


Operation Guide 4752/5353

CASIO®

- Your watch may differ somewhat from the one shown in the illustration.

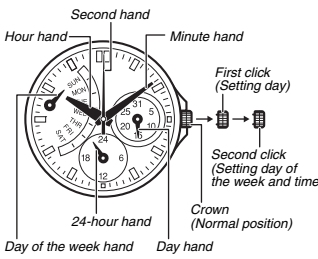

To set the day of the week and the time


- Pull the crown out to the second click when the second hand is at 12 o'clock position. This will cause the second hand to stop.
- Rotate the crown to change the day of the week setting. The day of the week changes when the time setting advances from 11:00 p.m. to 4:00 a.m. You can perform the following steps to set the day of the week you want more quickly.
 - Turn the crown away from you so the time setting changes from 11:00 p.m. to 4:00 a.m., which advances the day of the week.

- After the day of the week changes, rotate the crown towards you to return to approximately 11:00 p.m.
- Turn the crown away from you again so the time setting changes from 11:00 p.m. to 4:00 a.m. to advance to the next day of the week.
- Repeat the above steps as many times as necessary to set the day of the week you want.

- After setting the day of the week, set the hands by rotating the crown. Move the minute hand four or five minutes past the time you want to set, and then back it up to the proper setting.
 - Carefully set the time, making sure to distinguish between AM and PM.
- Push the crown back in to the normal position to restart timekeeping.

To set the day

 
- Pull the crown out to the first click.
- Set the day by rotating the crown towards you (in the direction indicated by the arrow in the illustration).
- Push the crown back in to the normal position.
 - Avoid changing the day setting while the current time is between 9:00 p.m. and 1:00 a.m.



- For a watch with an elapsed time bezel
 - Rotate the elapsed time bezel to align the ∇ mark with the minute hand.
 - After certain amount of time elapsed, read the graduation on the elapsed time bezel which the minute hand points to. The elapsed time is indicated.



- Some water resistant models are equipped with a screw lock crown.
- With such models, you must unscrew the crown in the direction noted in the illustration to loosen it before you can pull it out. Do not pull too forcibly on such crowns.
- Also note that such watches are not water resistant while their crowns are loosened. Be sure to screw the crowns back in as far as they will go after making any setting.



Specifications

- Accuracy at normal temperature:** ± 20 seconds a month
- Display:** 3 analog hands (hour, minutes and seconds),
3 dials (24-hour, day and day of the week)
- Battery:** One silver oxide battery (Type: SR920SW)
Approximately 3 years on type SR920SW