

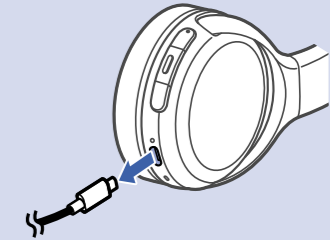
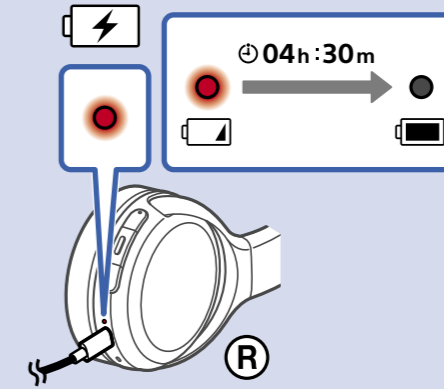
 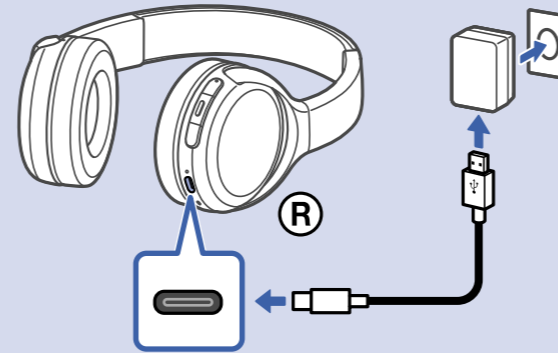


1


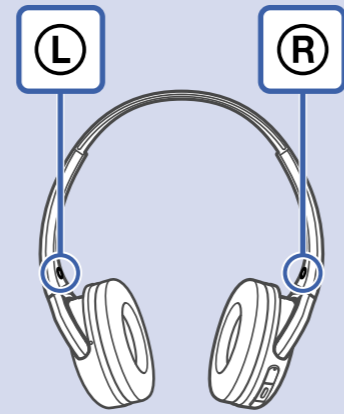


2





WH-CH510









Android™ iPhone

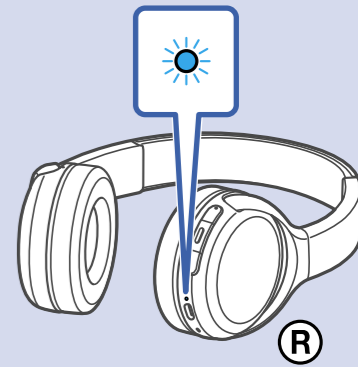
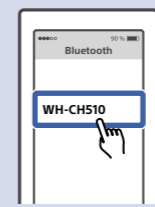


3

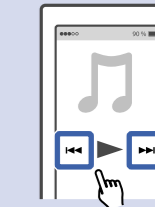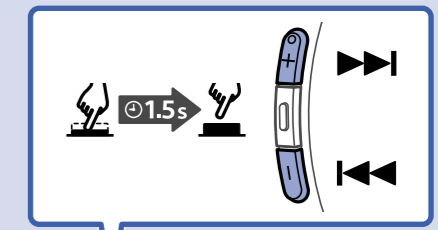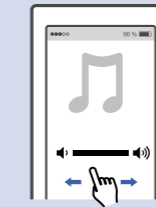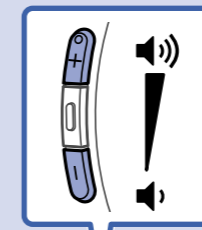

  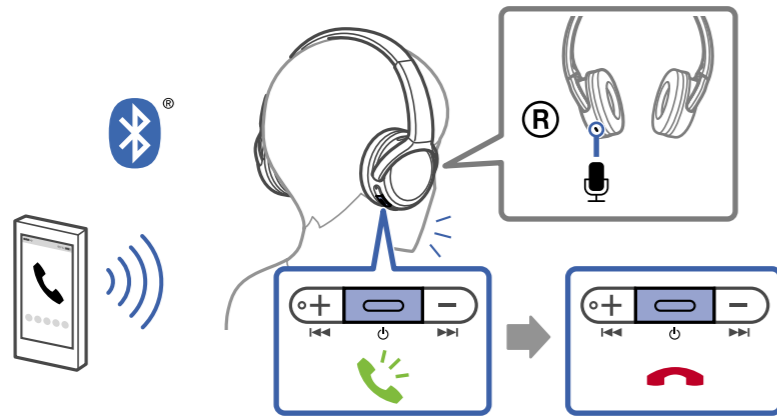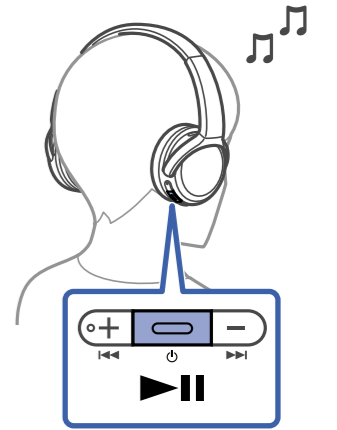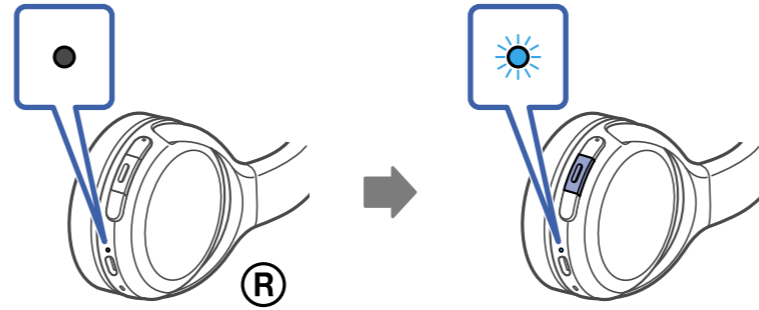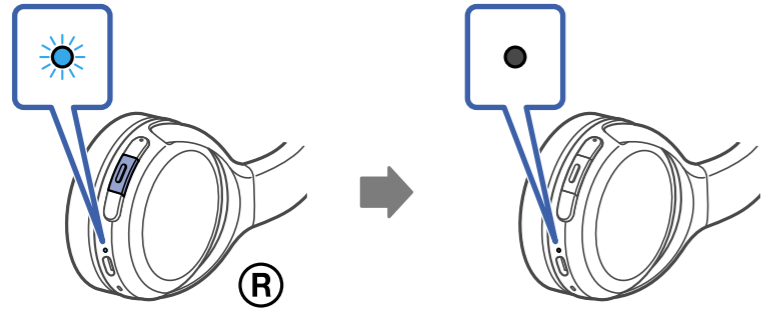

Android/iPhone

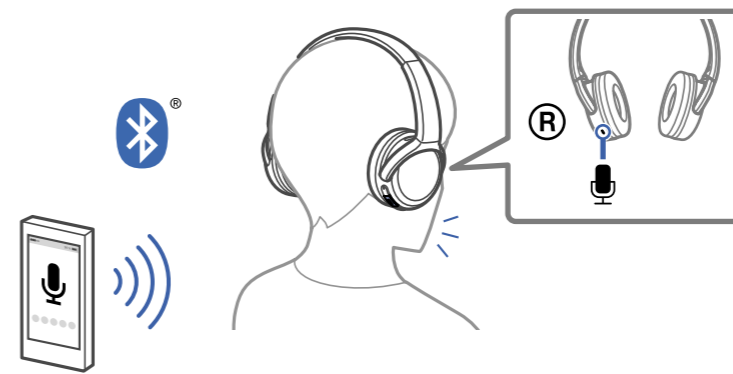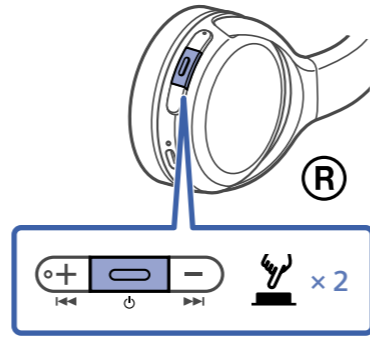

http://rd1.sony.net/help/mdr/whch510/h_zz/

