

# **USER'S GUIDE**

LM-TF002 (Seconds Cartoon, Multifunction Sport watch)

EL Backlight

Stopwatch

World Time

Countdown Timer

Low Power Indicator

⑤₅ 5 Alarms

100 Year Calendar


Chime

200M Water Resistant

Battery(CR2025)

# BUTTONS

 Button operation are indicated using the letters shown in the illustration

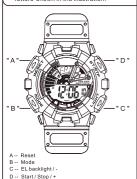


# ATTENTION

- 1. Never try to open the case or remove its back cover.
- 2. Do not operate buttons underwater.
- Should moisture appear inside the watch, have it checked immediately by your dealer. Otherwise it can cause erosion of the metal parts of the watch.
- Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.
- Avoid exposing the watch to temperature extremes.
- Wipe the watch with dry, soft cloth only. Avoid allowing it to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch.
- Avoid to wear the watch in electromagnetic, static conditions

## DISPLAY

 . The screen shown in helow:



# BACKLIGHT

 The backlight that uses an EL (electroluminescent) cause the display to glow for easy reading in the dark.

### Use EL Backlight

 In the timekeeping mode, press "C" to illuminate the display about 3 seconds.



# LOW POWER

If the battery voltage level is insufficient, the icon
 "E⊃" will appear to remind to replace a new battery



# LARMES TRANSFORMERS

# MODE SELECTION

. Press "B" to change mode to mode in the following Timekeeping Mode - Stopwatch Mode - Countdown Mode - Alarm Mode - World Time Mode

# (a) TIMEKEEPING

- 12/24H Format:
- · Hour Minutes Seconds Day of week, Month, Date;
  - · 100 years Calendar  $(2000 \sim 2099).$



### (b) STOPWATCI

- · 1/100 second unit:
- Measuring range: 0'00"00 ~ 99:59'59". at alatin



· Countdown range: 99:59'59" ~ 0'00"00.



# (d) ALARM

- 5 Alarms:
- · Hourly time signal: . The alarm sounds at the preset time each day.



### (e) WORLD TIME

. The time for other time zone.



# a TIMEKEEPING

### Time Setting

 In the timekeeping mode, press and hold "A" until the city code will flash(flashing is indicated in the setting mode);



 Press "C" or "D" to turn ON/OFF the Daylight Saving Time.



5. Repeat steps 3 and 4, the selection in the following sequence:
City code - Daylight Saving Time - Seconds - Hour - Minutes - 12/24H Format - Year - Month - Date - Date Format - Kev Tone(ON/OFF):



 Press "A" to exit the set state after setting (The day of week is automatically displayed in accordance with year, month and date setting).





### Calendar

 In the timekeeping mode, press and hold "D" to display: Month. Date.



Press "B" to select the Daylight
 Saving Time:



World Time Form					
City code	City	GMT Differential	Other major cities in same time zone		
WLG	Wellington	+12	Christchurch, Nauru Island, Nadi		
NOU	Noumea	+11	Port vila		
SYD	Sydney	+10	Melbourne, Guam, Rabaul		
ADL	Adelaide	+9.5	Darwin		
TYO	Tokyo	+09	Secul, Pyongyang		
HKG	Hong Kong	+08	Singapore, Kuala Lumpur, Beijing, Taipei, Manila		
BKK	Bangkok	+07	Jakarta, Phnom Penh, Hanoi, Vientiane		
RGN	Yangon	+6.5			
DAC	Dhaka	+06	Colombo		
DEL	Delhi	+5.5	Mumbai, Kolkata, Colombo		
KHI	Karachi	+05	Male		
KBL	Kabul	+4.5			
DXB	Dubai	+04	Abu Dhabi, Muscat		
THR	Tehran	+3.5	Shiraz		

City code	City	GMT Differential	Other major cities in same time zone
JED	Jeddah	+03	Kuwait, Aden, Addis Ababa, Nairobi, Moscow
CAI	Cairo	+02	Athens, Helsinki, Istanbul, Beirut, Damascus, Cape Town
JRS	Jerusalem	+02	
PAR	Paris	+01	Milan, Rome, Amsterdam, Madrid, Algiers
LON	London	+00	Dublin, Lisbon, Casablanca, Dakar, Abidjan
RIO	Rio de Janeiro	-03	Sao Paulo, Buenos Aires, Brasilia, Montevide
ccs	Caracas	-04	La Paz, Santiago, Port Of Spain
NYC	New York	-05	Montreal, Detroit, Miami, Boston, Panama Ci
CHI	Chicago	-06	Houston, Dallas/Fort Worth, New Orleans,
DEN	Denver	-07	El Paso, Edmonton
LAX	Los Angeles	-08	San Francisco, Las Vegas, Vancouver, Seatt
ANC	Anchorage	-09	Nome
HNL	Honolulu	-10	Papeete
PPG	Pago Pago	-11	Pago Pago

