 


# **USER'S GUIDE**

LM-TF004( Seconds Cartoon, Multifunction Sport Watch )





LED Backlight



 
World Time



Low Power Indicator



100 Year Calendar



200M Water Resistant

#### BUTTONS

 Button operation are indicated using the letters shown in the illustration

 


#### **ATTENTION**

- 1. Never try to open the case or remove its back cover.
- 2. Do not operate buttons underwater.
- Should moisture appear inside the watch, have it checked immediately by your dealer. Otherwise it can cause erosion of the metal parts of the watch.
- Though the watch is designed to withstand normal use, you should avoid rough use or dropping the watch.
- Avoid exposing the watch to temperature extremes.
- Wipe the watch with dry, soft cloth only. Avoid allowing it to come into direct contact with chemical materials, which can cause deterioration of the plastic parts of the watch.
- Avoid to wear the watch in electromagnetic, static conditions




. The screen shown in helow:



#### LEDBACKLIGHT

  The backlight that uses an LED, cause the display to glow for easy reading in the dark.



# LOW POWER

If the battery voltage level is insufficient, the icon
 ED" will appear to remind to replace a new battery.



# LARMES TRANSFORMERS

## MODE SELECTION

 Press "B" to change mode to mode in the following sequence:
 Timekeeping Mode - Stopwatch Mode - Countdown Mode - Alarm Mode - World Time Mode.

- (a) TIMEKEEPING
- 12/24H Format;
- Hour, Minutes, Seconds, Day of week, Month, Date;
- 100 years Calendar (2000 ~ 2099).



 1/100 second unit;
 Measuring range: 0'00"00 ~ 99:59'59".



#### C COUNTDOWN

 Countdown range: 99:59'59" ~ 0'00"00.



### d ALARM

- 5 Alarms;
  Hourly time signal;
- The alarm sounds at the preset time each day.



#### (e) WORLD TIME

The time for other time zone.



#### a TIMEKEEPING

#### Time Setting

 In the timekeeping mode, press and hold "A" until the city code will flash(flashing is indicated in the setting mode);



 Press "C" or "D" to turn ON/OFF the Daylight Saving Time.

 
Date Format - Key Tone(ON/OFF);



2 Press "C" or "D" to select the city



Repeat steps 3 and 4, the selection in the following sequence:
 City code – Daylight Saving Time – Seconds – Hour – Minutes – 12/24H Format – Year – Month – Date –



 When the digital time and hands they are not the same, please conduct the hands calibration function.

#### Calendar

In the timekeeping mode, press and hold "D" to display:



 Press "B" to select the Daylight Saving Time;

code, press and hold to adjust at high speed;



World Time Form				
City code	City	GMT Differential	Other major cities in same time zone	
WLG	Wellington	+12	Christchurch, Nauru Island, Nadi	
NOU	Noumea	+11	Port vila	
SYD	Sydney	+10	Melbourne, Guam, Rabaul	
ADL	Adelaide	+9.5	Darwin	
TYO	Tokyo	+09	Secul, Pyongyang	
HKG	Hong Kong	+08	Singapore, Kuala Lumpur, Beijing, Taipei, Manila	
BKK	Bangkok	+07	Jakarta, Phnom Penh, Hanoi, Vientiane	
RGN	Yangon	+6.5		
DAC	Dhaka	+06	Colombo	
DEL	Delhi	+5.5	Mumbai, Kolkata, Colombo	
KHI	Karachi	+05	Male	
KBL	Kabul	+4.5		
DXB	Dubai	+04	Abu Dhabi, Muscat	
THR	Tehran	+3.5	Shiraz	

City code	City	GMT Differential	Other major cities in same time zone
JED	Jeddah	+03	Kuwait, Aden, Addis Ababa, Nairobi, Moscow
CAI	Cairo	+02	Athens, Helsinki, Istanbul, Beirut, Damascus, Cape Town
JRS	Jerusalem	+02	
PAR	Paris	+01	Milan, Rome, Amsterdam, Madrid, Algiers
LON	London	+00	Dublin, Lisbon, Casablanca, Dakar, Abidjan
RIO	Rio de Janeiro	-03	Sao Paulo, Buenos Aires, Brasilia, Montevides
ccs	Caracas	-04	La Paz, Santiago, Port Of Spain
NYC	New York	-05	Montreal, Detroit, Miami, Boston, Panama City
CHI	Chicago	-06	Houston, Dallas/Fort Worth, New Orleans,
DEN	Denver	-07	El Paso, Edmonton
LAX	Los Angeles	-08	San Francisco, Las Vegas, Vancouver, Seattle
ANC	Anchorage	-09	Nome
HNL	Honolulu	-10	Papeete
PPG	Pago Pago	-11	Page Page

