

SOUNDSTICKS® WIRELESS

Setup Guide



harman/kardon®
by HARMAN

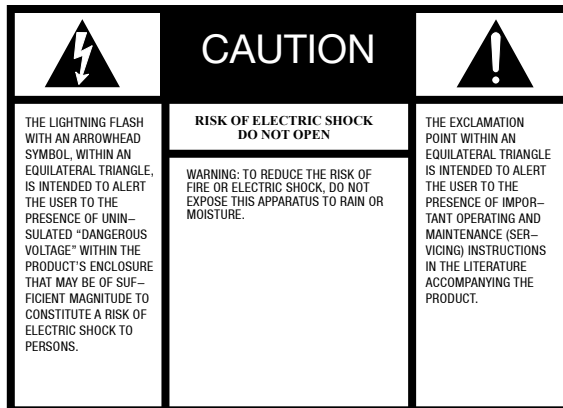
English

Japanese

Simplified Chinese

SOUNDSTICKS® WIRELESS

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with a dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with liquids, such as vases, are placed on the apparatus.
16. To completely disconnect this apparatus from the AC Mains, disconnect the power supply cord plug from the AC receptacle.
17. The mains plug of the power supply cord shall remain readily operable.
18. Do not expose batteries to excessive heat such as sunshine, fire or the like.
19. Do not place naked flame sources, such as lighted candles, on the apparatus.



SOUNDSTICKS® WIRELESS

Specifications*

System

Frequency range: 44Hz – 20kHz

Power consumption: 4W idle,
65W maximum

Subwoofer

Transducer (1): 6" woofer

Amplifier output power: 20W RMS

Dimensions (W x H): 9–3/16" x 10–3/16"
(232mm x 258mm)

Weight: 4 lb (2.2kg)

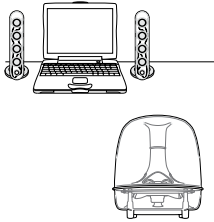
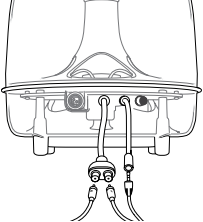
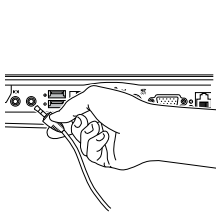
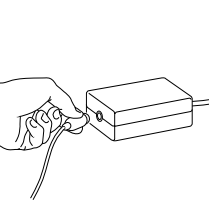
Satellite

Transducers (4): 1" full–range per channel

Amplifier output power: 10W RMS
per channel

Dimensions (W x H): 2" x 10"
(51mm x 254mm)

Weight: 1.5 lb (0.7kg)

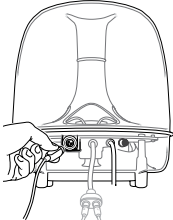
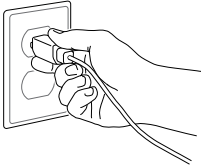
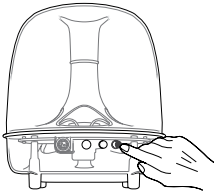
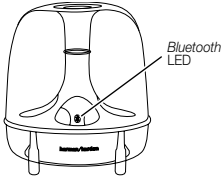
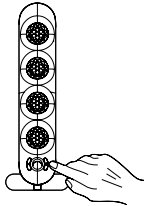
| | | | |
|---|---|---|---|
|  |  |  |  |
| <p>Step 1. Place individual SoundSticks (satellites) beside monitor/computer. Place subwoofer as desired, but placement under desk provides best performance.</p> | <p>Step 2. Connect satellite cables to the dual subwoofer cable. Also connect the input cable to the subwoofer input cable jack.</p> | <p>Step 3. Insert SoundSticks input cable into the computer or other audio device.</p> | <p>Step 4. Plug power cord into power adapter.</p> |

Troubleshooting

| Symptom | Possible problem | Solution |
|--|--|---|
| <p>No sound from SoundSticks speaker system.</p> | <p>No power to subwoofer. Power adapter plug not inserted correctly.</p> <p>No volume or low volume.</p> | <p>Ensure power supply is connected to live power source and is properly connected to subwoofer. Please note: When subwoofer is powered, a power LED should light.</p> <p>Place plug with arrow symbol facing UP into the subwoofer.</p> <p>Touch the volume “Up” (+) pad on the volume control satellite to unmute and/or increase the system volume level.</p> <p>Note: Touching the volume “Down” (–) pad lowers the system volume. Touching both (+) and (–) volume control pads at the same time will mute the system.</p> |

*These specifications are subject to change without notice.

Easy Setup Guide

| | | | | |
|--|---|---|--|--|
|  |  |  |  |  |
| <p>Step 5. Plug power adapter into subwoofer.</p> | <p>Step 6. Plug power cord into wall receptacle.</p> | <p>Step 7. Push the subwoofer volume knob/power ON/OFF button. Unit is on when the LED is lit. Use the subwoofer volume knob to balance the subwoofer's volume with that of the satellites.</p> | <p>Step 8. Turn on Soundsticks Wireless. (Unit will automatically enter pairing mode.) Put <i>Bluetooth</i>-enabled device in pairing mode. Select "Soundsticks Wireless" on device's pairing list. Passcode (if required) is 0000. When pairing is successful, Soundsticks Wireless' <i>Bluetooth</i> LED will illuminate.</p> | <p>Step 9. Adjust volume level by touching + or – button. Touching both the + and – buttons mutes the audio. When muted, touching either button unmutes the audio.</p> |

www.harmanardon.com

| Symptom | Possible problem | Solution |
|---|--|--|
| No sound from subwoofer, only satellites. | Subwoofer volume control set at minimum. | Rotate subwoofer volume control clockwise until relative volume level is appropriate. |
| No sound from satellites, only subwoofer. | Satellites not connected to subwoofer. | Check connection of satellites to subwoofer. |
| High frequencies sound dull. | Satellites not positioned properly. | Position and tilt (angle) loudspeakers toward listener. The sound from the satellites is very directional due to the four–element linear array design. |
| No sound from <i>Bluetooth</i> device. | Device not paired. | Pair device with Soundsticks Wireless. <i>Bluetooth</i> LED illuminates when pairing is successful. |

This product is intended to be supplied by a listed direct plug–in power unit marked "Class 2" and output rated 16V DC minimum 1.5 A.

*Audio from a paired *Bluetooth* device will mix with the audio from a connected audio device. To listen to only one device, stop play on the other device.

harman/kardon®

HARMAN

HARMAN International Industries, Inc.
8500 Balboa Boulevard, Northridge, CA 91329 USA

www.harmankardon.com

Made in P.R.C.

© 2012 HARMAN International Industries, Incorporated. All rights reserved.

Features, specifications and appearance are subject to change without notice.

Harman Kardon and SoundSticks are trademarks of HARMAN International Industries, Incorporated, registered in the United States and/or other countries.

The *Bluetooth* word mark and logo are registered trademarks and are owned by the Bluetooth SIG, Inc., and any use of such marks by HARMAN International Industries, Incorporated, is under license.

Part No. 950-0454-001 Rev. A

