




OLED55CX* OLED65CX* OLED77CX*

Quick Start Guide







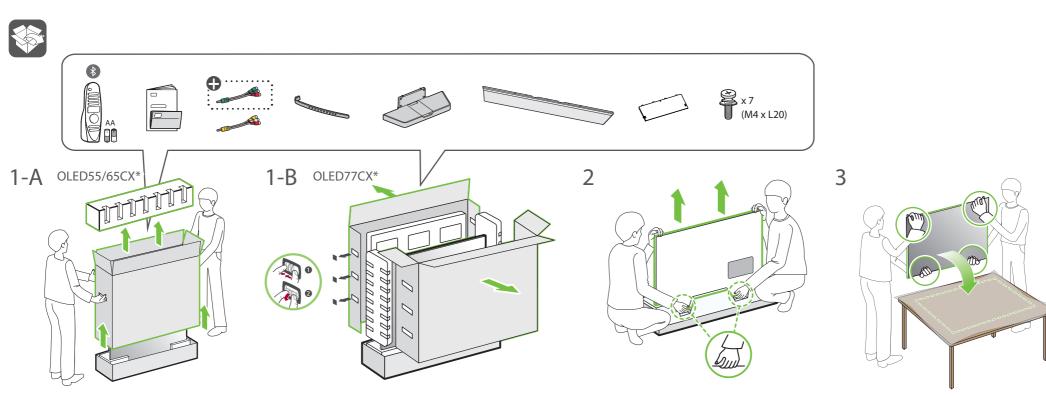




CAUTION—
Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

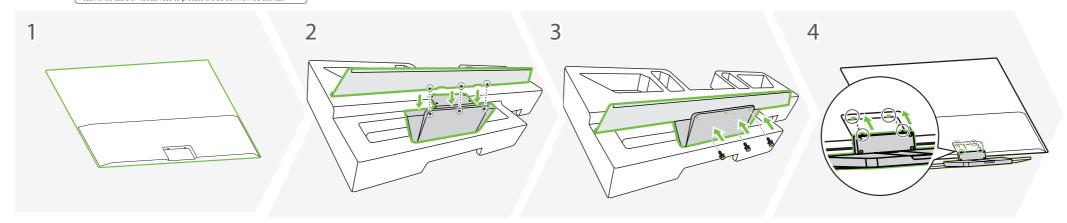

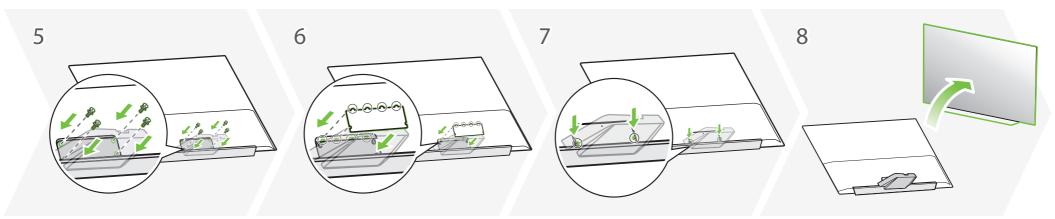


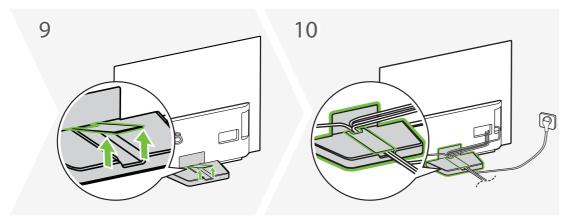


Images shown in manual may vary depending on model

Unpacking
Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.



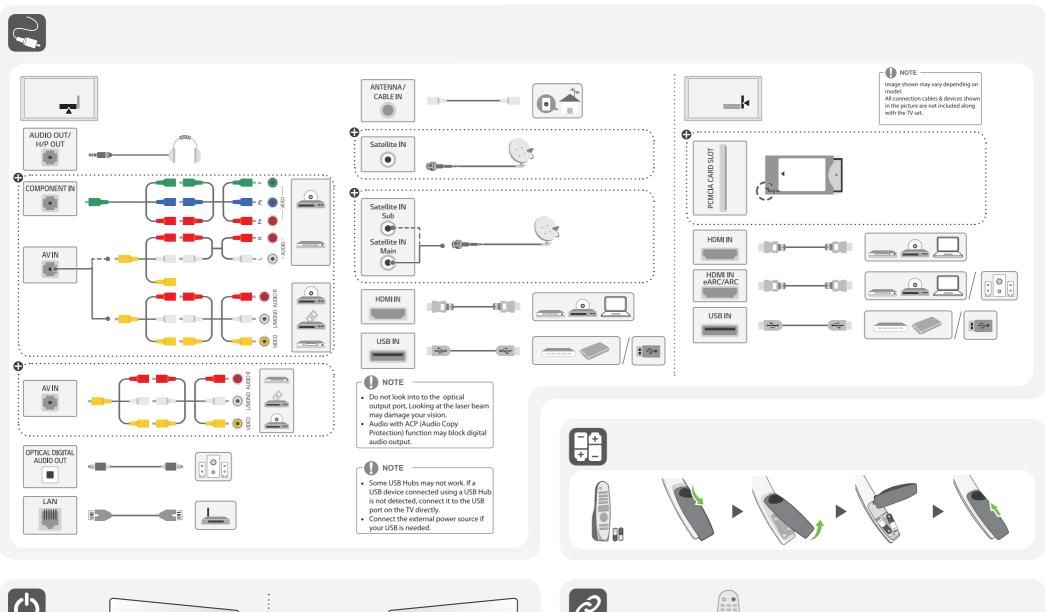



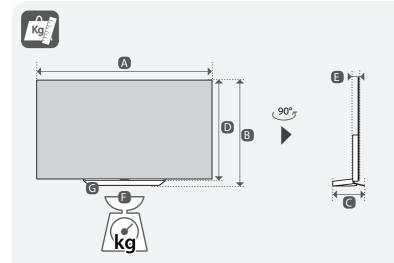

	A	В	C	D	3	(3	B -G
			(mm)			(kg)	
OLED55CXPTA OLED55CXPVA	1228	738	251	706	46.9	23.0	18.9
OLED65CXPTA OLED65CXPVA	1449	862	251	830	46.9	32.6	24.0
Power requirement				AC 100-240 V ~ 50 / 60 Hz			
OLED77CXPTA OLED77CXPVA	1723	1023	269	993	55.3	35.9	26.7
Douger requirement				AC 100-240 V ~ 50 / 60 Hz			
Power requirement				Only India -AC 200-240 V ~ 50 / 60 Hz			



English

- · Read **Safety and Reference**.
- · For the power supply and power consumption, refer to the label attached to the product.
- Depending on model