

★★★★★

INNOVATIVE PRODUKT DES JAHRES

รับประกันคุณภาพ

[www.pramiegermany.com](http://www.pramiegermany.com)



## INDUCTION AND CERAMIC HOBS USER INSTRUCTION MANUAL

PRMY-2108, PRMY-2205  
PRMY-2208




▶ ประเทศไทยเยอรมัน

▶ MODERNE TECHNIK



### Setting

After turn on the product that checks for any damages between transportation In the case of a contract dealer problem or after-service  
For the size and installation below according to numbers

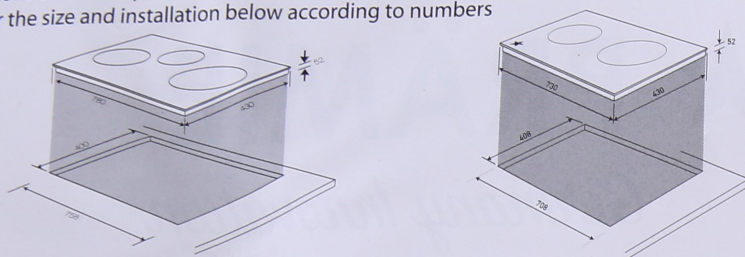

- Installed between the bottom of the machine and the separator panel must complete the dimensions defined (minimum 50 mm).
- In other cases, in order to ensure the correct functioning of the product that is not a barrier to the minimum, it must be cleared (minimum 20 mm.) on the table for air flow.
- If the under-top oven is installed, make sure that the oven must have a cooling system.
- Do not installing washing machine, a dishwasher above that the electronic circuit does not come to contract with steam and moisture that may be damaged.

### Electrical connection


- Remove electrical appliances from the power supply.
- Installation must be carried out by skilled personnel and have knowledge about safety and installation.
- The manufacturer is not responsible for all injuries to persons or animals and property damage. That is just about the failure. Observe the rules used to cancel this chapter.
- The power cord must have a length that is suitable for cooking that will come out from the top.
- Check the voltage written on the label on the bottom of the machine and make sure if it is suitable for the household voltage of your country.

### Available pots and pans

Use magnet to check if the ANF pot is suitable for the inductive stove. If it is not, the magnet cannot find the magnetic field.

- Make sure the pot has the other smooth bottom Wise that they are scratching, cooking, checking food.
- Never place pots or heat on the surface of the control panel or washing machine which may cause damages. Before use

Important: The cooking zone will not open if the pot is not in the right size. Just use the pot bearing the symbol "Sticky lead system" (pictured below) Place the pot about the cooking area needed before changing the top dishes.

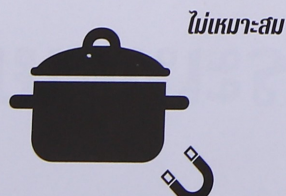

### Dashboard



### Available pots and pans

Use magnet to check if the pot is suitable for the inductive stove. If it is not, the magnet cannot find the magnetic field.

- Make sure the pot has the other smooth bottom Wise that they are scratching, cooking, checking food.
- Never place pots or heat on the surface of the control panel or washing machine which may cause damages

### Cooking switch on / off

- Cooking switch on the button and cooking zone showing the standing light.
- If within 120 seconds of switching on, there is no hot zone, choose cooking, will automatically close. Opening and adjusting the cooking zone.
- When cooking is open and pan is in the appointed cooking zone, select the region using the corresponding button: screen showing level 0.
- Each cooking zone includes several levels of power. You can tune it by the [ ] button, from the minute level "1" up to the "9" which is the maximum.

### Booster

- Select the sticky cooking zone and press this button.
- The cooking zone will run in 2400 continuously for 5 minutes.
- Press this button again over the cooking zone to recover to the previous level.

### Child protection system

- This function locks the control to prevent it from changing in a food accident.
- To disable the child lock function, switch to the stove and hold the [ ] button for 3 seconds. Display the timer for Thong Lo. Then the ball lock control panel.
- To disable the control panel lock, repeat the activation process.
- Thong Lo, cooking, using again.

### Stopwatch

The timer can be used to set the cooking time up to 99 minutes for all cooking zones. Choose the cooking zone to be used with the timer, press the button with the clock system when setting the desired cooking time, use the timer function button (see picture). The movie then a few seconds, the timer starts the countdown. When the specified time is an acoustic signal, the sound and the cooking will turn off automatically. To cancel the timer, press the button. To set the "00" display or hold the button with Automatic shutdown.

### Three ring function

- Select the ceramic stove zone and press the button to open and close the outer ring.

### Insulation

- Continuous heating temperature adjustment keys.



booster



timer



pause




warm



## WARNING PANEL:

### Thermo-Zone Heat Indicator

- This induction and ceramic hob is installed with Thermo-zone heat indicators and cooking zone.
- These indicators show the user if the cooking zone is still hot.
- The monitor displays when the cooking zone is warming.
- You can cook on the T-Zone spot out of the heat indicator.
- When the cooking zone is cooling down, the monitor will be automatically turned off.

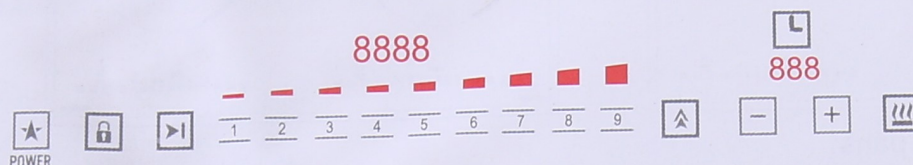

### MISTAKE AND MISPLACEMENT OF USING YOUR POT:

- If you are placing the pots improperly or not fit to the induction, the warning message will be displayed on the monitor (see the picture above).
- If the hobs cannot find any pots in 120 seconds, it will be automatically turned off.

### CLEANING:

- Vapor is not allowed to be used to clean the machine.
- Before cleaning, please make sure that the cooking zone is turned off and the heat indicator does not display.

### TECHNICAL INFORMATION

- Voltage: 220 – 240V 50 – 60 Hz
- Model:
- Power: left: right:

### IMPORTANT:

DO NOT USE SPONGE TO WIPE DIRT ON THE PAD, IT CAN DAMAGE THE MIRROR

- Clean the machine after each time using to remove the food stains.
- Sugar or sugary food can damage the machine. Please wipe it off at once.
- Salt and sugar can scratch the mirror surface.
- Use soft cloth, kitchen napkin to absorb or clean the machine (according to the manufacturer's advice).

 **PRÄMIE**  
*Germany Innovation*

