


microlab

just listen

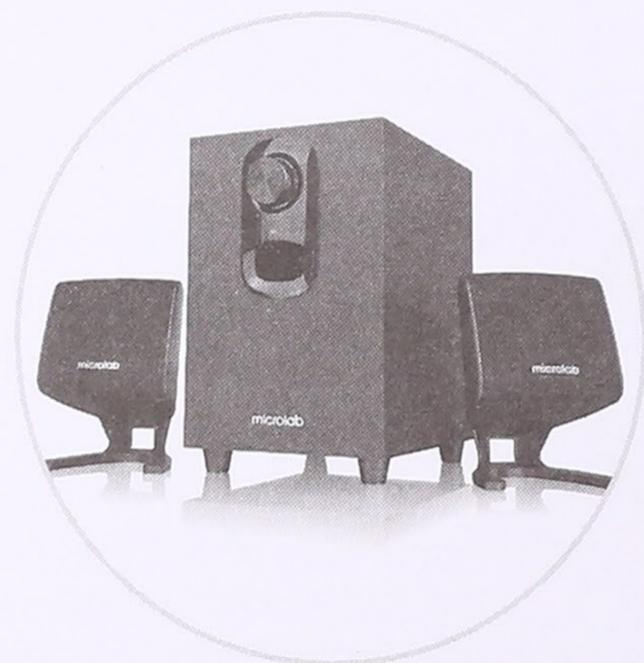


M-108
User Manual

Multimedia Speaker System

Prior to initial use, please read the manual carefully

Important Safety Instructions

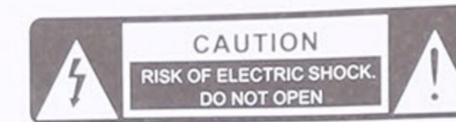

Caution:

To reduce the risk of electric shock, do not dismantle the product and do not expose the apparatus to rain or moisture. No user-serviceable parts inside. Refer servicing to qualified personnel only.

Explanation of Graphical Symbols:

-  The lightning flash within an equilateral triangle is intended to alert you to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute an electric shock to a person or persons.
-  The exclamation point within an equilateral triangle is intended to alert you to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNINGS:

1. **Read Instructions** - All the safety and operating instructions must be read before the product is operated.
2. **Retain Instructions** - The safety and operating instructions should be kept with the product for future reference.
3. **Heed warnings** - All warnings on the product and in the operating instructions should be adhered to.
4. **Follow instructions** - All operating and users' instructions should be followed.
5. **Installation** - Install in accordance with the manufacturer's instructions.
6. **Power sources** - This product should be operated only from the type of power source indicated by the marking adjacent to the power cord entry. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.
7. **Grounding or polarization** - the product is not required to be grounded. Ensure the plug is fully inserted into the wall outlet or extension cord receptacle to prevent blade or pin exposure. Some versions of the product are equipped with a power cord fitted with a polarized alternating line plug (a plug having one blade wide than the other). This plug will fit onto the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. When using an extension power-supply cord or a power-supply cord other than that supplied with the appliance, it should be fitted with the appropriate molded plugs and carry safety approval appropriate to the country of use.
8. **Power cord protection** - Power-supply cords should be routed so that they are not likely to be walked on, kinked or pinched by items placed on or against them, paying particular attention to cords from plugs, receptacles and the point where they exit from the appliance.
9. **Overloading** - Do not overload wall outlets, extension cords or multiple sockets, as this can result in a risk of fire or electric shock.
10. **Ventilation** - The product must be properly ventilated. Do not place the product on a bed, sofa, or other similar surface. Do not cover the product with any items such as tablecloths, newspapers, etc.
11. **Heat** - The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products including amplifiers that produce heat. No naked flame sources, such as lighted candles, should be placed on the apparatus.
12. **Water and moisture** - To reduce the risk of fire or electric shock, do not expose the product to rain, dripping, splashing or excessive moisture such as in a sauna or bathroom. Do not use this product near water, for example, near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, or etc.
13. **Object and Liquid Entry** - Never push objects of any kind into this product through openings, as they may touch dangerous voltage points or short-circuit parts that could result in a fire or electric shock. Never spill liquid of any kind on the product. Do not place any object containing liquid on top of the product.
14. **Cleaning** - Unplug the product from the wall outlet before cleaning. The cabinet of the subwoofer may be cleaned by dusting with a dry cloth. If you wish to use an aerosol cleaning spray, do not spray directly on the cabinet; spray onto the cloth. Be careful not to damage the drive units.
15. **Attachments** - Do not use attachments not recommended by the product manufacturers, as they may cause hazards.
16. **Accessories** - Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall,

causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow the manufacturers' instructions and should use a mounting accessory recommended by the manufacturer.

17. **Moving the product** - A product and cart combination should be moved with care. Quick stops, excessive force and uneven surfaces may cause the product and cart combination to overturn.
18. **Un-use periods** - The power cord of the device should be unplugged from the outlet during lightning storms or when the apparatus is left unused for a long period of time.
19. **Servicing** - Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
20. Please remove the power plug from the main power source or wall power source when not in use. When plugged in to a power source, the system is in standby mode, so the power is not entirely cut off.
21. **Replacement parts** - When replacement parts are required, ensure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
22. **Mains fuses** - For continued protection against fire hazard, use fuses only of the correct type and rating. The correct fuse specification for each voltage range is marked on the product.
23. Do not turn up the volume while listening to a section with very low level inputs or no audio signals. If you do, the speaker may be damaged when a peak level section is suddenly played.
24. The only means of completely disconnecting the product from the power supply is by removing the power cord from the wall outlet or the product. The wall outlet or the power cord entry to the product must remain freely accessible at all times while the product is in use.
25. Try to install the product near a wall socket or extension cord and shall be easily accessible.
26. The highest environmental temperature suitable for this product is 40°C.

EN
3

Introduction

A great product for most of your listening needs, this easy to use 2.1 speaker system brings you full audio range playback. Featuring a woofer cabinet for strong bass and compact satellites for clear highs. Ideal for multimedia entertainment use in study room, bedroom or kitchen.

Built with tuned bass reflex tunnel to enhance your home theater and music experience with better sound and effects. Frontal volume control for quick adjustment.



Features

- Quality 2.1 speaker system with built-in amplifier
- 11 Watt of acoustic power with 4" woofer and 2 x 3" satellites.
- Full audio spectrum performances, ideal for your favourite entertainment from Mp3, Mp4, CD/DVD movies and digital playbacks
- Specially designed woofer cabinet with bass reflex tunnel for deep bass
- Front panel volume control for quick access
- Angled satellites for optimum listening and with stands for firm support

Package contents



- | | |
|-------------------------------|-------|
| • M-108 subwoofer cabinet | 1 pc |
| • M-108 satellite speakers | 2 pcs |
| • 3.5 mm - 3.5mm stereo cable | 1 pc |
| • User manual | 1 pc |

Illustrations

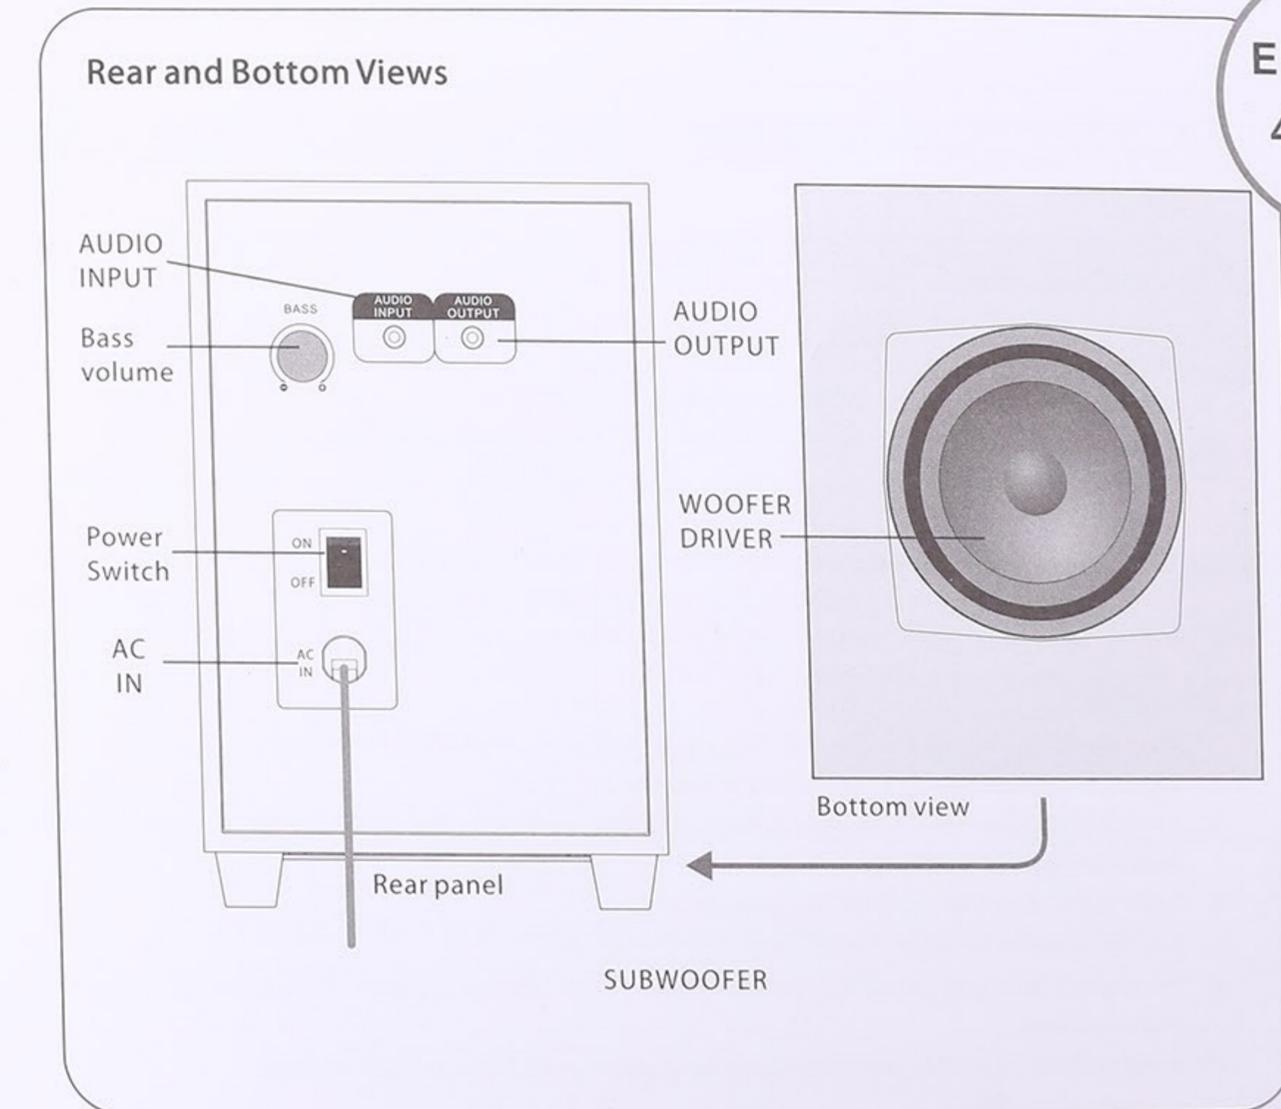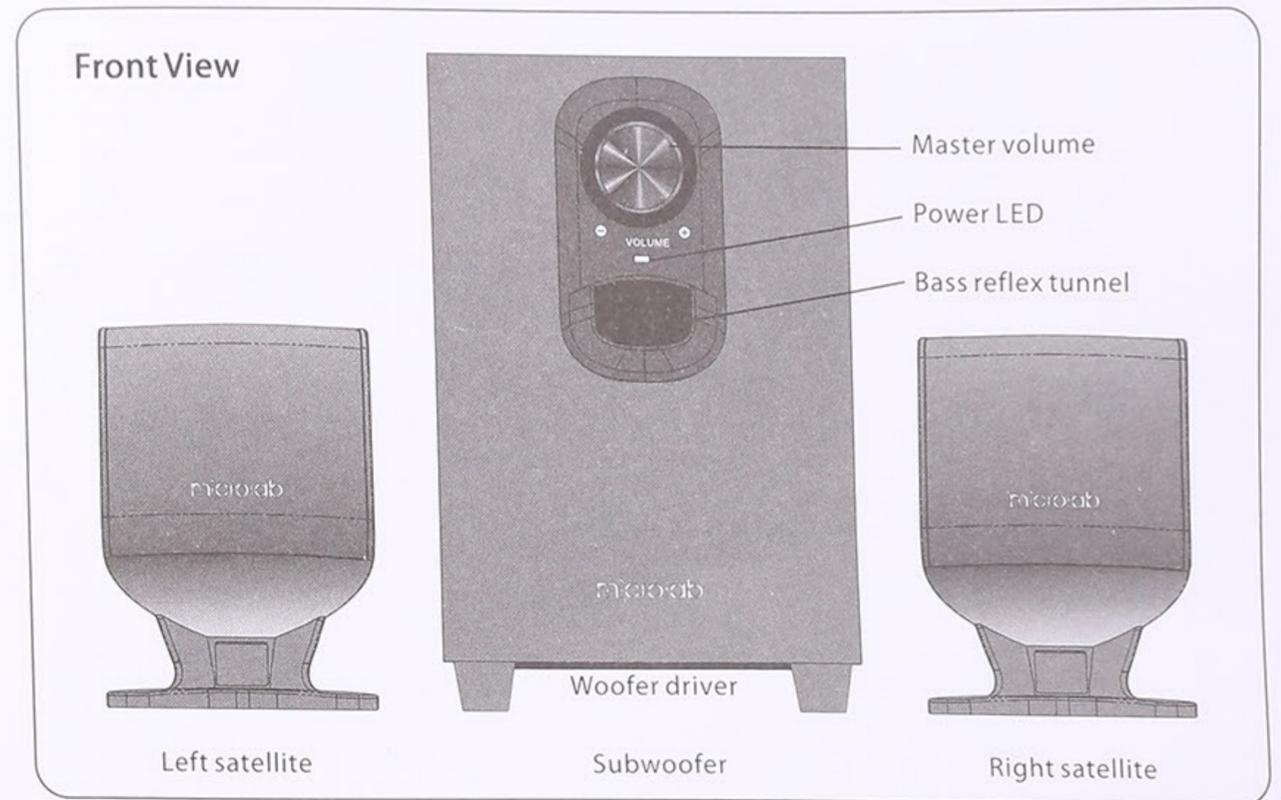

EN
4

Connections

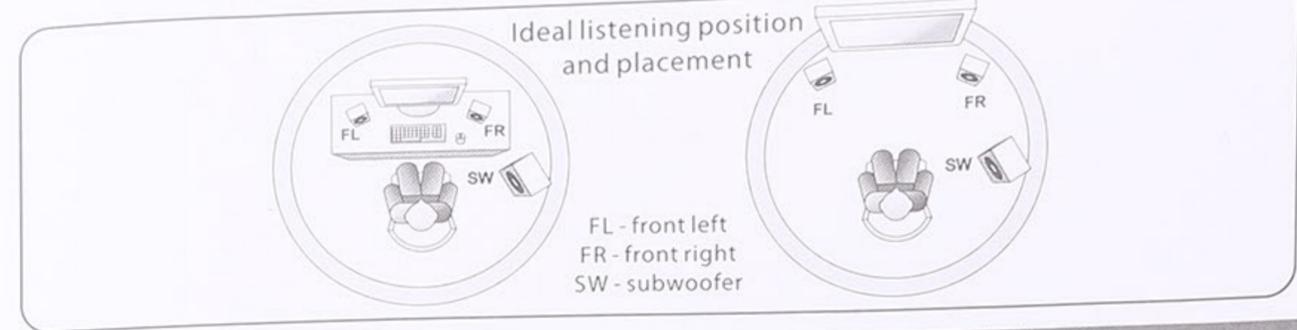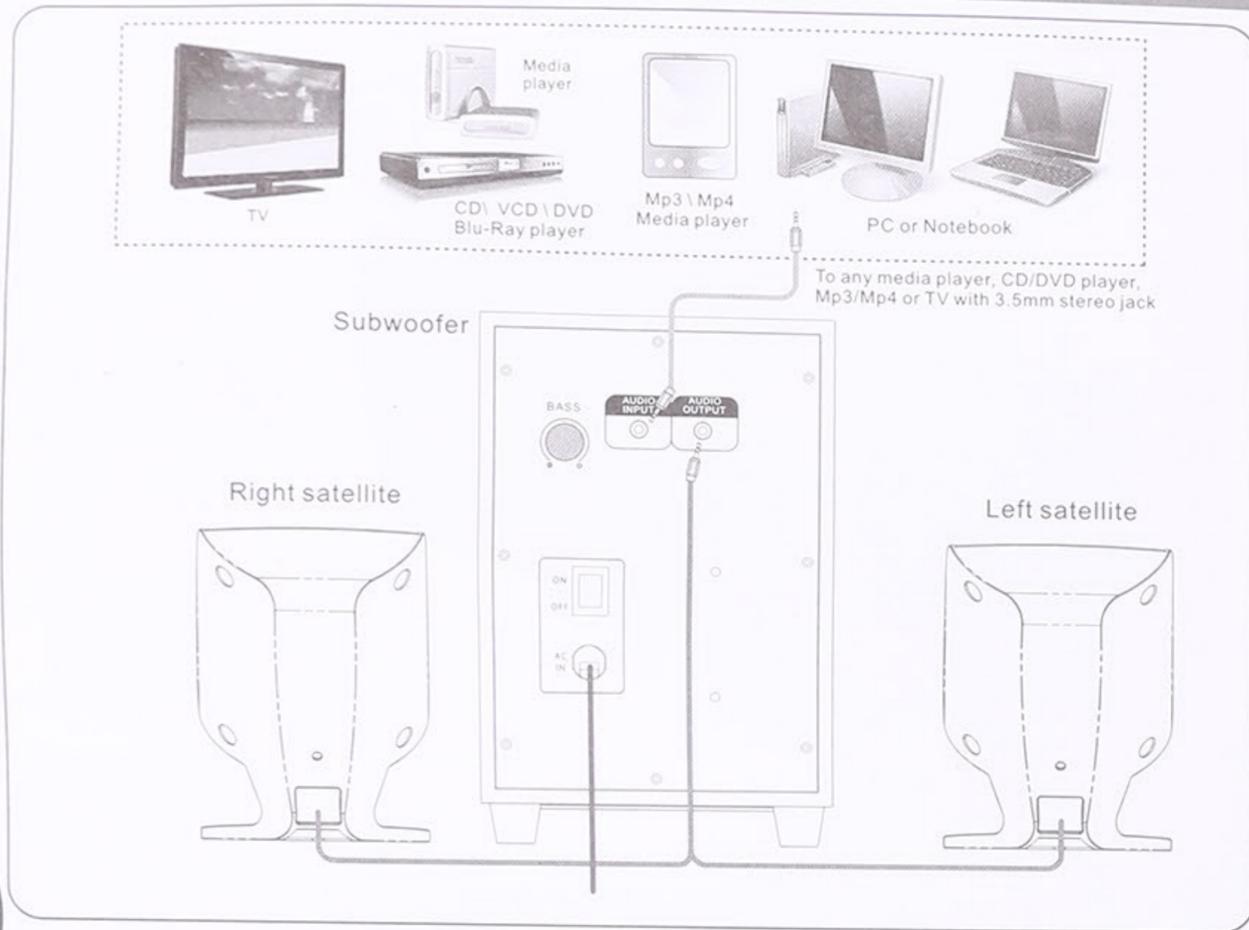

Technical Information

Amplifier

Out power power, RMS	11 Watt RMS
Power distribution, Watt	2.5 Watt x 2 + 6 Watt
Harmonic distortion	< 0.5% 1 W 1 kHz
Frequency response	50 Hz - 20 kHz
Signal/Noise ratio, dB	> 70 dB
Separation, dB	> 40 dB

Speaker

Tweeter driver type	3" x 2 4 Ohm
Woofer driver type	4" 6 Ohm

Interface

Input	3.5 mm stereo jack
Output	3.5 mm stereo jack

EN
5

Operations

Installation:

Precaution: Prior to connecting the speakers, ensure the AC power plug is removed from the AC source. Secondly, ensure the volume knob is set to zero.

1. Connect the both satellite speaker's cable (3.5mm) to the audio output at the rear panel of the subwoofer.
2. Place both satellites on extreme sides of the listening position.
3. Place the subwoofer on the floor and with its back near the wall for more bass.
4. Next, connect the playback source (Media player, VCD, DVD, or CD player) to the 3.5mm audio input jack.
5. Last, connect the AC power cord to the AC power supply source. Please always ensure the AC power ratings printed on the rear panel of the subwoofer match with your country's AC power supply ratings. If they do not match, please do not connect or turn ON the power. This will damage the speaker system.

Operation:

1. Plug the AC power plug to the wall AC source or any AC power distribution sockets.
2. Ensure the volume level is lowered to minimum.
3. Turn on the power switch located at the rear of the subwoofer. The green LED in front will illuminate indicating power on status.
4. Start the media player and its playback audio.
5. Slowly increase the volume level to your preferred level.
6. For sound effect, you can adjust the bass volume level at the rear panel of the subwoofer to your preferred level.

Note: Never listen to loud music for prolonged period as it might affect your hearings.

EN
6

Frequently Asked Questions (FAQ)

Question	Solution
Power LED won't light up	Check if the system is powered on Check the power plug is well connected
No sound	Check if the audio source is working well Check if the audio and speaker cables are connected Check if the volume is at the right level
One or more satellite no sound	Check if the satellite cable is well connected, and ensure source connection is correctly inserted
Static sound heard when volume knob is turned	Turn off the playback source first, then turn the speaker volume knob several times. Playback again and monitor. The static noise is due to dust, so simply turning the volume will remove it easily.
What are the products supported?	Any playback devices such as PC, notebook, CD/DVD player, Media players with 3.5 mm stereo plug
Sound is distorted	Check if the source file is not corrupted, play a different song and test

If the problem still exists, please contact the distributor or ask for professional service



microlab

www.microlab.cn

Microlab Electronics Co.,Ltd

Made in China

Disclaimer: All symbols and logos belong to the respective brand holder or registered holder. All specifications and information are subject to changes without further notice. Slight variations and differences might appear between the printed photos and actual product due to product enhancement.