 




EN	User manual	VI	Hướng dẫn sử dụng
MS-MY	Manual pengguna	ZH-HK	使用手冊

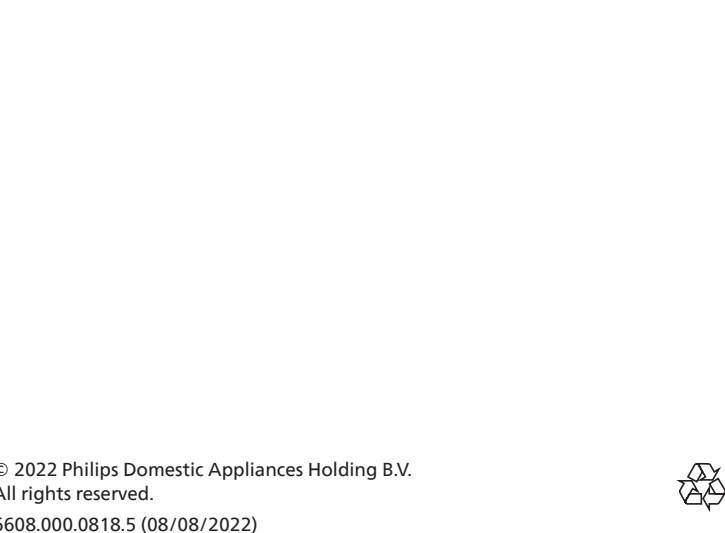

© 2022 Philips Domestic Appliances Holding B.V.
All rights reserved.
6608.000.0818.5 (08/08/2022)

English

1 Important

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

 
 
 
- The appliance must not be immersed.

Warning

- This appliance shall not be used by children from 0 year to 8 years.
- This appliance can be used by children aged from 8 years and above if they are continuously supervised and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and user maintenance shall not be made by children.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- WARNING:** Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING:** Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Don't place the power cord under the appliance when in use.
- When placing the steaming basket, avoid touching the side wall of the inner pot, otherwise it may cause deformation due to high temperature.

Caution

- CAUTION:** Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.

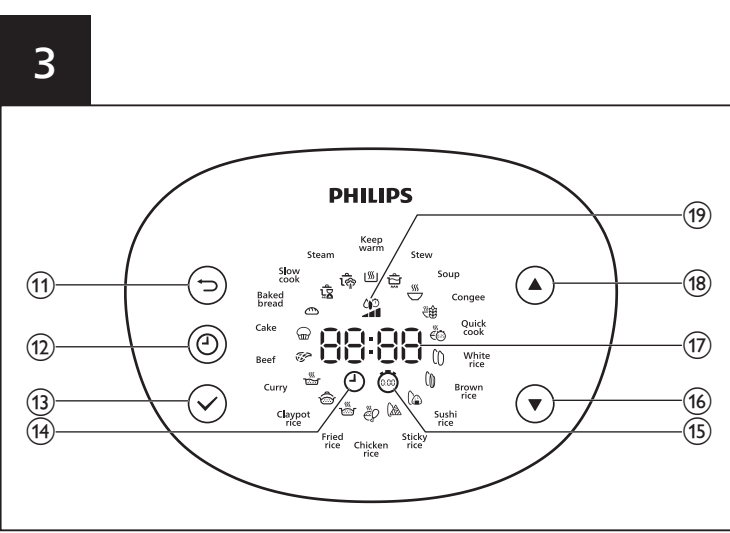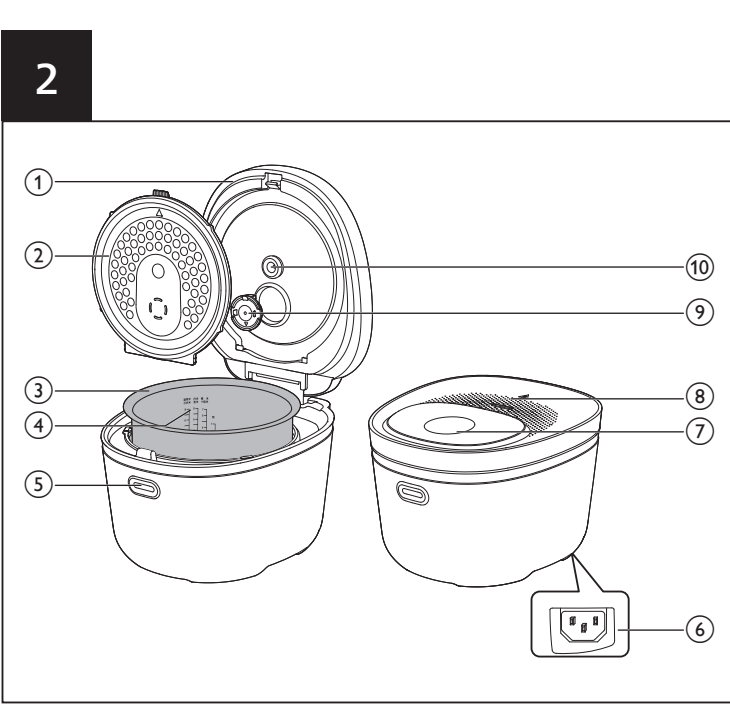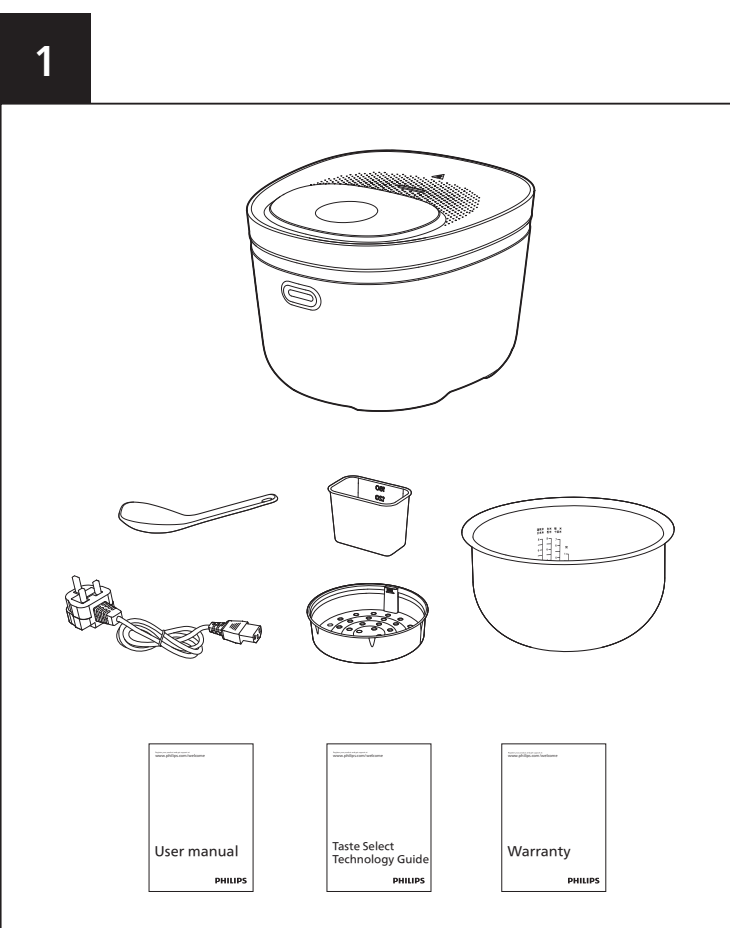

© 2022 Philips Domestic Appliances Holding B.V.
All rights reserved.
6608.000.0818.5 (08/08/2022)

English

- 1 Important**

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

 
 
 
- The appliance must not be immersed.

Warning

- This appliance shall not be used by children from 0 year to 8 years.
- This appliance can be used by children aged from 8 years and above if they are continuously supervised and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and user maintenance shall not be made by children.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- WARNING:** Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING:** Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Don't place the power cord under the appliance when in use.
- When placing the steaming basket, avoid touching the side wall of the inner pot, otherwise it may cause deformation due to high temperature.

Caution

- CAUTION:** Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.

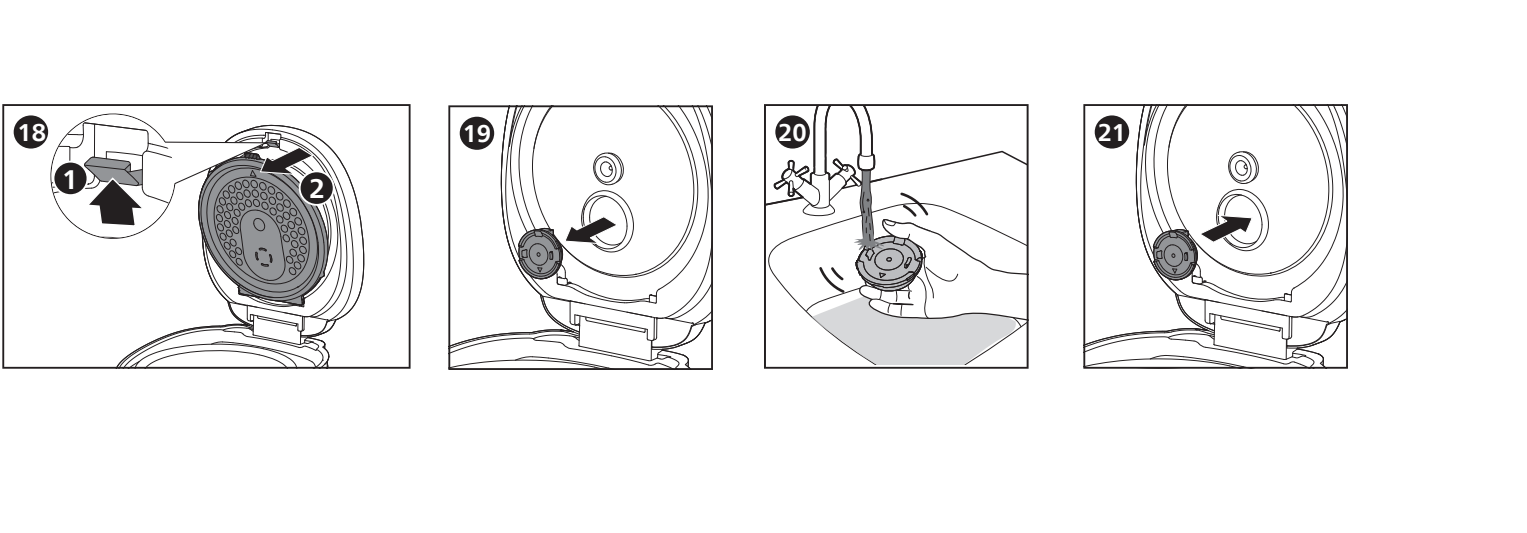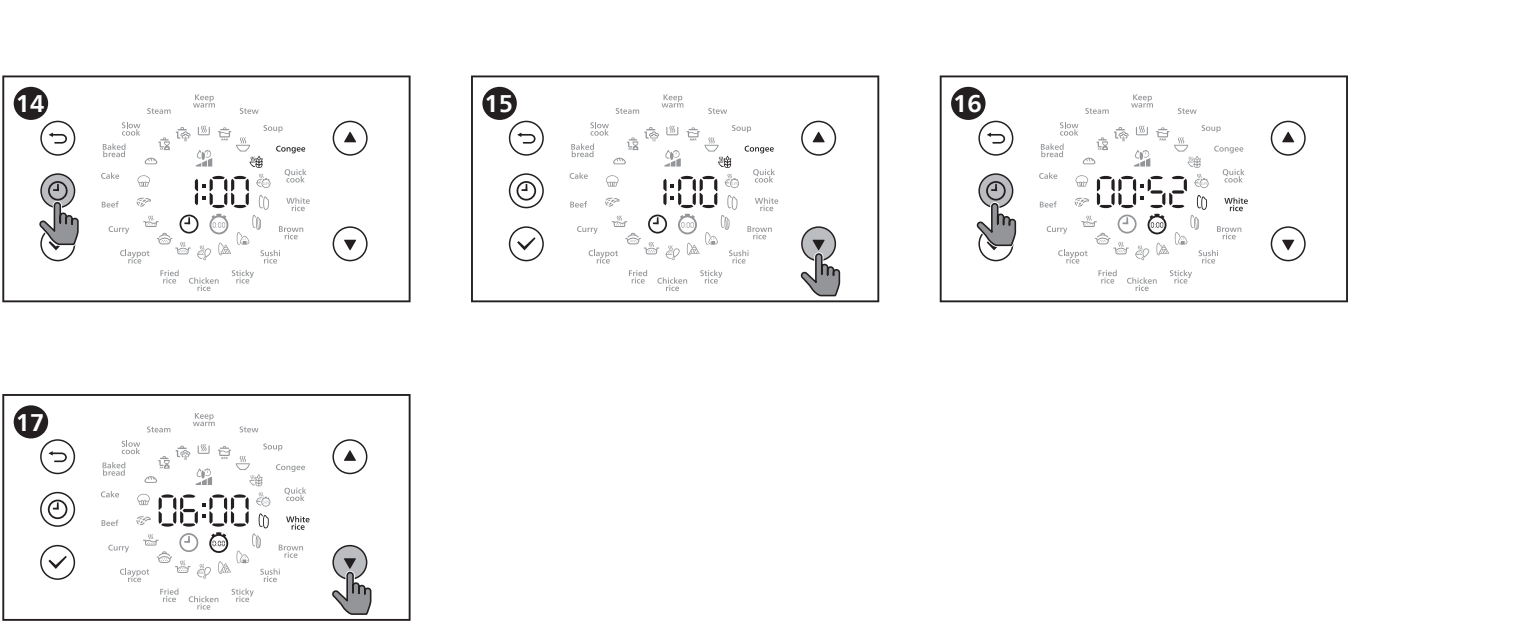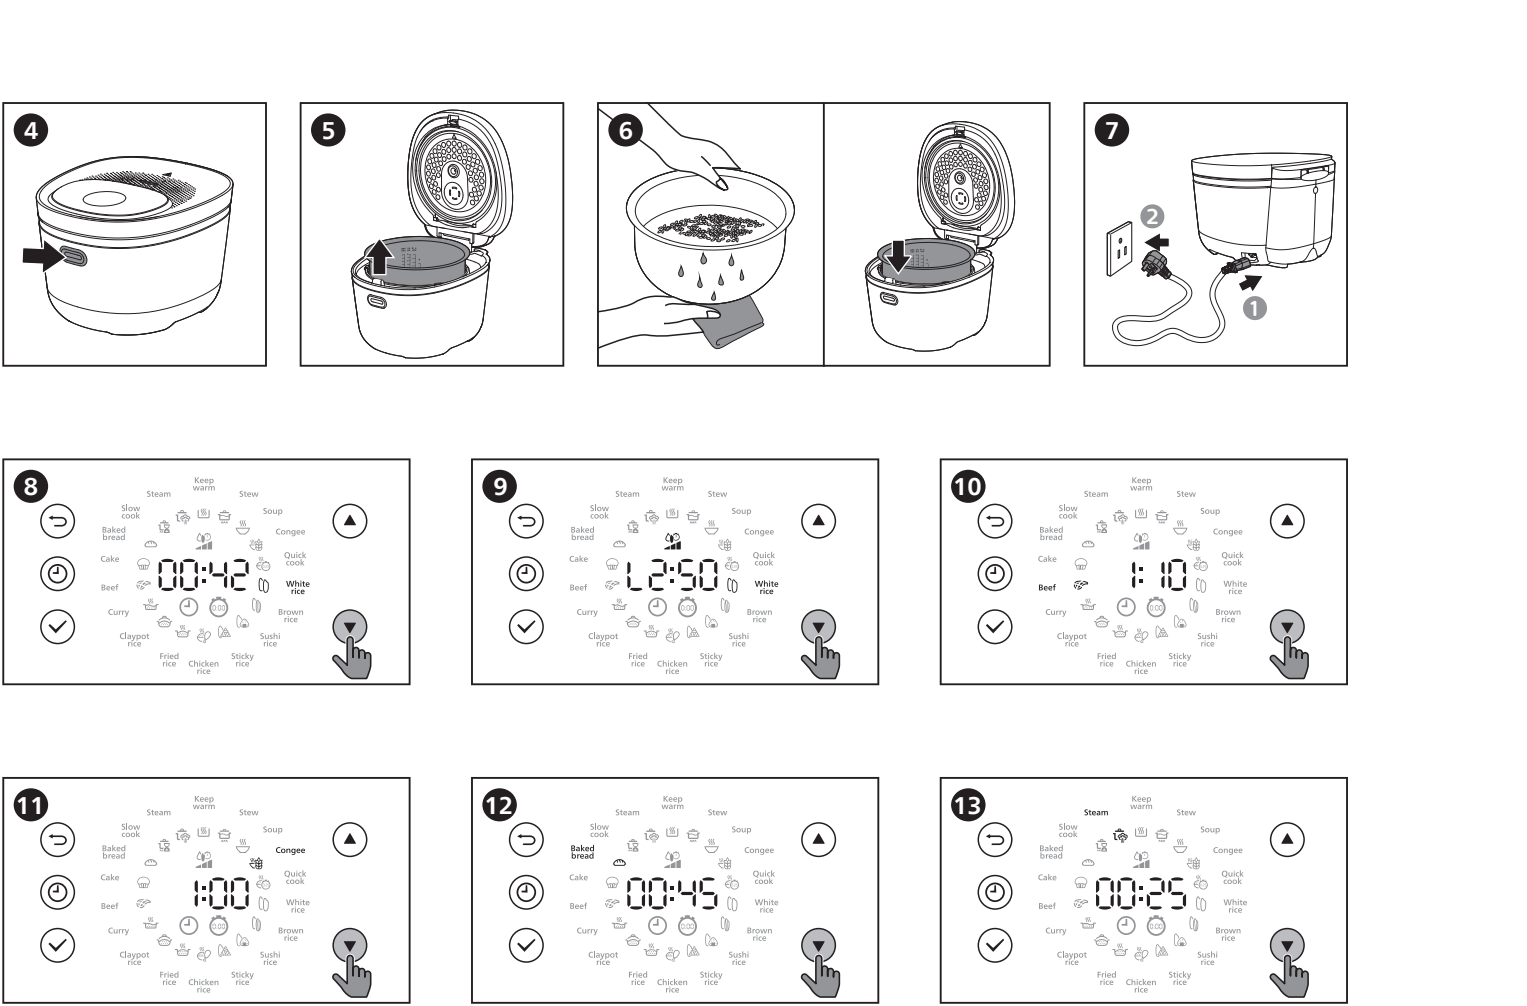

© 2022 Philips Domestic Appliances Holding B.V.
All rights reserved.
6608.000.0818.5 (08/08/2022)

English

- 1 Important**

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

- The appliance must not be immersed.

Warning

- This appliance shall not be used by children from 0 year to 8 years.
- This appliance can be used by children aged from 8 years and above if they are continuously supervised and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Keep the appliance and its cord out of reach of children aged less than 8 years.
- Cleaning and user maintenance shall not be made by children.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- Cooking appliances should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- WARNING:** Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING:** Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Don't place the power cord under the appliance when in use.
- When placing the steaming basket, avoid touching the side wall of the inner pot, otherwise it may cause deformation due to high temperature.

Caution

- CAUTION:** Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.
- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.

6 Cleaning and Maintenance

- Unplug the Rice cooker before starting to clean it.
- Wait until the Rice cooker has cooled down sufficiently before cleaning it.

Inner lid

- Pull the inner lid out outwards to remove it from the top lid for cleaning (fig. 18).
- Soak in hot water and clean with sponge.
- Make sure to remove all the food residues stuck to the Rice cooker.
- Re-install the inner lid back to the top lid.

Steam vent cap

- Follow the above steps to disassemble the inner lid.
- Disassemble the steam vent cap from the inner lid (fig. 19).
- Clean the steam vent cap under tap water (fig. 20). Make sure no food residue is left. Reassemble the steam box to the inner lid after cleaning is completed (fig. 21).

Interior

Inside of the top lid and the main body:

- Wipe with a damp cloth.
- Make sure to remove all the food residues stuck to the Rice cooker.

Heating element:

- Wipe with a damp cloth.
- Remove food residues with a damp cloth.

Exterior

Surface of the top lid and outside of the main body:

- Wipe with a cloth dampened with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues around the control panel.

Accessories

Spatula and inner pot:

- Soak in hot water and clean with sponge.

7 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

8 Guarantee and service

If you need service or information, or if you have a problem, visit the Philips website at www.philips.com or contact the Philips Customer Care Center in your country. You can find its phone number in the worldwide guarantee leaflet. If there is no Customer Care Center in your country, go to your local Philips dealer.

9 Specifications

Model Number	HD4539
Rated power output	1250W
Rated capacity	4.0L
Rice capacity	1.5L

10 Troubleshooting

If you encounter problems when using this Rice cooker, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The light on the button does not go on.	There is a connection problem. Check if the power cord is connected to the Rice cooker properly and if the plug is inserted firmly into the power outlet. The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is not cooked.	There is not enough water. Add water according to the scale on the inside of the inner pot. Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the Rice cooker on. The heating element is damaged, or the inner pot is deformed. Take the Rice cooker to your Philips dealer or a service center authorized by Philips.
The rice is too dry and not well cooked.	Add more water to the rice, and cook for a bit longer.
The Rice cooker does not switch to the keep-warm mode automatically.	You might have pressed the keep-warm button before pressing the start button. In this case the Rice cooker will be in standby mode after the cooking is finished. The temperature control is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is scorched.	You have not rinse the rice properly. Rinse the rice until the water runs clear.
Water spills out of the Rice cooker during cooking.	Make sure that you add water to the level indicated on the scale inside the inner pot that corresponds to the number of cups of rice used.
Rice smells bad after cooking.	Clean the inner pot with some washing detergent and warm water. After cooking, make sure the steam vent cap, inner lid and inner pot is cleaned thoroughly.

Bahasa Melayu

1 Penting

Baca manual pengguna ini dengan teliti sebelum anda menggunakan Pemamak nasi ini dan simpan untuk rujukan masa hadapan.

Bahaya

- Perkakas tidak boleh diredam.

Amaran

- Perkakas ini tidak boleh digunakan oleh kanak-kanak yang berumur 0 hingga 8 tahun.
- Perkakas ini boleh digunakan oleh kanak-kanak berumur 8 tahun ke atas jika mereka diawasi sepanjang masa atau telah diberikan pengawasan atau arahan berkenaan penggunaan perkakas dengan cara yang selamat dan memahami bahaya yang mungkin berlaku.
- Perkakas ini tidak dimaksudkan untuk digunakan oleh orang (termasuk kanak-kanak) yang kurang upaya dan segi fizikal, daya mental atau kurang berpengalaman dalam pengendalian, melainkan mereka telah diberikan pengawasan atau arahan berkenaan penggunaan perkakas ini oleh orang yang bertanggungjawab atas keselamatan mereka.
- Kanak-kanak perlu diawasi untuk memastikan mereka tidak bermain dengan perkakas ini.
- Jauhkan perkakas dan kord daripada jangkauan kanak-kanak yang berumur kurang daripada 8 tahun.
- Pembersihan dan penyelenggaraan oleh pengguna tidak boleh dilakukan oleh kanak-kanak.
- Perkakas ini hendaklah diletakkan di tempat yang stabil iaitu pemegangnya (jika ada) diletakkan untuk mengelakkan tumpahan atau malarut.
- Perkakas ini dimaksudkan untuk digunakan di dalam rumah dan untuk penggunaan lain yang serupa seperti:
 - Kawasan dapur pekerja di kedai, pejabat dan persekitaran kerja yang lain;
 - Rumah ladang;
 - Oleh pelanggan di hotel, motel dan persekitaran tempat menginap yang lain;
 - Persektaran jenis inap-sarapan.
- Jika set kord kuasa rosak, kord perlu digantikan dengan set kord daripada pengeluar.
- Perkakas memasak hendaklah diletakkan di tempat yang stabil iaitu pemegangnya (jika ada) diletakkan untuk mengelakkan tumpahan cecair yang panas.
- Perkakas ini tidak dimaksudkan untuk dikedahakkan menggunakan pemasa luaran atau sistem kawalan jauh yang berasingan.
- Semak jika voltan yang ditunjukkan pada perkakas sepadan dengan voltan sesaluar kuasa tempatan sebelum anda menyambungny.
- Jangan biarkan kord kuasa terjuntai dari tepi meja atau permukaan ruang kerja tempat perkakas itu diletakkan.
- Pastikan elemen pemanasan dan bahagian luar periuk dalam bersih dan kering sebelum anda memasangkan palam kepada saluran keluar kuasa.
- Jangan masukkan palam perkakas atau tekan sebarang butang pada panel kawalan dengan tangan yang basah.
- AMARAN:** Pastikan anda mengelakkan tumpahan pada penyambung kuasa untuk mengelakkan kemungkian bahaya.
- AMARAN:** Sentiasa ikuti arahan dan menggunakan perkakas dengan betul untuk mengelakkan kemungkian kecederaan.

- Mengikut arahan yang dinyatakan dalam manual pengguna ini, gunakan kain lembut yang lembap untuk membersihkan permukaan yang panas bersentuhan dengan makanan dan pastikan sisa makanan yang melekat pada perkakas dibersihkan juga.
- Jangan letakkan kord kuasa di bawah perkakas semasa sedang digunakan.
- Apabila meletakkan bakul pengukusan, elakkan daripada bersentuh dengan sisi dinding periuk dalam, jika tidak kecacatan mungkin akan berlaku akibat suhu yang tinggi.

Awas

- AWAS:** Permukaan elemen pemanas mungkin mempunyai baki haba selepas penggunaan.
- Jangan sekali-kali gunakan aksesori atau barang-barang ganti daripada pengilang lain atau pengilang yang tidak disyorkan oleh Philips. Jika anda menggunakan aksesori atau barang-barang ganti sedemikian, jaminan akan menjadi tidak sah.
- Jangan dedahkan perkakas pada suhu tinggi, ataupun meletakkannya pada pemanas atau dapur yang sedang terpasang atau masih panas.
- Jangan dedahkan perkakas pada cahaya matahari langsung.
- Letakkan perkakas pada permukaan yang stabil, mendatar dan rata.
- Letak periuk dalam ke dalam perkakas sebelum anda memasukkan palam pada salur keluar kuasa dan menghidupkan perkakas.
- Jangan letakkan periuk dalam terus di atas api terbuka untuk memasak nasi.

- Jangan gunakan periuk dalam sekiranya ia cacat.
- Permukaan yang dapat dicapai mungkin menjadi panas apabila perkakas beroperasi. Ambil langkah lebih berhati-hati apabila menyentuh perkakas.
- Berhati-hati dengan stim panas yang keluar dari bolong stim semasa memasak atau yang keluar dari perkakas semasa anda membuka tudungnya. Jauhkan tangan dan muka daripada perkakas untuk mengelakkan daripada stim.
- Jangan angkat atau pindahkan perkakas semasa ia sedang beroperasi.
- Jangan melebihi paras air maksimum yang ditunjukkan pada periuk dalam agar tidak melimpah kerana ia boleh menyebabkan bahaya.
- Jangan letakkan alat-alat memasak di dalam periuk ketika memasak, menyimpan panas atau memanaskan semula nasi.
- Hanya gunakan alat-alat memasak yang disediakan. Elakkan daripada menggunakan alat-alat yang tajam.
- Untuk mengelakkan calar, memasak raman seperti krustasea dan kerang-kerangan adalah tidak disyorkan. Buang kulitnya yang keras sebelum memasak.
- Jangan masukkan barang logam atau barang asing ke dalam bolong stim.
- Jangan letakkan bahan bermagnet pada tudung. Jangan gunakan perkakas berdekatan bahan bermagnet.
- Biarkan perkakas menyejuk terlebih dahulu setiap kali sebelum anda membersih atau mengilikkannya.
- Sentiasa bersihkan perkakas selepas digunakan. Jangan cucu perkakas dalam mesin basuh pinggan mangkuk.
- Cabut palam perkakas jika tidak akan digunakan untuk tempoh masa yang lama.
- Jika perkakas digunakan dengan cara yang tidak betul atau untuk tujuan profesional atau separa profesional, atau jika ia tidak digunakan mengikut arahan dalam panduan pengguna ini, jaminan menjadi tidak sah dan Philips menolak liabiliti terhadap sebarang kerosakan yang berlaku.

Medan elektromagnet (EMF)
Perkakas Philips mematuhi semua piawaian dan peraturan berkaitan dengan pendedahan kepada medan elektromagnet.

2 Pemamak nasi anda

Tahapiah untuk mendapatkan manfaat sepenuhnya daripada sokongan yang ditawarkan oleh Philips, daftar produk anda di www.philips.com/welcome.

3 Isi kandungan kotak (raj. 1)

Unit utama pemamak nasi	Cawan penyukat
Sudu 2 dalam 1 nasi dan sup	Kord kuasa
Bakul pengukus	Manual pengguna
Kad waranti	Panduan Teknologi Pilihan Rasa

4 Gambaran keseluruhan

Gambaran keseluruhan produk (raj. 2)

① Penutup atas	⑥ Soket kuasa
② Tudung dalam boleh tanggal	⑦ Panel kawalan
③ Periuk dalam	⑧ Bolong stim
④ Penunjuk paras air	⑨ Tukup bolong stim
⑤ Butang pelepas tudung	⑩ Injap stim

Gambaran keseluruhan kawalan (raj. 3)

⑪ Butang batal	⑭ Butang pilihan Menu/Masa
⑫ Pemasa	⑯ Paparan masa
⑬ Butang Pengesahan/Mula	⑰ Butang pilihan Menu/Masa
⑭ Penanda pemasa	⑱ Penanda kekerasan nasi
⑮ Penanda masa pratetap	

Fungsi memasak	Masa memasak lalai	Masa memasak boleh laras
Stim	25 minit	25-59 minit
Masak perlahan	4 jam	3-10 jam
Roti bakar	45 minit	30 minit- 2 jam
Kek	45 minit	Tidak Berkenaan
Daging	90 minit	1-4 jam
Kari	60 minit	1-2 jam
Nasi claypot	60 minit	Tidak Berkenaan
Nasi goreng	25 minit	Tidak Berkenaan
Nasi ayam	50 minit	Tidak Berkenaan
Beras pulut	70 minit	Tidak Berkenaan
Beras susuy	48 minit	Tidak Berkenaan
Beras perang	52 minit	Tidak Berkenaan
	42 minit/L1	Tidak Berkenaan
	50 minit/L2	Tidak Berkenaan
Beras putih*	35 minit/L3	Tidak Berkenaan
	25 minit/L4	Tidak Berkenaan
Pantas dimasak	25 minit	Tidak Berkenaan
Bubur	60 minit	1-3 jam
Sup	2 jam	1-4 jam
Stew	2 jam	2-8 jam
Simpan panas	12 jam	Tidak Berkenaan

*L1=Lembut, L2=Sederhana lembut, L3=Sederhana, L4=Sederhana keras

5 Menggunakan Pemamak nasi

Sebelum penggunaan pertama

- Keluarkan semua aksesori dari periuk dalam. Alih keluar bahan pembungkusan periuk dalam.
- Sebelum penggunaan pertama, dikhidmat air dan bersihkan Pemamak nasi.
- Bersihkan bahagian Periuk Pemasakan serba guna dengan teliti sebelum digunakan untuk kali pertama (lihat bab "Pembersihan dan Penyelenggaraan").

Nota
- Pastikan semua bahagian telah kering sepenuhnya sebelum anda mula menggunakan Pemamak nasi. - Pastikan bahawa bahagian luar periuk dalam adalah kering dan bersih, dan tiada sisa asing pada bahagian luar perkakas.

Persediaan sebelum memasak

Amaran

- Pastikan tudung dalam boleh tanggal dipasangkan dengan betul.

Nota
- Jangan isi periuk dalam dengan makanan dan cecair kurang daripada penunjuk paras air minimum atau lebih daripada penunjuk paras air maksimum. - Untuk memasak nasi, iktu penunjuk paras air di bahagian dalam periuk dalam. Anda boleh melaraskan aras air untuk jenis beras yang berlainan dan mengikut ketinggian anda. Jangan melampaui kuantiti maksimum yang ditunjukkan di bahagian dalam periuk dalam. - Selepas proses memasak dimulakan, anda boleh menekan ➞ untuk menamatkan proses semasa dan perkakas akan beralih kepada mod pemilihan menu.

Lakukan persediaan yang berikut sebelum memasak dengan Pemakas nasi:

- Tekan butang pelepas tudung untuk membuka Pemakas nasi (raj. 4).
- Keluarkan periuk dalam daripada Pemakas nasi (raj. 5).
- Masukkan makanan yang telah dicuci ke dalam periuk dalam, lap bahagian luar dan bawah periuk dalam sehingga kering dengan kain lembut, kemudian masukkan semula ke dalam periuk Pemakas nasi (raj. 6).
- Tutup tudung.
- Pasangkan palam kepada soket kuasa (raj. 7).

Nota
- Pastikan bahagian luar periuk dalam kering dan bersih serta tiada sisa asing pada elemen pemanasan. - Pastikan periuk dalam bersentuhan dengan betul dengan elemen pemanasan.

Memasak nasi

Terdapat 8 fungsi memasak: **Nasi Claypot, Nasi goreng, Nasi ayam, Beras pulut, Masak pantas, Beras putih, Beras Perang dan Beras susuy**. Untuk mengetahui julat masa memasak, rujuk Bab "Program memasak".

- Ikuti langkah dalam "Persediaan sebelum memasak".
- Tekan **Q** atau **Q** untuk memilih salah satu daripada menu memasak (raj. 8).
- Penanda fungsi memasak yang dipilih menyala, masa memasak lalai akan dipaparkan pada skrin.
- Untuk fungsi **Beras putih**, anda boleh memilih **Q** atau **Q** untuk memilih kekerasan nasi mengikut citarasa anda (raj. 9).
- Lampu penanda kekerasan nasi akan dipaparkan pada skrin.
- Tekan **➞** untuk mengesahkan, Pemakas nasi akan mula beroperasi dalam mod yang dipilih.
- Apabila selesai memasak, anda akan dengar bunyi bip 4 kali dan lampu fungsi memasak yang dipilih akan mati.
- Pemakas nasi akan berada dalam mod simpan panas secara automatik.
- Penunjuk simpan panas menyala.

