

菲林号: 80-M890BT-97-0001-01 2025-9-27


材质: 120g铜版纸

尺寸: 95*212mm (成品尺寸)


颜色: 黑白印刷

要求: 按封面和封底页风琴折

折页示意图

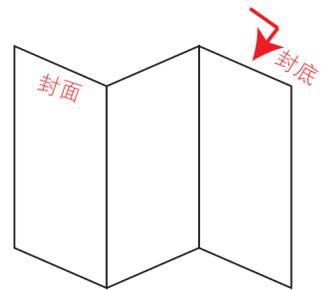

封面

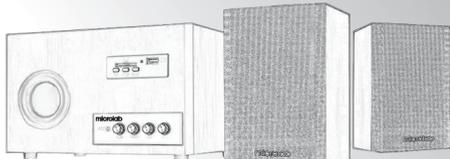

M890BT
User Manual

microlab

Thank you for purchasing Microlab products. More information, please visit our website:
<http://www.microlab-electronics.com>
<http://www.microlab.cn>


Important Safety Instructions

1. Read these instructions-All the safety and operating instructions should be read before this product is operated.
2. Keep these instructions - The safety and operating instructions should be retained for future reference.
3. Heed all warnings - All warnings on the appliance and in the operating instructions should be adhered to.
4. Follow all instructions - All operating and use instructions should be followed.
5. Do not use this apparatus near water - The appliance should not be used near water or moisture for example, in a wet basement or near a swimming pool, and the like.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacture's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat
9. Only use attachments/accessories specified by the manufacture.
10. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/appliances combination to avoid injury from tip-over.
11. Unplug the apparatus during lightning storms or when unused for long periods of time.
12. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
13. **WARNING:** To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture. The apparatus shall not be exposed to dripping or splashing and that objects filled with liquids, such as vases, shall not be placed on apparatus.
14. **CAUTION:** Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
15. **WARNING:** The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.



16. This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock. Warning: To reduce the risk of electric shock, do not remove cover (or back) as there are no user-serviceable parts inside. Refer servicing to qualified personnel. The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.
17.  Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. The can take this product for environmental safe recycling.
18. No naked flame sources, such as lighted candles, should be placed on the apparatus.
19. Replacement parts-When replacement parts are required, ensure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
20. Try to install the product near a wall socket or extension cord and shall be easily accessible.
21. The highest environmental temperature suitable for this product is 0°C-35°C indoor use only.

Illustrations

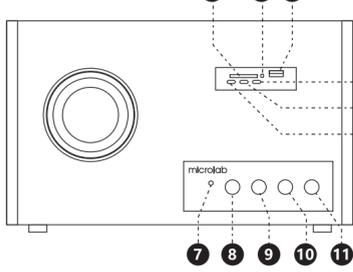

- 1 SD Card port
- 2 LED indicator: **RED** for Aux/FM; **BLUE** for Bluetooth; **PINK** for USB/SD;
- 3 USB port
- 4 Short press for **NEXT**; Long press for **VOLUME +**
- 5 Short press for **PREVIOUS**; Long press for **VOLUME -**
- 6 **MODE**: Long press for **MODE** selection; In Bluetooth mode: short press for **PLAY/PAUSE**; In FM mode: short press for **SCAN**;
- 7 Power indicator
- 8 **VOLUME** adjustment
- 9 **BALANCE** adjustment
- 10 **TREBLE** adjustment
- 11 **BASS** adjustment


封底






www.microlab-electronics.com
www.microlab.cn
Microlab Electronics Co., Ltd
Made in China

microlab

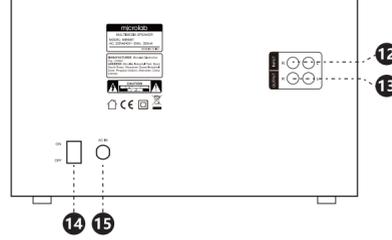

- 12 **AUDIO INPUT** for Aux in
- 13 **AUDIO OUTPUT** to satellite speaker
- 14 **POWER SWITCH**
- 15 **AC IN**
*Prior to initial use: please ensure AC ratings matched that of country in use.

Introduction

Connections:

Prior to connecting the speakers, ensure the AC power plug is unplugged from the AC source and ensure the volume knob is set to minimum.

1. Connect the satellites to audio outputs at the rear of the subwoofer.
2. Connect the AC power cord to the power supply source.
3. Please ensure the AC power supply match the power requirement printed at the rear panel.

Bluetooth Mode:

1. Long press "MODE" button to switch Bluetooth mode.
2. The LED will change to blue and flash quickly.
2. Search from your Bluetooth device and select "M890BT", pairing until there is a prompt tone.

* In Bluetooth mode, press and hold the previous and next buttons for 2 seconds, it will disconnect and return to pairing mode.

Aux Mode:

1. Connect the 3.5mm Line-in jack to the PC, laptop or smart devices.
2. Short press "MODE" button to switch Aux mode.
3. The LED will change to red.
4. Start the playback device and song.

USB / TF card Mode:

Insert a USB/TF card into the port and it will automatically start to play.

FM Mode:

1. Press the Mode button to FM mode.
2. Short press the MODE to automatically scan and save FM radio station.
3. Press the Previous/Next button to select the radio station.

Package contents:

- Subwoofer x1
- Satellites x2
- 3.5mm audio cable x1
- User manual x1

Specification:

Bluetooth 5.0
Power Output: 40W RMS
Power Distribution: 16 W+ 12 W x 2
Frequency Response: 35 Hz-20 KHz
Harmonic Distortion: 0.5% 1W 1KHz
Signal/Noise Ratio: 75dB
Separation: 45dB

Driver:
Subwoofer 5.25" , 4Ω
Midrange 3.0" x 2, 4Ω
Tweeter 1.0" x 2, 8Ω

Audio Input: 2 RCA, USB, SD, FM
Audio Output: 2 RCA
Power Input : AC 220-240V~ 50Hz