


品名: HD0303说明书 风琴折页

规格: 100X140MM

材质: 80g铜版纸

HYUNDAI

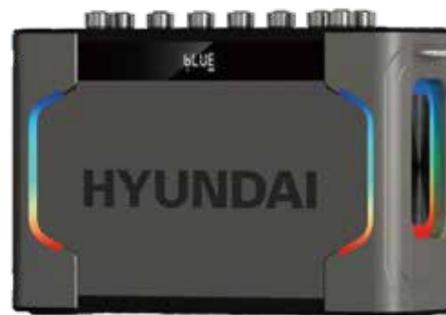

MODEL:HD0303


User's Manual
Product instruction manual



THANK YOU FOR BUYING

Thank you for using our digital products. In order to let you experience the product smoothly, we provide detailed instructions. You can find information about the product, how to use it and so on. Please read the instructions carefully before using this product. We apologize for any inconvenience caused by printing or translation errors.

FUNCTION DESCRIPTION

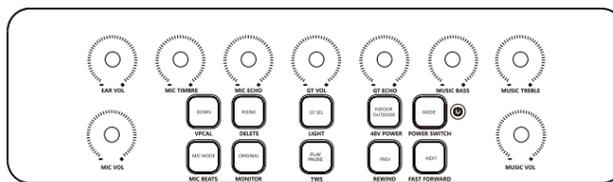


Key combination functions

Power switch / mode: Press and hold the power button to turn on or off the device. Press the mode button briefly to switch between Bluetooth / AUX / USB / TF card.
48V/Indoor/Outdoor: Press the 48V phantom power button briefly to activate it, and press and hold it for a long time to switch between indoor and outdoor modes.
Light control / Instrument selection: Press the LED switch briefly, hold it down for long to select the instrument sound effect.
Recording deletion / pitch adjustment: Short press to delete the recording, long press to raise the pitch of the music.
Cancel original sound / Lower pitch: Short press to cancel original sound, long press to lower pitch of the music.
Microphone Magic Sound/Microphone Mode: Press the microphone magic sound briefly, hold the microphone mode for a long time.
Listen/Original Tone: Short press the earphone listening switch, long press the original music tone
TWS/Play/Pause: Press the TWS button briefly to pause the music; press it for a longer time to stop playing.

1

Fast Rewind/Previous Track: Short press to go to the previous track, long press to fast rewind.
Fast forward/Next song: Press the music button briefly to skip to the next song, press it for a long time to quickly enter the next track.
[Microphone volume]
Adjust the volume of the microphone. Clockwise rotation increases the microphone volume, while counterclockwise rotation decreases it.
[Headphone Volume]
Adjust the volume of the headphones' audio output. Clockwise rotation increases the volume of the headphones' audio, while counterclockwise rotation decreases it.
[Microphone Sound]
Adjust the tone and volume of the microphone. Clockwise rotation increases the microphone tone and volume, while counterclockwise rotation decreases it.
[Microphone Reverb]
Adjust the size of the microphone reverberation. Clockwise rotation increases the microphone reverberation, while counterclockwise rotation reduces it.
[Instrument Volume]
Adjust the volume of the instrument. Clockwise rotation increases the instrument's volume, while counterclockwise rotation decreases it.
[Instrument Reverb]
Adjust the size of the instrument reverb. Clockwise rotation increases the instrument reverb, while counterclockwise rotation reduces it.
[Music Bass]
Adjust the volume of the music. Clockwise rotation increases the volume of the music, while counterclockwise rotation decreases it.
[High-pitched music]
Adjust the volume of the music. Clockwise rotation increases the volume of the music high notes, while counterclockwise rotation decreases the volume of the music high notes.
[Music Volume]
Adjust the volume of the music. Clockwise rotation increases the music volume, while counterclockwise rotation decreases it.

2

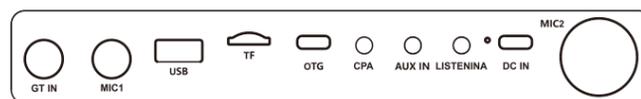


Instrument Input: Instrument input interface, which can be connected to 6.5mm standard wired instruments for use.
Microphone input: Microphone input port, capable of connecting a 6.5mm standard wired microphone.
USB: Insert the USB drive into the USB socket, and the speaker will automatically switch to USB mode and play the MP3 songs stored inside.
TF: Insert the TF card into the TF socket, and the speaker will automatically switch to TF mode and play the MP3 songs stored inside.
OTG: OTG Digital Live Streaming Input Interface (Some mobile phones without OTG interface need to be equipped with an adapter)
Capacitive microphone: Capacitive microphone input interface
AUX IN: Connect the speaker and the playback device using a 3.5mm cable.
Manually switch the speaker to the audio input.
Headphone monitoring: Insert the headphones and listen through them.
LED: Red light indicates charging, green light indicates full charge.
DC IN: DC 5V Charging Input
MIC2: Audio Input from a Mixer

3

REMOTE CONTROL

This remote control needs 2 AAA batteries of No.7, please install the batteries correctly and aim at the receiving window of the speaker remote control when using

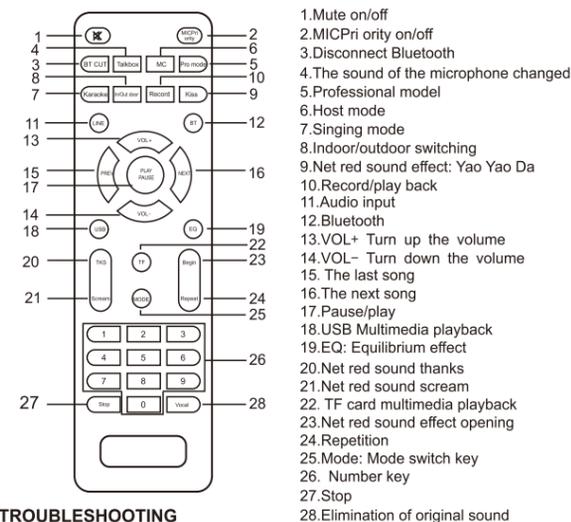

TROUBLESHOOTING

1. Music cannot be played: MP3 files' saving path cannot be identified by into disk's root folder.
2. No sound: check whether the volume has been turned down or muted.
3. No sound after connecting with computer: incorrect connection, please connect correctly.
4. Button has no function or incorrect function: Turn the power button off and back on, or unplug the power and reinstall it.
5. Cannot connect or pair with a Bluetooth device:
 - I. Ensure your Bluetooth device is turned on (smartphone, tablet, computer).
 - II. Ensure the speaker is turned on.
 - III. If the speaker is ON but not pairing, please relaunch the speaker and reconnect.

4

Imported/Distributed by E-NOVA TECH CO., LTD
Licensed by HYUNDAI Corporation Holdings, Korea
Company phone number: 0979 545 053