 


Home Theatre System

Reference Guide

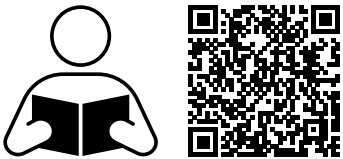

https://rd1.sony.net/help/ht/2100/h_zz/

©2026 Sony Corporation
Printed in China



BRAVIA Theatre Trio Model: YY2100C

English Home Theatre System

Before using the unit, be sure to access the following URL and read the End User License Agreement (EULA). The content of the agreement also applies to speakers (available separately) connected to the unit (unless those speakers have a separate license agreement).

https://rd1.sony.net/help/vs/el22/h_zz/

Model: YY2100C

The term "product" in this document refers to the unit or its accessories.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on the product.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

For Remote Commander

CAUTION

Risk of explosion if battery is replaced by an incorrect type.
Dispose of used batteries according to local rules and regulations.

Do not expose the batteries (battery pack or batteries installed) to excessive heat, such as sunshine, fire or the like, for a long time.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are attached in the following locations:

- the bottom of the unit

For details on the effects of contact with the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

This unit has been tested and found to comply with the limits set out in the EMC regulation using a connection cable shorter than 3 m.

Reduction in the Use of Hazardous Substances in Electrical & Electronic Equipment (Applicable in Republic of India)
This product and its components, consumables, parts or spares comply with the hazardous substances restriction of India's E-Waste (Management) Rules. The maximum allowable concentrations of the restricted substances are 0.1% by weight in homogenous materials for Lead, Mercury, Hexavalent Chromium, Polybrominated Biphenyls (PBB) and Polybrominated Diphenyl Ethers (PBDE), and 0.01% by weight in homogenous materials for Cadmium, except for the exemptions specified in Schedule II of the aforesaid Rules.

Information related to Plastic Waste Management Rules (Republic of India only)
Brand Owner: Sony India Private Limited
Registration No.: BO-25-000-07-AABCS157IQ-22
Thickness of plastic packaging is above 50 microns wherever applicable.

For customers in Australia or New Zealand

This product must be installed and operated with at least 20 cm separation between the radiating element and the human body (excluding extremities: hands, wrists, feet and ankles).

Precautions

On the power cord

- The supplied AC power cord (mains lead) is designed exclusively for this unit. It should not be used in combination with any other devices.
- Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
- If the AC power cord (mains lead) is damaged, contact your nearest Sony dealer or the store you purchased the product from for a replacement.

On placement

- Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
- The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit or near it.
- Do not place metal objects other than a TV around the unit. Wireless functions may be unstable.

How to care for the unit

- Any dust or dirt on the fabric part should be gently removed with a soft cloth.
 - Scratching the dirt off with the fingernails or applying excessive force may damage the fabric.
 - Do not use cleaning brushes, etc., as such tools may damage the fabric depending on the tool material.
 - If the fabric part is heavily soiled, wipe it with a soft cloth lightly dampened with a neutral detergent, then wipe it again with a soft dry cloth.
- Use of detergents or cleaners other than neutral detergent may cause color fading or fabric damage.
- Wipe the cabinet with a soft cloth dampened with a mild detergent. Do not use abrasive pads, cleansers, or solvents like alcohol or benzene.

On BLUETOOTH® communications

- Microwaves emitting from a BLUETOOTH device may affect the operation of electronic medical devices. Turn off this unit and other BLUETOOTH devices in the following locations, as it may cause an accident:
 - in hospitals, near priority seating in trains, locations where inflammable gas is present, near automatic doors, or near fire alarms.

Notes on transferring/dispersing

- Be sure to reset the unit, deleting private information and setting information before transferring/dispersing.
If the unit is transferred or disposed without resetting, private information may be inspected by a third person and abused.
For details of the resetting method, refer to Help Guide.

Other notes

- If a foreign object or water gets into the unit, turn off the unit immediately, unplug the unit from the AC outlet (mains), and consult with your nearest Sony dealer or the store you purchased the product from.
- **Data Processing Related to Internet Connection and System Software Update**
When this product connects to the Internet, Sony Corporation ("Sony") will process your IP address. Additionally, when this product needs to perform an update to receive the latest operating system software, display Privacy Policy through the "Sony | BRAVIA Connect" app or receive third party services, Sony will process IP address, version information of Privacy Policy, software version and country/region code of this product. If you do not want such data to be processed, do not set-up the wireless internet function.
Please note that the legal basis under EU law for Sony processing the above data for your internet connection and the provisions of software updates are the performance of the contract we have with you.
For more information about how Sony handles your data and your privacy rights, and for contact details if you have questions or concerns, please access the following URL and read the Privacy Policy. https://ssh-app-config.data-gateway.seeds.services/hec/pp/hec_pp_index.html
- When connecting the unit to the Internet, use the router (ADSL modem or optical line termination device with the router function supplied with the Internet provider, or Wireless LAN access point). If you connect to the Internet without using the router, a security problem may occur. If you are not sure that the wall outlet for the network line has the router function, ask your manager of the apartment house or Internet provider.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

How To Use


Installation, connection, and initial settings of the unit must be performed in accordance with the "Sony | BRAVIA Connect" app installed on your smartphone. For more information on how to use the unit, access the Help Guide from the URL on the cover of this document.

Mounting on a Wall


Refer to the Help Guide from the URL on the cover of this document for more details and other installation method.

Notes

 - Make sure to use the supplied wall mounting brackets when mounting the center speaker on a wall. Do not mount the center speaker directly on a wall. The temperature inside the center speaker rises considerably, which may cause damage or malfunction.
- Hang the center speaker horizontally on a reinforced wall.
- Ask a Sony dealer or licensed contractor to install the speakers securely and with full consideration of safety.
- Sony shall not be held responsible for any accidents or damage caused by improper installation, lack of installation stability, misuse, or natural disaster.
- For safety, at least two persons should work together to mount the center speaker.
- Prepare screws (not supplied) suitable for the wall material and hardness. Depending on the wall material, screws that are not suitable may damage the wall.
- Fasten the screws securely into the wall beam.

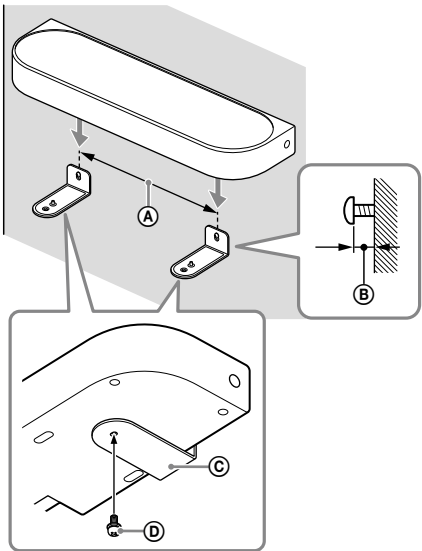

 - Ⓐ Distance between the screws (commercially available) for wall installation: 334 mm
- Ⓑ Gap between the wall installation screw head and wall: 3.5 mm to 4.5 mm
- Ⓒ Wall mounting bracket (supplied)
- Ⓓ Screw (supplied)

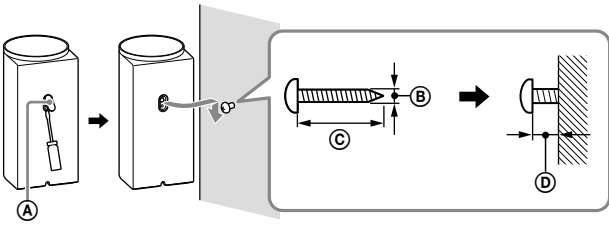

- Ⓐ Cover (supplied)
- Ⓑ 4 mm
- Ⓒ Longer than 30 mm (approx.)
- Ⓓ 11 mm (approx.)

Included Items

- Speaker (CENTER) (1)
- Speaker (FRONT L) (1)
- Speaker (FRONT R) (1)
- Calibration microphone (USB Type-C®) (1)
- Remote control (1)
- Battery (2)
- WALL MOUNT TEMPLATE (Paper) for the center speaker (1)
- WALL MOUNT TEMPLATE (Paper) for the front speaker (2)
- Wall mounting bracket (2)
- Foot (2)
- Screw (2)
- HDMI cable (4K, 8K transmission supported) (1)
- AC power cord (mains lead) for the center speaker (1)
- AC power cord (mains lead) for the front speaker (2)
- Documents (1 set)

Specifications

Center speaker (YY2100C1)

Amplifier section

POWER OUTPUT (rated)
Center L + Center R speaker blocks: 33 W + 33 W (at 6 Ω, 1 kHz, 1% THD)
Center tweeter speaker block: 33 W (at 6 Ω, 10 kHz, 1% THD)
POWER OUTPUT (reference)
Center L/Center R speaker blocks: 45 W (per channel at 6 Ω, 1 kHz)
Center tweeter speaker block: 45 W (at 6 Ω, 10 kHz)

Wireless LAN section

Communication system
IEEE 802.11 a/b/g/n/ac/ax
Frequency band
2.4 GHz, 5 GHz, 6 GHz bands

BLUETOOTH section

Frequency band
2.4 GHz band (2,400 0 GHz - 2,483 5 GHz)

USB section (For service use only)

FOR SERVICE port
Type A (For connecting USB memory)

HDMI section

Connector
Type A (19pin)

Wireless transmitter/receiver section

Communication system
Wireless Sound Specification
Frequency band
5 GHz, 6 GHz bands

General
Power
AC 220 V - 240 V, 50 Hz/60 Hz
Power consumption
On: 31 W
Network standby mode ([Network/Bluetooth Standby] is set to ON): 3.5 W or less
Standby mode ([Network/Bluetooth Standby] is set to OFF): 0.5 W or less
When [Signal Pass Through] is set to [Off], or when [Signal Pass Through] is set to [Auto] and the connected TV is turned off.
Changing the settings of the unit as described below will cause the power consumption to exceed the value listed above.
– Set [Signal Pass Through] to [On]
– Set [Signal Pass Through] to [Auto] and [Control for HDMI] to [Off]
When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the center speaker automatically enters the network standby mode or standby mode.
Disabling the [Auto Standby] function will increase the power consumption of this product.

Dimensions (W × H × D)
Including projecting parts and controls.
Center speaker: Approx. 589 mm × 64 mm × 165 mm
Center speaker with the Foot: Approx. 589 mm × 76 mm × 165 mm
Center speaker with the Wall mounting bracket: Approx. 589 mm × 72 mm × 178 mm

Mass
Center speaker: Approx. 3.2 kg
Center speaker with the Foot: Approx. 3.2 kg
Center speaker with the Wall mounting bracket: Approx. 3.6 kg

Front speaker (YY2100C2/ YY2100C3)

The following descriptions are the specifications per speaker.

Amplifier section

POWER OUTPUT (rated)
Top speaker: 33 W (at 6 Ω, 1 kHz, 1% THD)
Tweeter: 33 W (at 4 Ω, 10 kHz, 1% THD)
Woofer: 33 W (at 6 Ω, 1 kHz, 1% THD)
POWER OUTPUT (reference)
Top speaker: 45 W (at 6 Ω, 1 kHz)
Tweeter: 45 W (at 4 Ω, 10 kHz)
Woofer: 45 W (at 6 Ω, 1 kHz)

Wireless transmitter/receiver section

Communication system
Wireless Sound Specification
Frequency band
5 GHz, 6 GHz bands

General

Power
AC 220 V - 240 V, 50 Hz/60 Hz
Power consumption
On: 26 W
Network standby mode (power indicator is lit in red): 1.8 W or less
Turned off (power indicator is off): 0.3 W or less
When you press and hold the LINK for 2 seconds or more and then release your finger, the speaker shifts to the power off mode and the power indicator is turned off. Press the LINK to use the speaker again.

Dimensions (W × H × D)
Including projecting parts and controls.
Approx. 160 mm × 337 mm × 165 mm

Mass
Approx. 3.6 kg

Calibration microphone (ECM-AC4)

Directional characteristic
Omni directional
Effective frequency range
30 Hz - 16 kHz
Connector
USB Type-C® port
Power
Plug-in power (DC 5 V 30 mA)
Dimensions (W × H × D)
Not including USB Type-C® connector.
Approx. 70 mm × 12 mm × 12 mm

Mass
Approx. 6 g

Design and specifications are subject to change without notice.

The 6 GHz radio frequency band would be accessible in countries or regions wherever, it is allowed.

Depending on the connected device, the available radio frequency varies.

Trademarks

- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license.
 - USB Type-C® and USB-C® are registered trademarks of USB Implementers Forum.
 - The terms HDMI™, HDMI High-Definition Multimedia Interface, HDMI Trade dress and the HDMI Logos are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.
 - LDAC and LDAC logo are trademarks of Sony Group Corporation or its affiliates.
- All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
https://rd1.sony.net/help/ht/sl/26b/
- The software included in this product contains copyrighted software that is licensed under the GPL/LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL.
You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL.
This offer is valid to anyone in receipt of this information.
https://oss.sony.net/Products/Linux/
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- The Spotify Software is subject to third party licenses found here:
https://www.spotify.com/connect/third-party-licenses.
- Dolby, Dolby Vision, Dolby Atmos, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation. Manufactured under license from Dolby Laboratories. Confidential unpublished works. Copyright © 2012–2024 Dolby Laboratories. All rights reserved.
- Manufactured under license from IMAX Corporation. IMAX® is a registered trademark of IMAX Corporation in the United States and/or other countries. For DTS patents, see http://xperi.com/dts-patents/. Manufactured under license from DTS, Inc. and its affiliates. DTS, DTS:X, and the DTS:X logo are registered trademarks or trademarks of DTS, Inc. and its affiliates in the United States and/or other countries. © DTS, Inc. and its affiliates. ALL RIGHTS RESERVED.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

