 


Rear Speaker

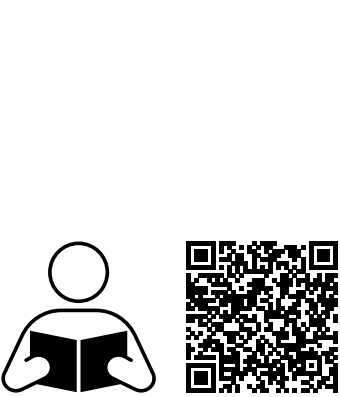

https://rd1.sony.net/help/ht/2101/h_zz/



©2026 Sony Corporation
Printed in China



Before using the unit, be sure to access the following URL and read the End User License Agreement (EULA).
https://rd1.sony.net/help/vs/e122/h_zz/

Model: YY2101C

The term “product” in this document refers to the unit or its accessories.

Do not install the product in a confined space, such as a bookcase or built-in cabinet.

To reduce the risk of fire, do not cover the ventilation opening of the unit with newspapers, tablecloths, curtains, etc. Do not expose the unit to naked flame sources (for example, lighted candles).

To reduce the risk of fire or electric shock, do not expose this product to dripping or splashing, and do not place objects filled with liquids, such as vases, on the product.

The unit is not disconnected from the AC power source (mains) as long as it is connected to the wall outlet, even if the unit itself has been turned off.

Install the unit so that the power cord can be unplugged from the wall socket immediately in the event of trouble.

This product has magnet(s) which may interfere with pacemakers, programmable shunt valves for hydrocephalus treatment, or other medical devices. Do not place this product close to persons who use such medical devices. Consult your doctor before using this product if you use any such medical device.

The nameplate and important information concerning safety are attached in the following locations:

- the bottom of the unit

For details on the effects of contact with the human body from the mobile phone or other wireless devices connected to the unit, refer to the instruction manual of the wireless device.

For customers in Taiwan

 
Without permission granted by the NCC, no company, enterprise, or user shall change frequency, enhance transmitting power or alter original characteristics as well as performance of approved low power radio-frequency devices.

The low power radio-frequency devices shall not influence aircraft security nor interfere with legal communications; If found, the user shall cease operating immediately until no interference is achieved. The said legal communications refers to radio communications operated in compliance with the Telecommunications Management Act. The low power radio-frequency devices must endure interference from legal communications or ISM radio wave radiated devices.

The operations near the radar system shall not be influenced.
The directed antenna with high gain must apply to the fixed point-to-point system only.

WARNING: Risk of electric shock, do not disassemble.

For customers in Singapore



Precautions

On the power cord

- The supplied AC power cord (mains lead) is designed exclusively for this unit. It should not be used in combination with any other devices.
- Completely disconnect the AC power cord (mains lead) from the AC outlet (mains) if it is not going to be used for an extended period of time. When unplugging the AC power cord (mains lead), always grip the plug. Never pull the cord itself.
- If the AC power cord (mains lead) is damaged, contact your nearest Sony dealer or the store you purchased the product from for a replacement.

On placement

- Do not place the unit near heat sources or in a place subject to direct sunlight, excessive dust, or mechanical shock.
- Place this unit on a flat, level surface. When placed on a sloped surface, the unit may fall over or fall off the surface due to its own vibration, resulting in injuries, malfunctions, or performance degradation.
- Use caution when placing the unit on a surface that has been specially treated (with wax, oil, polish, etc.), as staining or discoloration of the surface may result.
- The speakers of this unit are not of magnetically shielded type. Do not place magnetic cards on the unit or near it.
- Do not place metal objects other than a TV around the unit. Wireless functions may be unstable.

How to care for the unit

- Any dust or dirt on the fabric part should be gently removed with a soft cloth.
- Scratching the dirt off with the fingernails or applying excessive force may damage the fabric.
- Do not use cleaning brushes, etc., as such tools may damage the fabric depending on the tool material.
- If the fabric part is heavily soiled, wipe it with a soft cloth lightly dampened with a neutral detergent, then wipe it again with a soft dry cloth.
- Use of detergents or cleaners other than neutral detergent may cause color fading or fabric damage.
- Wipe the cabinet with a soft cloth dampened with a mild detergent. Do not use abrasive pads, cleansers, or solvents like alcohol or benzene.

Notes on transferring/disposing

- Be sure to reset the unit, deleting private information and setting information before transferring/disposing.
 - If the unit is transferred or disposed without resetting, private information may be inspected by a third person and abused.
- For details of the resetting method, refer to Help Guide.

Other notes

- If a foreign object or water gets into the unit, turn off the unit immediately, unplug the unit from the AC outlet (mains), and consult with your nearest Sony dealer or the store you purchased the product from.

- Data Processing Related to Internet Connection and System Software Update**
When this product connects to the internet, Sony Corporation (“Sony”) will process your IP address. Additionally, when this product needs to perform an update to receive the latest operating system software, display Privacy Policy through the “Sony | BRAVIA Connect” app or receive third party services. Sony will process IP address, version information of Privacy Policy, software version and country/region code of this product. If you do not want such data to be processed, do not set-up the wireless internet function.
Please note that the legal basis under EU law for Sony processing the above data for your internet connection and the provisions of software updates are the performance of the contract we have with you.
For more information about how Sony handles your data and your privacy rights, and for contact details if you have questions or concerns, please access the following URL and read the Privacy Policy. https://ssh-app-config.data-gateways.seeds.services/hec/pp/hec_pp_index.html
- When connecting the unit to the Internet, use the router (ADSL modem or optical line termination device with the router function supplied with the Internet provider, or Wireless LAN access point). If you connect to the Internet without using the router, a security problem may occur. If you are not sure that the wall outlet for the network line has the router function, ask your manager of the apartment house or Internet provider.
- If you have any questions or problems concerning this unit that are not covered in this manual, please consult your nearest Sony dealer.

How To Use

Make sure you follow the instructions for installing and connecting the rear speaker in the Help Guide.
Access the Help Guide from the URL on the cover of this document.
You may need to update the software of the compatible model to connect to this rear speaker.

This rear speaker only works with specific compatible models.
Please check the latest compatible model information at the following URL:
https://www.sony.net/comp-home/

 
Mounting on a Wall

Refer to the Help Guide from the URL on the cover of this document for more details and other installation method.

Notes

- Ask a Sony dealer or licensed contractor to install the speakers securely and with full consideration of safety.
- Sony shall not be held responsible for any accidents or damage caused by improper installation, lack of installation stability, misuse, or natural disaster.
- Prepare screws (not supplied) suitable for the wall material and hardness. Depending on the wall material, screws that are not suitable may damage the wall.
- Fasten the screws securely into the wall beam.

To mount on a wall directly

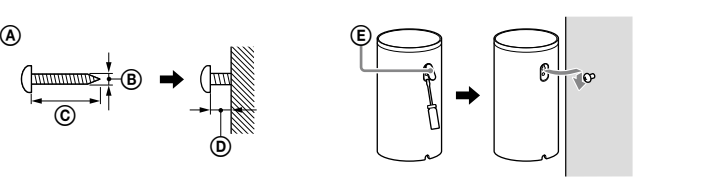

Ⓐ A screw (not supplied) that is suitable for the wall mounting hole on the rear of the speakers

Ⓑ 4 mm

 
Ⓒ More than 30 mm

Ⓓ Approx. 12 mm

Ⓔ Cover

To mount on a wall using the supplied wall mounting bracket

The speaker can be rotated and installed to face the listening position.
Be sure to refer to the Help Guide from the URL on the cover of this document for instructions on how to install the speaker.

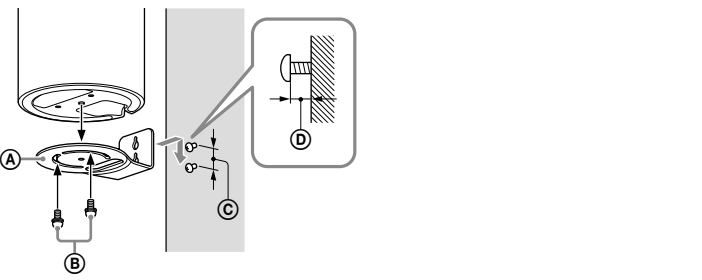

Ⓐ Wall mounting bracket (supplied)

Ⓑ Screw (supplied)

Ⓒ Distance between the screws (not supplied) for wall installation: Approx. 21 mm

Ⓓ Approx. 3 mm

Included Items

Rear speaker (REAR L) (1)
Rear speaker (REAR R) (1)
Wall mounting bracket (2)
Screw (4)
Models for Taiwan:
AC power cord (mains lead) (2)
Models for other countries/regions:
AC power cord (mains lead) (4)
Documents (1 set)

Specifications

Rear speaker (YY2101C)

The following descriptions are the specifications per speaker.

Amplifier section

POWER OUTPUT (rated)
Top speaker: 32 W (at 6 Ω, 1 kHz, 1% THD)
Tweeter: 8 W (at 4 Ω, 10 kHz, 1% THD)
Woofer: 32 W (at 6 Ω, 1 kHz, 1% THD)
POWER OUTPUT (reference)
Top speaker: 40 W (at 6 Ω, 1 kHz)
Tweeter: 10 W (at 4 Ω, 10 kHz)
Woofer: 40 W (at 6 Ω, 1 kHz)

Wireless LAN Section

Communication system
IEEE 802.11 a/b/g/n/ac/ax
Frequency band
2.4 GHz, 5 GHz, 6 GHz bands

BLUETOOTH® section

Frequency band
2.4 GHz band (2,400 0 GHz - 2,483 5 GHz)

Wireless transmitter/receiver section

Communication system
Wireless Sound Specification
Frequency band
5 GHz, 6 GHz bands

General

Power
Models for Taiwan:
AC 120 V, 50 Hz/60 Hz
Models for other countries/regions:
AC 220 V - 240 V, 50 Hz/60 Hz
Power consumption
On: 22 W
Network standby mode: 1.8 W or less
Turned off: 0.3 W or less
When the [Auto Standby] function is enabled, if the product is not being operated and there is no signal input for about 20 minutes, the product automatically enters the network standby mode or turned off.
Disabling the [Auto Standby] function will increase the power consumption of this product.
When this product is connected to home audio equipment, the power of the product is controlled in conjunction with the auto standby function of home audio equipment.

Dimensions (W × H × D)
Including projecting parts and controls.
Speaker: Approx. 154 mm × 286 mm × 154 mm
Speaker with the Wall mounting bracket: Approx. 154 mm × 294 mm × 167 mm

Mass
Speaker: Approx. 2.7 kg
Speaker with the Wall mounting bracket: Approx. 2.9 kg

Design and specifications are subject to change without notice.

The 6 GHz radio frequency band is unavailable in some countries/regions.

Depending on the connected device, the available radio frequency varies.

Trademarks

- The BLUETOOTH® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Sony Group Corporation and its subsidiaries is under license. All other trademarks and registered trademarks are trademarks or registered trademarks of their respective holders. In this manual, ™ and ® marks are not specified.

Licenses

- This product contains software that Sony uses under a licensing agreement with the owner of its copyright. We are obligated to announce the contents of the agreement to customers under requirement by the owner of copyright for the software. Please access the following URL and read the contents of the license.
https://rd1.sony.net/help/ht/sl/26d/
The software included in this product contains copyrighted software that is licensed under the GPL/ LGPL and other licenses which may require access to source code. You may find a copy of the relevant source code as required under the GPL/LGPL (and other licenses) at the following URL. You may obtain the source code as required by the GPL/LGPL on a physical medium from us for a period of three years after our last shipment of this product by applying through the form at the following URL.
This offer is valid to anyone in receipt of this information.
https://oss.sony.net/Products/Linux/
Please note that Sony cannot answer or respond to any inquiries regarding the content of this source code.
- Services offered by third parties may be changed, suspended, or terminated without prior notice. Sony does not bear any responsibility in these sorts of situations.

繁體中文

後置揚聲器

使用本裝置之前，請務必連接下列URL，並閱讀最終使用者授權協議（EULA）。
https://rd1.sony.net/help/vs/e122/h_zz/

型號: YY2101C

本文件中的用語“產品”是指裝置或其配件。

請勿將本產品安裝於密閉的空間內，例如書架或內建的櫃體內。

為減少起火的危險，請勿用報紙、桌布、窗簾等遮蔽本裝置的通風口。請勿將本裝置暴露於明火（例如，點燃的蠟燭）。

為減少火災或電擊的危險，請勿將本產品放置於滴水或瀝水之處，也請勿在本產品上放置裝有液體的物品，例如花瓶。

只要將本裝置連接至牆壁插座，即使處於關閉狀態，也不會斷開本裝置與AC主电源的連接。

安裝本裝置，以便在發生故障時可以立即從牆壁插座拔除電源線。

本產品有磁力，可能會干擾心律調節器、用於腦積水治療的可調式引流閥或其他醫療器材。請勿將本產品放在此類醫療器材使用者的附近。如果您使用任何此類醫療器材，請在使用本產品前諮詢您的醫生。

銘板和有關安全的重要資訊位於下列位置：

- 本裝置的底部

關於連接本裝置的行動電話或其他無線裝置接觸到人體所產生的影響，請參閱無線裝置的說明手冊。

對於台灣客戶

取得審驗證明之低功率射頻器材，非經核准，公司、商號或使用者均不得擅自變更頻率、加大功率或變更原設計之特性及功能。

低功率射頻器材之使用不得影響飛航安全及干擾合法通信；經發現有干擾現象時，應立即停用，並改善至無干擾時方得繼續使用。

前述合法通信，指依電信管理法規作業之無線電通信。低功率射頻器材須忍受合法通信或工業、科學及醫療用電波輻射性電機設備之干擾。

應避免影響附近雷達系統之操作。
高增益指向性天線只得應用於固定式點對點系統。

委製廠商：Sony Corporation

進口商：台灣索尼股份有限公司

地址：台北市中山北路二段42號5樓

服務電話：4499111（手機撥號請加02）

單元	限用物質及其化學符號					
	鉛 (Pb)	汞 (Hg)	鎘 (Cd)	六價鎘 (Cr ⁺)	多溴聯苯 (PBB)	多溴二苯醚 (PBDE)
電路板	－	○	○	○	○	○
外殼	－	○	○	○	○	○
揚聲器	－	○	○	○	○	○
配件 (電源線)	－	○	○	○	○	○
備考1. "○" 係指該項限用物質之百分比含量未超出百分比含量基準值。 備考2. "－" 係指該項限用物質為排除項目。						

原產地：越南

警語：觸電危險，請勿拆解

預先注意事項

關於電源線

- 附帶的交流電源線專為本裝置而設計。它不應配合任何其他裝置來使用。
- 如果本裝置將長時間不使用，請從交流電源插座完全拔出交流電源線。拔出交流電源線時，務必握住插頭來拔出。絕勿拉扯電線。
- 如果交流電源線損壞，請聯絡鄰近的Sony經銷商，或您購得產品的商店以便更換。

關於放置

- 請勿將本裝置置放於靠近熱源的地方，或者會受到陽光直曬、灰塵過多或機械性撞擊的地方。
- 請將本裝置置於平坦、水平的表面上。本裝置置放於傾斜表面上時，可能因為本身的震動而傾倒或從表面掉下來，造成傷害、故障，或效能降低。
- 將本裝置放置於經特別處理（打蠟、塗油、拋光等）的表面上時，請務必小心，否則可能會造成表面著色或變色。
- 本裝置的揚聲器並非磁屏蔽型。請勿將磁卡放置在本裝置上面或附近。
- 請勿將電視機以外的金屬物放在本裝置附近。無線功能可能不穩定。

如何保養本裝置

- 使用軟布輕輕擦除纖維物部分上的任何灰塵或油污。
 - 用指甲刮除油污或施加過多的力量，可能造成纖維物損壞。
 - 請勿使用清潔刷等工具，因為依據工具材料，這些工具可能會造成纖維物損壞。
- 如果纖維物部分嚴重磨損，請使用浸有中性清潔劑的軟布輕輕擦拭，然後再使用柔軟的乾布擦拭。
 - 使用中性清潔劑以外的除子劑或清潔劑可能會導致變色或纖維物損壞。
- 請使用浸有溫水和清潔劑的軟布擦拭櫃。請勿使用砂紙、除汗粉，或酒精和苯等溶液。

轉移/處置的注意事項

- 在轉移/處置之前，請務必重設裝置，刪除私人資訊和設定資訊。若未經重設而轉移或處置裝置，則私人資訊可能遭第三者檢視和濫用。有關重設方法的詳情，請參閱說明指南。

其他注意事項

- 如果有貨物或水進入裝置中，請立即關閉裝置的電源，從交流電源插座拔出裝置，然後聯絡鄰近的Sony經銷商，或您購得產品的商店。
- 與網際網路連接和系統軟體更新相關的資料處理**
本產品連接到網際網路時，Sony公司（“Sony”）將處理IP位址。此外，當本產品需要執行更新以接收最新的作業系統軟體、透過“Sony | BRAVIA Connect”應用程式顯示隱私政策或接收第三方服務時，Sony將處理本產品的IP位址、隱私政策版本資訊、軟體版本和國家/地區代碼。若不希望處理此類資料，請勿設置無線網路功能。
請注意，根據歐盟法律規定，Sony處理上述有關網際網路連接和提供軟體更新的資料的法律依據係履行我們與您簽訂的合約。
有關Sony如何處理您的資料和您的隱私權的詳細資訊，以及如果您有問題或疑問需獲取聯絡詳情，請訪問以下URL並閱讀隱私政策。
https://ssh-app-config.data-gateway.seeds.services/hec/pp/hec_pp_index.html
- 將本裝置連接到網際網路時，請使用路由器（ADSL數據機，或網際網路提供者所附帶具備路由器功能的光線路終端裝置，或無線LAN存取點）。如果沒有使用路由器而連接到網際網路，可能會發生安全問題。如果您不確定網路線的牆壁插座是否具備路由器功能，請詢問公寓管理員或網際網路提供者。
- 如果您對本裝置有任何本手冊沒有說明的疑問或問題，請就近與Sony經銷商聯絡。

如何使用

請確保依照說明指南中的指示安裝和連接有源後置揚聲器。
請從本文件封面上的URL來存取說明指南。
可能需要更新相容機型的軟體以連接到本有源後置揚聲器。

本有源後置揚聲器僅適用於特定的相容機型。
請造訪下列URL查看最新的相容機型資訊：
https://www.sony.net/comp-home/

 
安裝到牆上

請從本文件封面上的URL來參閱說明指南，以瞭解更多細節和其他安裝方法。

附註

- 請Sony經銷商或持有執照的承包商以標明且充分考量安全要素的方式安裝揚聲器。
- 若因不當安裝、安裝不牢固、使用不當或自然災害造成的任何意外或損壞，Sony概不負責。
- 請準備適合牆壁材質和硬度的螺絲（無附帶）。根據牆壁的材質，使用不合適的螺絲可能會損壞牆壁。
- 請將螺絲牢牢地固定在牆線上。

直接安裝到牆上

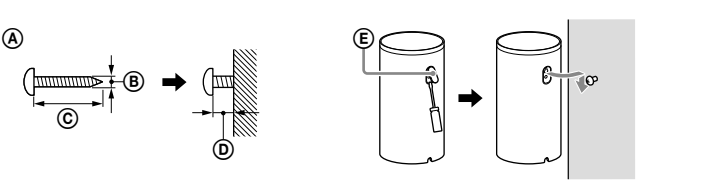

Ⓐ 適合揚聲器背面壁掛式安裝孔的螺絲（無附帶）

Ⓑ 4 mm

 
Ⓒ 30 mm以上

Ⓓ 約12 mm

Ⓔ 護蓋

使用附帶的壁掛式支架安裝在牆壁上

揚聲器可旋轉安裝，以朝向聆聽位置。
請務必從本文件封面上的URL來參閱說明指南，以瞭解如何安裝揚聲器的指示。

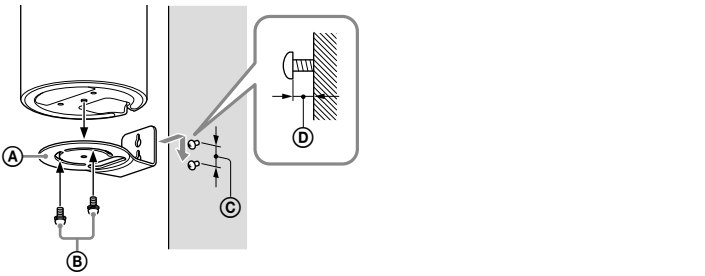

Ⓐ 壁掛式支架（附帶）

Ⓑ 螺絲（附帶）

Ⓒ 用於牆壁安裝的螺絲（無附帶）之間的距離：約21 mm

Ⓓ 約3 mm

隨附物品

有源後置揚聲器（REAR L）（1）
有源後置揚聲器（REAR R）（1）
壁掛式支架（2）
螺絲（4）
台灣機型：
交流電源線（2）
其他國家/地區的機型：
交流電源線（4）
文件（1組）

規格

後置揚聲器（YY2101C）

下列說明為各揚聲器規格。

放大器部分

功率輸出（額定）
頂部揚聲器：32 W（6歐姆，1 kHz，1% THD）
高音揚聲器：8 W（4歐姆，10 kHz，1% THD）
低音揚聲器：32 W（6歐姆，1 kHz，1% THD）
功率輸出（參考）
頂部揚聲器：40 W（6歐姆，1 kHz）
高音揚聲器：10 W（4歐姆，10 kHz）
低音揚聲器：40 W（6歐姆，1 kHz）

無線LAN部分

通訊系統
IEEE 802.11 a/b/g/n/ac/ax
頻率波段
2.4 GHz，5 GHz，6 GHz波段

BLUETOOTH®部分

頻率波段
2.4 GHz波段（2,400 0 GHz – 2,483 5 GHz）

無線傳輸器/接收器部分

通訊系統
無線聲音規格

頻率波段
5 GHz，6 GHz波段

一般常規

電源
台灣機型：
AC 120 V，50 Hz/60 Hz
其他國家/地區的機型：
AC 220 V – 240 V，50 Hz/60 Hz

耗電量
開啟：22 W
網路待機模式：1.8 W或以下
關閉：0.3 W或以下
[自動待機]功能啟用時，若產品沒有操作而且沒有訊號輸入達約20分鐘，產品會自動進入網路待機模式或關閉。
停用[自動待機]功能會增加本產品的耗電量。
當本產品連接到家用音訊設備時，本產品的電源將與家用音訊設備的自動待機功能一同控制。

尺寸 | 寬 × 高 × 深 |
包括突出部分和控制網。
揚聲器：約154 mm × 286 mm × 154 mm
帶壁掛式支架的揚聲器：約154 mm × 294 mm × 167 mm

質量
揚聲器：約2.7 kg
帶壁掛式支架的揚聲器：約2.9 kg

設計及規格如有變更，恕不另行通知。

有些國家/地區無法使用6 GHz無線電頻率波段。

可用無線電頻率視連接的裝置而異。

商標

- BLUETOOTH®字樣與商標為Bluetooth SIG, Inc.所擁有的註冊商標；Sony Group Corporation及其子公司針對此標顯示的使用已獲得授權。

所有其他商標與註冊商標是其相關所有者的商標或註冊商標。在本手冊中，未標明™與®標誌。

</

