**CUCKOO** 

Electric Rice cooker/warmer 전기 보온 밥솥 Operating Instructions 사용설명서

**CR-0631F Series** 



сискоо

IB:88

#### CONTENTS



#### Thank you very much for purchasing "CUCKOO" Electric Rice cooker/warmer

Read all instructions before use. Save these instructions for future reference.

## CONTENTS

#### **BEFORE USING**

Important safeguards	3
Specifications	4
Caution for safety	5
Cleaning and Maintenance	7
Name of each part	8
Function operating part	9

#### WHEN USING

How to set time
Before cooking rice
For tasty rice 12
How to cook
How to use "MY MODE" 15
How to use "GABA" 17
How to use "STEAM"
How to use "SLOW COOK" 20
How to preset the timer
To keep warm the cooked rice tasty

## BEFORE ASKING FOR SERVICE 고장 신고 전에

#### 저희 쿠쿠 보온밥솥을 애용해 주셔서 대단히 감사 드립니다.

이 사용설명서는 잘 보관하여 주십시오. 사용 중에 모르는 사항이 있을 때나 기능이 제대로 발휘되지 않을 때 많은 도움이 될 것입니다.

## 목 차

#### 사용하기전에

Important safeguards 3
제품규격
안전을 위한 주의 사항30
제품 손질 방법
각 부분의 이름 ~~~~~34
기능 조작부의 설명

#### 사용할 때

현재시각의 설정
취사전 준비사항
맛있는 밥을 드시려면
취사는 이렇게 하십시오
맞춤밥맛 기능은 이렇게 하십시오 41
현미발아는 이렇게 하십시오43
찜은 이렇게 하십시오45
웰빙쿡은 이렇게 하십시오46
예약 취사는 이렇게 하십시오48
밥을 맛있게 보온하려면

고장신고 전에 확인 하십시오 ··	
--------------------	--

## **IMPORTANT SAFEGUARDS**

# When using electrical appliances, basic safety precautions should always be followed, including the following :

- Read all instructions.
- ▶ Do not touch hot surfaces. Use handles or knobs.
- ▶ To protect against electrical shock do not immerse cord, plugs in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions, or is dropped or damaged in any manner.
- Return appliance to your nearest authorized service facility for examination, repair, or electrical or mechanical adjustment.
- If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
- The use of accessary attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- ▶ Do not let cord hang over edge of table or counter, or touch hot surfaces.
- ▶ Do not place on or near a hot gas or electric burner, on in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into wall outlet.
- ▶ To disconnect, turn any control to "off", then remove plug from wall outlet.
- ▶ Do not use appliance for other than intended use.
- ▶ Do not obstruct the steam vent hole with any articles, e.g.a piece of cloth.
- Do not place the inner pot directly over flame for cooking.

## SAVE THESE INSTRUCTIONS THIS APPLIANCE IS FOR HOUSEHOLD USE ONLY

## ADDITIONAL IMPORTANT SAFEGUARDS

- Avoid touching hot parts : outer lid, inner pot, inner lid and especially the steam vent hole.
- ▶ Do not switch on when the main body is empty.
- Make sure that heating plate and the magnetic switch are clean and dry whenever putting the inner pot into the cooker.
- ▶ Do not use sharp instruments to clean the inner pot as these will damage the nonstick coating.
- A short power-supply cord is to be provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord.
- Longer detachable power-supply cords or extension cords are available and may be used if care is exercised in their use.

## SHORT CORD INSTRUCTIONS

#### Note:

- **A.** A short power-supply cord (or cord set) is to be provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- B. Longer cord set or extension cords are available and may be used if care is exercised in their use.
- C. If a long cord set or extension cord is used.
  - (1) the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
  - (2) if the appliance is of the grounded type, the extension cord should be a grounding-type three-wire cord, and
  - (3) the longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over accidentally.

This appliance has a polarized plug : (one blade is wider than the other).

As a safety feature, this plug will fit in a polarized outlet only only one way.

If the plug does not fit fully in the outlet, reverse the plug.

If it still does not fit, contact a qualified electrician.

Do not attempt to defeat this safety feature.

#### Keep out of reach of children to avoid possible injury.

## SPECIFICATIONS / 제품규격

모델명 (M	odel Name)	CR-0631F	
전원 (Po\	wer Supply)	220 V ~/ 50-60 Hz	
소비전력(Power	취사 (Cook)	580W	
Consumption) Approx(약)	보온 (warm)	80W	
	백미(Glutinous)	2 ~ 6 cup	
취사용량	현미발아(GABA)	2 ~ 4 cup	
(Cooking Capacity)	잡곡/현미(Mixed/Brown)	2 ~ 4 cup	
	죽(Porridge)	1 ~ 1.5 cup	
전원 코드 길이 (P	ower Cord Length)	1.2m	
치수(Dimension)	폭 (Width)	23.5cm	
	길이 (Length)	31.7cm	
	높이 (Height)	21.3cm	

**CAUTION :** During use, the internal parts of the rice cooker and the area around the steam vent are **HOT.** 

## CAUTION FOR SAFETY

► The following must be observed to use the product safely and correctly to prevent accident and dangerous situations.

 $\Lambda$ 

▶ 'Warning' and 'Caution' are different as follows.

#### \Lambda WARNING

This means that the action it describes may result in death or severe injury.

#### 

This means that the action it describes may result in injury or property damage.

- This sign is for reminding something may cause problems under the certain situation.
- Please read and follow the instruction to avoid any harmful situation.
- · Indicates a prohibition
- Indicates an instruction

## 🕂 WARNING

Do not use the cooker near hot things such as stove, gas stove or direct ray of light.

It can cause an electric shock, fire, transformation or discoloration.

This device is not intended for use by people who lack physical, sensory, and mental abilities or lack the experience and knowledge to safely use the device without supervision or instruction, including children.



 Device may cause electric shock, burns, etc

## Do not plug or pull the power cord with wet hands.

▶ It can cause an electric shock.

#### When you pull out the power plug, don't pull the power cord. Please, surely pull out the power plug.

▶ It can cause an electric shock.

## Use a single socket with the rated current above 15A.

- Using several lines in one socket can cause overheating resulting in fire.
- ► Use the extension cord with the rated current above 15A.





It can cause an electric shock or fire.



- ▶ It can cause an electric shock or fire.
- ► If it contact water, please separate power cord and contacts dealer or service center.

#### Do not cover the automatic steam outlet or pressure weight with your hand or face.

- ▶ It can cause burns.
- Especially be careful to keep it out of reach of children.

## Do not use damaged power cord, plug or loose socket.

- ► It can cause an electric shock, short circuit or fire.
- ► If the plug were damaged, contact dealer or a service center.



## CAUTION FOR SAFETY

## **WARNING**

## Do not bend, tie or pull the power cord by force.

► It can cause an electric shock or short circuit resulting in fire.



## Remove an alien substance on plug with the clean cloth.

▶ It can cause fire.

#### Do not use on a rice chest or a shelf.

 Do not press the power code between furniture.
 It can cause an electric shock resulting in fire.



► When use on furniture automatic steam releasing can cause damage, fire and an electric shock.

#### Clean any dust or alien substance off the temperature sensor, heating plate and inner pot.



▶ It can cause a system problem or fire.

## Please clean the body and other parts after cooking.

▶ It can cause the transformation or smell.



## Please surely pull out the plug when not in use.

- It can cause an electric shocks or fire.
- ► Use AC 220V only.



## Do not open the top cover while in heating and cooking.

- ► It can cause burns.
- ► If you need to open the lid while cooking, keep pressing the cancel button for 2 seconds and confirm internal steam released

#### Use product at the flat place. Do not use on the cushion. Please avoid using it on an unstable location easy to be fallen down

- ▶ It can cause a transformation or a fire.
- ▶ It can cause burns or breakdowns.
- ► Be careful to install the power cord which does not disturb to pass.

## Don't spray or put any insecticide and chemicals.

- It can cause an electric shock or fire.
- In case cockroach or any insects get inside of the cooker please call a dealer or a service center.

#### Do not cover the automatic steam outlet or pressure weight with a duster, a towel or apron, etc.

- ▶ It can cause a transformation or a breakdown.
- ▶ It can cause an explosion by pressure.

## Do not press heavy things on the

power cord.



It can cause an electric shock or fire.

#### Be careful both plug and power cord not to be shocked by animal attack or sharp metal materials.

 Damages by impact can cause an electric shock or fire.





## CLEANING AND MAINTENANCE

- Negligent cleaning may cause a bad smell while keeping the rice warm. Clean the lid frequently

(Clean the rice cooker after pulling out the plug and waiting until the main body cools.)

- Wipe the main body and the lid with a dry dishcloth. Do not use benzene or thinners.
- The rice water left on the inner lid or in the inner pot may form a starch film but it is harmless.

#### Inner Pot



Wipe alien materials and moisture from the outer and the bottom of the inner pot. Using a rough sponge, brush or abrasive may result in peeling of the coating. Use dishwashing detergent and a soft cloth or sponge.

#### Pot Water Groove



The rice water generated while cooking is designed to be collected in the dew dish. After cooking, clean it with a dry dishcloth.

#### Inner Lid



If rice water remains on the inner lid, wipe the lid with a dry dishcloth. Since the edge of the lid is made of metal, clean it with care.

#### Inside the main body



If alien materials stick to the temperature detector, remove them avoiding damaging the metal plate. Wipe alien materials or moisture from the thermal plate.

#### How to clean

 Never use the hazardous chemical. (ex : benzene, varnish and so on)

#### The steam cap



lock

unlock

1. Remove the steam cap by simply pulling it off from the lid after every use.



- 3. Assemble the 2 parts by snapping them together.
- Attach the steam cap fimly to the lid and rotate on both directions to ensure that it is fixed properly.

After wipe with beca sme

 Before cleaning, unplug the steam cap.

After cooking, wipe the water with a wet cloth because of the smell.

If there is any alien substance on the temperature sensor carefully wipe it out without damping the metal plate.

## NAME OF EACH PART



#### How to assmble the steam cap



Hold the steam cap then assemble it to LOCK as arrow direction like picture.



 After assembling steam cap surely, put it to mainbody.

#### Rice measuring cup

## FUNCTIONS OF OPERATING PARTS



\*Press the buttons until you hear a buzzer sound. The design of this template may differ from the actual product.

#### Error Codes and Possible Causes

When the product have any problem or use it inappropriately you can see the below mark.

When the inner pot is not placed into the unit.



Temperature sensor problem. (Consult the service center and dealer)



When the operation don't finish for a long time. (Consult the service center and dealer)



When setting preset time longer than 13 hours. Set the preset time within 13 hours.

## HOW TO SET TIME

Connect the power plug.

1 second.











- ▶ Make sure not to change A.M. and P.M.
- Each time you press Hrs button, the time increases after 1 hour.
- Each time you press Min/My Mode button, the time increases after 1 minute.
- ▶ In case of 12:00 at noon, it will be displayed 12:00 P.M.



시 Hrs

Hrs



#### It will automatically start in 7 second.

- Once time is set, colon (:) does not blink and set time is displayed with a buzzer.
- Set time is stored pressing other buttons except for Hrs, Min/My Mode, and Cancel buttons.

#### How to set up the current time during keep warming

- 1. If you want to change the current time during keep warming, press Cancel button and then set up the current time.
- 2. When finish setting the current time, press Heat/Reheat button. At the time '[]+' sign is displayed.

#### About Lithium battery

- 1. This product contains lithium battery for improving blackout compensation and time. Lithium battery lasts for 3 years depending on using condition.
- 2. When current time does not be displayed on the screen, it means the battery is exhausted. It should be changed new one.

#### What is blackout compensation

- 1. This product memories previous condition and process. After finishing blackout, it operates immediately.
- 2. If blackout happens during cooking, the cooking time will be delayed depending on blackout time.
- 3. If the rice became cold because of blackout, warming will be cancelled.

## **BEFORE COOKING RICE**

Clean the inner pot with a dishcloth.

Clean the inner pot and remove any moisture.

Measure the rice correctly with a measuring cup.
 Rice level with the top of the measuring cup corresponds to person.

(Example: 3 persons for 3 cups, 3 persons for 6 cups)

▶ Using a rough sponge may cause peeling of the inner surface of the inner pot.





## 3 Clean the rice in a separate container until the water becomes clear.

#### 4 Adjust the water amount in accordance with the menu.

- ▶ Place the inner pot on a flat surface and adjust the water amount up to the water level line.
- ▶ The water level line is marked on the inner pot.
- Adjustment of water height
  - Glutinous : Adjust water based on 'Glutinous' water level line.
    - Max.6 persons for glutinous are available
  - Mixed/Brown, GABA: Adjust water base on "Mixed/Brown, GABA" water level line.

Max.4 persons for Mixed/Brown and GABA are available

- Porridge: Adjust water base on "Porridge" water level line.
  - Max. 1.5 persons for porridge are available



#### 5 Put the inner pot into the main body and cover the inner lid.

- · Completely insert the inner pot with care.
- If alien materials like rice are attached to the bottom of the inner pot, rice may not cook or the cooker may not work correctly.

## FOR TASTY RICE

### How to Cook Tasty Rice

#### ▶ Observe the following instructions for tasty rice:

Measure rice with a measuring cup. Pour water up to the water level line of the inner pot.	<ul> <li>Always measure rice correctly with the measuring cup. (The rice amount measured by a commercial rice container may vary depending on products.)</li> <li>Adjust water amount to the water level line after placing the inner pot on a flat surface.</li> </ul>	If the amount of water is incorrect for rice amount, the rice may be undercooked or scorched.
Store rice correctly.	<ul> <li>Purchase rice in as small quantity as possible and avoid direct sunlight or hot and humid places to prevent rice moisture from being vaporized.</li> <li>For dried rice unpacked for a long time, it is better to cook with more water (about a half water level line).</li> </ul>	If rice was dried up, it may be hard or undercooked.
It is better to make the timer cooking short.	<ul> <li>For dried-up rice, avoid timer cooking if at all possible and add water (about a half water level line).</li> </ul>	Timer cooking over 10 hours or with dried rice may cause rice to be undercooked, scorched or cooked unevenly.
It is better to make the warm time short.	<ul> <li>It is recommended to keep rice warm for less than 12 hours.</li> </ul>	Keeping rice warm for a long time may cause it to be discolored or develop an odor.
Always clean the cooker.	Clean the cooker frequently.     In particular, wipe alien materials from the lid frequently.	Negligent cleaning may cause an odor while keeping rice warm.

## HOW TO COOK



## Press the Menu button and select the desired menu.

- Whenever pressing the Menu button, the menu is changed in sequence of Glutinous, GABA, Mixed/Brown, Porridge, Steam, Slow cook.
- Once Glutinous rice, GABA and Mixed/Brown rice are cooked, their menus are memorized. So, you may not select the menus for the same menu.



Example) Selection of Mixed/Brown rice

#### 3 Steaming boiled rice (example: Glutinous rice)

- $\cdot$  The remaining cook time is shown on the display from the steaming boiled rice process.
- $\cdot$  The remaining time may vary depending on the menu.



Press the Cook/Turbo button to start cooking.



Example) Cooking Glutinous rice

#### Completion of cooking

4

- $\boldsymbol{\cdot}$  When the cooking is completed and a beep sounds, the Keep Warm function starts.
- When rice is cooked, quickly stir the rice. If the rice is not stirred, the rice may be discolored or develop an odor.
- $\boldsymbol{\cdot}$  Do not press the Cancel button while cooking. The cooking will be canceled.



## Cooking Time by Menu

Category	Menu	Glutinous	Turbo	GABA	Mixed/Brown	Porridge	Slow cook
Cooking Quantity	CR- 0631F	2~6 persons	2~4 persons	2~4 persons	2~4 persons	1~1.5 persons	Refer to Page 21.
Cookir	ig Time	36~53 min.	33~41 min.	80~88 min.	52~63 min.	90 min.	

- If you cook rice after cooking steamed dish, an odor may permeate the rice. (Clean the lid referring to Page 7.)
- ▶ The cooking time by menu may vary depending on the operating environment.

## HOW TO COOK

#### Choose cook menu

Glutinous	When you cook white rice	Porridge	Cooks glutinous into porridge
Mixed/ Brown	When you cook long rice or brown rice	Steam	The unit cooks all kind of stew by setting cooking time
Turbo function	Press twice "Cook/Turbo" Button after choosing "Glutinous" and it will switch to quick cooking It takes about 31~36 minutes for person.		
GABA	This function will be used for germinated brown rice.	Slow cook	This function can be cooked porridge, soup and healthy tea with low temperature cooking.

#### **Melanoizing effect**

The cooked rice can be light yellow at the bottom of the oven, because this product is designed to improve pleasant flavor and taste.

Especially, melanoizing is more serious at the "Preset cooking" than just "Cooking". It does not mean malfunction.

## HOW TO USE "MY MODE"

#### What is "MY MODE"?

Cuckoo's patented technology based on variable circuit design. User can select the degree of "softness" and "glutinosity & tastiness" to meet a user's specific taste.

#### **MY MODE Function**

Longer "SOAK" Time : rice becomes soft and sticky. (selectable in 4 steps) Longer "HEAT" Time : rice becomes tasty (selectable in 4 steps) [melanizing will occur] \* Above 2 functions can be selected both or individually.

#### How to use "MY MODE" Setting screen ▶ If you press the "Min/My mode" button, " 🕹 🛛 " appears along with a buzzer sound as shown in the figure below \* This picture is example. Setting "MY MODE" and extended "SOAK" Press the menu button and select Menu "Glutinous" or "GABA" or "Mixed/Brown" Press "Hrs" button to set "SOAK" Setting "HEAT" and save ▶ If you press the Cancel button Press "Min/My mode" button to set "HEAT" or 7 seconds pass with no Press "Cook/Turbo" button to save then input, the function is cancelled and the mode returns to press "Cook/Turbo" button again. Standby mode.

#### Cautions

- 1. 'MY MODE' function may influence scorching or cooking quality. Ensure that cooking time is not changed by children.
- \*Default settings are "SOAK" Time 0 min( "b: ""), "HEAT" Time 0 min( "h: "")
- 2. 'MY MODE' function may elongate cooking time according to set-up time.
- 3. Scorching of rice may occur by longer "HEAT" Time( "h:").

#### This is a Graph of 16 cuckoo custom-made rice taste function



- \*1. The rice becomes solid and sticky.
- \*2. The rice becomes soft and well-raised rice.
- \*3. The rice becomes soft and sticky.

ENGLISH

#### **Customized Cooking Function**

It is Cuckoo's unique technology to adjust the stages of the cooking temperature according to customer's taste.

If you press the My mode button, My mode appears along with a buzzer sound as shown in the figure below:



- 1. The My mode function is applied Glutinous rice, GABA, Mixed/Brown rice, Porridge, Steam, Slow cook. menus in a batch.
- 2. Based on '*E*: **1**', set the stages of the cooking temperature according to your taste. Rice may be scorched in the high cooking stage.
- 3. After setting each stage, cooking status may vary according to rice status in cooking status and water content percentage.

#### **Reset Function (Customization/Function)**

- 1. This function is used to reset all setting values such as customized rice taste, customized cooking, customized warming and keep warm during sleep.
- 2. Press the Cancel button for 5 seconds in standby mode.
- 3. The current time is initialized at 12:00. For the setting of the current time, refer to Page 10.

## HOW TO USE "GABA"

#### What is Germinated Brown rice?

▶ Brown rice has richer nutrients than polished rice. However, brown rice is rather tough and harder to be digested. By a least germination, the enzymes in the brown rice are activated, generating nutrients and more digestible.

#### **Tips to Buy Quality Brown Rice**

#### 1 Check the dates of harvest and pounding.

▶ The dates should be within 1year from a harvest, 3 months from pounding.



#### 2 Inspect rice with your eyes.

· heck that embryo is alive



- Rice surface should be light yellow and glazing. Whitely stirred up surface, or darkish colored Brown rice is not suitable for a germination
- Avoid fractured, not fully corned, or empty ear. Empty ear may generate odor during germination and bluish- nor corned Brown rice cannot be germinated.

(Poor brown rice- Empty ear and nit fully corned brown rice)

#### Features of Germinated Brown rice

Germinated Brown rice increases nutrients and enhances taste which is a weak point of brown rice. Germinated Brown rice also improves digestibility.

- ► Taste will be greatly enhanced.
- ► Digestive and rich in nutrients.
- Diatetic hormone is generated improving digestibility.
- Good as a health food for children or students.
  - Rich with dietary fiber.
- Germinated brown rice has rich GABA (Gamma Amino Butryc Acid)
- GABA promotes metabolism in liver and kidneys, suppresses neutral fat, lowers blood pressure, promotes metabolism in brain cells these effects have been proved by medical science.



<Comparison of Germinated brown rice's nutrition and Glutinous rice's(6 hours) nutrition.>

- ▶ Phytic acid 10.3Times
- ▶ Ferulic acid 1.4Times
- Gamma-orizanol
   23.9Times
- Gammma-aminobutyric 5Times
- ► Inositol 10Times
- ► Food fiber 4.3Times

Based on japan food analysis center

#### Using "GABA" Menu

## In order to promote germination, soak brown rice for 16 hours in water.

#### **Method of Pre-germination**

- ▶ Put washed brown rice in an appropriate container, pour sufficient water to soak the rice.
- Pre-germination shall not exceed 16 hours. Make sure to wash rice clean with flowing water before using "GABA" menu. Be careful that too hard washing may take off embryos which generate the germination.
- Unique smell may be generated according to the soaking time of pre-germination.
- ▶ When pro-germination has been completed, wash the rice and put in inner pot (Oven). Pour appropriated volume of water, and use "GABA" menu.
- In summer or hot temperature environment odor may be generated. Reduce germination time and wash clean when cooking.

#### 2 Set the Lock/ Unlock handle at "Lock", press Menu button to select "GABA".



Default setting: 2 Hours

When the "GABA" is selected, "2H" is indicated in the display.

#### 3 Press Hrs and Min /My Mode buttons to set time.

- Pressing Hrs button increases germination time by 2 hour.
- Pressing Min/My Mode button decreases germination time by 2 hour.
- ► "GABA" time can be set-up by 0, 2, 4, 6 hours.
- If "GABA" time is set "0" hours, pressing Pressure Cook/Turbo button will start cooking immediately. To cook without germination or cooking germinated Brown rice, set the time at "0".

#### 4 Press Pressure Cook/Turbo button.

3 more hours for germination

- Pressing Pressure Cook/Turbo button will begin the "GABA" process, after which. cooking will begin immediately.
- During "GABA" mode, "Cook" indicator will be lit together with the germination time left.

#### Precautions for "GABA" Cooking (no cooking preset time allowed)

- ► If smaller germ is preferred, omit pre-germination process. Select "GABA" menu, set-up appropriate germination time, and start cooking (nutrient ingredients do not vary significantly by the size of germ).
- During hot seasons, longer germination time may generate odor. Reduce germination time.
- ► GABA cooking is allowed up to 6 persons.
- ► City water can be used for germination. However, spring water is recommended. Germination may not be properly performed in hot or boiled water even after cooling.
- Germination rate, germ growth may differ by the Brown rice kind, condition or period of storing, etc.
   Germinated brown rice is sprouted brown rice. Germination rate and growth may differ by the Brown rice kind. The brown rice should be within 1 year from harvest, and not long since pounded.
- ▶ In GABA mode, preset on 4H, 5H, 6H may not be possible. If you want to preset the GABA, set up " []H"

## HOW TO USE "STEAM"





If the Steam menu is selected, the display shows '20 min'.







 If you press the Hr. button, the Steaming time increases by 5 minutes.



2. If you press the Min/My mode. button, the Steaming time reduces by 5 minutes. 3. The Steaming time can be configured up to 10 ~ 60 minutes.



If the Steam function starts, the cooking status is marked and the remaining time is shown on the display.



#### 4 How to preset the Steaming function



## HOW TO USE "SLOW COOK"



# HOW TO USE "SLOW COOK"

#### How to use Slow cook

Food	Menu	Preparations	Procedure
Pumpkin Porridge		500g pumpkins peeled 100g glutinous rice flour a teaspoon of sugar, a teaspoon of salt	<ol> <li>Pumpkins peeled cut into thin slices.</li> <li>Pour 3 cups of water and glutinous rice flour Into the inner pot.</li> <li>Put the sliced pumpkins into the inner pot and select [SLOW COOK] by pressing the menu button. Set the Slow cook time to 3 hours. And Press the Cook/Turbo button.</li> <li>After Slow cooking, grind it using a sieve or a blender then put some sugar and salt as your taste.</li> </ol>
Vegetable porridge		Rice of 1 person, 50g carrots 50g onions, 30g green onions a teaspoon of salt, a teaspoon of pepper	<ol> <li>Carrots, oinons and green onions cut into thin slices.</li> <li>Put 1 portion of rice, julienne Carrots, oninons, green onions into the inner pot. Then pour 2<sup>1</sup>/<sub>2</sub> cups of water into the inner pot.</li> <li>Close the lid and select [SLOW COOK] by pressing the menu button. Set the Slow cook time to 5 hours. And Press the Cook/Turbo button.</li> <li>When finishing the slow cook, put some salt and pepper as taste.</li> </ol>
Vegetable soup	Slow cook	30g carrots, 30g onions, 30g potatoes 30g Mushrooms, 20g sirloins 100g vichyssoise 1 tablespoon olive oil, a tea spoon of salt	<ol> <li>Onions, potatoes and carrots cut into thin slices.</li> <li>Chop mushrooms as regular size.</li> <li>Fry the chopped ingredients with 1 tablespoon olive oil.</li> <li>Close the lid and Pour 3 cups of water and put powder of cream soup into the inner pot. Put the roasted ingerdients then close the lid.</li> <li>After Slow cooking, grind it using a sieve or a blender then put some sugar and salt as your taste.</li> </ol>
Jujube Tea		180g jujubes, $\frac{1}{2}$ grain of gingers, a teaspoon of honey	<ol> <li>Clean and peel the gingers. then cut into thin slices</li> <li>Put jujube, gingers peeled Into the inner pot. And pour the water up to water level 4 for Glutinous.</li> <li>Look the inner lid and select [SLOW COOK] by pressing the menu button. Set the Slow cook time to 8 hours. And Press the Cook/Turbo button.</li> <li>After Slow cooking Put some honey as your taste. And stir the food.</li> </ol>

## HOW TO PRESET THE TIMER

## How to preset

#### Check if the current time and the menu are correct.

- Refer to page 10 for the time setting method.
- If the current time is not set correctly, the presetting time also be incorrect. (Make sure not to change A.M. and P.M.)
- If the menu is incorrect, press the "Menu" button and select the desired menu.



#### Press the "Timer" button.

- The default for set time is 6: 30 A.M. If you want to preset at this time, you do not need to set the preset time.
- If you press Timer button, previously inputted preset time is displayed and the timer lamp will be on.
- By using Hrs., Min/My mode buttons, set the finishing cooking time.
- \* Set the preset time within 7 seconds after pressing Timer button.



#### Set the presetting time.

- ► Set the presetting time with the "Hrs" and "Min/My mode" button. \* If the preset time is already correct, you do not need to set time again.
- 분 Min My Mod 맞춤밥및 Example) When you want to eat the rice at 7:30A.M. Press the "Timer" button and then press the "Min/My mode" button, set time at 7 hours. And press the "Min/My mode" button, set time at 30

Hrs

Menu





When finish presetting, the time lamp will be on.

for the "Min/My mode" button is 1 minute.)

The preset time will be stored. If you want to cook the rice to the preset time already entered, press the "Timer" button

minutes. (The unit for the "Hrs" button is 1 hour and the unit





## HOW TO PRESET THE TIMER

#### Precautions for preset cooking

#### If you want to use preset cooking

- ▶ If rice was dried-up, it may be hard or undercooked.
- There is a chance to cook hard or undercook depending on preset time and cooking conditions.

#### 2 If you want to change preset time

▶ If you want to change preset time, press cancel button and start as new.

#### If setup time is shorter than preset time

▶ If setup time is shorter than preset time, the cooking starts immediately.

#### 4 If setup time exceeds 13 hours

- Preset time will be changed automatically and displays "[]H<sub>a</sub>" when setup time exceeds 13hours. Ex) If you want to finish cooking at 7AM, 14 hours after from now, the finishing cooking time will be changed at 6AM, 13 hours after from now. At this time, "[]H<sub>a</sub>" sign is displayed.
  - \* If you want to finish cooking at 12:00 at noon, set time 12:00 PM.
  - \* Use preset mode to finish cooking from 1 hour later to 13 hours later.
  - \* If you want to check current time, press Hrs or Min button. Current time will be displayed for 2 seconds.

#### Using range of Timer cook for each menu

Menu Category	Glutinous	Mixed/Broown	GABA	Porridge	Steam	Slow cook
Using range of preset timer	From 53min (+My mode) to 13 hours	From 63min (+My mode) to 13 hours	From 88min (+My mode) to 13 hours	From 90min to 13 hours	From setting time + 1min to 13 hours	From setting time + 1min to 13 hours



If you want warm rice, press the Keep Warm/Reheat button to start the reheating. After 9 minutes, the reheated rice tastes as it has been just cooked.



\* Once the display status is set, the status is memorized until it is changed. Therefore, you may not set the status at every warming.

\* After cooking, the temperature of the cooked rice may be higher than the configured warming temperature.

- \* To change the current time while keeping warm, refer to Page 10.
- The frequent use of the Reheat function may cause the cooked rice to be discolored or dried. Use it once or twice per day.
- If a separate heating appliance or gas burner is used to cook rice, put the cooked rice into the cooker and press the Keep Warm/Reheat button to keep the rice warm.
   At this time, '*I*H' is shown on the display. (Like this, transferring hot rice to a cold cooker may cause the rice to be discolored or develop an odor.
- > 24 hours after keeping the cooked rice warm, the passed time blinks on the display to give the long time warning.

#### How to Adjust the Warm Temperature

If an odor develops, water drops are formed or the cooked rice is discolored despite frequent cleaning and the use of sterilized water. The warm temperature may be incorrect. Adjust the temperature.



To adjust the warm temperature while keeping rice warm, press the Keep Warm button for over 5 seconds and adjust the warm

- temperature. 1. A stale smell develops and lots of water drops are formed: The warm temperature is low. Raise the temperature by  $1 \sim 2^{\circ}$ .
- 2. The cooked rice turns yellow, the rice gets dry and an odor develops: The warm temperature is high. Lower the temperature by  $1 \sim 2^{\circ}$ .

#### How to adjust the Customized Warm function

This function is used in case that water runs when you open the inner lid while keeping warm or the cooked rice is swelled up.



If plenty of water runs out when you open the lid: Press the Hr. button to raise the setting mode by 1 or 2 stages.
 If the cooked rice is swollen around the edge of the rice: Press the Min/My mode. button to lower the setting mode by 1 or 2 stages.

25



When cooked rice is kept warm for a long time, the rice quality deteriorates (discoloration, drying and odor). To prevent deterioration, set the warm temperature as low temperature during sleeping time (10:00pm ~ 04:00am) as needs arise.







- 1. Press the Keep Warm button twice in My mode to enter 'Keep Warm during Sleep' mode.
- 2. Press the Hr. button in the 'Keep Warm during Sleep' mode and press the Cook button to set the function when the '5LP' letters are fixed on the display.
- 3. If you press the Cancel button or 7 seconds pass with no input in 'Keep Warm during Sleep' mode, the function is cancelled and the mode returns to Standby mode.
- 4. This function is inactivated in factory setting. Activate this function to your need.



- 1. Press the Keep Warm button twice in Customized Rice Taste mode to enter 'Keep Warm during Sleep' mode.
- 2. Press the Min. button in the 'Keep Warm during Sleep' mode and press the Cook button to cancel the function when the ' $5_{--}$ ' letters blink on the display.
- 3. If you press the Cancel button or 7 seconds pass with no input in 'Keep Warm during Sleep' mode , the function is cancelled and the mode returns to Standby mode.
- If this function is set, the warm temperature is kept at a low temperature in sleeping time. If you wand to keep warm, do not activate this function.

In summer, cooked rice may be discolored or develop an odor. Do not activate the 'Keep Warm during Sleep' mode if at all possible.

#### **Odor Develops While Keeping Warm**

- Clean the cooker frequently. In particular, negligent cleaning of the lid part may develop an odor while keeping warm because of the proliferation of bacteria.
- Even though the product is apparently clean, bacteria can be present. If strong odors develop, boil water to sterilize. Fill with the water up to the plain rice water level line for 2 persons and add a big spoonful of ginger. After that, close the lid and press the Cook/Turbo button to boil the water.

Press the Cancel button 30 ~ 40 minutes after boiling. After boiling, always clean the inner pot.

▶ If you keep the cooked rice warm without cleaning the inner pot after steaming food, an odor may penetrate the rice.

#### **Cautions for Keeping Warm**

It is recommended to evenly stir the cooked rice after cooking. The rice taste is improved. (For a small quantity of rice, pile up the rice on the center area of the inner pot to keep warm) Keeping rice warm for a long time may cause the rice to be discolored or develop an odor. So, it is recommended to keep warm for less than 12 hours.

24 hours after keeping the cooked rice warm, the passed time blinks on the display.

Do not keep the rice scoop in the inner pot while keeping the cooked rice warm. In particular, a wooden scoop may generate bacteria and result in the development of an odor.

Do not mix too small quantity of rice or leftovers with the rice under keeping warm. Doing so may develop an odor. (Use a microwave oven for the cold rice.) The warming status of mixed/brown rice is worse than plain rice. Do not keep it warm if at all possible.

The rice on the edge of the inner pot or the bottom of the steam outlet may turns plain and swollen. In this case, stir and mix the rice.

## CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following		
When the rice is not cooked.	"Cook/Turbo"button is pressed?	Press the "Cook/Turbo"button once. And check "[]]" sign on the display.		
	Is there power cut while in cooking?	Re-press the "Cook/Turbo"button		
When the rice is not well cooked.	<ul> <li>Did you use the measuring cup to measure your rice?</li> <li>Did you measure proper water?</li> <li>Did you clean the rice before cooking?</li> <li>Did you put rice in water too long time?</li> <li>Is the rice old or dry?</li> </ul>	<ul> <li>Refer to page 11~12.</li> <li>Insert some more water (about half of 1 level)</li> </ul>		
Been(other grains)is half cooked.	Is bean (other grains) is too dry?	<ul> <li>Soaked or steam beans other grains before cooking in the pressure cooker in order to avoid partially cooked beans or grains. Beans should be soaked for-to-minutes or steamed for-to-minutes prior to cooking, depending on your taste.</li> </ul>		
Rice is too watery or stiff.	<ul> <li>Is it selected the menu correctly?</li> <li>Did you measure proper water?</li> <li>Did you open the top cover before cooking was finished?</li> </ul>	<ul> <li>Selected the correct menu.</li> <li>Measure the proper water.</li> <li>Open the top cover after cooking finished.</li> </ul>		
When the water overflow.	<ul> <li>Did you use the measuring cup?</li> <li>Did you measure proper water?</li> <li>Did you open the top cover before cooking was finished?</li> </ul>	Refer to page 11~12.		
When you smell something while warming.	<ul> <li>Did you close the top cover.</li> <li>Please check the power cord input to wall socket.</li> <li>Did it warm over 12 hours?</li> <li>Is there any other substance such as rice scoop or cold rice.</li> </ul>	<ul> <li>Close the top cover perfectly.</li> <li>Alway be keeping the power on while warming.</li> <li>As possible as warming time is within 12 hours.</li> <li>Don't warm rice with other substance.</li> </ul>		
"E" sign is appeared.	There is some problem on the temperature sensor.	Please contact to dealer or service center.		
During warm, "time" display shine	Did "Warm" time spend over 24hrs?	The shining display announces that     "Warm"time is over 24hrs.		
During warm, rice is cold or wet	• Did you set "sleep warm" mode?	You change mode or set the warm temperature.		

## CHECK BEFORE ASKING FOR SERVICE

▼ If there is a problem with your cooker, check the following details before requesting service to your dealer. Sometimes the cooker may not operate as desired if used incorrectly.

Case	Check points	Do the following
When the button cannot operate with " [ ] "	<ul><li> Is there inner pot?</li><li> Do you use 127V?</li></ul>	<ul> <li>Please insert inner pot.</li> <li>This product only uses 220V.</li> </ul>
Rice is too watery or stiff.	<ul><li> Is it selected the menu correctly?</li><li> Did you measure proper water?</li></ul>	<ul> <li>Select the correct menu.</li> <li>Measure the proper water.</li> </ul>
When the time cannot be preset.	<ul> <li>Is the current time correct?</li> <li>Is it right A.M. or P.M.?</li> <li>Did you set the reservation time over 13 hours?</li> </ul>	<ul> <li>Set the current time.(refer to page 10)</li> <li>Check the A.M., P.M.</li> <li>Maximum reservation time is 13 hours.</li> </ul>
When you smell after and before cooking?	Did you clean it after cooking?	Please clean it after cooking.
When "tick, tick" sounds occurs while cooking and warming.	<ul> <li>Is it the sound of cooking relay?</li> <li>Did you wipe the moisture of bottom of inner pot?</li> </ul>	<ul> <li>It is normal that the "tick, tick"sound of relay is an on and off operation.</li> <li>The moisture of the bottom of the inner pot may cause "tick, tick" sound.</li> <li>Please wipe the moisture.</li> </ul>
When the operation don't finish for a long time and "E []]" display	<ul> <li>Is your voltage 127V?</li> </ul>	<ul> <li>This product have to use 220V.</li> <li>Consult the service center and dealer.</li> </ul>

## 안전을 위한 주의사항

'안전상의 경고'는 제품을 안전하고 올바르게 사용하여 사고나 위험을 미리 막기 위한 것이므로 반드시 지켜 주십시오.
'안전상의 경고'는 '경고'와 '주의'의 두가지로 구분되어 있으며 '경고'와 '주의'의 의미는 다음과 같습니다.



## 안전을 위한 주의사항

## ⚠ 경고

## 제품을 씽크대에 넣고 닦거나 제품 내부에 물을 넣지 마십시오.

- ▶ 전기 누전 및 감전, 화재의 원인이 됩니다.
- ▶ 제품에 물이 들어간 경우에는 사용을 중지하고 전원플러그를 뽑은 다음 The service center and dealer로 문의하여 주십시오.

이 기기는 신체, 감각, 정신능력이 결여되어 있거나 경험과 지식이 부족하여 감독이나 지시 없이는 안전하게 기기를 사용할 수 없는 사람(어린이 포함)이 사용하도록 만들어지지 않았습니다.

- 어린이가 기기를 가지고 놀지 않도록 주의하세요.
- ▶ 감전, 화상 등 부상의 원인이 됩니다.

#### 내솥 없이 사용을 하지 마십시오.

- ▶ 감전 및 고장의 원인이 됩니다.
- ▶ 내솥이 없는 상태에서 쌀이나 물을 넣지 마십시오.
- ▶ 쌀이나 물이 들어갔을 경우에는 The service center and dealer로 꼭 문의 하십시오.

#### 제품 내부에 금속막대기 등 이물질을 절대 넣지 마십시오. (특히, 어린이 주의)

▶ 감전 및 화재의 원인이 됩니다.



## 전원플러그에 묻은 이물질은 물기가 없는 천으로 깨끗이 제거하여 주십시오.

▶ 화재의 원인이 됩니다.

## 쌀통 및 다용도 선반 등에 제품을 놓고 사용하지 마십시오.

- 전원코드가 틈새에 눌러져 화재 및 감전의 원인이 됩니다.
- 취사 중 증기가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다.

## 전원코드 위에 무거운 물건을 올려 놓거나 코드가 제품바닥에 눌러지지 않도록 주의해 주십시오.

- ▶ 전원코드가 틈새에 눌러져 화재 및 감전의 원인이 됩니다.
- 취사 중 증기가 배출될 때 쌀통 및 다용도 선반에 의해 제품의 손상, 화재, 감전의 원인이 됩니다.

#### 변형된 내솥이나 전용 내솥이 아닌 것은 사용하지 마십시오.

- 내솥이 가열되어 이상작동 및 화재의 원인이 됩니다.
- AA
- ▶ 내솥을 떨어뜨렸거나 변형된 경우에는 The service center and dealer 로 문의하여 주십시오.

#### 제품을 분해하거나 개조하지 마십시오.

- ▶ 화재 및 감전의 원인이 됩니다.
- ▶ 서비스기사 이외의 사람이 분해하거나 수리하지 마십시오. 수리 및 고장 상담은 The service center and dealer 로 문의하여 주십시오.



#### 전원코드를 무리하게 구부리거나, 묶거나, 잡아당기지 마십시오.



 감전이나 쇼트로 인해 화재의 원인이 될 수 있습니다.

#### 전원플러그를 반복하여 뺐다 꽂았다하지 마십시오.

▶ 감전 및 화재의 위험이 있습니다.

#### 전원코드를 임의로 연장하거나 연결하는 등 가공하여 사용하지 마십시오.

▶ 감전 및 화재의 원인이 있습니다.

#### 제품 이동 시 전원코드를 이용하여 들어올리거나 잡아 당겨서 이동하지 마십시오.

▶ 쇼트로 인한 화재의 원인이 될 수 있습니다.

#### 온도감지기, 열판 및 내부 또는 내솥 주위의 이물질은 반드시 제거한 후에 사용하십시오.



온도감지를 정확히 못하게 되므로 내솥이 가열되어 이상작동 및 화재의 원인이 됩니다.

전원플러그를 콘센트에서 꽂거나 뺄때는 손의 물기를 반드시 제거한 후 전원플러그를 잡고 꽂거나 빼어 주십시오.

- ▶ 젖은 손으로 전원플러그를 뽑으면 감전의 원인이 될 수 있습니다.
- ▶ 무리하게 당겨 뽑으면 전원코드에 이상이 발생되어 누전 및 감전이 될 수 있습니다.

# 안전을 위한 주의사항

# ⚠주의

사용 중에 이상한 소리나 냄새 또는 연기가 나면 즉시 전원플러그를 뽑고 The service center and dealer로 문의해 주십시오.	사용 중이거나 사용직후에는 내솥, 내부, 열판 등은 뜨거우므로 만지지 마십시오. ▶ 고열에 의해 화상을 입을 수 있습니다.	
최대 용량 이상으로 내용물을 넣고 사용하지 마십시오. ▶ 밥물 넘침이나 취사 불량 등 고장의 원인이 됩니다. ▶ 죽은 지정된 용량 이상은 사용하지 마십시오.	제품 밑에 깔판, 방석, 전기장판 등을 놓고 사용하지 마십시오. ▶ 화재 및 변형의 원인이 됩니다.	
교류 220V 이외에는 사용하지 마십시오. ▶ 감전, 화재의 원인이 될 수 있습니다.	제품에 심한 충격을 주거나 떨어뜨리지 마십시오. ▶ 제품 고장 및 안전상의 문제가 발생할 수 있습니다.	
<ul> <li>제품이 정상적으로 작동을 하지 않습니다.</li> <li>▶ 110∨전원에서 승압용 트랜스를 220∨로 승압해서 사용하지 마십시오.</li> </ul>	사용하지 않을 때는 전원플러그를         콘센트에서 뽑아 주십시오.         ▶ 절연 성능 저하로 인해 감전, 누전, 화재의 원인이 될 수 있습니다.	
취사, 보온, 지정된 메뉴 이외의 물끓임, 식혜, 미역국, 카레, 기름으로 튀기는 요리 등 다른 용도로 사용하지 마십시오. ▶ 고장 및 냄새의 원인이 됩니다.	내 <b>솥을 다른 용도로 사용하거나 불위에 올리지 마십시오.</b> ▶ 내솥의 변형 및 코팅이 벗겨져 제품에 이상이 발생할 수 있습니다.	
경사진 곳이나 울퉁불퉁한 곳에서는 사용하지 마십시오.         화상 및 제품 고장의 원인이 됩니다.         전원코드에 손이나 발, 기타 물체가 걸려 제품이 떨어지지 않도록 주의 하십시오.	내솥 코팅이 벗겨질 경우에는         The service center and dealer로         문의해주십시오.         체품을 장기간 사용할 경우 내솥 코팅이         벗겨질 수 있습니다.         거친 수세미나 금속성 수세미로 내솥을	
전원플러그를 뽑을때는 전원코드를 잡지 마시고 꼭 전원플러그를 잡고 뽑아 주십시오.	씻을 경우 코팅이 벗겨질 수 있으니 반드시 주방용 중성세제와 스폰지로 비해 소프 (인마제 4을 신하지 4실 신하지 4을 신하지 4실 신하지 4을 신하지 4실 (하지 4실 신하지 4실 (하지 4 4실 (하지 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4 4	
<ul> <li>전원코드에 충격이 가면 감전 및 화재의 원인이 될 수 있습니다.</li> </ul>	<ul> <li>요리 후에는 반드시 청소해 주십시오.</li> <li>▶ 찜 요리 후 취사 및 보온을 하게되면 밥에 냄새가 배어들 수도있 습니다.</li> <li>▶ 33쪽을 참조하여 깨끗이 닦아낸 후 사용하십시오.</li> </ul>	
취사가 끝난 뒤에는 반드시 본체에 고인물을 닦아 주십시오.> 이상한 냄새 및 변색의 원인이 됩니다.> 본체의 물받이에 고인 물을 닦아 주십시오.	취사 직후, 제품 내부의 증기 및 고열로 인한 화상의 우려가 있으므로 주의를 요합니다.	

## 제품 손질 방법

- 청소를 잘하지 않으면 보온 중 냄새가 나는 원인이 됩니다. 특히 뚜껑부는 자주 청소해 주십시오. (전원플러그를 뽑고 본체의 열이 식고 난 후 손질하십시오.)
- 본체·뚜껑은 물기를 제거한 행주로 닦아 주십시오. 벤젠. 신나 등은 사용하지 마십시오.
- 사용중 내솥뚜껑이나 내솥내부에 밥물이 묻어 전분막이 생기는 수가 있으나. 위생상 아무런 영향이 없습니다.

내 솥

본체 물고임부



내솥의 바깥면이나 밑면의 이물질 및 물기를 깨끗이 닦아 주십시오. 거친 수세미, 솔, 연마제 등은 코팅이 벗겨질 수 있으므로 주방용 세제와 부 드러운 천. 스폰지로 닦아 주십시오.



내솥의 뚜껑에 밥물이 묻어 있는 경우 물기를 제거한 행주로 닦아 주십시오. 뚜껑의 가장자리 부분은 금속으로 되어 있으므로 청소할 때 주의 하십시오.



온도감지기에 이물질이 눌러 붙어 있는 경우는 금속판이 손상되지 않게 제거 하십시오. 열판에 이물질이나 물기를 깨끗이 닦아 주십시오.



취사시 발생하는 밥물은 이곳에 고일수 있도록 설계되어 있으므로 취사 완료 후 물기를 제거한 행주로 깨끗이 닦아 주십시오.



밥알이 달라붙는 것을 방지하기 위하여 내솥 내면에 불소 코팅을 하였습니다.



제품 내부 손질 방법









# KOREAN



## 각 부분의 이름



▶ 스팀캡을 확실히 조립한 후에 밥솥에 결합

하십시오.

34

▶ 스팀캡을 잡고 그림과 같이 두 부품의 화살

잠김) 쪽으로 돌려 채결하십시오.

표방향이 일치되게 하여 결합하시고 LOCK(

## 기능 조작부의 이름과 역할 / 기능 표시부의 이상점검 기능



## 기능 표시부의 이상점검 기능

사용방법이 올바르지 않거나 제품에 이상이 생겼을 때 아래와 같은 표시가 나타나 경보를 하여 줍니다.

내솥이 없을 때 나타납니다.

KOREAN

전원을 차단 후 The service center and dealer로 문의하십시오.

EDE

13/40

제품에 이상이 생겨(히터단선, 열량부족 등) 장시간 밥이 완료되지 않을 때 나타납니다.

E\_\_

예약 시간이 13시간을 초과한 경우에 나타납니다.

온도 감지기에 이상이 있을 때 나타납니다.

13시간 이내로 예약을 하십시오.

( "\_\_" 표시가 깜박거립니다.) → The service center and dealer로 문의하십시오.

## 현재시각의 설정

## 현재시각은 이렇게 맞추십시오.

▶ 현재시각을 맞추려면 다음 사항을 꼭 알아두십시오. 예) 현재 시각이 오전 8시 25분일 경우

#### 1) 전원플러그를 꽂은 후 시 버튼을 11 1초이상 누릅니다. 1초 주기로 표시부의 콜론(:)이 깜박거립니다 Hrs 2 시 버튼을 눌러 시를 "용"에 맞춥니다. ▶ 누를때 마다 1시간 단위로 변합니다. ▶ 계속 누르고 있으면 연속으로 변합니다. 오전, 오후가 뒤바뀌지 않도록 주의하여 맞춥니다. ▶ 낮 12:00의 경우는 오후 12:00로 표시됩니다. Hrs 3 분/맞춤밥맛 버튼을 눌러 분을 "25"에 맞춥니다. ▶ 누를 때마다 1분 단위로 변합니다. ▶ 계속 누르고 있으면 연속으로 변합니다. Min My Mod 4) 7초 후 변경된 시각으로 자동 입력됩니다. 시각설정이 완료되면 표시부의 콜론(:)이 깜박이지 않고 정지되며 변경된 현재 시각이 표시됩니다. (부저음 1회 발생) GLUTINOUS 시 분/맞춤밥맛 버튼 및 취소 버튼을 제외한 다른 버튼을 눌러도 설정된 시각이 입력됩니다.

#### 보온중일때 현재시각 설정은 이렇게 하세요.

- 1. 보온중일 때 현재시각을 변경할 경우에는 취소 버튼을 눌러 보온을 취소한 후 시 버튼으로 현재시각을 설정합니다.
- 2. 현재시각 설정이 끝나면 보온/재가열 버튼을 1회 눌러 보온합니다. 이때 표시부에는 " 🔐 "가 표시됩니다.

#### ■ 리듐 밧데리에 대하여

- 본 제품에는 정전보상 기능 및 시계 기능을 위하여 리듐 밧데리가 내장되어 있으며 밧데리의 수명은 약 3년 정도이나 성능에 따라서 차이 가 날 수 있습니다.
- 전원플러그를 꽂지 않았을 때 표시부에 현재시각이 나타나지 않으면 밧데리가 완전 소모된 경우이므로 The serice center and dealer로 문의하여 지정된 서비스센터에서 밧데리를 교환한 후 사용하십시오.

#### ■ 정전 보상기능이란?

- 본 제품은 정전이 되어도 정전 이전의 상태를 기억하게 되어 있어 정전 후, 다시 전기가 들어오면 정상적으로 작동하게 됩니다.
- 취사 중에 정전이 되면, 정전된 시간만큼 취사시간이 늦어지며 정전시간에 따라 취사 상태가 다소 차이가 날 수도 있습니다.
- 보온중 정전이 되어 밥이 식었을 때는 보온이 취소됩니다.
### 취사전 준비 사항

1 내솥은 깨끗이 씻은 후 물기를 닦습니다.

▶ 내솥을 씻을 때는 부드러운 행주를 사용하여 주십시오.





▶ 쌀을 계량컵의 윗면 기준하여 평평하게 맞추면 1인분에 해당됩니다. (예: 3인분일 경우 → 3컵, 6인분일 경우 → 6컵)

계량컵을 사용하여 쌀을 인분수 만큼 내솥에 담습니다.

▶ 강한 수세미를 사용하면 내솥 안쪽 표면이 벗겨지는 경우가 있습니다.

3 별도의 용기에 맑은 물이 나올 때까지 깨끗이 씻습니다.

#### 4 메뉴에 따라 물의 양을 조절합니다.

- ▶ 바닥이 평탄한 곳에 내솥을 올려 놓고 내솥에 표시된 눈금에 맞춰 물의 양을 조절합니다.
- ▶ 내솥에 표시된 눈금은 쌀과 물을 함께 부었을 때의 물눈금을 표시합니다.
- ▶ 물 높이 조절에 대하여
  - · 백미: '백미' 물눈금 기준으로 물을 맞춥니다. 백미는 최대 6인분까지 취사 가능합니다.
  - · 잡곡/현미, 현미발아: '잡곡/현미, 현미발아' 물눈금 기준으로 물을 맞춥니다. 잡곡/현미, 현미발아는 최대 4인분까지 취사 가능합니다.
  - · 죽: '죽' 물눈금 기준으로 물을 맞춥니다. 죽은 최대 1.5인분까지 취사가능합니다.



#### 5 내솥을 본체에 넣고 뚜껑을 닫아 주십시오.

내솥을 넣을 때 본체에 완전히 들어가도록 주의하여 넣습니다.

▶ 내솥의 바닥면에 쌀 등의 이물질이 붙어 있으면 취사가 잘 되지 않거나 고장의 우려가 있습니다.

### 맛있는 밥을 드시려면

### 밥솥으로 맛있는 밥 짓기

#### 맛있는 밥을 드시려면 다음 사항을 꼭 알아두십시오.

-

쌀은 계량컵으로! 물은 내솥눈금 으로 정확히!	<ul> <li>쌀은 반드시 계량컵을 사용하여 정확히 계량합니다.(시 중에 유통되고 있는 쌀통은 제품에 따라 쌀의 양이 다소 차이가 날 수도 있습니다.)</li> <li>물의 양은 내솥을 평평한 곳에 놓고 내솥의 물(水) 높이에 맞춥니다.</li> </ul>	쌀의 양과 물의 양이 맞지 않으면 밥이 퍼석하거나 설익거나 질게 될수가 있습니다.
쌀은 보관 방법이 중요!	<ul> <li>쌀은 기급적이면 소량으로 구입하여 통풍이 잘되고 직사광선이 없는 서늘한 곳에 쌀의 수분이 잘 증발되지 않도록 보관합니다.</li> <li>쌀이 개봉한 지 오래되어 말라 있는 경우는 물을 반눈금 정도 더 넣고 취사를 하면 좋습니다.</li> </ul>	쌀이 많이 말라 있는 경우는 계량을 정확히 하더라도 밥이 퍼석할 수가 있습니다.
예약 취사 시간은 짧을수록 좋습니다!	• 쌀이 많이 말라 있는 경우는 가급적 예약취사를 피하시고 물을 반눈금 정도 더 넣고 취사합니다.	10시간 이상 예약취사하거나 말라 있는 쌀을 예약취사할 경우는 밥이 퍼석하거나 설익을 수가 있으며 심한 경우는 층밥이 될 수도 있습니다.
보온시간은 짧을 수록 좋습니다!	<ul> <li>보온은 12시간 이내로 하는 것이 좋습니다.</li> </ul>	장시간 보온을 하게되면 밥색깔이 변하거나 밥에서 냄새가 날 수도 있습니다.
제품은 깨끗하게!	• 청소를 자주 하십시오. 특히, 뚜껑부에 이물질이 묻어 있지 않도록 자주 닦아주십시오.	청소를 자주 하지 않으면 세균이 번식하여 보온시 밥에서 냄새가 날 수 있습니다.

### 취사는 이렇게 하십시오



# KOREAN

### 메뉴별 취사시간

구분	메뉴	백미	백미쾌속	현미발아	잡곡/현미	죽	웰빙쿡
	취사량	2인분~6인분	2인분~4인분	2인분~4인분	2인분~4인분	1인분~1.5인분	47쪽을
	취사시간	약36분~약53분	약33분~약41분	약80분~약88분	약52분~약63분	약90분	참조하여 주십시오.

찜등의 요리 후 취사하게 되면 냄새가 배어들 수도 있습니다.
 (분리형 커버 및 뚜껑부위를 깨끗하게 닦아낸 후 사용하여 주십시오.)
 메는병 최나니가의 제품이 사용하거에 따라 다시 차이가 난 수도 이승니다.

▶ 메뉴별 취사시간은 제품의 사용환경에 따라 다소 차이가 날 수도 있습니다.

### 취사는 이렇게 하십시오

#### 취사메뉴 사용법

백미	백미를 취사할 때 사용합니다	죽	된죽을 끓이는 기능입니다.	
잡곡 /현미	백미에 현미를 섞어서 취사할 경우 사용합니다.	찜	수동으로 찜시간을 설정해서 요리합니다.	
백미 쾌속				
현미 발아	현미를 발아시켜 발아현미 밥을 드시고자 할때 사용합니다.	웰빙쿡	저온 조리기능으로 죽이나 스프, 건강차 등의 요리가 가능합니다.	

#### 멜라노이징(미세 밥 눌음) 현상

이 밥솥은 밥의 밑면에 엷은 누런 빛깔이 나타나는데, 이는 밥이 잔여수분을 밥 내부로 흡수시켜 밥 특유의 구수한 향기와 맛을 내는 멜라노이징 현상을 일으켜 맛있는 밥이 되도록 설계되어 있기 때문입니다. 특히 "예약취사"와 같이 쌀알이 오랜 시간 침전되면 내솥 바닥에 미세 전분이 가라앉아 "일반 취사"보다 멜라노이징(미세 밥 눌음)현상이 심하게 나타날 수도 있습니다.

### <mark>쿠쿠 맞춤밥맛</mark> 기능은 이렇게 하십시오

#### 쿠쿠 맞춤밥맛이란

세계 최초로 쿠쿠만의 가변밥맛 기술을 개발하여 밥의 "부드러운 정도"와 "차지고 구수한 정도"를 자신의 기호에 맞게 선택하여 취사하는 기능으로 소비자가 원하는 밥맛으로 취사할 수 있는 쿠쿠만의 특허 기술입니다.

#### 쿠쿠 맞춤밥맛기능

"불림시간"을 길게 선택하면 : 밥맛이 부드러워집니다. (불림시간 4단계 선택가능)

"가열유지시간"을 길게 선택하면 : 밥맛이 더 구수해집니다. 멜라노이징 이 발생 할 수 있습니다. (가열유지시간 4단계 선택가능) ※ 기호에 따라 불림시간, 가열유지시간을 각각 선택하셔도 되고 두 기능을 동시에 선택하셔도 됩니다.



- '쿠쿠 맞춤밥맛' 기능을 사용시 눌음현상 발생과 취반상태 등에 영향을 줄 수 있습니다. 어린이의 조작 등으로 인해 시간이 임의로 변경되지 않도록 주의하여 주십시오.
   ※ 초기 설정치는 불림시간 0분( " b 0"), 가열유지시간 0분( "k 0")으로 설정되어 있습니다.
   '쿠쿠 맞춤밥맛'기능을 사용하게 되면 설정된 시간만큼 취사시간이 다소 길어질 수 있습니다.
- 3. 가열유지시간을 길게 설정하면, 눌음현상이 나타날 수 있습니다.



KOREAN

### 맞춤취사 기능은 이렇게 하십시오

#### 맞춤취사 기능

취사시 가열완료온도도 단계를 소비자가 원하는 기호에 맞게 조절(온도의 높고, 낮음)하여 취사할 수 있는 쿠쿠만의 기술입니다.

맞춤밥맛 설정모드에서 예약 버튼을 누르면 부저음과 함께 표시부에 그림과 같이 맞춤취사 설정모드가 나타납니다.



- 1. '쿠쿠 맞춤밥맛' 기능은 백미, 백미 쾌속, 현미발아, 잡곡/현미 메뉴에 일괄 적용됩니다.
- 2. '¿: ①' 일때를 기준으로 하여 기호에 따라 취사온도 단계를 설정하여 주십시오. 취사단계가 높은 경 우 눌음현상이 발생할 수 있습니다.
- 3. 단계별 설정후 취사시 쌀의 상태 및 함수율에 따라서 취반상태에서 차이가 있을 수 있습니다.

#### (맞춤/기능) 설정값 초기화 기능

- 1. 맞춤밥맛, 맞춤취사, 맞춤보온, 취침보온 등 사용자가 변경한 모든 설정값들을 초기상태로 되돌릴 경우 사용합니다.
- 2. 대기 상태에서 [취소] 버튼을 5초간 누르고 있으면 됩니다.
- 3. 이 때, 현재 시각은 12:00으로 초기화됩니다. 현재 시각 설정은 36쪽을 참고하시길 바랍니다.

### 현미발아는 이렇게 하십시오

#### 발아현미란

▶ 현미는 백미에 비교 영양가가 높은 식품이지만 먹었을 때 거칠고 딱딱하며, 소화하기 힘들다는 단점이 있으나 아주 조금만발아시켜도 잠자고 있던 효소가 활성화되어 영양성분이 보다 풍부하게 되고 소화 흡수가 훨씬 수월한 형태로 변화됩니다.



수확한지 1년 이내 그리고 도정일자로부터 3개월 이내의 현미를 사용하십시오. (현미의 경우 수확년도와 도정날짜가 표시되어 있습니다.)

#### 2 눈으로 현미를 직접 확인하십시오.

- ▶ 시중에서 판매하는 현미의 대부분은 내부를 볼 수 있도록 되어 있습니다.
- 씨눈이 살아 있는지 먼저 확인하십시오.
- 쌀 표면이 밝은 황색을 띄고 표면에 윤기가 흐르면 좋은 현미이고 표면이 하얗게 일어나거나 색이 검은 기운을 띄면 발 아에 적합하지 않은 현미입니다.
- 조각나거나 덜 여문 현미는 피하시고 쭉정이가 없는 현미를 고르세요. 쭉정이는 발아 중 썩어 냄새를 유발하고 푸르스름한 색을 띄는 덜 여문 현미는 발아가 되지 않습니다.

### 발아현미의 특징

발아현미는 영양가 높은 현미를 발아 시켜 영양소를 더욱 증가시키고 현미의 단점인 거친 밥맛이 개선된 소화가 잘되는 훌륭한 영양원입니다.

- ▶ 현미보다 부드러운 밥맛을 즐기실 수 있습니다.
- ▶ 소화가 잘되고 영양소가 풍부합니다 발아과정에서 당화호르몬이 분비되어 소화흡수가 잘됩니다.
- ▶ 어린이나 수험생의 영양 건강식으로 좋습니다 식이섬유가 풍부합니다.
- ▶ 발아현미에는 GABA(감마아미노낙산)가 다량 함유되어 있습니다. GABA는 간장과 신장의 신진대사를 촉진하며 중성지방 증가 억제 작용, 혈압상승 방지효과, 뇌세포 대사 촉진 등 우리몸에 좋은 효과가 있음이 의학적으로 확인되었습니다.



#### **발아현미(6시간)와 백미의 영양 비교** 발아현미는 백미에 비해 높은 영양소를 가집니다.

피틴산 10.3배 페롤릭산 1.4배 감마오리자놀 23.9배 감마아미노낙산 5배 이노시톨 10배 식이섬유 4.3배 현미발아 메뉴의 조작방법

#### 발아를 더욱 촉진 시키기 위해 현미를 미리 16시간 이내로 침수하여 예비발아를 해주십시오. 예비발아방법 ▶일반적으로 가정에서 사용하시는 용기에 씻은 현미를 넣은 뒤, 최대한 물을 충분히 넣고 침수시킨 후 예비발아하여 주십시오. ▶예비발아는 16시간 이내로 하여 주시고 현미발아 메뉴 사용 전에는 반드시 흐르는 물에 세척하신 후 사용하여 주십시오. 지나 치게 세게 문질러 세척하면 쌀눈(배아)이 떨어져 발아되지 않을 수 있습니다. ▶ 예비발아하실 때 침수시간에 따라 특유의 냄새가 날 수 있습니다. ▶예비발아가 완료된 현미는 씻은 후에 내솥에 넣고 취사량에 따라 물높이를 맞추신 후 현미발아 메뉴를 사용하여 주십시오. ▶기온이 높은 여름이나 보관온도 등에 따라 예비발아시에는 냄새가 날 수 있으니 가급적 예비발아시간을 줄여 주시고 더 주의 해서 깨끗이 잘 씻어 주십시오. 2 메뉴 버튼을 눌러 현미발아를 선택합니다. ▶ 현미발아 메뉴가 선택되었을 때는 표시부에 2H 표시됩니다. GUUTINOUS GABA MIXED/BROWN PORRIDGE STEAM SLOW COOK ③시. 분/맞춤밥맛 버튼을 눌러 시간을 설정합니다. 2. 배· 버튼을 누르면 현미발아 사간이 2시간씩 감소 버튼을 누르면 현미발아 3. 현미발아 시간은 0. 2. 4. 6시간까지 1. Hrs 시간이 2시간씩 증가 설정 가능합니다. <u>M</u> 합니다 합니다 ☞ 현미발아 '0'시간으로 설정 후 압력취사/백 미쾌속 버튼 입력시 즉시 취사가 진행됩니다. 현미를 발아시키지 않고 취사할 경우 또는 이 미 발아가 되어있는 현미로 취사할 경우에는 '0' 시간으로 설정하십시오. ④ 취사/백미쾌속 버튼을 누릅니다. ▶ 취사/백미쾌속 버튼을 누르면 설정된 시간만큼 현미발아를 시작하고. 발아 완료 후 즉시 취사가 시작됩니다. 현미발아 중에는 '취사' 표시가 나타나며 남은 시간이 표시됩니다. ※발아 잔여시간이 3시간 남아있을때 현미발아 취사시 유의사항

● 발아된 싹의 크기를 키우지 않고 좀 더 빨리 드시고 싶으면 예비발아를 하지않고 현미발아를 선택하여 원하는 발아시간 을 설정하신 후 취사버튼을 눌러 취사하십시오. (싹의 크기에 따른 영양분의 차이는 크지 않습니다.)

※초기설정 2H (2시간)

34

しけり

соок

GABA

- ❷ 기온이 높을때 오랜시간 발아시키면 냄새가 날 경우가 있습니다. 그 경우에는 발아 설정시간을 단축하여 짧게 설정하여 주십시오.
- ③ 현미발아 메뉴로 취사하실 경우에는 최대 4인분 이하로 하여 주십시오.
- ④ 물은 수돗물을 사용하셔도 무방하나 생수를 이용하시면 더욱 좋습니다. 단, 뜨거운 물, 끓인 물은 식힌 경우라 하더라도 발아가 되지 않을수 있으니 사용을 피해주십시오.
- ⑤ 현미의 발아율이나 싹의 길이 등의 발아상태는 현미의 종자와 보관상태, 보관기간에 따라 차이가 있을 수 있습니다. - 발아현미는 현미를 싹틔운 것으로, 현미의 종자에 따라 발아율 및 발아된 후의 싹의 길이에 차이가 있을 수 있습니다. 발아시킬 현미는 반드시 수확후 1년 미만의 것을 사용해 주시고, 도정후 보관기간이 가급적 짧은 것을 이용해 주십시오.
- 6 현미의 종류에 따라 멜라노이징 또는 밥상태의 차이가 나타날 수 있습니다. 기호에 맞게 물량을 가감하거나 맞춤밥맛 기능을 이용해 주십시오.(41~42쪽 참조)

### 찜은 이렇게 하십시오



### 웰빙쿡은 이렇게 하십시오











웰빙쿡 취사가 시작되면 취사중 표시가 나타나며 남은 시 간이 표시됩니다.





### 웰빙쿡은 이렇게 하십시오



요리종류	메뉴선택	준비할 재료	이렇게 만드세요
호 박 죽		껍질 벗긴 호박 500g, 찹쌀가루 100g, 설탕 약간, 소금 약간	<ol> <li>껍질을 벗긴 호박은 얇게 썰어 준비해 주십시오.</li> <li>내솥에 찹쌀가루와 물3컵(계량컵 기준)을 넣고 잘 풀어 주십시오.</li> <li>내솥에 얇게 썰어둔 호박을 넣고, 뚜껑을 닫아 메뉴 버튼을 눌러 「웰빙쿡」을 선택한 후 웰빙쿡 시간을 3시간으로 설정한 뒤 취사/백미쾌속 버튼을 눌러 주십 시오.</li> <li>취사가 완료되면 체에 내려 으깨거나 믹서기로 갈아 기호에 맞게 설탕과 소금을 넣어 주십시오.</li> </ol>
야 채 죽		남은 밥 1인분, 당근 50g, 양파 50g, 쪽파 30g, 소금 약간, 후추 약간	<ol> <li>당근, 양파, 쪽파는 깨끗이 씻어 잘게 다져 준비해 두십시오.</li> <li>내솥에 준비해둔 밥 1인분과 잘게 다져놓은 당근, 양파, 쪽파를 넣고, 물 2支컵을 부어 주십시오.</li> <li>뚜껑을 닫고 메뉴 버튼을 눌러 「웰빙쿡」을 선택한 후 웰빙쿡 시간을 5시간으로 설정한 뒤 취사/백미쾌 속 버튼을 눌러 주십시오.</li> <li>요리가 완료되면 기호에 맞게 소금, 후추를 넣고 가볍게 저어 주십시오.</li> </ol>
야채스프	웰빙쿡	당근 30g, 양파 30g, 감자 30g, 양송이 30g, 쇠고기등심 20g, 크림 스프 가루 100g 올리브오일 1큰술, 소금 약간	<ol> <li>깨끗하게 씻은 양파, 감자, 당근, 쇠고기등심은 잘게 다져 주십시오.</li> <li>양송이는 모양대로 편을 내어 썰어 준비해 주십시오.</li> <li>썰어둔 재료는 올리브오일 1큰술과 소금 약간을 넣고 볶아 주십시오.</li> <li>내솥에 크림스프가루와 물3컵을 넣고 잘 풀어준 뒤 볶아둔 재료들을 넣어 뚜껑을 닫고, 메뉴 버튼을 눌러 「웰빙쿡」을 선택한 후 웰빙쿡 시간을 5시간으로 설정한 뒤 취사/백미쾌속 버튼을 눌러 주십시오.</li> <li>요리가 완료되면 기호에 맞게 소금, 후추를 넣고 가볍게 저어 주십시오.</li> </ol>
대 추 차		대추 180g, 생강 <del>호</del> 톨, 꿀 약간	<ol> <li>생강은 깨끗이 씻어 껍질을 벗기고, 얇게 썰어 준비해 주십시오.</li> <li>내솥에 준비해 둔 대추와 썰어 둔 생강을 함께 넣고, 물을 백미 물눈금 4까지 부어 주십시오.</li> <li>뚜껑을 닫고, 메뉴 버튼을 눌러「웰빙쿡」을 선택한 후, 웰빙쿡 시간을 8시간으로 설정한 뒤 취사/백미쾌 속 버튼을 눌러 주십시오.</li> <li>잘 우러난 대추차에 기호에 맞게 꿀을 넣어 주십시오.</li> </ol>

### 예약취사는 이렇게 하십시오

예약 취사하는 방법

현재 시각이 오후 9시이고 다음날 오전 7시 40분에 식사를 하고 싶을 경우

#### 1 현재 시각이 맞는지 확인합니다

- ▶ 현재 시각을 맞추는 방법은 36쪽을 참조하십시오.
- 현재 시각이 맞지 않을 경우 예약취사 시각이 맞지 않으므로 현재 시각으로 정확히 맞춥니다.
- 오전, 오후가 바뀌지 않도록 주의합니다.

#### 2 예약 버튼을 누릅니다.

- 예약 시각은 제품 출하시 '오전 6:30'에 맞추어져 있으므로 이 시각에 예약 취사를 원하시는 분은 예약시각 설정을 하지 않아도 됩니다.
- 예약 버튼을 누르면 그림과 같이 기존에 설정되어 있는 예약시각 표시가 나타나고, 예약 LED가 깜박거립니다. 시. 분/맞춤밥맛 버튼으로 취사완료 시각을 설정 합니다.
- 예약 버튼을 누른 후 7초이내에 예약 시각설정을 시작해 주십시오.
- ※ 보온중일때 예약 취사를 설정하실 경우 취소버튼을 눌러 보온을 취소한후 예약시각을 설정해 주십시오.



- 시 버튼을 눌러 '오전 7시' 에 맞춥니다.
   누를 때마다 1시간 단위로 변합니다. 계속 누르고 있으면 연속으로 변합니다.
   ※ 오전/오후가 바뀌지 않도록 주의하십시오.
- ▶ 분 버튼을 눌러 분을 '40'에 맞춥니다. 누를 때마다 1분 단위로 변합니다.

4 메뉴 버튼을 눌러 원하는 메뉴를 선택합니다.









- ▶ 예약 취사 설정이 완료되면, 예약 LED부가 3회 깜빡인후 점등됩니다.
- 예약 설정된 시각에 예약 취사가 완료됩니다. (취사량 및 사용조건에 따라 완료시각이 다소 차이가 날 수도 있습니다.)
- 예약 버튼 대신 취사/백미쾌속 버튼을 눌러도 되며, 버튼을 누르지 않으면 7초 후 설정된 시각이 자동 입력됩니다.
- 한 번 설정되어 취사가 완료된 예약 시각은 항상 기억되므로 예약 시각을 맞출 필요없이 예약 버튼만 누르면 됩니다.
- ※ 예약 취사 시간은 메뉴별 최대인분 기준으로 설정되어 있으므로 소량 취사시 예약시각보다 일찍 취사가 완료될 수 있습니다.



### 예약취사는 이렇게 하십시오



#### 1 예약 취사를 할 경우

- ▶ 쌀이 개봉된 지 오래되어 매우 말라버린 경우에는 층밥이 되는 수도 있습니다.
- ▶ 예약취사 설정시간 또는 주변 환경조건에 따라서 밥이 되거나 질어질 수 있으므로 내솥표시의 물(水)높이 기준에서 가감하여 물량을 조절해 주십시오.
- ▶ 예약설정시간에 따라서 멜라노이징 현상이 나타날 수 있습니다.

### 2 예약 시각 변경

▶ 예약시각을 변경할 경우는 취소 버튼을 취소시킨 후 다시 시작하십시오.

#### 이약 설정 가능 시간을 벗어난 경우

▶ 설정 시간이 예약 설정 가능 시간보다 짧았을 경우 즉시 취사를 시작합니다.

#### 4 설정시간이 13시간을 초과할 경우

● "13Ha"가 표시되고 예약 시간은 자동적으로 13시간으로 변경됩니다.
 예) 오후 5시에 내일 오전 7시 취사 완료를 예약하면(설정시간 14시간이 됨) "13Ha"가 표시되고 예약 시각이 오전 6시로 자동 변경됩니다. (설정시간 13시간)

※ 예약시간이 13시간을 초과할 경우 냄새 및 변색의 원인이 되고,
 여름철에는 쌀이 쉬기 때문에 13시간 이하로 예약설정 가능시간을 설정하였습니다.
 ※ 낮 12시에 예약취사 완료를 원하실 경우 오후 12:00로 설정해 주십시오.

- ※ 예약취사 기능은 현재시각 기준 1시간 후에서 13시간 이내로 취사완료를 원하실때 사용해 주십시오.
- ※ 예약취사 진행중에 현재 시각을 확인하려면 시 또는 분/맞춤밥맛 버튼을 누르면 현재 시각이 약 2초간 나타납니다.

#### 메뉴별 예약 설정 가능시간

메뉴 구분	백미	잡곡/현미	현미발아	죽	찜	웰빙쿡
예약설정 기능시간	53분 (+맞춤 밥맛시간) ~13시간	63분 (+맞춤 밥맛시간) ~13시간	88분 (+맞춤 밥맛시간) ~13시간	90분~13시간	찜 설정시간+1분 ~13시간	웰빙쿡 설정시간+1분 ~13시간



▶ 보온중 식사를 하실 때 따끈따끈한 밥을 원하시면, 보온/재가열 버튼을 누르면 보온재가열이 시작되고 9분 후 밥을 드시면 금방 지은 밥처럼 따끈따끈한 밥을 드실 수 있습니다.



□ 철정된 표시장에는 다시 변경하기 전까지 계속 기억되므로 매한 모든 지하다 낮물 필요가 없습니다 □ 취사 후에는 밥이 뜨거우므로 설정된 보온온도보다 온도가 높을 수 있습니다.

- ※ 보온중 일 때 현재시각을 변경할 경우에는 36쪽을 참조하여 주십시오.
- ▶ 재가열 기능을 너무 자주 사용하시면 밥이 변색되거나 마르는 경우가 있습니다. 1일 1~2회만 사용하세요.
- 별도의 전열기구나 가스불로 밥을 지은 경우는 밥을 밥솥에 담은 후 보온/재가열 버튼을 1회 눌러 보온을 합니다. 이때, 표시부에는 "이유"가 표시됩니다. (이와 같이 차가운 밥솥에 뜨거운 밥을 옮겨 담아 보온할 경우 냄새나 변색이 있을 수 있습니다.)
- ▶ 보온 24시간 경과 이후부터 보온 경과시간을 깜빡이게 표시하여 보온이 장시간 경과 되었음을 알립니다.

보온온도 조정방법

경우이므로 보온 온도를 조정합니다.



▶ 청소를 자주하고 물을 끓여 소독을 하였는데도 냄새가 나고 물이 맺히거나 색깔이 변하는 경우는 보온 온도가 맞지 않은

보온중 보온온도를 조정하실 때에는 보온 버튼을 5초 이상 누른 후 보온 온도를 조정하십시오.

1. 쉰 냄새가 많이 나고 물이 많이 맺히는(밥이 삭는)경우 : 보온 온도가 낮은 경우 입니다. 보온 온도를 1~2° C정도 높여 줍니다. 2 밥 색깔이 심하게 누렇고 밥이 마르면서 냄새가 날 경우 : 보온 온도가 높은 경우 입니다. 보온 온도를 1~2° C정도 낮춰 줍니다.

### 맞춤보온 기능 조정방법

보온시 뚜껑을 열 때 물이 많이 흐를 경우나 밥 가장자리에 밥 퍼짐 현상이 생길 경우에 사용합니다.



1. 뚜껑이 열때 물이 많이 흐를 경우 : 시 버튼을 눌러 설정모드를 1, 2단계 정도 높여 줍니다.

2. 밥 가장자리에 밥퍼짐 현상이 생기는 경우 : 분/맞춤밥맛 버튼을 눌러 설정모드를 -1, -2단계 정도 낮춰 줍니다.

KOREAN

취침보온 모드 설정방법

▶ 장시간 보온을 유지할 시 밥품질(변색, 마름, 냄새등)의 저하예방을 위해 취침시간(P.M. 10 : 00 ~ A.M. 04 : 00)동안 보온모드를 저온상태로 유지하는 기능으로 필요에 따라 설정해 주십시오.

#### 설정방법







- 표시부에 그림과 같이 나타납니다.

- 1. 맞춤밥맛 설정모드에서 보온 버튼을 2회 입력시 "취침보온" 모드로 진입합니다.

- 2. "취침보온" 설정모드로 들어왔을 때 시 버튼을 누르면 표시부와 같이 " 5LP" 문자가 고정되며 취사





3. "취침보온" 설정모드 진입 후 아무런 버튼 입력없이 7초가 지나거나 취소 버튼을 누르면 기능이 설정되지 않고. 취소되며 대기 상태로 돌아갑니다.



- 4. 본 기능은 제품 출하시 해제상태로 되어 있으니 필요에 따라 설정해주십시오.

1. 맞춤밥맛 설정모드에서 보온 버튼을 2회 입력시 "취침보온" 모드로 진입합니다.

2. "취침보온" 설정모드로 들어왔을 때 분 버튼을 누르면 표시부와 같이 " 5 \_ \_ " 문자가 깜박이며

표시부에 그림과 같이 나타납니다.

대기 상태로 돌아갑니다.

물을 끓여 소독을 합니다.

취사 버튼을 누르면 설정이 해제됩니다.

보온시 냄새가 날 때



3. "취침보온" 설정모드 진입 후 아무런 버튼 입력없이 7초가 지나거나 취소 버튼을 누르면 기능이 설정되지 않고 취소되며

▶ 본 기능을 설정시 취침시간 동안 보온온도가 저온상태로 유지되오니 취침시간 동안 보온이 필요하신 분은 설정하지 마십시오.

기온이 높은 여름철에는 밥이 상해서 변색되거나 냄새가 날 수 있습니다. 여름철에는 "취침보온" 모드 설정을 가급적 하지 마십시오.



### 해제방법

- 물을 내솥의 백미 눈금 2인분 정도에 맞추고 식초를 1큰술 넣은 후 뚜껑을 닫고 취사/백미쾌속 버튼을 눌러 물을 끓입니다. 30~40분 정도 끓인 후 취소 버튼을 눌러 줍니다. 물을 끓인 후 내솥을 반드시 깨끗이 씻어 냅니다.

▶ 청소를 자주 해 주십시오. 특히, 뚜껑부의 청소상태가 나쁘면 세균이 번식하여 보온시 냄새가 날 수 있습니다. ▶ 외관상 깨끗하더라도 곳곳에 세균이 서식하여 보온시 냄새를 발생시킬 수 있으므로 냄새가 많이 날 경우는

▶ 찜 등의 요리를 한 후 깨끗이 씻어내지 않고 보온하면 밥에 냄새가 배어들 수 있습니다.

### 보온할 때 주의사항

취사 완료 후 밥을 밑면까지 골고루 섞어
보온하면 밥상태가 좋습니다.
(적은 밥은 내솥의 중앙에 불룩하게 모아서
보온하십시오.)

장시간 보온하면 밥이 변색되고 냄새가 날 수 있으므로 보온은 12시간 이내로 하는 것이 좋습니다. 보온 24시간 경과 이후부터 보온 경과시간을 깜빡이며 표시합니다.

잡곡/현미는 백미보다 보온 상태가 좋지 않으므로

보온중 내솥의 가장자리나 증기 배출구 하단부는

부분적으로 밥이 하얗게 변하고 부풀어 오를 수도 있습니다. 이럴 경우는 밥을 저어서 섞어 주십시오.

가급적 보온은 피하십시오.

주걱을 넣어 둔 채로 보온하지 마십시오. 특히, 나무주걱 등은 세균을 발생시켜 냄새의 원인이 됩니다.

너무 적은 밥을 보온하거나 먹다 남은 밥이나 찬밥을 보온 중인 밥과 섞어서 보온하지 마십시오. 밥에서 냄새가 날 수 있습니다. (찬밥은 전자레인지를 이용하십시오.)

### 고장신고 전에 확인하십시오

▼ 제품에 이상이 생겼을 경우에는 The service center and dealer로 문의하시기 전에 아래 사항을 확인해 주 십시오.

증 상	확인사항	형시셔조
밥이 되지 않을 때	• 취사/백미쾌속 버튼을 눌렀습니까?	•원하는 메뉴선택 후 반드시 취사/백미쾌속 버튼을 1회 눌러 표시부에 "[[]]" 표시가 나타나는지 확인하십시오.
밥이 설익거나 퍼석할 때 또는 층밥이 될 때	<ul> <li>계량컵을 사용하셨습니까?</li> <li>물 조절은 정확히 하셨습니까?</li> <li>쌀을 깨끗이 씻었습니까?</li> <li>쌀을 장시간 불린 후 취사하셨습니까?</li> <li>쌀을 개봉한지 오래되어 너무 말라있지 않습니까?</li> </ul>	•37~38쪽을 참조하여 올바르게 사용하십시오. •물을 반눈금 정도 더 넣고 취사하십시오.
콩(잡곡/현미)이 설익을 때	• 콩(잡곡/현미)이 너무 마르지 않았습니까?	• 콩(잡곡/현미)을 불리거나 삶아서 안남미/현미메뉴에서 취사를 하십시오. 잡곡의 종류에 따라 설익을 수도 있습니다.
밥이 너무 질거나 된밥일 때	• 메뉴 선택은 맞게 하셨습니까? • 물 조절은 정확히 하셨습니까? • 뜸을 들이는 상태에서 뚜껑을 열지는 않았습니까?	•원하는 메뉴를 바르게 선택하십시오. •물 조절을 정확히 하십시오.(37~38쪽 참조) •취사 완료음이 울린 후 뚜껑을 열고 밥을 섞어주십시오.
취사 도중 밥물이 넘칠 때	•계량컵을 사용하셨습니까? •물 조절은 정확히 하셨습니까? •메뉴 선택을 정확히 하셨습니까?	• 37~38쪽을 참조하여 올바르게 사용하십시오.
보온중 냄새가 날 때	<ul> <li>뚜껑을 꼭 닫았습니까?</li> <li>보온중 전원플러그가 콘센트에서 빠지지 않았습니까?</li> <li>12시간 이상 보온하였거나 너무 적은 밥을 보온 하지 않았습니까?</li> <li>주걱이나 식은밥 혹은 다른 종류의 밥을 넣어서 보온하지 않았습니까?</li> </ul>	• 뚜껑을 완전히 닫아주십시오. • 보온중 전원플러그를 항상 꽂아 주십시오. • 보온시간은 가능한 12시간 이내로 하십시오. • 백미 이외의 메뉴와 식은밥은 보온하지 마십시오.
또"표시가 나타날때	•온도감지기에 이상이 있을 때 나타납니다.	• 전원을 차단 후 The service center and dealer로 문의하십시오.
보온중 보온경과시간 표시가 깜빡일때	• 보온후 24시간이 경과하지 않으셨습니까?	• 보온 24시간이 경과하면 보온이 장시간 경과되었음을 알리는 기능입니다.
보온중 밥이 많이 식었거나 물이 많이 흐를 때	• 보온을 취침보온모드로 설정하지 않으셨습니까?	• 필요에 따라 취침보온모드를 해제 또는 설정한 후 보온하여 주십시오.

### 고장신고 전에 확인하십시오

### ▼ 제품에 이상이 생겼을 경우에는 The service center and dealer로 문의하시기 전에 아래 사항을 확인해 주 십시오.

증 상	확인사항	조치사항
" ـ 」"표시가 나타날 때	• 내솥이 제품에 들어 있습니까? • 127V용(전원)에 사용하지 않았습니까?	<ul> <li>내솥이 들어 있지 않은 상태에서는 버튼조작이 되지 않습니다. 내솥을 넣어 주십시오.</li> <li>본 제품은 220V전용 제품입니다. 전원을 바르게 사용하십시오.</li> </ul>
밥이 심하게 눌을 때	<ul> <li>온도감지기, 열판, 내솥외면에 밥알이 심하게 눌어 붙어 있거나 이물질이 있지는 않습니까?</li> <li>"쿠쿠 맞춤밥맛", "쿠쿠 맞춤취사" 기능을 설정하지 않으셨습니까?</li> </ul>	<ul> <li>오도감지기, 열판, 내솥외면의 이물질을 제거해 주십시오.</li> <li>(33쪽 참조)</li> <li>필요에 따라 맞춤밥맛 또는 맞춤취사 기능을 해제 또는 설정한 후 취사하여 주십시오.</li> </ul>
예약 취사 시각이 맞지 않을 때	• 현재 시각이 맞습니까? • 오전, 오후를 잘못 선택하지 않았습니까? • 예약시간을 13시간 이상으로 선택하지 않았습니까?	<ul> <li>현재시각을 맞추지 않으면 예약시각에 취사가 완료</li> <li>되지 않습니다. 현재시각을 맞추십시오. (36쪽 참조)</li> <li>오전, 오후를 확인하십시오.</li> <li>최대 예약시간은 13시간입니다.</li> </ul>
	• 찜 요리를 하신 후 청소를 깨끗이 하셨습니까?	• 뚜껑부 및 스팀캡을 깨끗이 닦아낸 후 사용하여 주십시오.
취사, 보온 또는 보온 재가열중 '딱딱' 소리가 날 때	• 취사 릴레이 소리가 아닙니까? • 내솥 밑면의 물기는 닦았습니까?	• 릴레이의 "딱딱"소리는 켜짐, 꺼짐의 작동소리로서 정상입니다. • 내솥 밑면에 물기가 있으면 "딱딱"소리가 납니다. 다음부터는 물기를 닦은 후 내솥을 넣어 주십시오.
장시간 동안 취사가 완료되지 않고 " <b>E [] 3</b> " 표시가 나타날 때	• 127\/용(전원)에 사용하지 않았습니까?	<ul> <li>제품에 이상이 생겨(히터 단선, 열량부족 등) 장시간 밥이 완료되지 않을때 나타나는 표시입니다.</li> <li>전원을 차단 후 The service center and dealer로 문의하십시오.</li> <li>물만 넣고 장시간 가열한 경우에 " [ ] ] " 표시가 나타나는 것은 정상입니다.</li> <li>본 제품은 220V전용 제품입니다.</li> <li>전원을 바르게 사용하십시오.</li> </ul>

KOREAN

## CUCKOO



00383-0842C0 Rev.23