


SEC. WORK	가	나	다	PRINTING DEGREE	MATERIAL AND PRINTING DESCRIPTION	LG MODEL 명	SUFFIX	LANGUAGE	PAGE	REMARK
	BRAND	MODEL	P/NO.							
20	LG	T2735NWL	MFL69482520	1	SNOW WHITE 80g OFFSET 인쇄	F70E1UDNK1	ASSPEVN	ENGLISH/ VIETNAMESE	80	W-MODULE

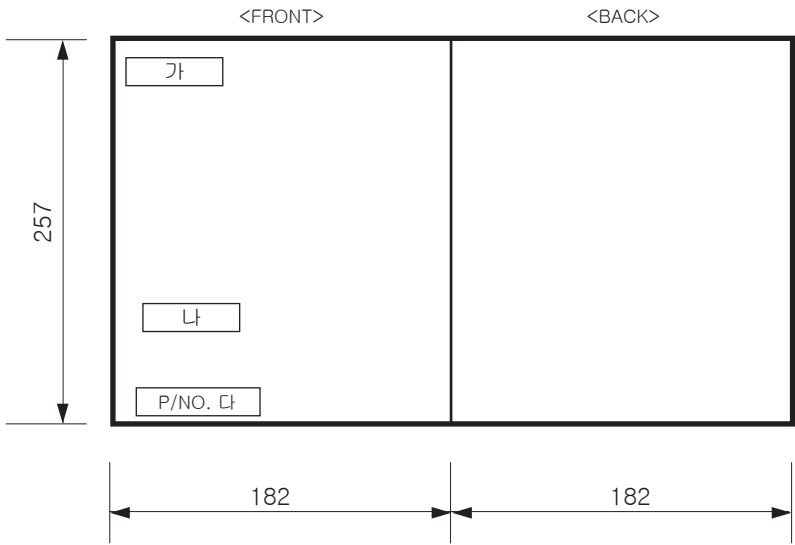

<< 주기 >>

1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 FILM에 준함.
3. 외곽치수는 절단후 치수임.
4. 양산전에 설계 한도를 득할 것.
5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501-34를 만족할 것

<< NOTES >>

1. Material, printing and exterier size are refer to work tables.
2. Printing, text size and line are based on LG design film.
3. Exterier size on the drawing is cutting line.
4. Before product controlled by criteria sample.
5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB,PBDE)and details should comply with LG standard of LG(63)-A-5501-34

△					
△					
△					
△					
REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 사양 번호	DATE 년/월/일	PREPARED 시행자	APPROVED 승인자

PDF
ILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일 :

TRIG.	UNIT	mm	SCALE	N S	T I T L E	MANUAL, OWNER'S	
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED		W-MODULE	1/1
	한 윤 근 16.11.15	상 민 규 16.11.15	장 호 성 16.11.15	차 웅 길 16.11.15		MFL69482520	
LG 전자 (주) LG Electronics Inc.			RELATED DWG.		DWG. No.		

OWNER'S MANUAL

WASHING MACHINE



Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

EN ENGLISH

VI VIETNAMESE

T2735NWL



MFL69482520
Rev.00_111516

www.lg.com

TABLE OF CONTENTS

This manual may contain images or content different from the model you purchased.

This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS	3
IMPORTANT SAFETY INSTRUCTIONS	3
Disposal of Your Old Appliance	8
INSTALLATION	9
Parts	9
Accessories	9
Specifications	10
Installation Place Requirements	11
Unpacking and Removing Packing Materials	12
Stacking the Pedestal Washing Machine	12
Connecting the Supply Hose	13
Installing the Drain Hose	16
Leveling the Appliance	17
OPERATION	18
Using the Appliance	18
Sorting Laundry	19
Closing the Door and Drawer	20
Adding Cleaning Products	21
Control Panel	23
Programme Table	24
Option Programme	26
SMART FUNCTIONS	27
Using the Smart Diagnosis™ Function	27
MAINTENANCE	28
Cleaning Your Washing Machine	28
Tub Clean	29
Cleaning the Water Inlet Filter	29
Cleaning the Lint Filter	30
Caution on Freezing During Winter	30
TROUBLESHOOTING	32
Diagnosing Problems	32
Error Messages	37

SAFETY INSTRUCTIONS

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance.

The guidelines are separated into 'WARNING' and 'CAUTION' as described below.



This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.



WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.



CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Children in the Household

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

For use in Europe:

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

Children of less than 3 years should be kept away unless continuously supervised.

Installation

- Never attempt to operate the appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug.
- This appliance should only be transported by two or more people holding the appliance securely.
- Do not install the appliance in a damp and dusty place. Do not install or store the appliance in any outdoor area, or any area that is subject to weathering conditions such as direct sunlight, wind, or rain or temperatures below freezing.
- Tighten the drain hose to avoid separation.

- If the power cord is damaged or the hole of the socket outlet is loose, do not use the power cord and contact an authorized service centre.
- This appliance must not be installed behind a lockable door, a sliding door or a door with a hinge on the opposite side to that of the appliance, in such a way that a full opening of the appliance door is restricted.
- This pedestal washing machine must be installed underneath a matching LG front-loading washing machine manufactured after 2009.
- This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current.
- This appliance is equipped with a power cord having an equipment-grounding conductor and a grounding power plug. The power plug must be plugged into an appropriate socket outlet that is installed and grounded in accordance with all local codes and ordinances.
- Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or service personnel if you are in doubt as to whether the appliance is properly grounded.
- Do not modify the power plug provided with the appliance. If it does not fit the outlet, have a proper outlet installed by a qualified electrician.

Operation

- Do not use a sharp object like drill or pin to press or separate an operation unit.
- Do not repair or replace any part of the appliance. All repairs and servicing must be performed by qualified service personnel unless specifically recommended in this Owner's Manual. Use only authorized factory parts.
- Use new hose or hose-set supplied with the appliance. Reusing old hoses can cause a water leak and subsequent property damage.
- Do not reach into the appliance if the tub or agitator is moving.
- Keep the area underneath and around the appliance free of combustible materials such as lint, paper, rags, chemicals, etc.
- Do not put animals, such as pets into the appliance.
- Do not leave the appliance door open. Children may hang on the door or crawl inside the appliance, causing damage or injury.
- Never reach into the appliance while it is operating. Wait until the drum has completely stopped.
- Do not put in, wash or dry articles that have been cleaned in, washed in, soaked in, or spotted with combustible or explosive substances (such as wax, oil, paint, gasoline, degreasers, drycleaning solvents, kerosene, vegetable oil, cooking oil, etc.). Improper use can cause fire or explosion.
- In case of flood, disconnect the power plug and contact the LG Electronics customer information centre.
- Do not push down the door excessively, when the appliance door is open.

- Do not touch the door during a high temperature programme.
- Do not use flammable gas and combustible substances (benzene, gasoline, thinner, petroleum, alcohol, etc.) near the appliance.
- If the drain hose or inlet hose is frozen during winter, use it only after thawing.
- Keep all washing detergents, softener and bleach away from children.
- Do not touch the power plug or the appliance controls with wet hands.
- When pulling out the power plug from an outlet, hold the power plug, not the cable.
- Do not bend the power cable excessively or place a heavy object on it.
- If there is a gas leakage (isobutane, propane, natural gas, etc.), do not touch the appliance or power plug and ventilate the area immediately.
- Do not operate the pedestal washing machine with two or more pedestal washing machines stacked.
- To avoid breaking the door glass, do not push too hard on the door when closing.
- Do not step on the pedestal washing machine.
- Do not wash rugs, mats, shoes or pet blankets, or any other items other than clothes or sheets, in this machine.
- This appliance must only be used for domestic household purposes and should not be used in mobile applications.
- Do not open or close the door by foot.

Maintenance


- Securely plug the power plug in the socket outlet after completely removing any moisture and dust.
- Disconnect the power cord before cleaning the appliance.
- Never unplug the appliance by pulling on the power cable. Always grip the power plug firmly and pull straight out from the socket outlet.
- Do not spray water inside or outside the appliance to clean it.

Disposal

- Before discarding an old appliance, unplug it. Cut off the cable directly behind the appliance to prevent misuse.
- Dispose of all packaging materials (such as plastic bags and styrofoam) away from children. The packaging materials can cause suffocation.
- Remove the door before disposing of or discarding this appliance to avoid the danger of children or small animals getting trapped inside.


INSTALLATION

Parts

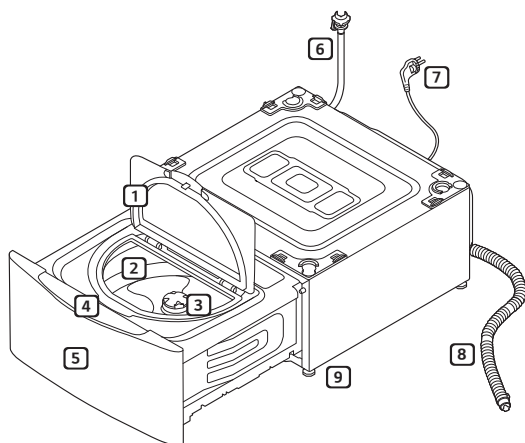

- 1 Door
- 2 Drum
- 3 Lint Filter
- 4 Control Panel
- 5 Drawer
- 6 Water Supply Hose
- 7 Power Plug
- 8 Water Drain Hose
- 9 Leveling Feet

Accessories



Water supply hose
(for cold water)




Connecting
supply hose



Water drain hose



Water supply hose
connector



General-type
connector / Screw-
type connector



Cable tie



Water drain hose
connector



Anti-slip sheets



Spanner



Detergent
measuring
cup



Screws



Hose clip

- Different accessories may apply to each model.


Specifications

Model	T2735NWL
Wash Capacity	3.5 kg (Wash)
Power Supply	220 - 240 V~, 50 Hz
Size	700 mm (W) x 770 mm (D) x 360 mm (H)
Product Weight	48.7 kg
Permissible Water Pressure	0.1 - 0.8 MPa (1.0 - 8.0 kgf / cm ²)

- Appearance and specifications may change without notice to improve the quality of the product.
- The external hot water supply MUST NOT exceed 65°C.
- No further backflow protection required for connection to the water supply.

Installation Place Requirements

Location

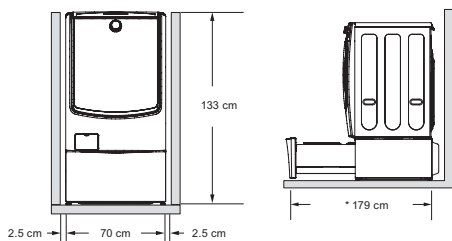

* 179 cm : additionally needed for service.

Level floor : Allowable slope under the entire appliance is 1°.

Power outlet : Must be within 1.5 meters of either side of the location of the appliance.

- Do not overload the outlet with more than one appliance.

Additional Clearance : 2.5 cm at the sides and 10 cm behind the unit.

- Do not place or store laundry products on top of the appliance at any time.
- These products may damage the finish or controls.

WARNING

- The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Positioning

- Install the appliance on a flat hard floor.
- Make sure that air circulation around the appliance is not impeded by carpets, rugs, etc.
- Never try to correct any unevenness in the floor with pieces of wood, cardboard or similar materials under the appliance.
- If it is impossible to avoid positioning the appliance next to a gas cooker or coal burning stove, an insulation (85x60 cm) covered with aluminum foil on the side facing the cooker or stove must be inserted between the two appliances.

- Do not install the appliance in rooms where freezing temperatures may occur. Frozen hoses may burst under pressure. The reliability of the electronic control unit may be impaired at temperatures below freezing point.
- Ensure that when the appliance is installed, it is easily accessible for an engineer in the event of a breakdown.
- With the appliance installed, adjust all four feet using a transit bolt spanner to ensure the appliance is stable, and a clearance of approximately 20 mm is left between the top of the appliance and the underside of any work-top.
- If the appliance is delivered in winter and temperatures are below freezing, place the appliance at room temperature for a few hours before putting it into operation.
- Do not use a drip pan as it can block the drawer. Using the drip pan may result in increased vibration and noise during operation.

WARNING


- This equipment is not designed for maritime use or for use in mobile installations such as caravans, aircraft etc.

Electrical Connection

- Do not use an extension cord or double adapter.
- Always unplug the appliance and turn off the water supply after use.
- Connect the appliance to an earthed socket in accordance with current wiring regulations.
- The appliance must be positioned so that the plug is easily accessible.
- Repairs to the appliance must only be carried out by qualified personnel. Repairs carried out by inexperienced persons may cause injury or serious malfunctioning. Contact your local service centre.


Unpacking and Removing Packing Materials

- 1 Lift the appliance off the foam base.
 - If you must lay the appliance down to remove the carton base, always protect the side of the appliance and lay it carefully on its side. Do not lay the appliance on its front or back.
- 2 Pull and save the foam block for future use.
 - If the washing machine must be moved in the future, the foam block will help prevent damage to the washing machine during transportation.

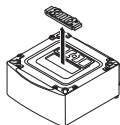

NOTE

- To prevent damage, do not remove the foam block until the washing machine is at the final location.
- 3 Turn the top cover about 180 degrees.
 - Cover the upper hole with the top cover and install 4 short screws (included in packing box) to fix it in place.

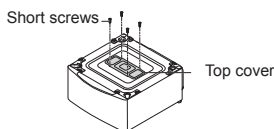


WARNING


- The top cover must be installed to avoid the risk of electric shock or short circuit from water drops. Failure to do so can cause serious injury, fire, electric shock or death.

Stacking the Pedestal Washing Machine


- 1 Make sure the leveling feet on the front-loading washing machine are fully retracted before stacking. Place the front-loading washing machine on top of the pedestal washing machine. Make sure the holes on the pedestal washing machine align with the holes in the front-loading washing machine.

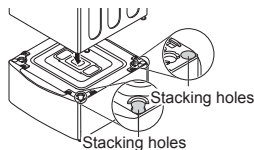

- 2 Install 4 long screws (included in box) at each corner to securely attach the front-loading washing machine to the pedestal washing machine.

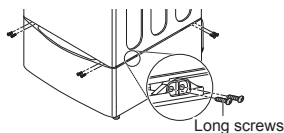

- 3 Turn the feet of the front-loading washing machine slightly until it is snugged up against the pedestal washing machine.

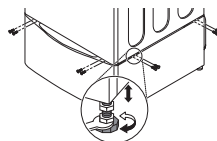

⚠ WARNING





- This pedestal washing machine must be installed underneath a matching LG front-loading washing machine manufactured after 2009. (16-21 kg washing machine only)
- The pedestal washing machine will not work as a standalone unit.
- The pedestal washing machine must be stacked under an LG front-loading washing machine in order to operate properly.

Connecting the Supply Hose

- Water supply pressure must be between 0.1 MPa and 0.8 MPa (1.0–8.0 kgf/cm²).
- Do not strip or crosstread when connecting supply hose to the valve.
- If the water supply pressure is more than 0.8 MPa, a decompression device should be installed.
- Periodically check the condition of the hose and replace the hose if necessary.

Checking the Rubber Seal on the Supply Hose


Two rubber seals are supplied with the water supply hoses. They are used for preventing water leaks. Make sure the connection to taps is sufficiently tight.

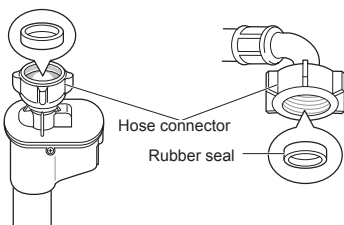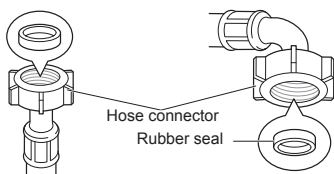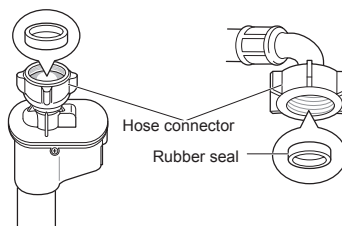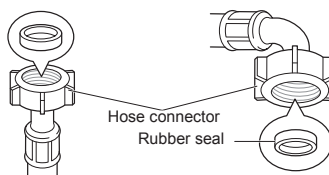


Connecting Hose to Water Tap

Connecting Screw-Type Hose to Tap with Thread


Screw the hose connector onto the water supply tap.

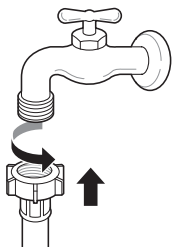


- 1 Loosen the four fixing screws.

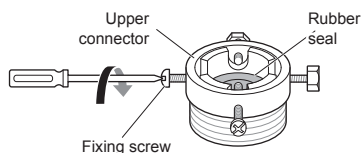


- 2 Remove the guide plate if the tap is too large to fit the adapter.

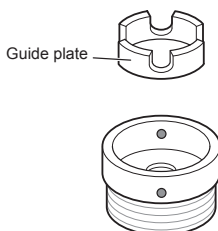

- 3 Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws.

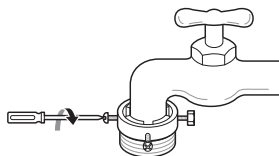


- 4 Push the supply hose vertically upwards so that the rubber seal within the hose can adhere completely to the tap and then tighten it by screwing it to the right.

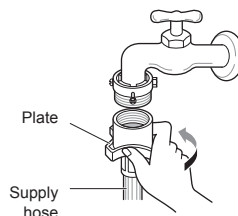


Connecting One Touch Type Hose to Tap Without Thread


- 1 Unscrew the adapter ring plate and loosen the four fixing screws.

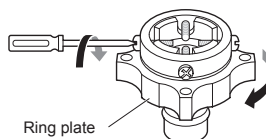


- 2** Remove the guide plate if the tap is too large to fit the adapter.

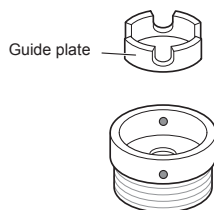

- 3** Push the adapter onto the end of the tap so that the rubber seal forms a watertight connection. Tighten the four fixing screws and the adapter ring plate.

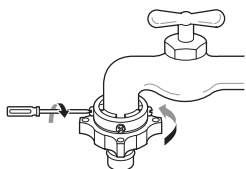

- 4** Pull the connector latch plate down, push the supply hose onto the adapter, and release the connector latch plate. Make sure the adapter locks into place.

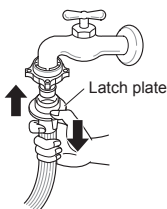


NOTE


- After connecting the supply hose to the water tap, turn on the water tap to flush out foreign substances (dirt, sand, sawdust, and etc.) in the water lines. Let the water drain into a bucket, and check the water temperature.

Connecting Hose to Two Washing Machines


- 1** Connect the water supply hose connector to the water supply hose of the front-loading washing machine. Open the accessory package for pedestal washing machine installation.

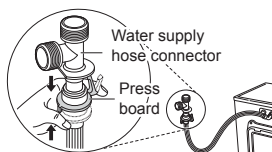

- 2** Connect the water supply hose of pedestal washing machine to the water supply hose connector, pedestal washing machine to be installed.

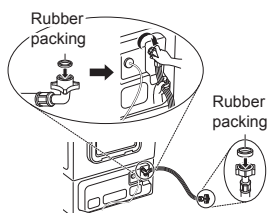


- 3** Connect the additionally provided water supply hose of the front-loading washing machine to the water supply hose connector and water faucet.

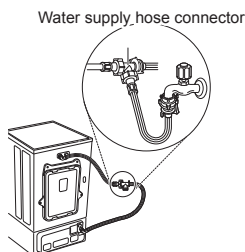


Installing the Drain Hose

- The drain hose should not be placed higher than 100 cm above the floor. Water in the appliance may not drain or may drain slowly.


- 1 Insert the hose clip onto the drain hose elbow.

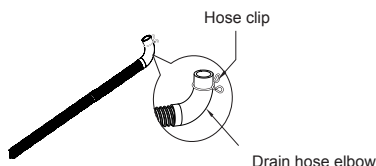

- 2 With the hose leading up from the elbow, insert the elbow onto the drain outlet on the back of the pedestal washing machine.

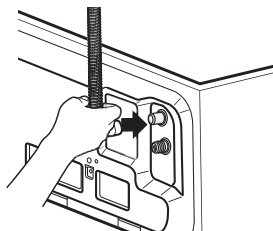


- 3 Adjust the hose clip in place to prevent leaking.

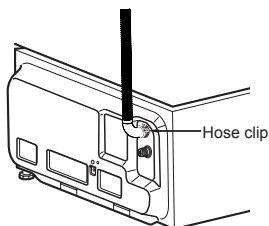

Using the Drain Hose Connector


Connect the drain hose of the front-loading washing machine and the pedestal washing machine to the drain connector. Insert the included wire hose clamps on to the ends of the two drain hoses. Push the drain hoses firmly onto the drain connector. Adjust the wire hose clamps to prevent the hoses from coming loose or leaking. Failure to do so could result in flooding. Use of the drain connector helps avoid siphoning, odors, or improper draining.

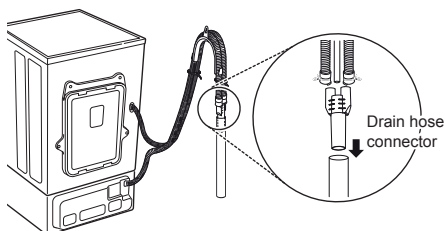

Leveling the Appliance

If the floor is uneven, turn the adjustable feet as required (Do not insert pieces of wood etc. under the feet). Make sure that all four feet are stable and resting on the floor and then check that the appliance is perfectly level (Use a spirit level).

- Once the appliance is level, tighten the lock nuts up towards the base of the appliance. All lock nuts must be tightened.

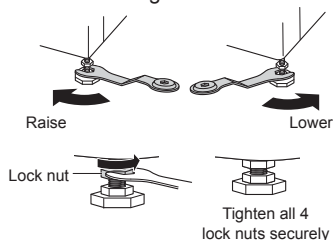

Diagonal Check

- When pushing down the edges of the top plate diagonally, the appliance should not move up and down at all (check both directions). If the appliance rocks when pushing the machine top plate diagonally, adjust the feet again.

WARNING

- When stacking the front-loading washing machine on the pedestal washing machine, use the leveling feet on the pedestal washing machine to level both. The front-loading washing machine's leveling feet should be minimized and the locknuts turned counterclockwise to secure them.

NOTE

- Timber or suspended type flooring may contribute to excessive vibration and unbalance.
- If the washing machine is installed on a raised platform, it must be securely fastened in order to eliminate the risk of falling off.

Using Anti-Slip Sheets (Optional)


If you install the appliance on a slippery surface, it may move because of excessive vibration. Incorrect leveling may cause malfunction through noise and vibration. If this occurs, install the anti-slip sheets under the leveling feet and adjust the level.

- Clean the floor to attach the anti-slip sheets.
 - Use a dry rag to remove and clean foreign objects and moisture. If moisture remains, the anti-slip sheets may slip.

- Adjust the level after placing the appliance in the installation area.

- Place the adhesive side of the anti-slip sheets on the floor.

- It is most effective to install the anti-slip sheets under the front feet. If it is difficult to place the pads under the front feet, place them under the back feet.

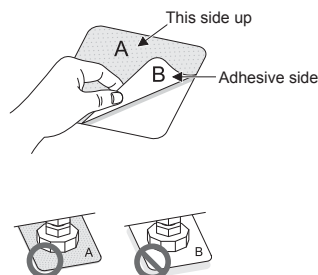

- Ensure the appliance is level.
 - Push or rock the top edges of the appliance gently to make sure that the appliance does not rock. If the appliance rocks, level the appliance again.


NOTE

- You can obtain anti-slip sheets from the LG Service Centre.

Using the Appliance


1 Sort laundry and load items.

- Sort laundry by fabric type, soil level, colour and load size as needed. Open the door and load items into the washing machine.

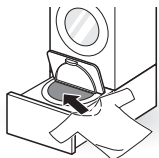

2 Add cleaning products.


- Add the proper amount of detergent with the detergent measuring cup to the washing drum evenly.

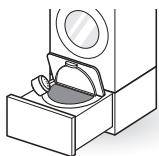

3 Closing the door and drawer.

4 Turn on the washing machine.

- Press the **Power** button to turn on the washing machine.

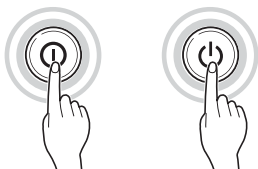

5 Choose the desired washing cycle.

- Press the cycle button repeatedly until the desired cycle is selected.



6 Begin cycle.

- Press the **Start/Pause** button to begin the cycle. The washing machine will agitate briefly without water to measure the weight of the load. If the **Start/Pause** button is not pressed within 5 minutes, the washing machine will shut off and all settings will be lost.



7 Add softener.

- When the machine chimes for about 20 seconds, add the softener and press **Start/Pause** to restart the cycle.

8 End of cycle.

- When the cycle is finished, a melody will sound. Immediately remove your clothing from the washing machine to remove wrinkling and odors.
- After washing is complete, wipe off the washing machine door, gasket and inside the washing drum with a dry towel for clean washing.

Sorting Laundry

1 Look for a care label on your clothes.

- This will tell you about the fabric content of your garment and how it should be washed.
- Symbols on the care labels.



Wash temperature



Normal machine wash



Permanent press



Delicate



Hand wash




Do not wash

2 Sorting laundry.

- To get the best results, sort clothes into loads that can be washed with the same wash cycle.
- Different fabrics need to be washed at varying temperatures and spin speeds.
- Wash two or more towels or knits together. If washed separately, laundry which absorbs a lot of water may not be washed well or abnormal spin-drying may occur due to leaning.
- Always sort dark colours from pale colours and whites. Wash separately as dye and lint transfer can occur causing discolouration of white and pale garments. If possible, do not wash heavily soiled items with lightly soiled ones.
 - Soil (Heavy, Normal, Light) :
Separate clothes according to amount of soil.
 - Colour (White, Lights, Darks):
Separate white fabrics from coloured fabrics.
 - Lint (Lint producers, Collectors):
Wash lint producers and lint collectors separately.

3 Caring before loading.

- Do not wash 'memory wire' on female inner wear (such as a brassiere) as it may damage other clothes or the washing machine and create noise.
- Check all pockets to make sure that they are empty. Items such as nails, hair clips, matches, pens, coins and keys can damage both your washing machine and your clothes.



- Close zippers, hooks and strings to make sure that these items don't snag on other clothes.
- Pre-treat dirt and stains by brushing a small amount of detergent dissolved water onto stains to help lift dirt.
- If an item of clothing has a long lace attached to it, arrange the lace so it cannot be tangled or put it into a washing net.
- Remove the insides of cushions, pillows, or sitting mats and only wash the cover. The insides may protrude, damaging other laundry. Plastic parts may generate abnormal vibrations.

CAUTION

- Divide laundry in large volume for washing so that the laundry can be submerged under water completely. If laundry expands during washing, it may cause damage to the laundry and parts during washing or spin.

Closing the Door and Drawer

- 1 Push the washing machine door until it clicks.



- 2 Push the drawer completely closed.

⚠ CAUTION

- Do not let your hands get stuck between the door and the washing machine, as this can cause injury.
- Forcing the drawer or the door to open can cause part damages and safety problems.
- Closing the drawer before having closed the door completely may scratch the door glass.
- Ensure the drawer is pulled out completely to prevent the door from contacting the front load washing machine.

NOTE

- Door lock may fail if there is too much laundry in the machine or if the door is not completely closed.
- If the product is operating or the Drawer Lock (🔒), indicator is displayed, the door cannot open. To open the door, press the Start/Pause button to stop the product, and when Drawer Lock (🔒), indicator disappears, open the door. Do not force the drawer and door open.
- If (dE1, dE2, dE3) or a warning sign appears on the display, close the drawer and the door completely. After doing so, press the Start/Pause button.

- If the drawer cannot be opened completely, pull the drawer forward with a little force using both hands.
- If power failure occurs during product operation, the door cannot be opened. Provide the power again or contact the LG service centre. (in case of boil wash, the door may not open after the power is supplied again due to high temperature inside the washing machine).
- If the door cannot open due to high temperature, carry out rinsing with cold water using the Rinse+Spin programme or wait a while before opening the door.


Adding Cleaning Products

Detergent Dosage

- Detergent should be used according to the instruction of the detergent manufacturer and selected according to type, colour, soiling of the fabric and washing temperature.
- If too much detergent is used, too many suds can occur and this will result in poor washing results or cause heavy load to the motor.
- If you wish to use liquid detergent follow the guidelines provided by the detergent manufacturer.
- If too many suds occur, reduce the detergent amount.
- Detergent usage may need to be adjusted for water temperature, water hardness, size and soil level of the load. For best results, avoid oversudsing.
- Refer to the label of the clothes, before choosing the detergent and water temperature.
- When using the washing machine, use designated detergent for each type of clothing only:
 - General powdered detergents for all types of fabric
 - Powdered detergents for delicate fabric
 - Liquid detergents for all types of fabric or designated detergents only for wool
- For better washing performance and whitening, use detergent with the general powdered bleach.

Adding Detergent

Measure the detergent with the detergent dispenser and pour it into the tub.

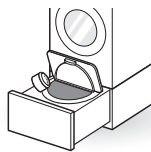

- Use the provided detergent measuring cup to add only one cup of detergent.
- Reduce the amount of detergent for lightly soiled laundry. If you use too much detergent, excessive bubbles will remain after rinsing.

Adding Softeners

Adding Fabric Softener

CASE 1. When the machine chimes:

- 1 Press **Start/Pause** to pause the cycle.
- 2 Add the liquid fabric softener.
- 3 Close the door, slide the drawer closed, and press **Start/Pause** to restart the cycle.

NOTE

- To disable or enable the fabric softener alert, press and hold the **Extra Rinse** button for three seconds.

CASE 2. If you miss the softener add point:

- 1 Press the **Power** button to interrupt the cycle.
- 2 Select the **Rinse+Spin** programme and press the **Start** button to start the cycle. Add the fabric softener at the chimes.
- 3 Close the door, slide the drawer closed, and press **Start/Pause** to restart the cycle.

NOTE

- Do not pour fabric softener directly on the clothes.
- The softener can also be diluted with water and added directly into the drum. Do not pour undiluted softener directly onto clothing because it may stain fabrics.


Adding Water Softener

- A water softener, such as anti-limescale (e.g. Calgon) can be used to cut down on the use of detergent in extremely hard water areas. Dispense according to the amount specified on the packaging. First add detergent and then the water softener.
- Use the quantity of detergent required for soft water.

CAUTION

- Do not directly put bleach to the laundry. This may cause partial discoloration and severe damage to the laundry.
- Do not use chlorine bleach or acidic cleaner when washing the laundry, as it can cause damage to clothes such as discoloration and decoloration of laundry.

Control Panel

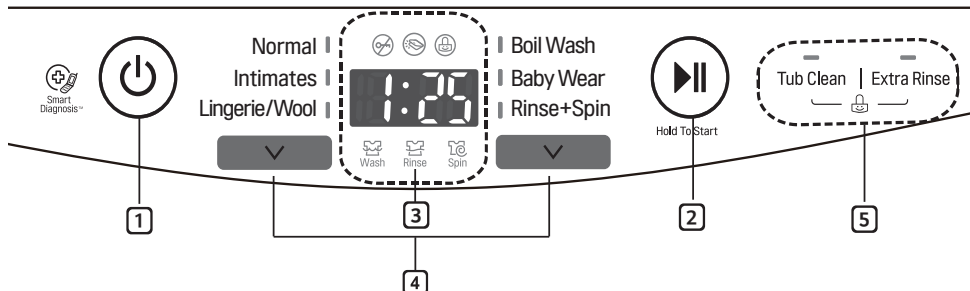

1 Power Button

- Press the **Power** button to turn the washing machine on.

2 Start/Pause Button

- This **Start/Pause** button is used to start the wash cycle or pause the wash cycle.
- If a temporary stop of the wash cycle is needed, press the **Start/Pause** button.

NOTE

- If you do not press the **Start/Pause** button within 4 minutes of selecting a programme, the washing machine automatically turns off and all cycle settings are lost.

3 Display

- The display shows the cycle status and estimated time remaining.
- : Drawer lock indicator
- : Door lock indicator
- : Child lock indicator

4 Programme Button

- Programmes are available according to laundry type.

5 Options

- Use these buttons to select the desired options for the selected programme.
- The setting lights above the buttons illuminate to show the current selection.

Programme Table

Washing Programme

Programme	Description	Note	Maximum Load
Normal	Use this programme to wash lightly soiled normal items, except delicate fabrics such as wool or silk.	Pressing the Start/Pause button without selecting a programme will cause the Normal programme to begin immediately using the default settings.	3.5 kg
Intimates	Use this programme to wash delicate items such as lingerie or sheer and lacy clothes which could easily be damaged in a normal programme.	- This programme is effective for washing heavily stained cotton T-shirts or inner wear. - This programme is not for silk items.	1.5 kg
Lingerie/ Wool	Use this programme to wash textiles, lingerie, or fine clothes likely to shrink or deform.	- To reduce damage to textiles and improve washing performance, use special neutral detergent for wool. - To prevent damage to clothes, the drum spins gently to the left and right for washing.	1.5 kg

Programme	Description	Note	Maximum Load
Boil Wash	Use this programme to wash under wears or baby wear to be sterilized and whitened.	- In this programme, laundry is washed thoroughly due to high temperature. Use 1/2 the amount of detergent recommended by the manufacturer for a normal load. - Do not wash white or brightly colored laundry with darkly colored laundry that can discharge colors. - It is more effective to pre-wash laundry which is stained with blood or milk briefly with cold water before carrying out main washing can remove stains more effectively. - In this programme, water is heated using the heating system of the washing machine. - Bubble Removing Function: If an excessive amount of detergent is used, the bubble removing function may operate. - Lowering Drain Temperature Function: For the safety, cold water is briefly supplied before draining to lower the water temperature.	1.5 kg
Baby Wear	Use this programme to wash baby wear hygienically.	- Select a proper type of neutral detergent. - Clothes are washed at high temperature to sterilize and remove mites. - It is more effective to pre-wash laundry stained with food, sweat, urine and feces briefly before washing. - Due to high temperature, this programme is not recommended for wool, silk or any other delicates.	1.5 kg
Rinse+Spin	Select this programme to rinse and spin a load separately from a regular cycle.	Add fabric softener only.	1.5 kg

- Set programme at 'Wash: Normal' to test in accordance with TCVN 8526:2013.

Option Programme

Tub Clean

Use this option to keep the drum clean by sterilizing germs within the drum. For information on using Tub Clean, see the Cleaning Your Washing Machine section.

Extra Rinse

Use this option to increase the number of rinsing programmes.

- 1 Press the **Power** button.
- 2 Select a washing programme.
- 3 Press the **Extra Rinse** button to set time required.
 - When you press the **Extra Rinse** button, the number of rinsing cycles (1 - 5) to be added will be displayed.
- 4 Press the **Start/Pause** button.

Child Lock

Use this option to disable the controls. This feature can prevent children from changing cycles or operating the appliance.

Locking the Control Panel

- 1 Press and hold the **Tub Clean** and **Extra Rinse** button at the same time for three seconds.
- 2  will appear on the display. When the Child Lock is set, all buttons are locked except the **Power** button.

NOTE

- Turning off the power or completing all cycles will not reset the child lock function. You must deactivate child lock before you can access any other functions.

Unlocking the Control Panel


Press and hold the **Tub Clean** and **Extra Rinse** button at the same time for three seconds.

- To change the cycle or option, press the **Start/Pause** button to stop operation, and then choose the cycle or option which you wish to change.


Using the Smart Diagnosis™ Function

Use this function if you need an accurate diagnosis by an LG Electronics service centre when the product malfunctions or fails. Use this function only to contact the service representative, not during normal operation.

- 1 Press the **Power** button to turn on the washing machine. Do not press any other buttons or turn the cycle selector knob.
- 2 When instructed to do so by the call centre, place the mouthpiece of your phone close to the **Power** button.

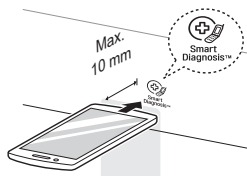

- 3 Press and hold the **Tub Clean** button for three seconds, while holding the phone mouthpiece to the icon or **Power** button.
- 4 Keep the phone in place until the tone transmission has finished. Time remaining for data transfer is displayed.
 - For best results, do not move the phone while the tones are being transmitted.
 - If the call centre agent is not able to get an accurate recording of the data, you may be asked to try again.

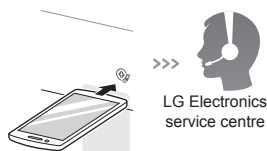

- 5 Once the countdown is over and the tones have stopped, resume your conversation with the call centre agent, who will then be able to assist you using the information transmitted for analysis.

NOTE

- The Smart Diagnosis™ function depends on the local call quality.
- The communication performance will improve and you can receive better service if you use the home phone.
- If the Smart Diagnosis™ data transfer is poor due to poor call quality, you may not receive the best Smart Diagnosis™ service.

WARNING

- Unplug the washing machine before cleaning to avoid the risk of electric shock. Failure to follow this warning may result in serious injury, fire, electric shock, or death.
- Never use harsh chemicals, abrasive cleaners, or solvents to clean the washing machine. They may damage the finish.

Cleaning Your Washing Machine

Care After Wash

- After the cycle is finished, wipe the door and the inside of the door seal to remove any moisture.
- Leave the door open to dry the drum interior.
- Wipe the body of the washing machine with a dry cloth to remove any moisture.



Cleaning the Exterior

Proper care of your washing machine can extend its life.

Door:

- Wash with a damp cloth on the outside and inside and then dry with a soft cloth.

Exterior:

- Immediately wipe off any spills.
- Wipe with a damp cloth.
- Do not press the surface or the display with sharp objects.

Cleaning the Interior

- Use a towel or soft cloth to wipe around the washing machine door opening and door glass.
- Always remove items from the washing machine as soon as the cycle is complete. Leaving damp items in the washing machine can cause wrinkling, colour transfer, and odour.
- Run the Tub Clean programme once a month (or more often if needed) to remove detergent buildup and other residue

Tub Clean

Use this option to keep the drum clean by sterilizing germs within the drum.

- 1 Press the **Power** button.
- 2 Dilute 200 ml liquid chlorine bleach in 1 ℓ of water and pour the mixture in the drum.
- 3 Press the **Tub Clean** button to set time required.
- 4 Press the **Start/Pause** button.




CAUTION

- If there is a child, be careful not to leave the door open for too long.


Cleaning the Water Inlet Filter

- Turn off the stopclock if the washing machine is to be left for any length of time (e.g. holiday), especially if there is no floor drain (gully) in the immediate vicinity.
- **LE** icon may blink on the display when the water pressure is weak or an inlet filter is clogged with dirt. Clean the inlet filter.
- The inlet filter screens could be plugged by hard water scale, sediment in the water supply, or other debris.

- 1 Turn off the water tap and unscrew the water inlet hose.

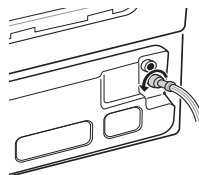


- 2 Clean the filter using a hard bristle brush.

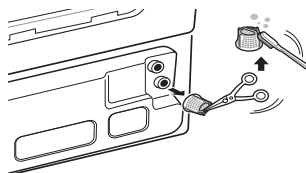


Cleaning the Lint Filter

The filter is an important part for efficient washing performance result, so it needs special care from you. It is recommended that the filter be cleaned regularly.


- 1 Pull the cap of the lint filter.

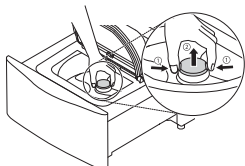

- 2 Open the cap and remove lint and then wash out.

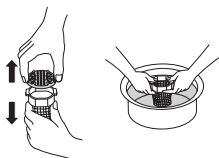

- 3 Insert the lower part of the filter into the drum and close the cap until you hear a click sound.

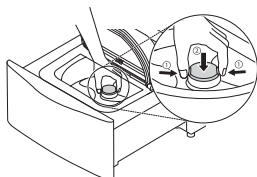

NOTE


- When the lint filter is damaged, contact LG service centre.
- Do not operate the washing machine without the lint filter.
- Do not place the lint filter loosely. Doing so may damage the fabrics or the washing machine.

Caution on Freezing During Winter

- When frozen, the product does not operate normally. Make sure to install the product where it will not freeze during winter.
- In case the product must be installed outside on a porch or in other outdoor conditions, make sure to check the following.

How to Keep the Product from Freezing

- After closing the tap, disconnect the cold supply hose from the tap, and remove water while keeping the hose facing downwards.

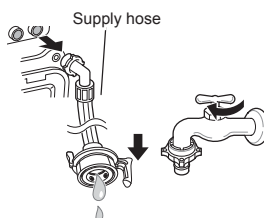


How to Handle Freezing

Step 1. When the Door is Frozen

- Thaw out the door using a hot water cloth.

Step 2. When the Water Supply Hose is Frozen

- When the **IE** icon may blink on the display when water supply problems occur, take the following measures.
 - Take out water supply hose and connect to the tap and check that water comes from the tap and supply hose.
 - Turn off the tap, and thaw out the tap and both connection areas of supply hose of the product using a hot water cloth.
 - Take out supply hose and immerse in warm water below 50–60 °C.

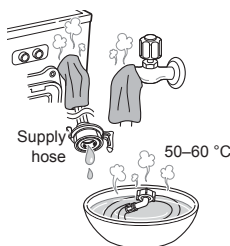

Step 3. When the Drain Pump is Frozen

- When the **FF**, **DE** icon may blink on the display when drain pump problems occur, take the following measures.

- 1 Pour 15 l warm water below 50–60 °C in the drum until washing machine wing nuts are immersed and wait for an hour.
- 2 Press the **Power** button and then run the Boil Wash programme for an hour.
 - When the **IE** icon appears on the display, repeat steps 1 to 2.
- 3 Turn off the power when the Boil Wash programme is finished. If the drawer is open, select the **Rinse+Spin** and then press the **Extra Rinse** to the number of 9 and press the **Start/Pause** button to run the Spin.
- 4 Select the **Rinse+Spin** programme and press the **Start/Pause** button to check that the washing machine works.
- 5 When the **DE** icon appears on the display, thaw out the drain hose inner part with the hot water.

The appliance is equipped with an automatic error-monitoring system to detect and diagnose problems at an early stage. If the appliance does not function properly or does not function at all, check the following before you call for service:

Diagnosing Problems

Symptoms	Reason	Solution
Rattling and clanking noise	Foreign objects, such as keys, coins, or safety pins may be in drum.	• Stop washing machine, check drum for foreign objects. If noise continues after washing machine is restarted, call for service.
Thumping sound	Heavy wash loads may produce a thumping sound.	• If sound continues, washing machine is probably out of balance. Stop and redistribute wash load.
	Wash load may be out of balance.	• Pause the cycle and redistribute the load after the door unlocks.
Vibrating noise	Packaging materials were not removed.	• Remove packing materials
	Wash load may be unevenly distributed in the drum.	• Pause the cycle and redistribute the load after the door unlocks.
	Not all leveling feet are resting firmly and evenly on the floor.	• See Leveling the Appliance in the Installation section.
	Floor not rigid enough.	• Make sure that the floor is solid and does not flex.
Water leaks every load	Hoses not installed correctly.	• Check all fill and drain hose connections to ensure that they are tight and secure.
Excessive sudsing	Too much detergent or incorrect detergent.	• Reduce the amount of detergent for lightly soiled laundry. If you use too much detergent, excessive bubbles will remain after rinsing.
Staining	Clothes were not properly sorted.	• Always wash dark colors separately from light colors and whites to prevent discoloration. • Never wash heavily soiled items washed with lightly soiled items.

Symptoms	Reason	Solution
Water leaking	Supply hose connection is loose at the tap, washing machine, or drain hose connector.	• Check hoses and drain hose connectors for leaks, cracks and splits. • Tighten hose connections.
	House drain pipes are clogged.	• The washing machine pumps out water very rapidly. Check for water backing up out of the drain pipe during drain. If water is seen coming out of the drain, check for proper drain hose installation and check for restrictions in the drain. Contact a plumber to repair drain pipe.
	Drain hose has come out of drain connector or is not inserted far enough.	• Tie drain hose to supply hose or standpipe to prevent it from coming out during drain. For smaller drain pipes, insert the drain hose into the pipe as far as the drain hose flange. For larger drain pipes, insert the drain hose into the pipe 2-5 cm past the flange.
	Load is too large for the drum.	• Reduce the load or use the front-loading washing machine. • Stop the washing machine and check the load. Make sure the load fits loosely in the drum and the door closes easily.
Wrinkling	Washing machine not unloaded promptly.	• Always remove items from the washing machine as soon as the cycle is complete.
	Washing machine overloaded.	• The washing machine can be fully loaded, but the drum should not be tightly packed with items. The door of the washing machine should close easily.
	Hot and cold water supply hoses are reversed.	• Hot water rinse can set wrinkles in garments. Check the supply hose connections.
Water leaks	Oversudsing of detergent.	• Oversudsing may create leaks, and may be caused by the type and amount of detergent used. Always reduce the amount of detergent if the load is small or lightly soiled, or if your water is very soft. Never use more than the maximum amount shown in the dispenser provided.

Symptoms	Reason	Solution
Washing machine not filling properly	Filter clogged.	• Make sure the inlet filters on the fill valves are not clogged. Refer to the filter cleaning instructions.
	Supply hoses may be kinked.	• Check that supply hoses are not kinked or clogged.
	Insufficient water supply.	• Make sure that both hot and cold water taps are turned on all the way.
	door and drawer are open.	• The washing machine will not operate if the door is open. Close the door and make sure that nothing is caught under the door preventing it from closing completely.
	Hot and cold supply hoses are reversed.	• Check supply hose connections.
	Water level is too low.	• The fill level is optimized for the wash motion to achieve the best wash performance.

Symptoms	Reason	Solution
Washing machine will not operate	Control panel has powered off due to inactivity.	• This is normal. Press the Power button to turn the washing machine on.
	Washing machine is unplugged.	• Make sure cord is plugged securely into a working outlet.
	Water supply is turned off.	• Turn both hot and cold taps fully on.
	Controls are not set properly.	• Make sure the cycle was set correctly, close the door and press the Start/Pause button.
	Door or drawer is open.	• Close the door and drawer make sure that nothing is caught under the door preventing it from closing completely.
	Circuit breaker/fuse is tripped/blown.	• Check house circuit breakers/fuses. Replace fuses or reset breaker. The washing machine should be on a dedicated branch circuit. The washing machine will resume the cycle where it stopped once power is restored.
	Control needs to be reset.	• Press the Power button, then re-select the desired programme and press the Start/ Pause button.
	Start/Pause was not pressed after a cycle was set.	• Press the Power button then re-select the desired programme and press the Start/ Pause button. The washing machine will shut off if the Start/Pause button is not pressed within 4 minutes.
	Extremely low water pressure.	• Check another tap in the house to make sure that household water pressure is adequate.
	Washing machine is too cold.	• If the washing machine has been exposed to temperatures below freezing for an extended period of time, allow it to warm up before pressing the Power button.

Symptoms	Reason	Solution
Washing machine will not drain water	Kinked drain hose.	• Ensure that the drain hose is not kinked.
	Drain located higher than 2.4 m above the floor.	• Make sure that the drain hose is no higher than 2.4 m above the bottom of the washing machine and is no more than 1.5 m away from the washing machine.
Poor stain removal	Heavily soiled load.	• Use the front-loading washing machine.
	Previously set stains.	• Articles that have previously been washed may have stains that have been set. These stains may be difficult to remove and may require hand washing or pre-treating to aid in stain removal.
Wash cycle time is longer than usual	The washing machine automatically adjusts the wash time for the amount of laundry, water pressure and other operating conditions.	• This is normal. The washing machine adjusts cycle time automatically to provide optimal results for the selected programme. The time remaining shown in the display is only an estimate. Actual time may vary.
Musty or mildewy odor in washing machine	Incorrect or too much detergent has been used.	• This machine requires very little detergent. Use the provided detergent measuring cup.
	Inside of drum was not cleaned properly.	• Run the Tub clean programme regularly.
Washing machine chimes repeatedly before final rinse	This is not an error.	• This is an alert to allow the addition of liquid fabric softener before the final rinse.

Error Messages

Symptoms	Reason	Solution
 	Drawer is not closed properly.	- Close the drawer and press Start/Pause button to start the cycle. - If the drawer is closed and the drawer lock error message is displayed, call for service.
	Door is not closed properly.	- Open the drawer and make sure the latch area is free of clothing or other obstructions. - Close the door, shut the drawer, and press Start/Pause to start the cycle. - If the door is closed and the door error message is displayed, call for service.
	Water supply taps are not fully open.	Make sure that the water taps are fully open.
	Water line hoses are kinked, pinched, or crushed.	Make sure that the hoses are not kinked or pinched. Be careful when moving the washing machine during cleaning and maintenance.
	Water inlet filters are clogged.	Clean the inlet filters.
	Water supply pressure to tap or house is too low.	Check another tap in the house to make sure that household water pressure is adequate and flow is not restricted. Disconnect the supply hose from the washing machine and run a few liters of water through the hose to flush the water supply lines. If flow is too low, contact a plumber to have the water lines repaired.
	Water supply connected with leak-limiting hoses.	Hoses designed to limit leaks can trip falsely and prevent the washing machine from filling. The use of leak limiting hoses is not recommended.
	Drain hose is kinked, pinched, or clogged.	Make sure the drain hose is free of clogs, kinks, etc., and is not pinched behind or under the washing machine.
	Drain discharge is more than 1.2 m above bottom of washing machine.	Adjust or repair drain. Maximum drain height is 1.2 m.

Symptoms	Reason	Solution
	UE rebalancing operation is not successful.	The automatic attempt to rebalance the load was not successful. The cycle has been paused to allow the load to be manually adjusted.
	The load is too small.	Add more items to allow the washing machine to balance the loads.
	Heavy articles are mixed with lighter items.	Wash articles of somewhat similar weight.
	The load is out of balance.	Manually redistribute the load if articles have become tangled.
	Control error.	Unplug the power plug and call for service.
	Water level is too high due to a faulty water valve.	Close the water taps, unplug the washing machine, and call for service.
	The water level sensor is not working correctly.	Close the water taps, unplug the washing machine, and call for service.
	A motor error has occurred.	Allow the washing machine to stand for 30 minutes and then restart the cycle. If the LE error code persists, call for service.
	It is time to run the Tub Clean programme.	Run the Tub Clean programme.
	Pedestal washing machine is being operated without a full-size washing machine.	The pedestal washing machine will not operate as a standalone unit. It must be stacked under an LG front-loading washing machine.
	Stacking switch is not working properly.	The stacking switch will not operate properly if the unit is stacked under a non-LG appliance, or an LG appliance manufactured before 2009.
	Drain hose, supply hose or drain pump is frozen	- Thaw out the supply hose using a hot water cloth. - Pour warm water in the drum.
	CL is not an error. This prevents children from changing cycles or operating the appliance.	To deactivate, press the Tub Clean and Extra Rinse button for three seconds.

Memo

Memo

HƯỚNG DẪN SỬ DỤNG

MÁY GIẶT



Trước khi bắt đầu lắp đặt, hãy đọc kỹ những hướng dẫn này. Điều này sẽ đơn giản hoá quá trình lắp đặt và đảm bảo sản phẩm được lắp đặt đúng cách và an toàn. Để hướng dẫn này ở gần sản phẩm sau khi lắp đặt để sau này tham khảo.

MỤC LỤC

Hướng dẫn này có thể có các hình ảnh hoặc nội dung khác với model mà bạn đã mua.

Hướng dẫn sử dụng này có thể được sửa đổi bởi nhà sản xuất.

HƯỚNG DẪN AN TOÀN	3
HƯỚNG DẪN AN TOÀN QUAN TRỌNG.....	3
Xử lý Thiết bị Cũ Của Bạn.....	8
LẮP ĐẶT.....	9
Các bộ phận	9
Các phụ kiện.....	9
Thông số kỹ thuật.....	10
Yêu cầu Không gian Lắp đặt	11
Mở kiện và gỡ bỏ vật liệu đóng gói	12
Đặt chồng máy giặt lên chân đế.....	12
Nối ống cấp	13
Lắp đặt Ống Xả nước.....	16
Giữ thẳng bằng cho Thiết bị	17
VẬN HÀNH.....	18
Sử dụng thiết bị	18
Phân loại Quần áo.....	19
Đóng cửa và ngăn kéo	20
Thêm Các chất Làm sạch.....	21
Bảng Điều khiển	23
Bảng Chương trình.....	24
Chương trình Tùy chọn	26
CHỨC NĂNG THÔNG MINH.....	27
Sử dụng Chức năng Smart Diagnosis™	27
BẢO TRÌ.....	28
Vệ sinh Máy Giặt Của bạn.....	28
Tub Clean (Vệ sinh Lồng giặt).....	29
Vệ sinh Bộ lọc Ngõ vào Nước	29
Vệ sinh bộ lọc xơ vải	30
Thận trọng trước hiện tượng Đóng băng Trong Mùa đông.....	30
XỬ LÝ SỰ CỐ	32
Chẩn đoán Sự cố	32
Thông báo Lỗi.....	37

HƯỚNG DẪN AN TOÀN

Các hướng dẫn an toàn sau đây nhằm mục đích ngăn chặn các rủi ro hoặc hư hỏng không thể lường trước từ việc vận hành sản phẩm không an toàn hoặc không đúng cách.

Các hướng dẫn được chia thành hai phần ‘CẢNH BÁO’ và ‘THẬN TRỌNG’ như được mô tả bên dưới.



Biểu tượng này được hiển thị để cho biết các vấn đề và thao tác vận hành có thể gây ra rủi ro. Hãy đọc cẩn thận phần có biểu tượng này và thực hiện theo các hướng dẫn để tránh rủi ro.



CẢNH BÁO

Biểu tượng này cho biết nếu không thực hiện theo các hướng dẫn có thể gây ra thương tích nghiêm trọng hoặc tử vong.



THẬN TRỌNG

Biểu tượng này cho biết nếu không thực hiện theo các hướng dẫn có thể gây ra thương tích nhẹ hoặc hư hỏng sản phẩm.

HƯỚNG DẪN AN TOÀN QUAN TRỌNG



CẢNH BÁO

Để giảm rủi ro cháy, nổ, tử vong, điện giật, thương tích hoặc bỏng ở người khi sử dụng sản phẩm này, hãy thực hiện theo các biện pháp phòng ngừa cơ bản, bao gồm các điều sau:

Hộ gia đình có trẻ em

Thiết bị này không nhằm dành cho những người (bao gồm trẻ em) có năng lực thể chất, giác quan hoặc tinh thần bị suy giảm, hoặc thiếu kinh nghiệm và kiến thức sử dụng nếu họ không có sự giám sát hoặc hướng dẫn liên quan đến việc sử dụng thiết bị từ người chịu trách nhiệm về sự an toàn của họ. Trẻ em cần phải được giám sát để đảm bảo rằng các bé không chơi đùa với thiết bị.

Sử dụng ở Châu Âu:

Trẻ em từ 8 tuổi trở lên hoặc người có năng lực thể chất, giác quan hoặc tinh thần bị suy giảm, hoặc thiếu kinh nghiệm và kiến thức có thể sử dụng thiết bị này nếu có sự giám sát hoặc hướng dẫn liên quan đến việc sử dụng thiết bị một cách an toàn và hiểu các nguy hiểm có liên quan. Trẻ em không được chơi đùa với thiết bị. Trẻ em không được thực hiện việc vệ sinh và bảo trì dành cho người dùng nếu không có sự giám sát.

Cần giữ trẻ em dưới 3 tuổi tránh xa thiết bị nếu không giám sát được bé liên tục.

Lắp đặt

- Đừng bao giờ cố gắng vận hành thiết bị nếu thiết bị hư hỏng, trục trặc, bị tháo rời từng phần, thiếu hoặc gãy các bộ phận, kể cả dây hoặc phích cắm bị hỏng.
- Thiết bị này chỉ nên được vận chuyển bởi hai hoặc nhiều người giữ thiết bị một cách chắc chắn.
- Không lắp đặt thiết bị ở nơi có nhiều bụi và ẩm thấp. Không lắp đặt hoặc bảo quản thiết bị ở bất kỳ khu vực ngoài trời hoặc ở bất kỳ chỗ nào chịu tác động của điều kiện thời tiết như ánh sáng mặt trời trực tiếp, gió, mưa hoặc nhiệt độ dưới mức đóng băng.
- Siết chặt ống xả để tránh bị bật ra.

- Nếu dây điện bị hỏng hoặc ổ ổ cắm bị lỏng, không dùng dây điện đó và liên hệ với trung tâm dịch vụ được ủy quyền.
- Không được lắp đặt thiết bị phía sau cửa có khoá, cửa trượt hoặc cửa có bản lề ở phía đối diện cửa của thiết bị, làm hạn chế thao tác mở hần cửa của thiết bị.
- Chân đế máy giặt này phải được lắp đặt dưới máy giặt lồng ngang LG phù hợp được sản xuất sau năm 2009.
- Thiết bị này phải được nối đất. Trong trường hợp xảy ra trục trặc hoặc hỏng máy, việc nối đất sẽ giảm thiểu rủi ro điện giật bằng cách tạo ra đường đi cản trở dòng điện ít nhất.
- Thiết bị này được trang bị dây điện có dây dẫn nối đất thiết bị và phích cắm nối đất. Phích cắm phải được cắm vào ổ cắm phù hợp được lắp đặt và nối đất theo các quy tắc và quy định địa phương.
- Việc kết nối dây dẫn nối đất thiết bị không đúng cách có thể gây ra rủi ro điện giật. Xác nhận lại với thợ điện hoặc nhân viên dịch vụ có đủ trình độ chuyên môn nếu bạn nghi ngại không biết thiết bị có được nối đất đúng cách hay không.
- Không sửa đổi phích cắm được cung cấp kèm theo thiết bị. Nếu phích cắm không phù hợp với ổ cắm, hãy yêu cầu thợ điện có đủ trình độ chuyên môn lắp đặt ổ cắm đúng.

Vận hành

- Không sử dụng đồ vật sắc nhọn như máy khoan hoặc đinh ghim để nhấn hoặc tách rời một đơn vị vận hành.
- Không sửa chữa hoặc thay thế bất kỳ bộ phận nào của thiết bị. Mọi việc sửa chữa và bảo trì phải do nhân viên dịch vụ có đủ trình độ chuyên môn thực hiện trừ khi được khuyến nghị cụ thể trong Hướng dẫn sử dụng cho Người dùng này. Chỉ sử dụng các phụ tùng thay thế chính hãng.
- Sử dụng bộ ống mới được cung cấp kèm theo thiết bị. Sử dụng lại các ống cũ có thể gây ra hiện tượng rò rỉ nước và làm hỏng tài sản về sau này.
- Không tiếp cận thiết bị nếu lồng giặt hoặc trục đang chuyển động.
- Không để vật liệu dễ cháy chẳng hạn như xơ vải, giấy, giẻ lau, hoá chất v.v. ở khu vực bên dưới và xung quanh thiết bị.
- Không đặt các loại động vật, chẳng hạn như thú cưng vào trong thiết bị.
- Không để hở cửa thiết bị. Trẻ em có thể trèo lên cửa hoặc bò vào trong thiết bị, gây hư hỏng hoặc thương tích.
- Không bao giờ đưa tay vào bên trong thiết bị khi thiết bị đang hoạt động. Đợi cho đến khi lồng giặt hoàn toàn dừng hẳn.
- Không bỏ thêm, giặt hoặc sấy những đồ dùng đã được rửa, giặt, ngâm hoặc chấm các chất dễ cháy hoặc dễ nổ (chẳng hạn như sáp, dầu, sơn, xăng, các chất tẩy nhờn, dung môi tẩy khô, dầu hoả, dầu thực vật, dầu ăn v.v.). Sử dụng không đúng cách có thể gây cháy nổ.
- Trường hợp xảy ra lụt, ngắt dây điện và liên hệ trung tâm dịch vụ khách hàng LG Electronics.
- Không đè cửa xuống quá mạnh khi cửa thiết bị hở.

- Không chạm vào cửa thiết bị khi sử dụng chương trình nhiệt độ cao.
- Không được sử dụng khí dễ cháy và các chất dễ cháy (benzen, xăng, dung môi, dầu mỡ hoặc cồn v.v.) gần sản phẩm.
- Nếu ống xả hoặc ống cấp bị đóng băng trong mùa đông, chỉ sử dụng thiết bị sau khi tan tuyết.
- Giữ tất cả các chất tẩy giặt, chất làm mềm và chất tẩy trắng tránh xa trẻ em.
- Không được chạm vào phích cắm hoặc các phần điều khiển thiết bị bằng tay ướt.
- Khi kéo phích cắm điện ra khỏi ổ cắm, hãy cầm phích cắm điện, không phải dây điện.
- Không được gấp cong dây điện quá mức hoặc đặt một vật nặng lên dây.
- Nếu có rò rỉ khí (isobutan, propan, khí tự nhiên v.v.), không được chạm vào thiết bị hay dây điện và thông gió khu vực ngay lập tức.
- Không vận hành chân đế máy giặt khi có hai hay nhiều chân đế máy giặt chồng lên nhau.
- Để tránh làm vỡ cửa kính, không đẩy cửa quá mạnh khi đóng cửa.
- Không dẫm lên chân đế máy giặt.
- Không giặt mền, đệm, giày hoặc chăn cho thú cưng hay bất kỳ vật khác ngoại trừ quần áo hoặc khăn trải giường, trong máy này.
- Chỉ được dùng thiết bị này cho hộ gia đình và không được dùng thiết bị này trong các ứng dụng di động.
- Không dùng chân đế mở hoặc đóng cửa.

Bảo trì


- Cắm chặt phích cắm vào ổ cắm sau khi loại bỏ hơi ẩm và bụi bẩn.
- Ngắt dây nguồn trước khi vệ sinh thiết bị.
- Không bao giờ rút phích cắm thiết bị bằng cách kéo dây điện. Luôn cầm chặt phích cắm và kéo thẳng phích cắm ra khỏi ổ cắm.
- Không phun nước vào bên trong hoặc bên ngoài thiết bị để vệ sinh thiết bị.

Tiêu hủy

- Trước khi vứt bỏ thiết bị cũ, rút phích cắm. Cắt bỏ dây cáp ngay phía sau thiết bị để phòng ngừa sử dụng nhầm.
- Tiêu hủy tất cả vật liệu đóng gói (chẳng hạn như túi nhựa và styrofoam) tránh xa trẻ em. Vật liệu đóng gói có thể gây ngạt thở.
- Tháo rời cửa trước khi thải bỏ hoặc vứt bỏ thiết bị này để tránh gây nguy hiểm cho trẻ nhỏ hoặc các động vật nhỏ bị mắc kẹt bên trong.


LẮP ĐẶT

Các bộ phận

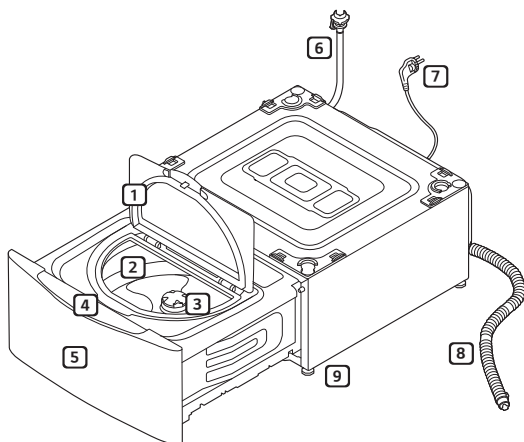


- 1 Cửa
- 2 Lồng giặt
- 3 Bộ lọc xơ vải
- 4 Bảng Điều khiển
- 5 Ngăn kéo
- 6 Ống cấp nước
- 7 Phích cắm điện
- 8 Ống xả nước
- 9 Chân có thể Điều chỉnh độ cao

Các phụ kiện



Ống cấp nước
(cho nước lạnh)




Nối
ống cấp



Ống xả nước



Đầu nối
ống cấp nước



Đầu nối loại thông
thường / Đầu nối
loại bắt vít



Dây buộc cáp



Đầu nối
ống xả nước



Miếng lót chống
trượt



Cờ-lê



Cốc
đóng xả phòng



Vít



Kẹp ống

- Tùy dòng máy có thể có các phụ kiện khác nhau.


Thông số kỹ thuật

Model	T2735NWL
Khối lượng giặt	3,5 kg (Giặt)
Nguồn Điện	220 - 240 V~, 50 Hz
Kích thước	700 mm (R) x 770 mm (S) x 360 mm (C)
Trọng lượng Sản phẩm	48.7 kg
Áp lực nước cho phép	0,1 - 0,8 MPa (1,0 - 8,0 kgf / cm ²)

- Hình dạng bên ngoài và các thông số kỹ thuật có thể thay đổi mà không báo trước để cải thiện chất lượng sản phẩm.
- Nguồn cấp nước nóng bên ngoài KHÔNG ĐƯỢC vượt quá 65°C.
- Không cần trang bị thêm bảo vệ dòng chảy ngược để nối vào nguồn cấp nước.

Yêu cầu Không gian Lắp đặt

Vị trí

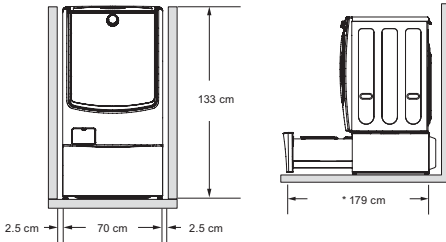

* 179 cm : cần thêm để bảo dưỡng.

Độ thẳng bằng sàn : Độ dốc cho phép bên dưới toàn bộ thiết bị là 1°.

Ổ cắm điện : Phải trong khoảng cách 1,5 mét mỗi bên tính từ vị trí của thiết bị.

- Không làm quá tải ổ cắm do sử dụng nhiều hơn một thiết bị.

Khoảng hở Thêm : 2,5 cm ở hai bên và 10 cm phía sau thiết bị.

- Không đặt hoặc để các sản phẩm giặt bên trên thiết bị vào bất cứ lúc nào.
- Các sản phẩm này có thể làm hư hỏng bề mặt sơn hoặc các phần điều khiển.

⚠ CẢNH BÁO

- Phích cắm phải được cắm vào ổ cắm phù hợp được lắp đặt và nối đất đúng cách theo các quy tắc và quy định địa phương.

Bố trí

- Lắp đặt thiết bị trên sàn cứng và bằng phẳng.
- Đảm bảo sự tuần hoàn không khí xung quanh thiết bị không bị cản trở bởi các loại thảm, mền, v.v.
- Không cố chỉnh sửa bất kỳ tình trạng không bằng phẳng nào của sàn bằng các miếng gỗ, bìa cứng hoặc vật liệu tương tự bên dưới thiết bị.
- Nếu không thể tránh bố trí thiết bị kế bên bếp ga hoặc bếp than thì phải đặt một lớp cách nhiệt (85x60 cm) phủ lá nhôm ở bên phía đối diện bếp ga hoặc bếp lò giữa hai thiết bị.

- Không lắp đặt thiết bị trong các phòng có thể xảy ra nhiệt độ đóng băng. Các ống đóng băng có thể bị cháy dưới áp suất. Độ tin cậy của bộ điều khiển điện tử có thể bị ảnh hưởng ở nhiệt độ dưới điểm đóng băng.
- Đảm bảo rằng khi lắp đặt thiết bị, kỹ sư có thể dễ dàng tiếp cận được thiết bị trong trường hợp hỏng máy.
- Sau khi thiết bị đã được lắp đặt, điều chỉnh tất cả bốn chân bằng cách sử dụng cò-lê bu-lông vận chuyển để đảm bảo thiết bị được cân bằng, chừa ra khoảng cách xấp xỉ 20 mm giữa mặt trên của thiết bị với mặt dưới bàn để đồ trên máy giặt nếu có.
- Nếu thiết bị được giao trong mùa đông và nhiệt độ dưới nhiệt độ đóng băng, đặt thiết bị ở nhiệt độ phòng trong vài giờ trước khi tiến hành vận hành thiết bị.
- Không sử dụng khay hứng vì nó có thể làm kẹt ngăn kéo. Sử dụng khay hứng có thể làm tăng độ rung và tiếng ồn trong khi vận hành.

⚠ CẢNH BÁO


- Thiết bị này không được thiết kế để sử dụng trên biển hoặc trong những hệ thống lắp đặt di động chẳng hạn như nhà lưu động, máy bay, v.v.

Nối Điện

- Không sử dụng dây kéo dài hoặc bộ nối điện đôi.
- Luôn rút phích cắm thiết bị và tắt nguồn cấp nước sau khi sử dụng.
- Kết nối thiết bị với ổ cắm được nối đất phù hợp theo các quy định đi dây hiện hành.
- Thiết bị phải được bố trí sao cho có thể dễ dàng tiếp cận được phích cắm.
- Chỉ nhân viên có đủ trình độ chuyên môn mới được phép sửa chữa thiết bị. Việc sửa chữa được thực hiện bởi những người không có kinh nghiệm có thể gây thương tích hoặc trực tiếp nghiêm trọng. Hãy liên hệ trung tâm dịch vụ địa phương của bạn.


Mở kiện và gỡ bỏ vật liệu đóng gói

- 1 Nhấc thiết bị khỏi bề mặt xốp.
 - Nếu bạn phải đặt thiết bị nằm xuống để tháo bỏ để bì cứng thì phải luôn luôn bảo vệ phần mặt bên của thiết bị và đặt cẩn thận thiết bị nằm trên mặt bên của máy. Không đặt thiết bị nằm trên mặt trước hoặc mặt sau của máy.
- 2 Kéo và giữ tấm xốp để sử dụng về sau.
 - Nếu sau này phải di chuyển máy giặt, tấm xốp sẽ giúp tránh hư hỏng cho máy giặt trong khi vận chuyển.



LƯU Ý

- Để tránh hư hỏng, không tháo tấm xốp cho đến khi máy giặt ở vị trí cuối cùng.
- 3 Xoay nắp trên khoảng 180 độ.
 - Che lỗ phía trên bằng nắp trên và lắp 4 vít ngăn (đi kèm trong hộp đóng gói) để cố định vào vị trí.

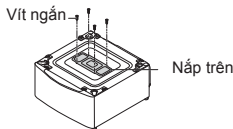


⚠ CẢNH BÁO


- Phải lắp nắp trên để tránh nguy cơ điện giật hoặc đoản mạch do nước nhỏ xuống. Không tuân theo cảnh báo này có thể dẫn đến thương tích nặng, hỏa hoạn, điện giật hoặc tử vong.

Đặt chông máy giặt lên chân đế


- 1 Đảm bảo chân có thể điều chỉnh độ cao trên máy giặt lồng ngang thu lại hoàn toàn trước khi đặt chông. Đặt máy giặt lồng ngang lên trên chân đế máy giặt. Đảm bảo các lỗ trên chân đế máy giặt khớp với các lỗ trên máy giặt lồng ngang.

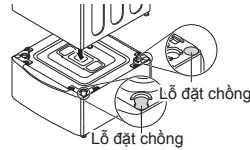

- 2 Lắp 4 vít dài (đi kèm trong hộp) ở mỗi góc để gắn chặt máy giặt lồng ngang vào chân đế máy giặt.

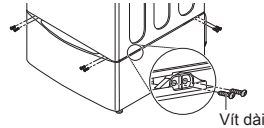

- 3 Xoay nhẹ chân của máy giặt lồng ngang cho đến khi khớp vào chân đế máy giặt.


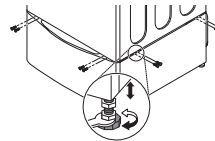


⚠ CẢNH BÁO

- Chân đế máy giặt này phải được lắp đặt dưới máy giặt lồng ngang LG phù hợp được sản xuất sau năm 2009. (chỉ với máy giặt 16-21 kg)
- Chân đế máy giặt không hoạt động như một thiết bị độc lập.
- Chân đế máy giặt phải được đặt dưới máy giặt lồng ngang LG để vận hành đúng cách.



Nối ống cấp

- Áp lực nước phải nằm trong khoảng 0,1 MPa đến 0,8 MPa (1,0–8,0 kgf/cm²).
- Không làm tròn ren hoặc hư ren khi kết nối ống cấp với van.
- Nếu áp lực cấp nước lớn hơn 0,8 MPa, phải lắp đặt thiết bị giảm áp.
- Kiểm tra định kỳ tình trạng của ống và thay ống nếu cần thiết.

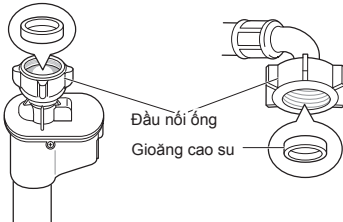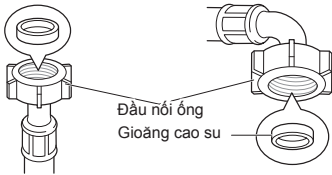

Kiểm tra gioăng cao su trên ống cấp


Hai gioăng cao su được cung cấp kèm theo các ống cấp nước. Chúng được sử dụng để phòng ngừa rò rỉ nước. Đảm bảo kết nối với vòi nước máy đủ chặt.

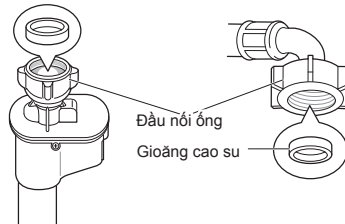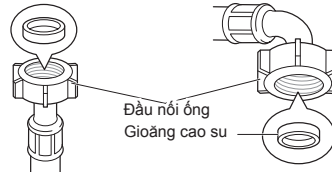


Kết nối Ống với Vòi Nước máy

Kết Nối Ống Kiểu Vặn vít với Vòi nước máy có Ren


Vặn đầu nối ống lên trên vòi cấp nước.

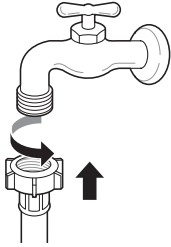


1 Nới lỏng bốn vít cố định.

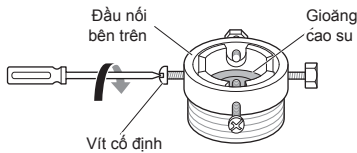


2 Tháo bỏ vành dẫn hướng nếu vòi nước máy quá lớn để lắp với ống nối.

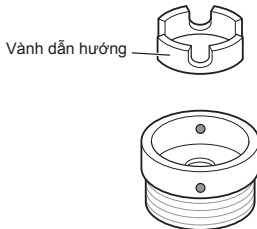

3 Đẩy ống nối lên trên phần đầu của vòi nước máy sao cho gioăng cao su tạo thành kết nối kín nước. Siết chặt bốn vít cố định.

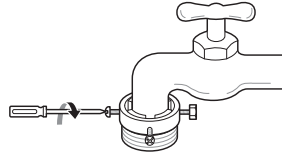


4 Đẩy ống cấp theo chiều thẳng đứng lên phía trên sao cho gioăng cao su bên trong ống có thể dính chặt hoàn toàn vào vòi nước máy rồi sau đó siết chặt bằng cách vặn ống về phía bên phải.

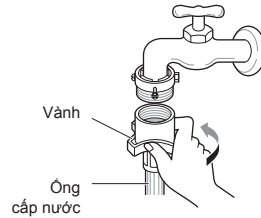


Kết nối Ống Loại Một Chạm với Vòi nước máy Không có Ren


1 Vặn nới vành đai ống nối và nới lỏng bốn vít cố định.

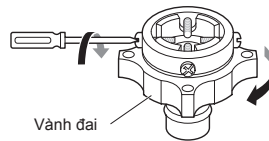


- 2** Tháo bỏ vành dẫn hướng nếu vòi nước máy quá lớn để lắp với ống nối.

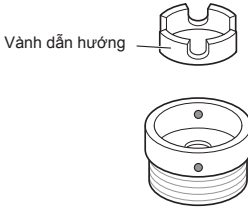

- 3** Đẩy ống nối lên trên phần đầu của vòi nước máy sao cho gioăng cao su tạo thành kết nối kín nước. Siết chặt bốn vít cố định và vành đai ống nối.

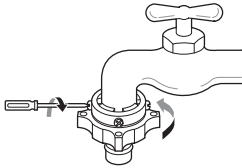

- 4** Kéo vành khoá ráp đầu nối xuống, đẩy ống cấp lên ống nối và nhả vành khoá ráp đầu nối. Đảm bảo ống nối khoá vào đúng chỗ.

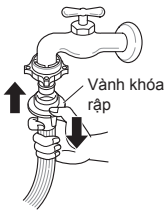


LƯU Ý


- Sau khi kết nối ống cấp với vòi nước máy, mở vòi nước máy để xả sạch các chất lạ (chất dơ, cát, mùn cưa, v.v.) trong các đường nước. Hứng nước xả vào xô và kiểm tra nhiệt độ nước.

Nối ống với hai máy giặt


- 1** Nối đầu nối ống cấp nước với ống cấp nước của máy giặt lồng ngang. Mở gói phụ kiện để lắp đặt chân đế máy giặt.

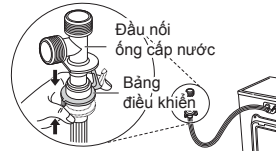

- 2** Nối ống cấp nước của chân đế máy giặt với đầu nối ống cấp nước, chân đế máy giặt sẽ lắp đặt.

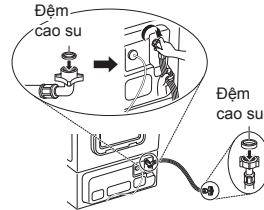


- 3** Nối ống cấp nước được cung cấp thêm của máy giặt lồng ngang với đầu nối ống cấp nước và vòi nước.

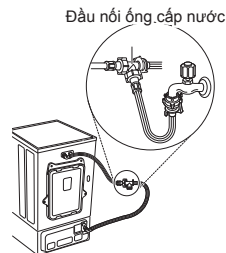


Lắp đặt Ống Xả nước

- Ống xả không nên đặt cao hơn 100 cm so với sàn. Nước trong thiết bị không thể xả hoặc xả chậm.


1 Lắp kẹp ống vào khuỷu ống xả.

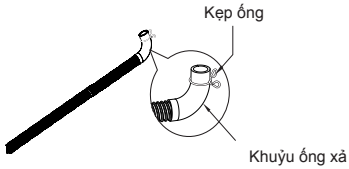

2 Khi ống đã nối xuống khuỷu, lắp khuỷu vào đầu ra lỗ xả ở phía sau của chân đế máy giặt.

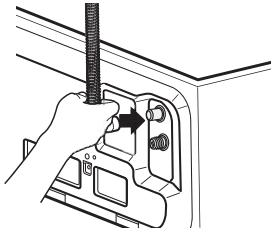


3 Điều chỉnh kẹp ống vào vị trí để tránh rò rỉ.

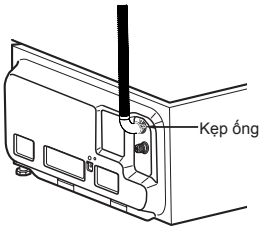

Sử dụng đầu nối ống xả


Nối ống xả của máy giặt lồng ngang và chân đế máy giặt với đầu nối ống xả. Lắp dây kẹp ống đi kèm vào đầu của hai ống xả. Ấn mạnh ống xả vào đầu nối ống xả. Điều chỉnh dây kẹp ống để ngăn ống không bị lỏng hoặc rò rỉ. Không tuân theo hướng dẫn này có thể dẫn đến tràn nước. Sử dụng đầu nối ống xả giúp tránh rút nước do hiệu ứng bình thông nhau, tránh mùi hoặc xả không đúng cách.

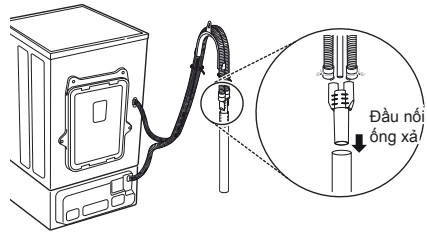

Giữ thẳng bằng cho Thiết bị

Nếu sàn không bằng phẳng, hãy vận các chân có thể điều chỉnh được nếu cần (Không chèn các miếng gỗ v.v. bên dưới các chân). Đảm bảo rằng tất cả bốn chân đều vững chắc và chống trên sàn, sau đó kiểm tra xem thiết bị đã thẳng bằng hoàn hảo chưa (Sử dụng ống ni-vô).

- Khi thiết bị đã thẳng bằng, siết chặt các ốc hãm lên trên sát bề thiết bị. Tất cả các ốc hãm phải được siết chặt.

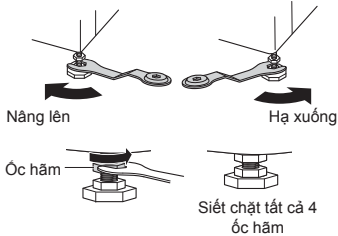

Kiểm tra Đường chéo

- Khi đẩy các cạnh của tấm trên máy giặt xuống theo đường chéo, thiết bị không được di chuyển lên xuống (kiểm tra cả hai chiều). Nếu thiết bị rung chuyển khi đẩy tấm trên máy theo đường chéo, điều chỉnh lại các chân lần nữa.

⚠ CẢNH BÁO

- Khi đặt chông máy giặt lồng ngang lên chân đế máy giặt, hãy sử dụng chân có thể điều chỉnh độ cao trên chân đế máy giặt để giữ cân bằng cho cả máy giặt và chân đế. Chân có thể điều chỉnh độ cao của máy giặt lồng ngang nên thu lại hết cỡ và xoay các đai ốc khóa ngược chiều kim đồng hồ để cố định các chân này.

LƯU Ý

- Sàn làm bằng gỗ hoặc dạng lũng có thể góp phần gây rung mạnh và mất thẳng bằng.
- Nếu máy giặt được lắp đặt trên một bề năng, thiết bị phải được buộc chặt chắc chắn để loại trừ rủi ro rơi đổ.

Sử dụng Miếng lót Chống Trượt (Tùy chọn)

Nếu bạn lắp đặt thiết bị trên một bề mặt trơn trượt, thiết bị có thể di chuyển do sự rung lắc quá mức. Việc chỉnh thẳng bằng không đúng có thể gây trục trặc thông qua tiếng ồn và độ rung. Nếu xảy ra trường hợp này, lắp đặt các miếng lót chống trượt bên dưới các chân chỉnh thẳng bằng và điều chỉnh độ thẳng bằng.


1 Vệ sinh sàn để dán các miếng lót chống trượt.

- Sử dụng một miếng giẻ khô để loại bỏ và lau sạch các vật thể lạ và hơi ẩm. Nếu vẫn còn hơi ẩm, các miếng lót chống trượt có thể bị trượt.

2 Điều chỉnh độ thẳng bằng sau khi đặt thiết bị trong khu vực lắp đặt.

3 Đặt mặt dính của miếng lót chống trượt lên sàn.

- Lắp đặt các miếng lót chống trượt bên dưới chân trước là hiệu quả nhất. Nếu khó đặt các miếng lót bên dưới chân trước, hãy đặt chúng bên dưới chân sau.

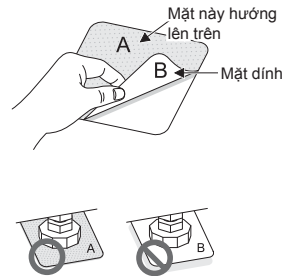

4 Đảm bảo rằng thiết bị đã thẳng bằng.

- Đẩy hoặc lắc nhẹ các cạnh bên trên của thiết bị để đảm bảo rằng thiết bị không bị rung chuyển. Nếu thiết bị rung chuyển, chỉnh lại thiết bị một lần nữa cho thẳng bằng.


LƯU Ý

- Bạn có thể mua miếng lót chống trượt ở Trung tâm Dịch vụ LG.

Sử dụng thiết bị


1 Phân loại quần áo và cho đồ vào máy.

- Phân loại quần áo theo loại vải, mức độ bẩn, màu sắc và kích thước để giặt nếu cần. Mở cửa và cho đồ vào trong máy giặt.

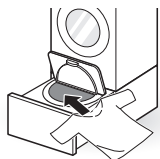

2 Thêm sản phẩm làm sạch.


- Dùng cốc đong chất tẩy lấy một lượng chất tẩy thích hợp cho đều vào lồng giặt.

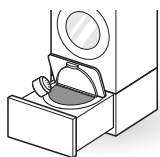

3 Đóng cửa và ngăn kéo.

4 Bật máy giặt.

- Nhấn nút **Nguồn** để bật máy giặt.

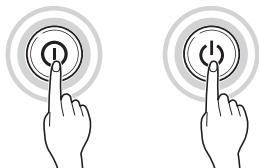

5 Chọn chu trình giặt mong muốn.

- Nhấn nút chu trình nhiều lần cho đến khi chọn được chu trình mong muốn.



6 Bắt đầu chu trình.

- Nhấn nút **Khởi động/Tạm dừng** để bắt đầu chu trình. Máy giặt sẽ khuấy trộn nhanh không nước để đo khối lượng quần áo. Nếu không nhấn nút **Khởi động/Tạm dừng** trong vòng 5 phút, máy giặt sẽ tắt nguồn và tất cả các cài đặt sẽ bị mất.



7 Thêm nước xả vải.

- Khi máy giặt phát ra âm báo trong khoảng 20 giây, hãy thêm nước xả vải và nhấn **Khởi động/Tạm dừng** để khởi động lại chu trình.

8 Kết thúc chu trình.

- Khi chu trình hoàn tất, máy sẽ phát ra một giai điệu. Lấy quần áo của bạn ra khỏi máy giặt ngay để tránh quần áo bị nhăn và có mùi.
- Sau khi giặt xong, lau cửa máy giặt, vòng đệm và bên trong lồng giặt bằng khăn khô để giặt được sạch.

Phân loại Quần áo

1 Tìm nhãn sử dụng trên quần áo của bạn.

- Nhãn này sẽ thông tin cho bạn về hàm lượng sợi vải của quần áo và cách giặt.
- Các biểu tượng trên nhãn sử dụng.



Nhiệt độ giặt



Giặt máy thông thường



Đồ dễ nhàn



Delicate (Sợi tinh xảo)



Giặt tay




Không giặt

2 Phân loại quần áo.

- Để đạt hiệu quả tốt nhất, phân loại quần áo thành các mẻ mà có thể giặt trong cùng một chu trình giặt.
- Các loại vải khác nhau cần được giặt ở các nhiệt độ và tốc độ vắt khác nhau.
- Giặt hai hay nhiều khăn hoặc đồ len cùng nhau. Nếu giặt riêng, quần áo hút nhiều nước có thể không được giặt kỹ hoặc có thể xảy ra hiện tượng vắt khô bất thường do nghiêng.
- Luôn luôn phân loại các đồ tối màu với đồ màu nhạt và màu trắng. Giặt riêng chúng ra do có thể xảy ra hiện tượng nhuộm màu hoặc phai màu sợi vải làm đổi màu quần áo trắng và nhạt màu. Nếu có thể, không giặt các đồ bị bẩn nhiều cùng với các đồ bị bẩn ít.
 - Vết bẩn (Nhiều, Vừa, Ít) :
Tách riêng quần áo tùy vào lượng vết bẩn.
 - Màu sắc (Trắng, Sáng, Tối):
Tách riêng vải trắng với vải màu.
 - Sợi vải (Sợi vải nhân tạo, Tổng hợp):
Giặt riêng sợi vải nhân tạo và sợi vải tổng hợp.

3 Thận trọng trước khi bỏ đồ vào máy.

- Không giặt 'gọng giữ dáng' trong đồ lót phụ nữ (ví dụ như nịt ngực) vì nó có thể làm hỏng quần áo khác hoặc làm hỏng máy giặt và gây tiếng ồn.
- Kiểm tra tất cả các túi để đảm bảo không có gì trong túi. Các đồ vật chẳng hạn như đinh, kẹp tóc, que diêm, bút, tiền xu và chìa khóa có thể làm hư hỏng cả máy giặt lẫn quần áo của bạn.




- Đóng phéc-mơ-tuya, móc cài áo và dây thắt để đảm bảo các đồ vật này không làm rách những quần áo khác.
- Xử lý trước vết bẩn và vết màu khó sạch bằng cách chà một lượng nhỏ chất tẩy đã pha loãng nước lên các vết màu khó sạch để giúp làm bong vết bẩn.
- Nếu quần áo của bạn có dây buộc dài, hãy để dây buộc sao cho nó không bị rối hoặc cho nó vào túi giặt.
- Tháo ruột của đệm, gối hoặc thảm ngồi và chỉ giặt phần vỏ. Phần ruột có thể bung ra, làm hỏng các đồ giặt khác. Các chi tiết bằng nhựa có thể tạo ra rung động bất thường.

⚠ THẬN TRỌNG

- Chia nhỏ lượng lớn đồ giặt sao cho đồ giặt có thể ngập hoàn toàn dưới nước. Nếu đồ giặt bồng lên trong khi giặt, đồ giặt và các bộ phận có thể bị hỏng trong khi giặt hoặc vắt.

Đóng cửa và ngăn kéo

- 1** Đẩy cửa máy giặt cho đến khi nghe thấy tiếng tách.



- 2** Đẩy ngăn kéo đóng hoàn toàn.

⚠ THẬN TRỌNG

- Không để tay bạn bị kẹt giữa cửa và máy giặt vì điều này có thể gây thương tích.
- Cố dùng lực mở ngăn kéo hoặc cửa có thể làm hỏng bộ phận máy và gây ra các sự cố về an toàn.
- Đóng ngăn kéo trước khi cửa đóng hoàn toàn có thể làm xước kính ở cửa.
- Đảm bảo kéo ngăn kéo ra hoàn toàn để tránh không cho cửa tiếp xúc với máy giặt lồng ngang.

LƯU Ý

- Có thể không chốt được cửa nếu có quá nhiều đồ giặt trong máy hoặc nếu cửa không được đóng hoàn toàn.
- Nếu sản phẩm đang vận hành hoặc đèn báo Chốt Ngăn kéo (🔒) hiển thị thì không thể mở cửa. Để mở cửa, nhấn nút Khởi động/Dừng để dừng thiết bị, và khi đèn báo Chốt Ngăn kéo (🔒) biến mất, hãy mở cửa. Không cố dùng lực mở ngăn kéo và cửa.
- Nếu (dE1, dE2, dE3) hoặc một dấu hiệu cảnh báo xuất hiện trên màn hình, hãy đóng ngăn kéo và cửa hoàn toàn. Sau đó, nhấn nút Khởi động/Dừng.

- Nếu không thể mở hoàn toàn ngăn kéo, dùng cả hai tay kéo ngăn kéo về phía trước với lực nhỏ.
- Nếu xảy ra mất điện trong khi vận hành thiết bị, cửa sẽ không thể mở được. Cấp lại nguồn hoặc liên hệ trung tâm dịch vụ LG. (trong trường hợp giặt nước nóng, không thể mở cửa sau khi nguồn được cấp lại do nhiệt độ cao bên trong máy giặt).
- Nếu không thể mở cửa do nhiệt độ cao, tiến hành xả bằng nước lạnh bằng cách sử dụng chương trình Giũ+Vắt hoặc đợi một lúc trước khi mở cửa.


Thêm Các chất Làm sạch

Liều lượng Chất tẩy

- Chất tẩy cần được sử dụng theo hướng dẫn của nhà sản xuất chất tẩy đó và được lựa chọn phù hợp với loại, màu, vết bẩn của sợi vải và nhiệt độ giặt.
- Nếu sử dụng quá nhiều chất tẩy thì có thể xuất hiện quá nhiều bọt xà phòng và điều này sẽ dẫn đến hiệu quả giặt kém hoặc gây tải nặng cho động cơ.
- Nếu bạn muốn sử dụng chất tẩy dạng lỏng, hãy làm theo những chỉ dẫn do nhà sản xuất chất tẩy cung cấp.
- Nếu xuất hiện quá nhiều bọt xà phòng thì giảm bớt lượng chất tẩy.
- Có thể cần phải điều chỉnh cách sử dụng chất tẩy theo nhiệt độ nước, độ cứng nước, kích thước và mức độ bẩn của mẻ giặt. Để đạt hiệu quả tốt nhất, tránh tạo quá nhiều bọt xà phòng.
- Tham khảo nhãn trên quần áo trước khi chọn chất tẩy và nhiệt độ nước.
- Khi sử dụng máy giặt, sử dụng chất tẩy được chỉ định dành riêng đối với từng loại quần áo:
 - Các chất tẩy dạng bột chung cho tất cả các loại vải
 - Các chất tẩy dạng bột dành cho vải mềm mịn
 - Chất tẩy dạng lỏng dành cho tất cả các loại vải hoặc các chất tẩy được chỉ định dành riêng cho vải len
- Để hiệu quả giặt và tẩy trắng tốt hơn, hãy sử dụng chất tẩy có thành phần tẩy trắng dạng bột phổ biến.

Thêm Chất tẩy

Đong xà phòng bằng dụng cụ đong xà phòng và đổ vào lồng giặt.

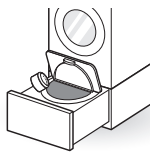

- Sử dụng cốc đong xà phòng đi kèm để thêm chỉ một cốc xà phòng.
- Giảm lượng xà phòng nếu đồ giặt bị bẩn nhẹ. Nếu bạn sử dụng quá nhiều xà phòng, lượng bọt thừa sẽ vẫn còn lại ngay sau khi giữ.

Thêm nước xả vải

Thêm Chất làm mềm Vải

TÌNH HUỐNG 1. Khi máy giặt phát ra âm báo:

- 1 Nhấn **Khởi động/Tạm dừng** để tạm dừng chu trình.
- 2 Thêm nước xả vải.
- 3 Đóng cửa, trượt ngăn kéo đóng vào, và nhấn **Khởi động/Tạm dừng** để khởi động lại chu trình.

LƯU Ý

- Để tắt hoặc bật thông báo về nước xả vải, nhấn và giữ nút **Extra Rinse** trong ba giây.

TÌNH HUỐNG 2. Nếu bạn quên không cho nước xả vải:

- 1 Nhấn nút **Nguồn** để tạm ngắt chu trình.
- 2 Chọn chương trình **Rinse+Spin** và nhấn nút **Start** để bắt đầu chu trình. Thêm nước xả vải vào lúc máy phát âm báo.
- 3 Đóng cửa, trượt ngăn kéo đóng vào, và nhấn **Khởi động/Tạm dừng** để khởi động lại chu trình.

LƯU Ý

- Không rót chất làm mềm vải trực tiếp lên quần áo.
- Cũng có thể pha loãng nước xả vải với nước và cho trực tiếp vào lồng giặt. Không đổ trực tiếp nước xả vải chưa pha loãng vào quần áo vì có thể gây bẩn vải.


Thêm Chất làm mềm Nước

- Có thể sử dụng chất làm mềm nước, chẳng hạn như chất chống cặn vôi (ví dụ than hoạt tính Calgon), để giảm bớt việc sử dụng chất tẩy trong các khu vực có nước quá cứng. Phân phối tùy theo lượng được ghi rõ trên bao bì đóng gói. Trước tiên thêm chất tẩy rồi đến chất làm mềm nước.
- Sử dụng lượng chất tẩy cần thiết đối với nước mềm.

THẬN TRỌNG

- Không cho thuốc tẩy trực tiếp vào đồ giặt. Điều này có thể dẫn đến mất màu một phần và hư hỏng nghiêm trọng đến đồ giặt.
- Không sử dụng thuốc tẩy clo hoặc chất tẩy rửa axit khi giặt đồ vì nó có thể gây hỏng quần áo như làm đổi màu và mất màu đồ giặt.

Bảng Điều khiển

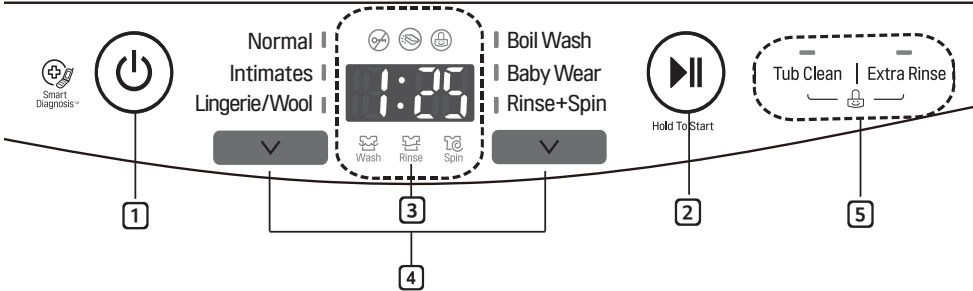

1 Nút Nguồn

- Nhấn nút **Nguồn** để bật máy giặt.

2 Nút Khởi động/Tạm dừng

- Nút **Khởi động/Tạm dừng** này dùng để khởi động hoặc tạm dừng chu trình giặt.
- Nếu cần dừng tạm thời chu trình giặt, nhấn nút **Khởi động/Tạm dừng**.

LƯU Ý

- Nếu bạn không nhấn nút **Khởi động/Tạm dừng** trong vòng 4 phút để chọn chương trình, máy giặt sẽ tự động tắt và tắt cả cài đặt chu trình bị mất.

3 Hiển thị

- Màn hình hiển thị trạng thái chu trình và thời gian còn lại ước tính.
- 🔒: Đèn báo chốt ngăn kéo
- 🔒: Đèn báo khóa cửa
- 👶: Đèn báo khóa trẻ em

4 Nút chương trình

- Các chương trình có thể sử dụng theo loại quần áo.

5 Lựa chọn

- Sử dụng các nút này để chọn các tùy chọn mong muốn cho chương trình đã chọn.
- Các đèn thiết đặt phía trên nút phát sáng để biểu thị lựa chọn hiện tại.

Bảng Chương trình

Chương trình Giặt

Chương trình	Mô tả	Lưu ý	Tải trọng Tối đa
Normal (Giặt thường)	Sử dụng chương trình này để giặt các đồ bình thường bị bẩn nhẹ, trừ vải dễ hỏng như len hoặc lụa.	Nếu nhấn nút Khởi động/Tạm dừng mà không chọn một chương trình, chương trình Thông thường sẽ bắt đầu ngay với cài đặt mặc định.	3,5 kg
Intimates (Đồ ngủ)	Sử dụng chương trình này để giặt các đồ dễ hỏng như quần áo lót của phụ nữ hoặc quần áo bằng vải xuyên thấu và ren có thể dễ bị hỏng khi giặt ở chương trình bình thường.	- Chương trình này hiệu quả khi giặt áo thun cotton bị bẩn nặng hoặc đồ lót. - Không dùng chương trình này để giặt đồ lụa.	1,5 kg
Lingerie/ Wool (Đồ lót/Đồ len)	Sử dụng chương trình này để giặt vải dệt, quần áo lót của phụ nữ hoặc các quần áo mảnh mịn dễ bị co hoặc biến dạng.	- Để giảm hư hại đến vải và cải thiện công suất giặt, hãy sử dụng xà phòng trung tính đặc biệt cho đồ len. - Để tránh làm hỏng quần áo, lồng giặt xoay nhẹ trái phải để giặt.	1,5 kg

Chương trình	Mô tả	Lưu ý	Tải trọng Tối đa
Boil Wash (Giặt Nước nóng)	Sử dụng chương trình này để giặt đồ lót hoặc đồ trẻ em cần khử trùng và tẩy trắng.	- Ở chương trình này, đồ giặt được giặt kỹ nhờ nhiệt độ cao. Sử dụng 1/2 lượng xà phòng do nhà sản xuất khuyến nghị cho lượng giặt thông thường. - Không được giặt đồ màu trắng hoặc màu sáng cùng đồ màu tối có thể phai màu. - Sẽ hiệu quả hơn nếu giặt sơ qua đồ giặt bị dính máu hoặc sữa bằng nước lạnh trước khi giặt chính để có thể loại bỏ vết bẩn hiệu quả hơn. - Trong chương trình này, nước được làm nóng bằng hệ thống làm nóng của máy giặt. - Chức năng loại bỏ bọt: Nếu sử dụng quá nhiều xà phòng, chức năng loại bỏ bọt có thể vận hành. - Chức năng giảm nhiệt độ xả: Để đảm bảo an toàn, nước lạnh được cấp nhanh trước khi xả để giảm nhiệt độ nước.	1,5 kg
Baby Wear (Đồ Trẻ em)	Sử dụng chương trình này để giặt đồ trẻ em hợp vệ sinh.	- Chọn loại xà phòng trung tính phù hợp. - Quần áo được giặt ở nhiệt độ cao để khử trùng và loại bỏ chất rắn. - Sẽ hiệu quả hơn nếu giặt sơ qua đồ giặt dính thức ăn, mồ hôi, nước tiểu và phân trước khi giặt. - Do nhiệt độ cao, chương trình này không được khuyến nghị sử dụng cho đồ len, lụa hoặc bất kỳ đồ dễ hỏng nào khác.	1,5 kg
Rinse+Spin (Giũ+Vắt)	Chọn chương trình này để giũ và vắt mé giặt riêng với chu trình thông thường.	Chỉ thêm nước xả vải.	1,5 kg

- Đặt chương trình ở chế độ 'Wash (Giặt): Normal (Giặt thường)' vòng/phút để kiểm tra phù hợp với TCVN 8526:2013.

Chương trình Tùy chọn

Tub Clean (Vệ sinh Lồng giặt)

Sử dụng tùy chọn này để giữ lồng giặt sạch sẽ bằng cách khử sạch vi trùng bên trong lồng giặt. Để biết thông tin về cách sử dụng Tub Clean (Vệ sinh Lồng giặt), xem mục Vệ sinh Máy giặt Của bạn.

Extra Rinse (Giũ Mạnh)

Sử dụng tùy chọn này để tăng số lượng chương trình giũ.

- 1 Nhấn nút **Nguồn**.
- 2 Lựa chọn một chương trình giặt.
- 3 Nhấn nút **Extra Rinse** để cài đặt thời gian yêu cầu.
 - Khi bạn nhấn nút **Extra Rinse**, số lượng chu trình giũ (1 - 5) được thêm vào sẽ hiển thị.
- 4 Nhấn nút **Khởi động/Tạm dừng**.

Khóa Trẻ em

Sử dụng tùy chọn này để vô hiệu hóa các phím điều khiển. Tính năng này có thể ngăn trẻ em không thay đổi các chu trình hoặc vận hành thiết bị.

Khóa Bảng Điều khiển

- 1 Nhấn và giữ nút **Tub Clean** và **Extra Rinse** cùng lúc trong ba giây.
- 2  sẽ xuất hiện trên màn hình. Khi cài đặt Khóa Trẻ em, tất cả các nút đều bị khóa trừ nút **Nguồn**.

LƯU Ý

- Tắt nguồn hoặc hoàn thành tất cả chu trình sẽ không thiết đặt lại chức năng khóa trẻ em. Bạn phải vô hiệu hóa chức năng khóa trẻ em trước khi có thể truy cập bất kỳ chức năng nào khác.

Mở khóa Bảng Điều khiển


Nhấn và giữ nút **Tub Clean** và **Extra Rinse** cùng lúc trong ba giây.

- Để thay đổi chu trình hoặc tùy chọn, nhấn nút **Khởi động/Tạm dừng** để dừng vận hành, sau đó chọn chu trình hoặc tùy chọn bạn muốn thay đổi.


Sử dụng Chức năng Smart Diagnosis™

Sử dụng chức năng này nếu bạn cần sự chẩn đoán chính xác từ trung tâm dịch vụ LG Electronics khi sản phẩm bị trục trặc hoặc lỗi. Chỉ sử dụng chức năng này để liên hệ đại diện dịch vụ, không sử dụng khi máy hoạt động bình thường.

- 1 Nhấn nút **Nguồn** để bật máy giặt. Không nhấn bất kỳ nút nào khác hoặc vận nướm chọn chu trình.
- 2 Khi được hướng dẫn thực hiện như vậy từ trung tâm tổng đài, đặt loa điện thoại gần nút **Nguồn**.

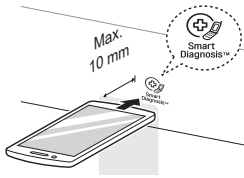

- 3 Nhấn và giữ nút **Tub Clean** trong ba giây, trong khi đó giữ micrô của điện thoại ở biểu tượng tượng hoặc nút **Nguồn**.
- 4 Giữ điện thoại ở đúng vị trí cho đến khi quá trình truyền âm hoàn tất. Thời gian còn lại của quá trình truyền dữ liệu được hiển thị.
 - Để đạt kết quả tốt nhất, không di chuyển điện thoại trong khi đang truyền âm.
 - Nếu nhân viên trung tâm tổng đài không thể nhận được bản ghi dữ liệu chính xác, bạn có thể được yêu cầu thử lại lần nữa.

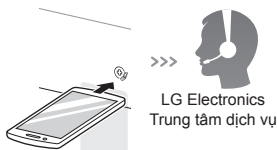

- 5 Khi hết thời gian đếm ngược và âm thanh chấm dứt, tiếp tục cuộc nói chuyện với nhân viên trung tâm tổng đài - là người sẽ có thể hỗ trợ bạn sử dụng các thông tin đã truyền để phân tích.

LƯU Ý

- Chức năng Smart Diagnosis™ phụ thuộc vào chất lượng cuộc gọi địa phương.
- Hiệu quả giao tiếp sẽ cải thiện và bạn có thể nhận được dịch vụ tốt hơn nếu sử dụng điện thoại bàn.
- Nếu quá trình truyền dữ liệu Smart Diagnosis™ kém do chất lượng cuộc gọi kém, bạn có thể không nhận được dịch vụ Smart Diagnosis™ tốt nhất.

⚠ CẢNH BÁO

- Rút phích cắm máy giặt trước khi vệ sinh để tránh rủi ro điện giật. Không tuân theo cảnh báo này có thể dẫn đến thương tích nặng, hỏa hoạn, điện giật hoặc tử vong.
- Không bao giờ sử dụng các hóa chất mạnh, chất tẩy rửa có tính mài mòn hoặc dung môi để vệ sinh máy giặt. Chúng có thể làm hư hỏng bề mặt sơn.


Vệ sinh Phần bên trong

- Sử dụng khăn lau hoặc vải mềm để lau khô xung quanh ô cửa và kính cửa máy giặt.
- Luôn lấy đồ ra khỏi máy giặt ngay khi chu trình hoàn tất. Để đồ ẩm ướt trong máy giặt có thể khiến đồ bị nhăn, chuyển màu và có mùi.
- Chạy chương trình Vệ sinh Lồng một lần một tháng (hoặc thường xuyên hơn nếu cần) để loại bỏ tích tụ chất tẩy và các chất cặn khác

Vệ sinh Máy Giặt Của bạn

Chăm sóc Sau khi Giặt

- Sau khi chu trình hoàn tất, lau khô cửa và mặt trong gioăng cửa để loại bỏ hơi ẩm.
- Mở cửa để làm khô phần bên trong lồng giặt.
- Lau khô thân máy giặt bằng vải khô để loại bỏ hơi ẩm.

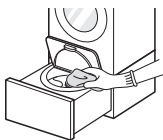

Vệ sinh Phần bên ngoài

Chăm sóc máy giặt đúng cách có thể kéo dài tuổi thọ sản phẩm.

Cửa:

- Rửa bằng vải ẩm ở mặt ngoài và mặt trong, sau đó lau khô bằng vải mềm.

Phần bên ngoài:

- Lau khô ngay lập tức mọi chỗ bị tràn.
- Lau khô bằng vải ẩm.
- Không ấn các vật thể sắc nhọn lên bề mặt hoặc màn hình.

Tub Clean (Vệ sinh Lồng giặt)

Sử dụng tùy chọn này để giữ lồng giặt sạch sẽ bằng cách khử sạch vi trùng bên trong lồng giặt.

- 1 Nhấn nút **Nguồn**.
- 2 Pha loãng 200 ml nước tẩy clo trong 1 l nước và đổ hỗn hợp vào lồng giặt.
- 3 Nhấn nút **Tub Clean** để cài đặt thời gian yêu cầu.
- 4 Nhấn nút **Khởi động/Tạm dừng**.


THẬN TRỌNG

- Nếu có trẻ em, lưu ý không để cửa mở quá lâu.


Vệ sinh Bộ lọc Ngõ vào Nước

- Tắt đồng hồ tính giờ nếu không sử dụng máy giặt trong một khoảng thời gian bất kỳ (ví dụ: nghỉ lễ), đặc biệt nếu không có đường thoát nước sàn (rãnh tháo) ở ngay xung quanh.
- Biểu tượng  có thể nhấp nháy trên màn hình khi áp lực nước yếu hoặc bộ lọc đầu vào bị tắc bởi chất bẩn. Vệ sinh bộ lọc đầu vào.
- Lưới bộ lọc đầu vào có thể bị bít do cặn vôi trong nước cứng, cặn lắng trong ống cấp nước hoặc các cặn bẩn khác.

- 1 Tắt vòi nước máy và vặn nơi ống cấp nước.

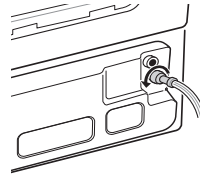


- 2 Vệ sinh bộ lọc bằng cách sử dụng bàn chải lông cứng.

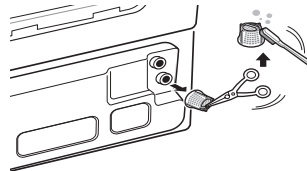


Vệ sinh bộ lọc xơ vải

Bộ lọc là một bộ phận quan trọng giúp máy giặt hoạt động hiệu quả, do đó cần đặc biệt chú ý đến bộ lọc. Cần phải vệ sinh bộ lọc thường xuyên.


- 1 Kéo nắp của bộ lọc xơ vải.

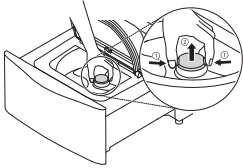

- 2 Mở nắp và loại bỏ xơ vải sau đó rửa sạch.

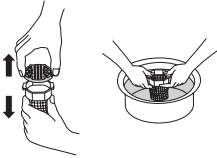

- 3 Cho phần dưới của bộ lọc vào lồng giặt và đóng nắp cho đến khi bạn nghe thấy tiếng tách.

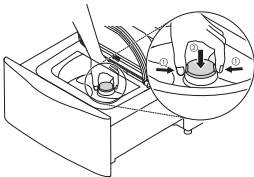

LƯU Ý


- Khi bộ lọc xơ vải bị hỏng, liên hệ trung tâm dịch vụ LG.
- Không vận hành máy giặt mà không có bộ lọc xơ vải.
- Không để bộ lọc xơ vải bị lỏng. Làm như vậy có thể làm hỏng vải hoặc máy giặt.

Thận trọng trước hiện tượng Đóng băng Trong Mùa đông

- Khi bị đóng băng, sản phẩm không hoạt động bình thường. Đảm bảo lắp đặt sản phẩm ở vị trí sẽ không bị đóng băng trong mùa đông.
- Trong trường hợp phải lắp đặt sản phẩm bên ngoài trời khác, đảm bảo kiểm tra như sau đây.

Làm thế nào để Giữ Sản phẩm không bị Đóng băng

- Sau khi khóa vòi nước máy, ngắt kết nối ống cấp nước lạnh với vòi nước máy và xả bỏ nước trong khi vẫn giữ ống hướng xuống dưới.

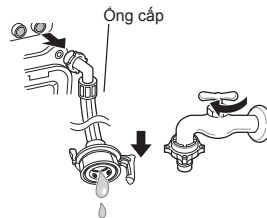


Làm cách nào để Xử lý Đóng băng

Bước 1. Khi cửa bị đóng băng

- Rã đông cửa bằng cách sử dụng vải thấm nước nóng.

Bước 2. Khi ống cấp nước bị đóng băng

- Biểu tượng **IE** có thể nhấp nháy trên màn hình khi xảy ra sự cố về cấp nước, hãy thực hiện các biện pháp sau.
 - Tháo ống cấp nước và nối với vòi nước máy và kiểm tra xem nước có chảy ra từ vòi nước máy và ống cấp không.
 - Khóa vòi nước máy và rã đông vòi nước máy và cả hai khu vực kết nối ống cấp của sản phẩm bằng cách sử dụng vải thấm nước nóng.
 - Tháo ống cấp và ngâm ngập trong nước ấm dưới 50–60 °C.

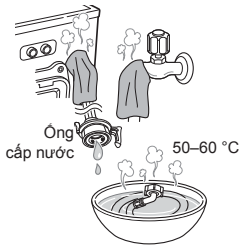

Bước 3. Khi bơm xả bị đóng băng

- Biểu tượng **FF**, **DE** có thể nhấp nháy trên màn hình khi xảy ra sự cố với bơm xả, hãy thực hiện các biện pháp sau.

- 1 Đổ 15 l nước ấm dưới 50–60 °C vào lồng giặt cho đến khi ngập đai ốc cánh chuẩn của máy giặt và đợi một tiếng.
- 2 Nhấn nút **Nguồn**, sau đó chạy chương trình Giặt Nước nóng trong một tiếng.
 - Khi biểu tượng **IE** xuất hiện trên màn hình, lặp lại các bước từ 1 đến 2.
- 3 Tắt nguồn khi chương trình Giặt Nước nóng hoàn tất. Nếu ngăn kéo mờ, chọn **Rinse+Spin** và nhấn **Extra Rinse** đến số 9, sau đó nhấn nút **Khởi động/Tạm dừng** để chạy Vắt.
- 4 Chọn chương trình **Rinse+Spin** và nhấn nút **Khởi động/Tạm dừng** để kiểm tra xem máy giặt có hoạt động không.
- 5 Khi biểu tượng **DE** xuất hiện trên màn hình, rã đông phần bên trong ống xả bằng nước nóng.

Thiết bị được trang bị hệ thống giám sát lỗi tự động để phát hiện và chẩn đoán các sự cố ở giai đoạn đầu. Nếu thiết bị không hoạt động đúng chức năng hoặc hoàn toàn không hoạt động, hãy kiểm tra như sau trước khi gọi cho bộ phận dịch vụ:

Chẩn đoán Sự cố

Triệu chứng	Nguyên nhân	Giải pháp
Tiếng ồn lạch cạch lách cách	Các vật thể lạ, chẳng hạn như chìa khóa, tiền xu hoặc kim băng có thể nằm trong lồng giặt.	Dừng máy giặt, kiểm tra lồng giặt xem có vật thể lạ không. Nếu vẫn còn tiếng ồn sau khi khởi động lại máy giặt, hãy gọi cho bộ phận dịch vụ.
Âm thanh to	Tải giặt nặng có thể tạo ra âm thanh to.	Nếu âm thanh vẫn tiếp tục, máy giặt có thể bị mất cân bằng. Dừng và phân phối lại mẻ giặt.
	Mẻ giặt có thể không cân.	Dừng chu trình và bố trí lại mẻ giặt sau khi cửa mở.
Tiếng ồn rung	Vật liệu đóng gói chưa được tháo ra.	Tháo vật liệu đóng gói.
	Có thể mẻ giặt được bố trí không đều trong lồng giặt.	Dừng chu trình và bố trí lại mẻ giặt sau khi cửa mở.
	Có chân có thể điều chỉnh độ cao không nằm chắc chắn và đều nhau trên sàn.	Xem Cân bằng thiết bị trong mục Lắp đặt.
	Sàn không đủ cứng.	Đảm bảo sàn cứng và không đàn hồi.
Nước rò rỉ mỗi lần giặt	Không lắp đặt ống đúng cách.	Kiểm tra tất cả các kết nối ống cấp và ống xả để đảm bảo các kết nối đó được khít và chắc chắn.
Quá nhiều bọt	Quá nhiều xà phòng hoặc xà phòng không phù hợp.	Giảm lượng xà phòng nếu đồ giặt bị bẩn nhẹ. Nếu bạn sử dụng quá nhiều xà phòng, lượng bọt thừa sẽ vẫn còn lại ngay sau khi giũ.
Ó màu	Chưa phân loại quần áo đúng cách.	- Luôn giặt riêng quần áo tối màu với quần áo trắng và sáng màu để tránh bị phai màu. - Không được giặt chung đồ bẩn nặng với đồ bẩn nhẹ.

Triệu chứng	Nguyên nhân	Giải pháp
Rò rỉ nước	Kết nối ống cấp bị lỏng ở vòi nước máy, máy giặt hoặc đầu nối ống xả.	• Kiểm tra các ống và đầu nối ống xả xem có bị rò rỉ, nứt vỡ không. • Siết chặt các kết nối ống.
	Các đường ống xả trong nhà bị tắc.	• Máy giặt bơm nước ra rất nhanh. Kiểm tra xem nước có bị chảy ngược ra ngoài ống xả trong khi xả không. Nếu thấy nước chảy ra ngoài ống xả, kiểm tra xem ống xả có được lắp đặt đúng cách không và có bị tắc chỗ nào không. Hãy gọi thợ ống nước để sửa ống xả.
	Ống xả tuột ra khỏi đầu nối ống xả hoặc không được đưa vào đủ sâu.	• Buộc ống xả với ống cấp hoặc ống nước đứng để tránh nước bắn ra trong khi xả. Đối với ống xả nhỏ hơn, đút ống xả vào ống cứng sâu tới mép ống xả. Đối với ống xả lớn hơn, đút ống xả vào ống cứng qua mép 2-5 cm.
	Mề giặt quá nhiều trong lồng giặt.	• Giảm mề giặt hoặc sử dụng máy giặt lồng ngang. • Dùng máy giặt và kiểm tra mề giặt. Đảm bảo mề giặt vừa đủ, không bị ép chặt trong lồng giặt và cửa đóng dễ dàng.
Bị nhăn	Không lấy đồ giặt ra khỏi máy giặt nhanh chóng.	• Luôn lấy đồ ra khỏi máy giặt ngay khi chu trình hoàn tất.
	Máy giặt quá tải.	• Có thể cho đầy đồ giặt vào máy giặt, nhưng không được xếp chặt ních đồ giặt trong lồng giặt. Cửa máy giặt phải đóng dễ dàng.
	Ống cấp nước nóng và lạnh bị đảo ngược.	• Giữ bằng nước nóng có thể khiến quần áo bị nhăn. Kiểm tra các kết nối ống cấp.
Rò rỉ nước	Xà phòng quá nhiều bọt.	• Quá nhiều bọt có thể gây rò rỉ, và có thể do loại và lượng xà phòng đã sử dụng. Luôn giảm lượng xà phòng nếu mề giặt ít hoặc bắn nhẹ, hoặc bạn sử dụng nguồn nước rất mềm. Không được dùng quá lượng tối đa biểu thị trên dụng cụ đo đi kèm.

Triệu chứng	Nguyên nhân	Giải pháp
Máy giặt không nạp nước đúng cách.	Bộ lọc bị tắc.	• Đảm bảo bộ lọc đầu vào trên van nạp không bị tắc. Tham khảo hướng dẫn vệ sinh bộ lọc.
	Ống cấp có thể bị gấp.	• Kiểm tra xem ống cấp có bị gấp hoặc bị tắc không.
	Nguồn cấp nước không đủ.	• Đảm bảo cả vòi nước nóng và lạnh đều mở thông suốt.
	Cửa và ngăn kéo đang mở.	• Máy giặt sẽ không vận hành nếu cửa đang mở. Đóng cửa và đảm bảo không có gì bị kẹt dưới cửa để tránh cửa không đóng được hoàn toàn.
	Ống cấp nước nóng và lạnh bị đảo ngược.	• Kiểm tra các kết nối ống cấp.
	Mức nước quá thấp.	• Mức nạp nước được tối ưu hóa cho chuyển động giặt nhằm đạt hiệu quả giặt tốt nhất.

Triệu chứng	Nguyên nhân	Giải pháp
Máy giặt sẽ không vận hành	Bảng điều khiển tắt nguồn do không hoạt động.	• Điều này là bình thường. Nhấn nút Nguồn để bật máy giặt.
	Máy giặt bị rút phích cắm điện.	• Đảm bảo dây được cắm chặt vào ổ cắm có điện.
	Nguồn cấp nước bị ngắt.	• Mở hết cỡ cả hai vòi nước nóng và lạnh.
	Các mục điều khiển chưa được cài đặt đúng cách.	• Đảm bảo cài đặt chu trình đúng cách, đóng cửa và nhấn nút Khởi động/Dừng.
	Cửa hoặc ngăn kéo đang mở.	• Đóng cửa và ngăn kéo, đảm bảo không có gì bị kẹt dưới cửa để tránh cửa không đóng được hoàn toàn.
	Cầu dao/cầu chì bị ngắt/cháy.	• Kiểm tra cầu dao/cầu chì trong nhà. Thay thế cầu chì hoặc thiết đặt lại cầu dao. Máy giặt phải sử dụng mạch nhánh riêng. Máy giặt sẽ tiếp tục lại chu trình ở chỗ đã dừng khi có điện trở lại.
	Mục điều khiển cần phải đặt lại.	• Nhấn nút Nguồn, sau đó chọn lại chương trình mong muốn và nhấn nút Khởi động/Dừng.
	Khởi động/Dừng không được nhấn sâu khi thiết đặt chu trình.	• Nhấn nút Nguồn sau đó chọn lại chương trình mong muốn và nhấn nút Khởi động/Dừng. Máy giặt sẽ tắt nếu nút Khởi động/Dừng không được nhấn trong vòng 4 phút.
	Áp lực nước quá thấp.	• Kiểm tra vòi nước máy khác trong nhà để đảm bảo rằng áp lực nước trong nhà đủ.
	Máy giặt quá lạnh.	• Nếu máy giặt phải ở trong môi trường nhiệt độ lạnh trong một thời gian dài, hãy để máy ấm lên trước khi nhấn nút Nguồn.

Triệu chứng	Nguyên nhân	Giải pháp
Máy giặt không xả nước	Ống xả bị gấp.	• Đảm bảo ống xả không bị gấp.
	Ống xả được đặt cao hơn sàn nhà trên 2,4 m.	• Đảm bảo ống xả không cao hơn 2,4 m so với đáy máy giặt và cách máy giặt không quá 1,5 m.
Loại bỏ vết bẩn kém	Mề giặt bị bẩn nặng.	• Sử dụng máy giặt lồng ngang.
	Vết bẩn khó giặt từ trước.	• Các đồ đã được giặt trước có thể có vết bẩn khó giặt. Các vết bẩn này có thể khó loại bỏ và có thể cần giặt tay hoặc xử lý sơ bộ để hỗ trợ cho việc loại bỏ vết bẩn.
Thời gian chu trình giặt lâu hơn bình thường	Máy giặt tự động điều chỉnh thời gian giặt cho lượng đồ giặt, áp lực nước và các điều kiện vận hành khác.	• Điều này là bình thường. Máy giặt điều chỉnh thời gian chu trình tự động để cho kết quả tối ưu cho chương trình đã chọn. Thời gian còn lại hiển thị trên màn hình chỉ là ước tính. Thời gian thực tế có thể khác.
Có mùi mốc trong máy giặt.	Đã sử dụng quá nhiều xả phòng hoặc xả phòng không phù hợp.	• Máy này cần rất ít xả phòng. Sử dụng cốc đong xả phòng đi kèm.
	Bên trong lồng giặt không được vệ sinh đúng cách.	• Chạy chương trình Tub clean (Vệ sinh Lồng giặt) thường xuyên.
Máy giặt phát âm báo lặp đi lặp lại trước lần giũ cuối cùng	Đây không phải là lỗi.	• Đây là thông báo cho phép thêm nước xả vải trước lần giũ cuối cùng.

Thông báo Lỗi

Triệu chứng	Nguyên nhân	Giải pháp
	Ngăn kéo không được đóng đúng cách.	• Đóng ngăn kéo và nhấn nút Khởi động/Dừng để bắt đầu chu trình. • Nếu ngăn kéo đóng và thông báo lỗi chốt ngăn kéo hiển thị, hãy gọi cho bộ phận dịch vụ.
	Cửa không được đóng đúng cách.	• Mở ngăn kéo và đảm bảo khu vực chốt cửa không bị vướng quần áo hoặc các vật cản khác. • Đóng cửa, đóng ngăn kéo và nhấn Khởi động/Dừng để bắt đầu chu trình. • Nếu cửa đóng và thông báo lỗi cửa hiển thị, hãy gọi cho bộ phận dịch vụ.
	Các vòi cấp nước không mở hết cỡ.	• Đảm bảo các vòi nước được mở hết cỡ.
	Các ống đường nước bị gấp, bẹp hoặc bị đè.	• Đảm bảo các ống không bị gấp hoặc bẹp. Cần thận khi di chuyển máy giặt trong khi vệ sinh hoặc bảo dưỡng.
	Bộ lọc nước đầu vào bị tắc.	• Vệ sinh bộ lọc đầu vào.
	Áp lực nguồn cấp nước đến vòi nước hoặc vào nhà quá thấp.	• Kiểm tra vòi nước máy khác trong nhà để đảm bảo rằng áp lực nước trong nhà đủ và dòng chảy không bị tắc nghẽn. Tháo ống cấp khỏi máy giặt và đổ vài lít nước vào ống để thông đường cấp nước. Nếu dòng chảy quá yếu, hãy liên hệ thợ đường ống để sửa đường nước.
	Đường cấp nước được nối với ống hạn chế rò rỉ.	• Các ống được thiết kế để hạn chế rò rỉ có thể đóng sai, khiến máy giặt không thể nạp đầy nước. Không khuyến nghị sử dụng ống hạn chế rò rỉ.
	Ống xả bị gấp, bẹp hoặc tắc.	• Đảm bảo ống xả không bị tắc, gấp, v.v... và không bị bẹp ở phía sau hoặc phía dưới máy giặt.
	Ống xả cao hơn đáy máy giặt trên 1,2 m.	• Điều chỉnh hoặc sửa chữa ống xả. Chiều cao ống xả tối đa là 1,2 m.

Triệu chứng	Nguyên nhân	Giải pháp
	Vận hành tái cân bằng UE không thành công.	• Cố gắng tự động tái cân bằng mẻ giặt không thành công. Chu trình đã dừng để cho phép điều chỉnh mẻ giặt bằng tay.
	Mẻ giặt quá ít.	• Thêm nhiều đồ để máy giặt cân bằng mẻ giặt.
	Các đồ nặng lẫn với đồ nhẹ.	• Giặt các đồ có trọng lượng tương đối như nhau.
	Mẻ giặt bị mất cân bằng.	• Bố trí lại mẻ giặt bằng tay nếu đồ giặt bị quần vào nhau.
	Lỗi điều khiển.	• Rút phích cắm điện và gọi cho bộ phận dịch vụ.
	Mức nước quá cao do van nước bị hỏng.	• Đóng các vòi nước máy, rút phích cắm máy giặt và gọi cho bộ phận dịch vụ.
	Cảm biến mực nước không hoạt động đúng.	• Đóng các vòi nước máy, rút phích cắm máy giặt và gọi cho bộ phận dịch vụ.
	Xảy ra lỗi động cơ.	• Để máy giặt đứng yên trong 30 phút và sau đó khởi động lại chu trình. Nếu mã lỗi LE vẫn còn, hãy gọi cho bộ phận dịch vụ.
	Đã đến lúc chạy chương trình Tub Clean (Vệ sinh Lồng giặt).	• Chạy chương trình Tub Clean (Vệ sinh Lồng giặt).
	Chân đế máy giặt đang vận hành mà không có máy giặt phù hợp.	• Chân đế máy giặt sẽ không vận hành như một bộ phận độc lập. Chân đế phải nằm dưới máy giặt lồng ngang LG.
	Chốt đặt chông không hoạt động đúng cách.	• Chốt đặt chông sẽ không vận hành đúng cách nếu chân đế nằm dưới một thiết bị khác không phải LG, hoặc một thiết bị LG được sản xuất trước năm 2009.
	Ống xả, ống cấp hoặc bơm xả bị đóng băng	• Rã đông ống cấp bằng cách sử dụng vải thấm nước nóng. • Đổ nước ấm vào lồng giặt.
	CL không phải là lỗi. Chức năng này ngăn không cho trẻ em thay đổi các chu trình hoặc vận hành thiết bị.	• Để vô hiệu hóa, nhấn nút Tub Clean và Extra Rinse trong ba giây.

Ghi nhớ

