

SUNHOUSE®

Hotline: 1800 6680

Trung tâm bảo hành Miền Bắc

Km8, Đại lộ Thăng Long, Hoài Đức, Hà Nội - ĐT: +84 24 3200 8339 / 3200 5230

Trung tâm bảo hành Miền Trung

685 Điện Biên Phủ, Q. Thanh Khê, Đà Nẵng - ĐT: +84 23 6372 6821

Trung tâm bảo hành Miền Nam

Lô 8 - 10 đường số 1, KCN Tân Tạo, P. Tân Tạo A, Q. Bình Tân, TP Hồ Chí Minh
ĐT: +84 28 3869 1014 / Fax: +84 28 3869 1013

SUNHOUSE®

HƯỚNG DẪN SỬ DỤNG



NỒI CƠM ĐIỆN TỬ 1.8L SUNHOUSE Model: SHD8909

Vui lòng đọc kỹ hướng dẫn trước khi sử dụng

Nhập khẩu và phân phối: Công ty cổ phần Tập đoàn SUNHOUSE

Địa chỉ: Số 139 Nguyễn Thái Học, P. Điện Biên, Q. Ba Đình, Tp. Hà Nội

ĐT: (+84) 24 3394 0848 - 3736 6676 **Fax:** (+84) 24 3394 0878 - 3736 6696

Sản phẩm được sản xuất tại P.R.C

Website: www.sunhouse.com.vn

Quý khách hàng thân mến,

Xin chân thành cảm ơn vì đã tin dùng và lựa chọn sản phẩm của SUNHOUSE. Chúng tôi tin rằng, sản phẩm làm bằng những chất liệu cao cấp hàng đầu này sẽ đáp ứng mọi yêu cầu và làm hài lòng quý khách.

Quý khách hàng vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng để đảm bảo an toàn và đạt hiệu quả tốt nhất.

Nhà sản xuất không chịu trách nhiệm pháp lý về con người và tài sản trong những trường hợp thiệt hại do lắp đặt sai hoặc sử dụng thiết bị không đúng cách.

TỔNG QUAN SẢN PHẨM


1. Lòng nồi phủ chống dính cao cấp, an toàn cho sức khỏe
2. Đa chức năng, có nhiều chế độ nấu phù hợp mục đích khác nhau
3. Dễ dàng điều chỉnh chức năng nhờ nút bấm và màn hình điện tử

LƯU Ý AN TOÀN

- Đọc kỹ hướng dẫn trước khi sử dụng.
- Thiết bị này không thích hợp cho những người (kể cả trẻ em) có năng lực về cơ thể, giác quan hoặc tinh thần suy giảm hoặc thiếu kinh nghiệm và hiểu biết trừ khi được giám sát hoặc hướng dẫn sử dụng thiết bị bởi người có trách nhiệm về sự an toàn của họ.
- Không để trẻ em chơi đùa với thiết bị. Để thiết bị và dây điện ngoài tầm với của trẻ em.

**TUYỆT ĐỐI CẤM****CẦN TUÂN THỦ****CẦN CHÚ Ý****NGUY HIỂM**

Đặt sản phẩm tránh xa khỏi tầm tay trẻ em, nghiêm cấm trẻ em tự ý sử dụng sản phẩm để tránh bỏng hoặc giật điện

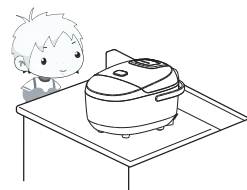

Tuyệt đối không được chạm những vật bằng kim loại như là thìa, đũa,... vào những mối nối của sản phẩm để tránh bị giật trong quá trình sử dụng

**THẬN TRỌNG**

Rút ổ cắm ra trước khi rửa, di chuyển hoặc sửa chữa sản phẩm để tránh bị điện giật



Ngưng sử dụng nếu dây cắm bị hỏng, giác cắm lỏng lẻo để tránh bị giật, cháy



Không đặt nồi lên nguồn lửa trực tiếp, giữ thiết bị tránh xa lửa hoặc những nguồn nhiệt khác




Không đặt thiết bị ở những vị trí bấp bênh, ẩm ướt, dễ cháy hoặc dễ bị cháy như mặt bông, miếng nhựa, thảm len,...

LƯU Ý


- ❗ Kết nối sản phẩm với đúng nguồn điện 220V-50Hz. Việc kết nối sai nguồn điện định mức có thể gây nguy hại cho sản phẩm

- ❗ Vui lòng không cắm hoặc rút ổ cắm bằng tay ướt để tránh giật điện

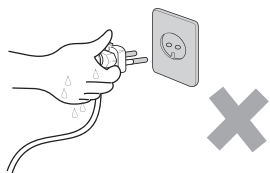

- ❗ Khi rút phích cắm, cần phải dùng tay cầm vào và rút ra, không được giật hoặc kéo dây để tránh gây hư hại đến dây


- ❗ Hãy sử dụng đúng loại dây được cung cấp

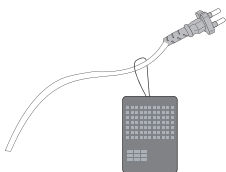

- ❗ Nếu xảy ra mất điện trong lúc đang vận hành, vui lòng rút phích cắm và khởi động lại khi có điện

- ❗ Đảm bảo dây nguồn không tiếp xúc với những bề mặt sắc nhọn hoặc những bề mặt có thể sinh nhiệt để tránh rò rỉ điện, điện giật hoặc cháy nổ

- ❗ Hãy sử dụng ổ cắm 10A trong suốt quá trình sử dụng sản phẩm. Không dùng chung ổ cắm với các thiết bị năng lượng cao khác để tránh chập điện

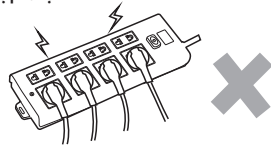

- ❗ Đảm bảo phích cắm được cắm chắc chắn vào ổ điện

- ❗ Khi không sử dụng, vui lòng rút phích cắm khỏi ổ điện

- ❗ Sản phẩm thuộc nhóm I, do vậy cần đảm bảo nguồn điện cần được tiếp địa.

- ❗ Nếu nguồn điện đột ngột bị ngắt khi nồi đang vận hành, hãy rút ổ cắm ra rồi khởi động lại sau khi có điện

LƯU Ý

- ❗ Không tự ý cài đặt thêm bộ điều chỉnh thời gian hoặc điều khiển từ xa để vận hành thiết bị

- ❗ Sản phẩm chỉ sử dụng trong nhà, không dùng ở nơi ẩm ướt, ngoài trời để tránh gây giật điện và ảnh hưởng đến tuổi thọ của thiết bị

- ❗ Thiết bị này không dành cho trẻ em hoặc người khiếm khuyết về thể xác hay tinh thần sử dụng, trừ khi họ được giám sát bởi người có trách nhiệm


- ❗ Vui lòng không sử dụng cho các mục đích khác ngoài các chức năng được thiết lập trên sản phẩm

- ❗ Không di chuyển sản phẩm trong quá trình đang vận hành


- ❗ Loại bỏ hoàn toàn các loại giấy bỏ sau khi mở sản phẩm để tránh trẻ em đùa nghịch gây ngạt thở

- ❗ Khi sản phẩm đang hoạt động, nhiệt độ sẽ tăng lên nên hạn chế chạm trực tiếp vào các phần kim loại, lỗ thoát hơi của sản phẩm

- ❗ Không để tay gần lỗ thoát hơi nước khi nồi đang hoạt động để tránh bị bỏng

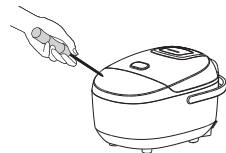

- ❗ Hạn chế để lòng nồi bị va đập mạnh. Không dùng để đun trực tiếp trên bếp gas, bếp hồng ngoại vì sẽ làm bong tróc lớp chống dính, biến dạng lòng nồi


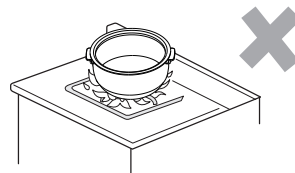


- ❗ Không mở nắp trên của sản phẩm khi nồi đang hoạt động để tránh bị bỏng

- ❗ Giữ ruột nồi, đáy nồi, mâm nhiệt sạch sẽ, không dính dị vật để đảm bảo tiếp xúc tốt

LƯU Ý

- ❗ Khi nồi đang hoạt động, không dùng khăn che lỗ thoát hơi
- ❗ Không nhúng sản phẩm vào nước hoặc vệ sinh trực tiếp bằng nước.
- ❗ Khi lấy thực phẩm ra khỏi nồi, tránh chạm trực tiếp vào nắp trong để hạn chế nguy cơ bỏng
- ❗ Vui lòng sử dụng muỗng cơm đi kèm với sản phẩm. Không sử dụng dụng cụ có góc nhọn hoặc bằng kim loại để tránh làm bong tróc lớp chống dính
- ❗ Không đặt các sản phẩm đóng gói, đóng chai vào nồi để hâm nóng vì sẽ có nguy cơ xảy ra nổ.
- ❗ Nghiêm cấm sử dụng ruột nồi khác với ruột nồi được cung cấp sẵn để tránh nguy cơ cháy nổ
- ❗ Không vận hành sản phẩm khi không có ruột nồi hoặc không có thực phẩm trong ruột nồi
- ❗ Không nấu thức ăn có tính axit (PH <5)

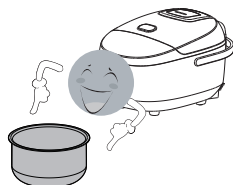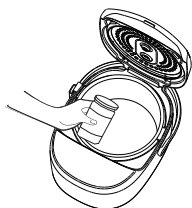

THÀNH PHẦN CẤU TẠO & HƯỚNG DẪN SỬ DỤNG

THÀNH PHẦN CẤU TẠO



Muôi xới cơm


Cốc đong gạo

Gá để muối

Dây nguồn



BẢNG ĐIỀU KHIỂN

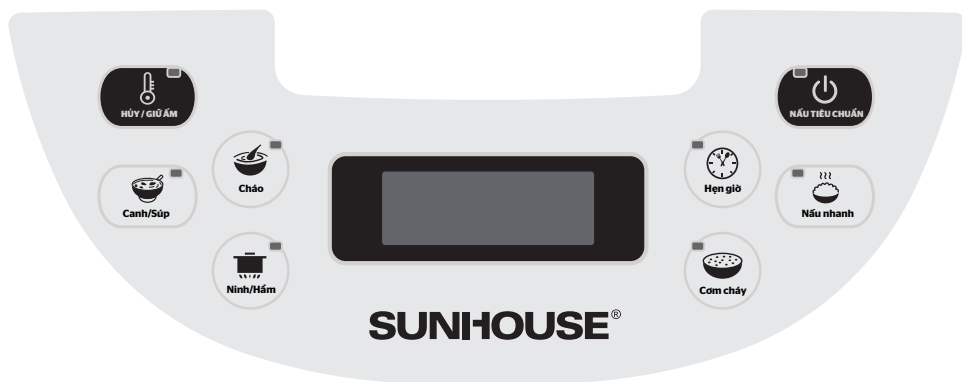

HƯỚNG DẪN SỬ DỤNG

CHUẨN BỊ NẤU

- Đảm bảo nắp bên trong và van hơi được lắp chính xác. Nếu van hơi không được lắp đúng thì rất có thể sẽ xảy ra trào nước.
- Đong gạo bằng cốc đong được cung cấp sẵn. Mỗi cốc đong đúng tiêu chuẩn có thể chứa khoảng 180ml (50g)
- Khi đổ nước vào nồi, cần đặt ruột nồi lên trên mặt phẳng để không làm sai lệch mực nước khi đo lường. Thang đo mực nước chỉ mang tính tham khảo, lượng nước phụ thuộc vào loại gạo, độ mềm và độ cứng theo sở thích của bạn. Lượng tối đa không được vượt quá vạch nước cao nhất được đánh dấu trong ruột nồi.
- Đặt ruột nồi vào trong nồi cơm điện. Trước đó, cần lau sạch ruột nồi, mâm nhiệt để loại bỏ hết dị vật, đảm bảo ruột nồi khô ráo trước khi nấu.
- Đóng nắp nồi. Đặt nồi trên bề mặt bằng phẳng rồi cắm điện và chọn chế độ nấu mong muốn.

LỰA CHỌN CHẾ ĐỘ NẤU

Bước 1: Cho nguyên liệu/thực phẩm và đổ lượng nước tương ứng vào nồi

Bước 2: Ấn chọn chế độ nấu mong muốn. Màn hình sẽ hiển thị thời gian nấu mặc định và nhấp sáng trong 10 giây. Sau 10 giây, nồi tự động vào quá trình nấu.

Trong quá trình nấu, nếu muốn dừng ngang thì ấn nút HỦY, nồi sẽ ngừng nấu

Bước 3: Sau khi nấu xong, nồi sẽ kêu “beep” 3 lần rồi tự động chuyển sang chế độ GIỮ ẤM

CHẾ ĐỘ NẤU	THỜI GIAN MẶC ĐỊNH	THỜI GIAN HẸN GIỜ
Nấu tiêu chuẩn	45 phút (0:45)	1- 24 giờ
Nấu nhanh	35 phút (0:35)	1- 24 giờ
Cơm cháy	60 phút (1:00)	Không hẹn giờ được
Cháo	90 phút (1:30)	1- 24 giờ
Ninh/Hầm	60 phút (1:00)	1- 24 giờ
Canh/Súp	Canh: 60 phút (1:00) Súp: 90 phút (1:30)	1- 24 giờ

CHÚ Ý


- Với chế độ Canh/Súp, nhấn lần 1 để chọn nấu canh - thời gian mặc định là 60 phút), nhấn lần 2 để chọn nấu Súp - thời gian mặc định là 90 phút.
- Khi nấu cơm và cháo, không nên hẹn giờ trên 13 tiếng (mùa hè thì không quá 8 tiếng) vì ngâm gạo trong thời gian dài sẽ khiến gạo bị chua, gây mùi khó chịu, cơm không dẻo ngon.
- Khi nồi vừa kết thúc quá trình nấu cơm, không nên dùng muỗng để xới cơm luôn. Bạn nên chờ nồi giữ ấm thêm 10 -15 phút rồi mới xới cơm để có món cơm mềm tươi hơn.

VỆ SINH VÀ BẢO TRÌ


1. Nồi cơm điện rất dễ có mùi sau khi nấu cơm hoặc các món ăn khác, nên vệ sinh nồi ngay trong ngày sử dụng.
2. Trước khi vệ sinh và bảo trì, cần rút phích cắm và để nguội nồi cơm điện.
3. Sử dụng giẻ mềm, sạch và thấm nước để lau nắp, đế nồi và các bộ phận khác để giữ cho nồi cơm điện sạch sẽ. Lưu ý: Vui lòng không lau bằng điều khiển, phích cắm và dây nguồn bằng vải ẩm.
4. Không sử dụng dung dịch ăn mòn và các vật cứng để làm sạch bên trong và bên ngoài sản phẩm (ví dụ: nước chanh, xăng, bột khử nhiễm, bàn chải cứng, vv.)
5. Không ngâm, rửa bên trong nồi cơm điện.
6. Không sử dụng máy rửa chén hoặc để làm sạch nồi, tránh nguy cơ cháy nổ.

VỆ SINH NẮP TRONG VÀ VAN XẢ THEO CÁC BƯỚC DƯỚI ĐÂY:


1 - Mở nắp giữ nồi, một tay giữ nắp trong, tay còn lại ấn khóa để tháo nắp trong ra.

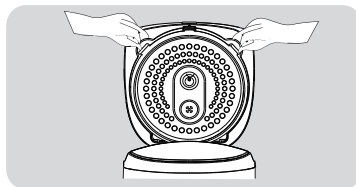


2 - Làm sạch nắp rời và gioăng nắp nồi bằng nước và lau khô bằng giẻ mềm. Có thể thêm một lượng nhỏ nước rửa chén vào để làm sạch hơn. Sau khi rửa sạch, khéo léo đặt các móc định vị của nắp trong về đúng vị trí và nhấn xuống. Khi nghe thấy âm thanh "Rắc" là cài đặt hoàn tất.

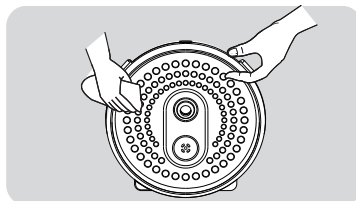


3 - Van hơi trên nắp có thể được rút ra trực tiếp bằng tay và vệ sinh nhanh chóng. Sau khi đã loại bỏ hết cặn bẩn và lau khô, hãy nhớ lắp lại vào nắp nồi.

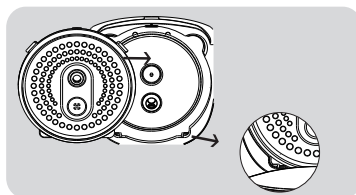


4 - Gạo, nước hoặc các mẫu thực phẩm khác có thể dính trên mâm nhiệt. Để làm sạch, sử dụng một tấm vải khô, tuyệt đối không được dùng nước.

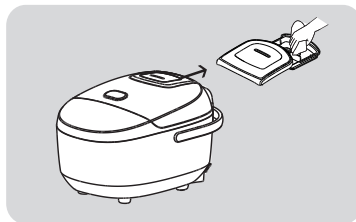

5 - Nhấc ruột nồi ra và làm sạch bằng nước, vải ẩm. Tuyệt đối không dùng dụng cụ sắc nhọn để chà xát, tránh làm bong tróc lớp chống dính. Sau khi đã vệ sinh sạch sẽ, lau khô bằng vải mềm rồi nhẹ nhàng đặt trở lại vào nồi.

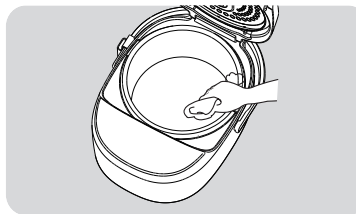


6 - Sau khi đã vệ sinh hết các bộ phận, nhớ đặt lại vào nồi để đảm bảo hoạt động trơn tru những lần sau.

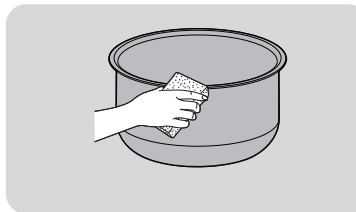

THÔNG TIN SẢN PHẨM

Model	SHD8909
Điện áp	220V
Tần số định mức	50Hz
Công suất	700W
Dung tích	1.8L
Trọng lượng (kg)	3.5 (kg)
Số người sử dụng	2 - 4

SƠ ĐỒ MẠCH ĐIỆN

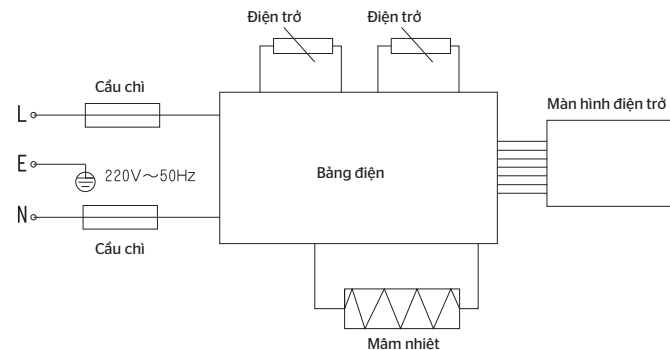

CÁC LỖI THƯỜNG GẶP VÀ CÁCH XỬ LÝ

Hiện tượng lỗi	Nguyên Nhân	Cách xử lý
Đèn không sáng	Không kết nối nguồn điện	Kiểm tra nguồn & bật nguồn
	Lỗi dây điện	Liên hệ Bộ phận bảo hành hoặc các cửa hàng sửa chữa
Mâm nhiệt không nóng	Lỗi mạch	Liên hệ Bộ phận bảo hành hoặc phòng chăm sóc khách hàng
	Nổ/ hỏng cầu chì	
Đèn báo hiệu sáng nhưng mâm nhiệt không nóng	Lỗi mạch	
Lỗi sống cối	Quá nhiều nguyên liệu	Điều chỉnh tổng dung tích của gạo và nước theo phạm vi cao nhất và thấp nhất
	Tỷ lệ gạo với nước sai	Cân bằng lại tỷ lệ Gạo - nước tùy theo loại gạo đang sử dụng
	Ruột nối không tiếp xúc với mâm nhiệt	Xoay nối trong nhẹ nhàng, nối sẽ hoạt động trở lại bình thường Dọn dẹp vật lạ bằng khăn mềm, không rửa bằng nước.
	Ruột nối khác, không tương thích với mâm nhiệt	Liên hệ Bộ phận bảo hành hoặc phòng chăm sóc khách hàng
	Ruột nối bị biến dạng	Mua phụ kiện thay thế
	Lỗi mạch	Liên hệ Bộ phận bảo hành hoặc phòng chăm sóc khách hàng
Tự động chuyển chế độ trước khi hoàn thành	Lỗi cảm biến nhiệt	Tắt nguồn và đợi cho đến khi nối cối nguội
	Trong nối cạn nước	
	Ruột nối không tiếp xúc với mâm nhiệt	Xoay nối trong nhẹ nhàng, nối sẽ hoạt động trở lại bình thường Dọn dẹp vật lạ bằng khăn mềm, không rửa bằng nước.

Khi nối cối báo lỗi, vui lòng kiểm tra Mã cảnh báo trên màn hình hiển thị và chọn giải pháp xử lý phù hợp

Màn hình hiển thị E1 / E2 / E3 / E4 / E5	Quá tải	Điều chỉnh số lượng vừa phải
---	---------	------------------------------

****Nếu vẫn còn lỗi sau khi xử lý thông qua các phương pháp trên, vui lòng liên hệ với bộ phận bảo hành hoặc phòng Chăm sóc khách hàng***

SUNHOUSE®

INSTRUCTION MANUAL



SUNHOUSE 1.8L ELECTRONIC RICE COOKER

Model: SHD8909

Read operating instructions before use

Dear beloved customers,

Thank you for trusting and choosing SUNHOUSE's products. We do believe that this is the most useful and modern product which is manufactured by leading materials. SUNHOUSE's products will meet your requirements and satisfy you.

Please kindly read carefully manual before usage to assure safety and effectiveness.

Manufacturer does not bear any legal responsibilities to human and treasure in case of damage arisen from wrong installation and usage.

Foreword

respected user

Thank you for purchasing the Rice Cooker. This manual applies to smart rice cookers with models

SHD8909. All content in the book is for user use and dimension only

Reference time guard, the actual subject matter. If you still have problems during use, please

contact your local SUNHOUSE Service Center or our customer service center.

Special Notes:

1. All contents in this instruction manual have been carefully checked. If there are any typographical errors or misunderstandings on the content, please contact us.

2. Products are subject to change without prior notice.

Rice Cooker Features

1. Equipped with non-stick inner pot, easy to clean and healthier.

2. With a variety of rice cooking procedures, you can choose different tastes according to your personal preferences, fully meet the individual needs

3. User-friendly operation interface, large digital tube display, personalized intelligent button design, making operation easy and convenient.

Safety Precautions

1 This tip is about protecting yourself and others from danger, damage and other safety aspects. Important content must be observed.

2. Ignore the labels of the table below and use the product incorrectly, which may cause casualties and material losses, please be sure to comply.

The following are the meanings expressed in this article:



Forbidden operation item



Operation item must be followed




Matters needing attention in daily operation


Danger



Please keep it out of reach of children. Do not allow children to work alone to avoid electrocution or scalding.

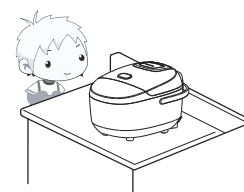

Do not insert metal, wire, needle or other foreign objects into the product or gap, otherwise it will cause electrical shock or abnormal work.

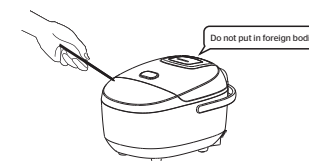

Danger




In case of cleaning, moving, overhaul or product malfunction, be sure to remove the plug in order to prevent leakage or accidental start up.



If the power cord or plug is broken, please do not use it when the socket is loose so as not to cause electric shock and fire.



3. Do not put this product directly on the fire or anywhere near the heat source, fire source, otherwise the product will be damaged or malfunction, or even dangerous.

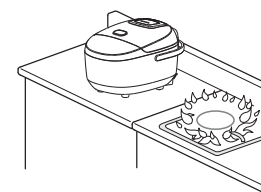

6. Please do not place this product on a table that is unsteady, humid, hot, smooth, and heat-resistant (such as plastic tablecloths, cotton cloth, carpets, etc.) so as to avoid electrical shock, fire, falling off, etc., resulting in injury accidents and property losses.


Attention



The working power supply uses 220v-50Hz AC, no other power supply, otherwise it will damage the original device or cause fire, electric shock and other accidents.




2. Do not pull the plug with wet hand; otherwise it will cause electric shock or injury.

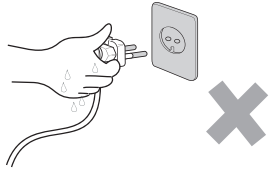

When removing the plug, you must hold the plug handle and do not pull the power cord, otherwise it will easily damage the power cord.



Please use a dedicated power cord, such as the power cord is damaged, please go to the Wei jia mei after-sales service department to buy a dedicated power cord to replace.

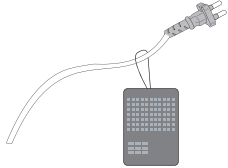


When the power is cut off during work, please unplug the plug and re-operate after the power on. When the power is cut off during work, please unplug the plug and re-operate after the power on.



Make sure that the power cord does not come into contact with sharp edges, burrs, other items that protrude sharp or hot surfaces. This may cause electric leakage, resulting in electric shock or fire.



Please use the dedicated power socket of 10A and above separately. Do not share the same socket with other high-power appliances at the same time to avoid the fire caused by excessive current.

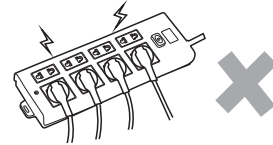

When the plug is inserted into the socket, it must be inserted into the socket. Otherwise, the original may be overheated and burnt due to poor contact, which may cause a short circuit or fire.



When not in use, please unplug the power cord to prevent short circuit and self-ignition caused by aging of the device.



Before use, you must ensure that the power cord is connected to the host reliably; otherwise the device may be damaged due to poor contact.



This product is a Class I appliance, and the grounding wire of the socket should be well grounded.



This product is intended for home use only. Any commercial use, improper use, or failure to comply with this manual is not covered by the warranty, and the company is not responsible for any accident or injury caused by such failure.

Attention



This appliance cannot be operated in the form of an external timer or a separate remote control system.




This product is for use only indoor. It should not be used in wet places or outdoors to prevent damage caused by electric shock.




This product does not apply to persons who are sensory or mentally dysfunctional and who lack relevant experience or knowledge (including children). Use this product unless supervised and directed by their professionals. Children should be looked after to ensure they do not play with this product.



After the product fails, please send it to the after-sales service department for repair. Do not disassemble the product or replace the parts yourself to avoid fire, electric shock or injury.

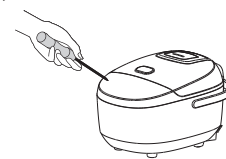

The inner pot should not be bumped or directly placed on other heat sources, such as a gas stove, otherwise it will be easily deformed.

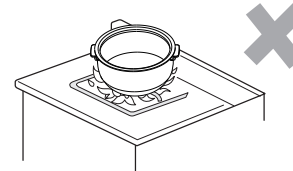

Please do not use it for purposes other than the function of this product, so as to avoid damage to the machine or personal injury.



Do not move the product during work.



Immediately after opening the package, put the plastic bag into the trash can to prevent children from playing and posing a risk of suffocation.



When the product is working, the temperature will rise. Do not touch the metal part of the product directly to prevent burns.



High temperature and steam will be generated when the product is working. Do not put your hands and face close to the steam hole to prevent burns.



Do not open the top cover when working on the product to prevent burns.



The inner pot and the bottom and the edge should be kept clean. The bottom of the inner pot and the surface of the heating plate should not be attached with water droplets, rice grains and other sundries. The inner pot is placed stably, otherwise the contact will be bad and the components will be burned out.

Attention



When working on the product, do not cover the cover with a damp cloth to prevent the steam from being discharged and the body from dissipating heat and causing damage to the device.



When taking food such as rice, please do not touch the inner part of the inner cover such as the inside of the lid to avoid burns.




Do not allow water to enter the cooker base. Rinse and soak with water to avoid electric shock or short circuit.




Please use the rice spoon that comes with the product, do not use the equipment with sharp edges and corners, so as not to damage the inner layer of the inner layer.



It is strictly forbidden to use the inner pot that is not included with this product to prevent damage to components caused by overheating.

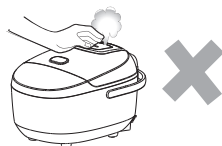

Do not put any bagged, filled, or bottled items into the product for heating; otherwise there is a danger of explosion.

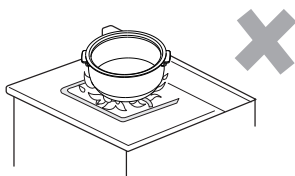

When the inner pot is not placed in the main unit or the inner pot is empty, do not start the operation to avoid damage to the original device.



The altitude range of this product is 0-2000 meters.



Do not cook acidic food (PH<5)

Name Of Each Part And How To Use It



Please prevail in kind

Rice Spoon



Measuring Cup




Spoon Tray



Power Cord



Operation Panel

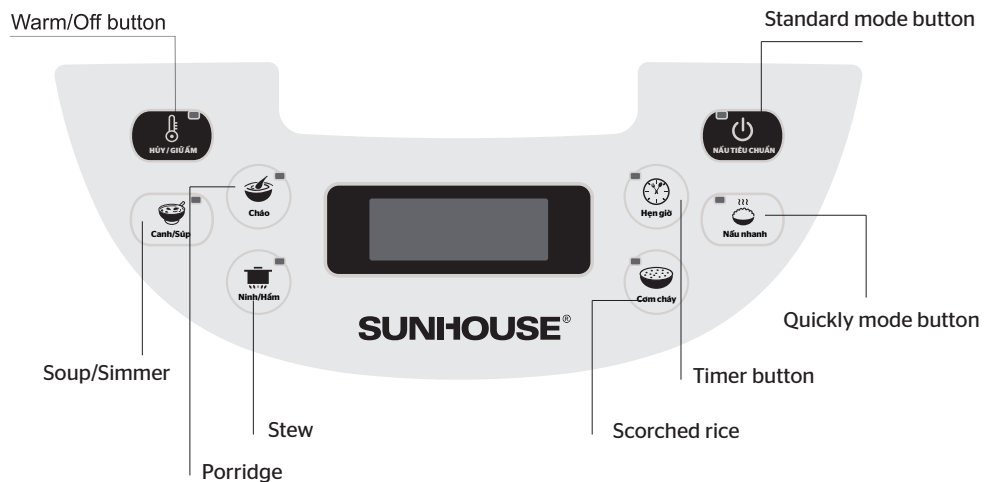

INSTRUCTION MANUAL

PREPARE TO COOK

1. Make sure inner lid and air valve are installed accurately. If the air valve is not right installation, it will lead to water spill.
2. Measure rice with available plastic cup. The standard of cup contains about 180ml (50g).
3. When pouring water, you need to put inner pot on a flat to avoid wrong water level. Water level measurement just for reference, the amount of water depends on type of rice, submmissive, and strength that fits with your favorite. Maximum water in pot can not exceed marked level.
4. Put inner pot into rice cooker. But first, you need to clean pot and heating surface and keep them dry
5. Close the lid. Put rice cooker in flat, then plug the power socket and choose suitable mode.

COOKING MODE

Step 1: Put the materials/ food into and pour enough water.

Step 2: Press cooking mode. Time will be displayed on screen and flickered in 10 seconds. After 10 seconds, cooking will process automatically

Step 3: After finish, rice cooker will beeping 3 times and then auto change WARM mode.

MODE	DEFAULT TIME	TIME SETTING 
 Standard mode	45 minutes (0:45)	1- 24 hours
 Quickly mode	35 minutes (0:35)	1- 24 hours
 Scorched rice	60 minutes (1:00)	No set time
 Porridge	90 minutes (1:30)	1- 24 hours
 Stew	60 minutes (1:00)	1- 24 hours
 Soup/Simmer	Soup: 60 minutes (1:00) Simmer: 90 minutes (1:30)	1- 24 hours

NOTE

- Soup - press 1 times to cook - default time is 60 minutes, press 2 times to choose Simmer mode - default time is 90 minutes.
- When you cook rice and porridge, you should not set up time over 13 hours (not to exceed 8 hours on summer) because soak the rice for a long time will reduce rice quality such as sour, fetid, not delicious.
- When the cooker has just finished cooking, should not use spoon to dig up rice instantly. Please waiting for 10-15 minutes, the rice cooker will take to you the best meal.

Troubleshooting and troubleshooting

Trouble and Handling If you find that the rice cooker is faulty, please check the following "Fault Alarm Code" before commissioning the repair and dispose of it according to the following methods.

Fault phenomenon	Cause	Solution
Light does not shine	Circuit power is not connected	Check if the power is on
	Line fault	Send the designated after-sales service department for repair
The heating plate is not heated	Circuit failure	Send the designated after-sales service department for repair
	Fuse blown	
	Fever disk failure	
The indicator light is on and the hot plate is not heated.	Circuit failure	Send the designated after-sales service department for repair
	Fever disk failure	
Uncooked rice	Too much or too little	Adjust the total capacity of rice and water in the highest and lowest range
	The ratio of rice to water is wrong.	Between scales
	The inner pot is not placed, hanging	Adjust the ratio of rice to water
	Between the inner pot and the hot plate	Turn the inner pot gently, it will return to normal
	Foreign body	Clean up foreign objects, but do not wash with water Send the designated after-sales service department for repair
	Inner pot deformation	
	Circuit failure	
Cooked into rice	Sensor failure	Gently turn the inner pot to return it to normal Send the designated after-sales service department for repair
	The inner pot is not placed, hanging	
	Inner pot deformation	
	Circuit failure	
Automatically enter before the work is completed Insulation function	Sensor failure	Turn off the power and wait until the rice cooker cools down.
	Not placed in the inner pot	
	Dry burning in the inner tank	
A large amount of porridge	The inner pot is not	Adjust the amount to
Digital scintillation display E1/E2/E3/E4/E5	Too much cooking	Adjust the amount to moderate

If the fault persists after processing through the above methods, please contact the after-sales service department, the company will provide you with good after-sales service.

Electrical Schematic

