

HƯỚNG DẪN SỬ DỤNG

MÁY ÉP TRÁI CÂY (Máy ép tốc độ chậm)

MAGIC ECO

AC-130



TẢI NGAY APP VÀO BẾP



ĐĂNG KÝ BẢO HÀNH
CÔNG THỨC NẤU ĂN

Tìm hiểu nhiều hơn về chúng tôi tại www.facebook.com/nguonsongvietstore
hoặc website công ty www.dodunggiadinh.vn

I

THÔNG SỐ

Điện áp: 220V ~ 50Hz
 Công suất: 130W
 Kích thước: 110 x 98 x 335 mm

Trọng lượng: 1.8 kg
 Dung tích cốc nước trái cây: 600ml
 Dung tích cốc chứa bã: 450ml

01

GHI CHÚ

1. Máy này chỉ dùng cho gia đình.
2. Không sử dụng nó cho mục đích thương mại, nếu không dịch vụ bảo hành sẽ không hợp lệ.
3. Không để trẻ em đến gần khi sử dụng. Vui lòng theo dõi và hướng dẫn phù hợp khi sử dụng máy này gần trẻ em.

II

HƯỚNG DẪN
VÀ LƯU Ý KHI SỬ DỤNG

1. Vui lòng kiểm tra điện áp là 220V ~ 50Hz trước khi sử dụng.
2. Máy này chỉ sử dụng trong nhà, không sử dụng ngoài trời hoặc cho các mục đích khác.
3. Vui lòng sử dụng máy theo hướng dẫn này và không sử dụng cho các mục đích khác.
4. Để tránh nguy cơ rò rỉ điện, không nhúng thiết bị chính, dây điện và phích cắm vào nước.
5. Máy này không phải là đồ chơi. Vui lòng cung cấp hướng dẫn phù hợp khi sử dụng máy này gần trẻ em.
6. Khi không sử dụng máy hoặc tháo các bộ phận để vệ sinh, vui lòng rút phích cắm.
7. Thời gian sử dụng liên tục của sản phẩm này được kiểm soát trong vòng 20 phút.
8. Khi sản phẩm đang hoạt động, không nên để máy hoạt động không tải hoặc quá tải.
9. Không chạm hoặc tháo bất kỳ bộ phận nào trong khi máy đang hoạt động.
10. Cấm sử dụng ngón tay, thìa cơm, đũa và các vật lạ khác để đẩy trái cây và rau quả tại ống cấp nguyên liệu, chỉ sử dụng thanh đẩy được hãng cung cấp sẵn để đẩy trái cây và rau quả.
11. Không mở máy trong khi hoạt động.
12. Không đặt máy gần các vật dễ cháy hoặc bếp nấu.
13. Vui lòng sử dụng máy trên bề mặt ổn định.
14. Không để dây treo ở một bên hoặc góc.
15. Khi rút phích cắm ra, bạn phải cầm phích cắm bằng tay. Nghiêm cấm rút phích cắm bằng cách kéo dây.


16. Nếu phích cắm hoặc các bộ phận khác bị hỏng, bạn phải ngừng sử dụng sản phẩm này và hỏi chuyên gia tại trung tâm bảo hành để được chỉ định thay thế hoặc sửa chữa nhằm tránh tai nạn hoặc hư hỏng.
17. Sản phẩm này không dành cho những người có khả năng thể chất yếu, phản ứng chậm, rối loạn tâm thần hoặc thiếu kinh nghiệm liên quan và thông thường (bao gồm cả trẻ em) sử dụng, trừ khi sử dụng theo hướng dẫn hoặc trợ giúp của những người chịu trách nhiệm về an toàn.

GHI CHÚ:

Để tránh rò rỉ điện và các nguy hiểm khác, phải rút phích cắm khi không sử dụng máy và các bộ phận được tháo ra để vệ sinh. Nếu có lỗi phích cắm hoặc dây nguồn bị hỏng vui lòng ngừng sử dụng máy ngay lập tức và không được phép tự tháo rời và thay thế nó. Phải thông báo ngay lập tức đến **Trung Tâm Bảo Hành** kiểm tra và bảo trì.

01

TÊN PHỤ KIỆN

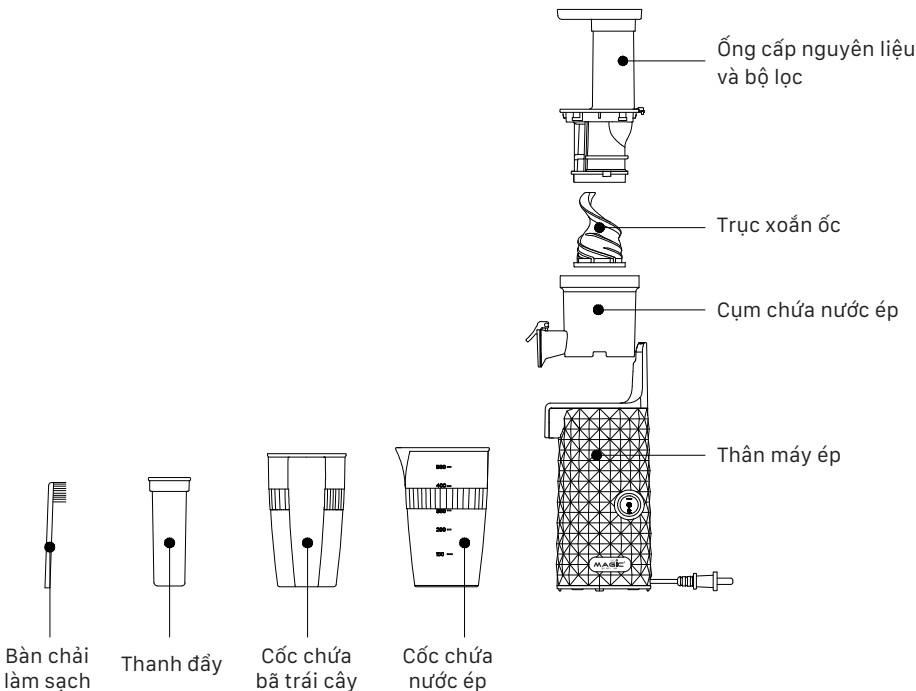

02

HƯỚNG DẪN LẦN ĐẦU SỬ DỤNG

1. Mở hộp tháo bỏ tất cả các bao bì đóng gói.
2. Vui lòng kiểm tra nguồn điện để đảm bảo rằng nguồn điện là 220 ~ 50 Hz
3. Trước khi sử dụng, vui lòng rửa cụm chứa nước ép, phễu, trục xoắn ốc, cụm chứa nước ép, ống cấp nguyên liệu bộ lọc, thanh đẩy bằng nước rửa chén pha loãng, sau đó làm sạch bằng nước và lau khô.
* Lưu ý: Không đặt thân máy vào nước để làm sạch.
4. Thực hiện theo các bước lắp ráp để cài đặt tất cả các phụ kiện.
5. Kết nối máy với nguồn điện.

THỰC HIỆN CÁC BƯỚC TRÊN, MÁY ĐÃ SẴN SÀNG ĐỂ SỬ DỤNG


03

CÁCH LẮP RÁP


Trước khi lắp đặt các phụ kiện, vui lòng đảm bảo rằng máy không được cắm nguồn điện và công tắc nằm vị trí "0", sau đó làm theo các hướng dẫn bên dưới

Các bước lắp đặt:


1. Căn chỉnh cụm chứa nước ép với mũi tên chỉ vào rãnh của thân máy và ấn nhẹ. (Hình 1)
2. Căn chỉnh mặt chốt bên ngoài của trục xoắn ốc với rãnh ở đáy cụm chứa nước ép và ấn nhẹ cho đến khi trục xoắn ốc khớp với đáy. (Hình 2)
3. Nhìn biểu tượng "▲" của ống cấp nguyên liệu và bộ lọc đặt sao cho khớp với biểu tượng "☐" Nhấn nhẹ nhàng và xoay ống cấp theo chiều kim đồng hồ cho đến khi biểu tượng "▲" trên ống cấp khớp với biểu tượng "☐" trên thân máy. (Hình 3)
4. Đặt cốc chứa nước ép, cốc chứa bã trái cây vào đúng vị trí, sau đó cắm dây nguồn vào nguồn điện. (Hình 4)

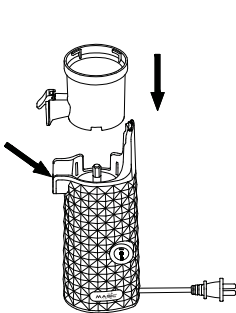


Hình 1

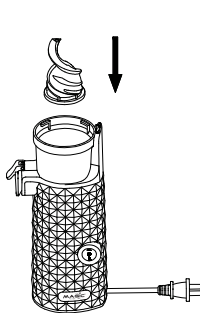

Hình 2

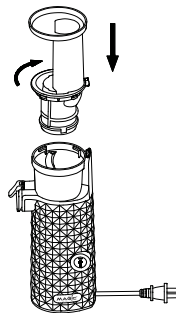

Hình 3

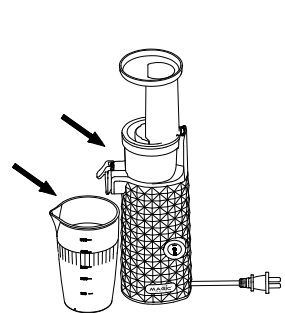

Hình 4

04

HƯỚNG DẪN SỬ DỤNG

1. Kết nối máy với nguồn điện.
2. Kiểm tra xem tất cả các phụ kiện đã được lắp đặt đầy đủ.
3. Kiểm tra xem công tắc có ở vị trí "O" không.
4. Hãy chắc chắn rằng cốc chứa nước ép và cốc chứa bã trái cây đã đặt vào đúng vị trí
5. Kiểm tra xem van khóa nước trái cây đã được đóng chưa.
6. Chuẩn bị nguyên liệu. Cắt nguyên liệu lớn thành hình khối có kích thước nhỏ hơn 3cm
7. Đặt các nguyên liệu đã chuẩn bị vào ống cấp nguyên liệu.
8. Nhấn công tắc đến vị trí " - ".
9. Đẩy nguyên liệu xuống bằng thanh đẩy của máy.
10. Nếu bạn gặp phải tắc kẹt nguyên liệu, vui lòng nhấn công tắc " R ".

*** GHI CHÚ:** Vui lòng không tiếp tục sử dụng máy quá 20 phút

05

VAN KHÓA HOẶC XẢ NƯỚC ÉP

Van khóa nước trái cây có thể được giữ kín trong quá trình chiết xuất nước ép, và van có thể được mở sau khi sản lượng nước ép đạt đến một mức nhất định.

Sử dụng cốc chứa nước ép để chứa nước trái cây. (Hình 5)



Van đang ở trạng thái mở



Van đang ở trạng thái đóng

Hình 5

Sử dụng VAN KHÓA nước trái cây khi:

1. Sau khi chiết xuất nước trái cây, khóa nắp để tránh nhỏ giọt.
2. Để trộn các loại nước ép rau quả khác nhau.

Lưu ý:

1. Trước khi ép lấy nước, hãy bỏ lõi và hạt của quả để tránh làm hỏng ốc vít.
2. Nếu bạn cần ép nhiều loại trái cây và rau quả, trước tiên hãy ép loại cứng trước, và sau đó là các loại mềm.
3. Sau khi thêm nguyên liệu còn lại cuối cùng, hãy để máy tiếp tục chạy trong 30 giây.

06

GHI CHÚ


Máy ép trái cây này không thích hợp để chế biến các loại rau và trái cây sau:

- * Một số loại trái cây và rau quả rất cứng hoặc nhiều chất xơ như mía.
- * Một số loại trái cây và rau quả có độ nhớt cao như bơ, chuối, vải, xoài, đu đủ, thanh long, bayberry, v.v. Những loại trái cây này có thể làm tắc bộ lọc nước trái cây bên trong máy.

GHI CHÚ: Nếu máy ép trái cây quá nóng, thiết bị bảo vệ của máy sẽ tự động ngừng hoạt động. Trong trường hợp này, vui lòng nhấn công tắc về vị trí "0" để làm mát trong 10 phút, để máy nguội và khởi động lại máy.

Trước khi tháo rời máy để vệ sinh, vui lòng nhấn công tắc đến vị trí "0" và ngắt kết nối nguồn điện, sau đó làm theo các bước dưới đây:

1. Trước tiên, đóng van khóa nước trái cây, sau đó tháo cốc chứa nước ép và cốc chứa bã trái cây. (Hình 6)
2. Xoay ống cấp nguyên liệu theo chiều ngược chiều kim đồng hồ cho đến khi biểu tượng của "▲" trên ống cấp khớp với biểu tượng "☐" trên thân máy, sau đó nhấc ống cấp nguyên liệu lên theo phương thẳng đứng (Hình 7)
3. Kéo trục xoắn ốc ra theo hướng thẳng đứng, nếu khó rút trực tiếp ra, lắc nhẹ từ trái sang phải rồi kéo ra. (Hình 8)
4. Kéo cụm chứa nước ép theo chiều dọc. (Hình 9)

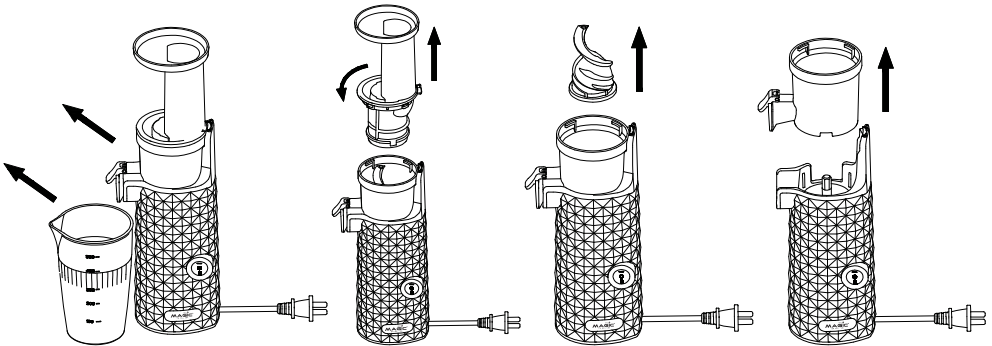

Hình 6

Hình 7

Hình 8


Hình 9

GHI CHÚ:

Sau khi sử dụng, xin vui lòng làm sạch kịp thời, nếu không phần cặn bã còn lại sẽ dễ dàng bám vào vật chứa, ảnh hưởng đến việc tháo gỡ và làm sạch. Và có thể làm giảm hiệu suất sản phẩm.

Vui lòng áp dụng các bước sau để làm sạch máy ép trái cây sau mỗi lần sử dụng:

1. Rút phích cắm của thiết bị khỏi nguồn điện.
2. Rửa sạch các bộ phận đã tháo rời (**Hình 10**) bằng nước sạch. Nếu cặn bã làm nghẽn tắc bộ lọc nước ép, hãy làm sạch nó bằng bàn chải làm sạch.

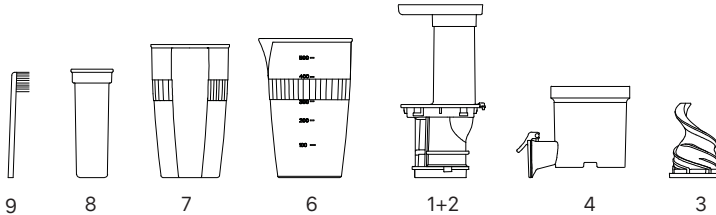

Hình 10

- * Ghi chú:**
- Khi vệ sinh, không sử dụng bàn chải sắt, chất mài mòn hoặc dụng cụ sắc nhọn.
 - Nhiệt độ nước không được vượt quá 40°C.

3. Nếu bạn cần loại bỏ cặn bã trên cụm chứa nước ép vui lòng lật cụm chứa nước ép và kéo van chốt silicon ra (**Hình 11**) để rửa sạch. Sau khi làm sạch, xin vui lòng đặt lại vào đúng vị trí.



Hình 11

4. Nếu bạn cần làm sạch vòng niêm phong của cụm chứa nước ép, vui lòng làm theo các bước dưới đây:

- a/ Đảo ngược cụm chứa nước ép lên để dễ thao tác hơn. Đẩy vòng đệm kín bằng ngón tay cái của bạn (**Hình 12a**), sau đó rửa sạch với nước.
- b/ Sau khi làm sạch, vui lòng đặt vòng đệm trở lại cụm chứa nước ép. Xin lưu ý rằng mặt phẳng lớn mịn phải hướng lên. (**Hình 12b**). Vui lòng kiểm tra rãnh ở giữa vòng đệm và hoàn toàn vừa với lỗ của cụm chứa nước ép.
- c/ Sau khi lắp đặt, bề mặt nhẵn lớn của vòng đệm nằm ở bên trong và bề mặt nhỏ có hoa văn hình tròn nằm phía ngoài. (**Hình 12c**)



Hình 12a



Hình 12b



Hình 12c

- Không bao giờ để ướt hoặc đặt thân máy vào nước. Chỉ sử dụng một miếng vải hơi ẩm và mềm để vệ sinh.
- Sau khi làm sạch, hãy làm khô các phụ kiện và đặt chúng ở nơi khô ráo và thông thoáng.

BẢO QUẢN

- Trước khi cất giữ, vui lòng vệ sinh máy theo hướng dẫn vệ sinh và bảo quản.
- Bố trí nơi cất giữ sản phẩm.
- Giữ máy cách xa tầm với trẻ em.
- Hãy bảo quản máy và phụ kiện ở nơi khô ráo và thoáng mát.

* GHI CHÚ:

Trước khi cất giữ, hãy chắc chắn rằng thân máy và các bộ phận đã khô hoàn toàn.

IV

KHUYẾN NGHỊ KHI SỬ DỤNG

HẠNG MỤC	KHUYẾN NGHỊ	NGUYÊN NHÂN
1	Không được cho “đá viên” vào máy ép trái cây.	Khối đá cứng sẽ làm hỏng các linh kiện bên trong máy ép.
2	Cắt nhỏ nguyên liệu với chiều dài 5-10cm hoặc khối 3x3cm.	Nếu sợi quá dài, dễ vướng và khó cho vào.
3	Trái cây có lõi cứng, phải được loại bỏ hạt trước khi ép.	Lõi cứng có thể dễ dàng gây ra thiệt hại cho các thành phần của máy ép trái cây.
4	Ngoài thanh đẩy được cung cấp, Cấm sử dụng các vật dụng khác để đẩy nguyên liệu.	Nếu bạn sử dụng các vật liệu khác để đẩy nguyên liệu => máy có thể bị hỏng.
5	Thời gian máy ép hoạt động không được vượt quá 20 phút.	Máy hoạt động quá giờ làm cho động cơ nóng lên, khiến động cơ dễ bị hư hỏng.
6	Xin vui lòng không sử dụng thìa, đũa, v.v. tiếp xúc với ống cấp nguyên liệu, cổng chứa và thải bã trái cây.	Sẽ làm hỏng máy.

KHẮC PHỤC SỰ CỐ

TRỰC TRẮC	PHÂN TÍCH NGUYÊN NHÂN	GIẢI PHÁP
<i>Đang chạy Máy đột ngột dừng lại</i>	Nguyên nhân do quá nhiều trái cây và rau quả cùng một lúc, bị tắc nghẽn.	Nhấn công tắc đến vị trí " R " để cho phép các thành phần dư thừa tua ngược lại để thoát ra. Nếu sau ba hành động liên tiếp, máy vẫn không thể tiếp tục hoạt động, vui lòng làm theo các bước " <i>làm sạch</i> " vệ sinh máy trước khi sử dụng.
	Các loại trái cây và rau quả cứng hơn không được cắt nhỏ.	Cắt nhỏ các loại rau quả cứng trước khi cho vào máy ép.
<i>Lượng nước ép thu được thấp</i>	Van chốt silicon ở dưới cùng của cụm chứa nước ép, vòng đệm kín không được lắp đặt đúng cách.	Vui lòng tham khảo các bước của " <i>Phương pháp lắp ráp</i> ", lắp đặt lại đúng vị trí.
<i>Có tiếng ồn bất thường</i>	Bộ phận nghiền vắt khi ép.	Khi máy đang chạy, có thể có tiếng ồn vắt rau và trái cây, vui lòng sử dụng nó với sự tự tin.
<i>Không thể mở nắp ống cấp nguyên liệu</i>	Có quá nhiều dư lượng trong ống cấp nguyên liệu.	Vui lòng nhấn nút " R " để lấy dư lượng.
	Kiểm tra xem có một vật cứng tương tự như lõi trái cây bị kẹt trong cụm chứa nước ép không.	Nếu có, vui lòng nhấn phím " R " để đưa đối tượng cứng về cổng ống cấp nguyên liệu.
	Có quá nhiều dư lượng trong cụm chứa nước ép.	Cho nước vào cụm chứa nước ép và để qua đêm nhằm làm mềm nguyên liệu.
<i>Sau khi máy được sử dụng, thùng chứa và phụ kiện bị ố bẩn</i>	Các hộp đựng và phụ kiện dễ bị ố vì trái cây/ rau quả có các sắc tố tự nhiên.	Sắc tố tự nhiên này là bình thường và không thể tránh khỏi hiện tượng.



TẢI NGAY APP VÀO BẾP



ĐĂNG KÝ BẢO HÀNH
CÔNG THỨC NẤU AN

SẢN PHẨM ĐƯỢC NHẬP KHẨU VÀ PHÂN PHỐI ĐỘC QUYỀN BỞI CÔNG TY TNHH TM XNK NGUỒN SỐNG VIỆT

Hồ Chí Minh: Số 235-237 Đường số 9A, KDC Trung Sơn, Bình Hưng, Bình Chánh, TP. HCM | Bảo hành: 028 54318607

Hà Nội: Số 109 Phố Trung Hòa, Phường Yên Hòa, Quận Cầu Giấy, Hà Nội | Bảo hành: 024 37855966

HOTLINE MUA HÀNG: 1800 6977

Slow Juicer **MAGIC ECO**

AC-130

Operating Instruction



DOWNLOAD APP VAOBEP



WARRANTY REGISTRATION
COOKING RECIPE

More information at [www.facebook/nguonsongvietstore](https://www.facebook.com/nguonsongvietstore)
or website www.dodunggiadinh.vn

I IMPORTANT SAFETY INSTRUCTIONS

When using this appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USE


1. This product is only for home use, not for outdoor.
2. Remove the product from the outlet to the "off" mode before unplugging the plug from the outlet. Do not use the way to pull the power cord to unplug the plug, should be hold the plug and remove it from the socket.
3. Do not allow the wires to touch the hot surface. Before removing and cleaning, the product must be completely cooled.
4. When not in use, be sure to unplug the power plug from the power outlet.
5. Do not operate this product with any damage to the power cord. In order to avoid electric shock, do not disassemble and reassemble. If any damage, please carry it to our maintenance center. Unauthorized repair/ modification or product for non-product design purposes, warranty will not provide.
6. Do not allow children to use this product separately.
7. Touch hot metal parts or steam may burn.
8. Never touch the inside of the product while it is working.
9. This product cannot be connected to a timer or remote control.
10. When first time to use this appliance, a slightly smell and white smoke may be emitted. It is normal status. Please ensure sufficient ventilation, those smell and white smoke will disappear quickly.
11. This machine is strictly forbidden to run without load (without any ingredients) or overloaded (too many ingredients).
12. It is strictly forbidden to move or touch the moving parts while working to avoid accidents.
13. Do not hang the power cord on sharp objects, and do not connect it to movable objects.
14. This machine is strictly prohibited to put in a sterilization cabinet, high temperature oven, or boil it with boiling water.
15. It is forbidden to use fingers, rice spoons, chopsticks and other objects at the feeding port of this machine.
16. Do not use a low-quality universal plug to transfer, as it may cause fire or personal injury.
17. Do not place the product in a place with high temperature to avoid causing fire or personal

01


SPECIAL STATEMENT

1. To avoid overloading the circuit, do not operate the other on the same circuit.
2. If the extension cord is necessary, use a 13 amp cable. A smaller current than this product may cause overheating and short circuit.
3. Please keep this manual for future reference.
4. Do not allow children or untrained personnel to use the product without supervision.

5. Do not immerse the product, power cord, or plug in any liquid. Doing so may cause electric shock or fire. To clean the product, follow the cleaning section on the instructions.
6. When the product is not in use, disconnect the plug from power supply.
7. Do not touch the product with wet hands.
8. Do not expose the product to outdoor (rain or under the sun).
9. After inserting the plug into the socket and opening it, make sure that the qualified personnel supervise the use of the product.
10. Before using the product, remove all packaging materials.
11. After unpacking, check for damage and these are no missing parts.
12. All packaging materials, such as plastic bags, polyfoam, tape, etc. Should be placed in places where children are not exposed, because improper use of these materials will lead to child suffocation, and even death.
13. Use only the parts provided in the product and the packaging, otherwise it may pose a hazard to the user and may damage the product.
14. Before using the product, please check product rating label on the power, voltage is consistent. The rating labels attached to back of the product. If you have any questions, please contact our customer service department for assistance.
15. Do not allow the power cord to touch a sharp edge or hot surface, during operation.
16. The product is not a toy, cannot be used directly into the people and animals, otherwise it will be burned.
17. This product cannot be used in unstable locations or burying objects, otherwise it is likely to cause a fire or burn.
18. Consumptive parts are not included in the warranty, if you need to be replaced, must be purchased with my company. Also, those parts are not necessarily available, it may take some time to replace.
19. This product is for home use only, not for any commercial purposes.
20. If the products need to be repaired, client must clean the product and kill all the insects before sent to our repair center, otherwise our company will charge extra cost for cleaning and pest control.
21. You may notice an odour & gas using the appliance for the first time, due to the insulation material. This is harmless and will subside quickly.
22. Do not use this product unattended.
23. Before using the product, please make sure that all accessories are clean, to avoid residues from corroding and deteriorating and emitting odor.
24. After use, please clean immediately.
25. This product is not suitable for crushing dry goods, such as soybeans, rice, etc. are not allowed to be stirred in the machine.
26. The best distance between this product and other kitchen appliances is 30CM or above.
27. Before using the product, please make sure the table is clean, and clean the table immediately after use.
28. If the product does not work after being powered on, please refer to the "Trouble shooting" guide to resolve it. If it still does not work, please bring this product to our maintenance department for repair. Repair / modify or use the product for a product other than the original design Use, warranty is not provided.

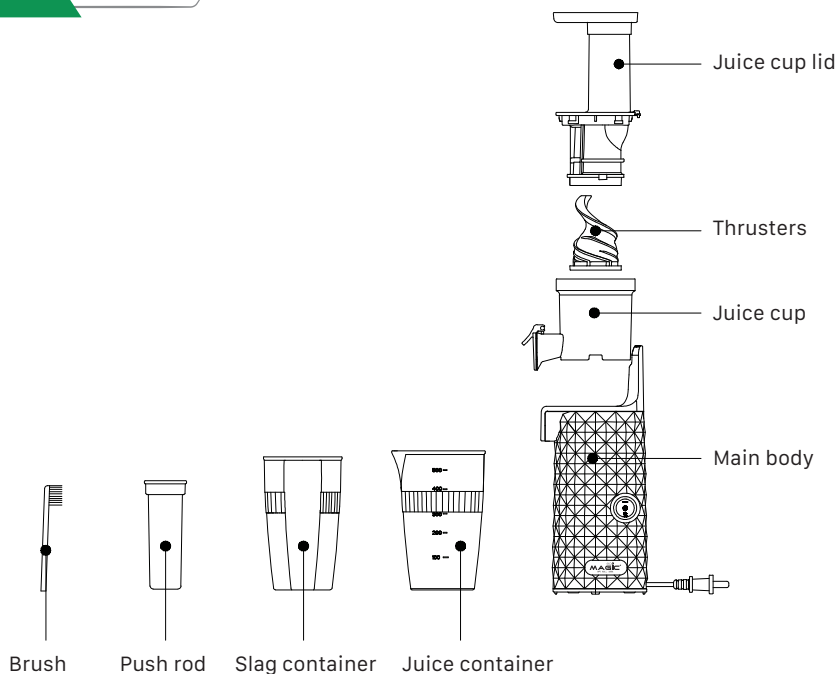


Juice cup lid	The main part of the juice, the top is the feeding port for the ingredients
Thrusters	The main accessory squeezed into juice
Juice cup	The main components of the juice
Main body	The main components, such as the main casing and the motor, provide power for juice extraction.
Juice container	Collect juice.
Slag container	Collect slag.
Push rod	For slowly pushing ingredients.
Brush	Brush off the residue wrapped in the slag opening and clean the juice filter.

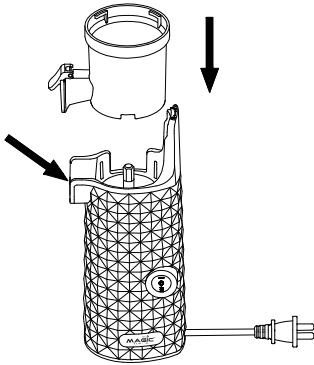


1. Assembling the juice cup

Align the outlet "ㄣ" of the juice cup with the arrow pointing to the main unit and press down gently.

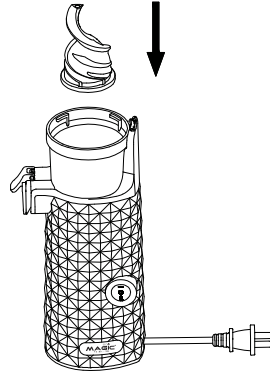


2. Assembling thrusters

Align the outer flange of the thrusters with the groove in the bottom of the juice cup, and press down gently.

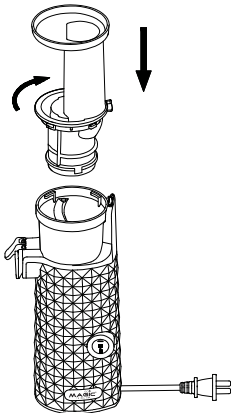

3. Assembling the Juice cup lid

Put the bottom of the juice cup lid on the thrusters, "▲" symbol is aligned with "ㄣ" symbol on the host; then gently press down and rotate clockwise, Turn the "▲" symbol on the lid to the "ㄣ" symbol on the main unit and lock it.

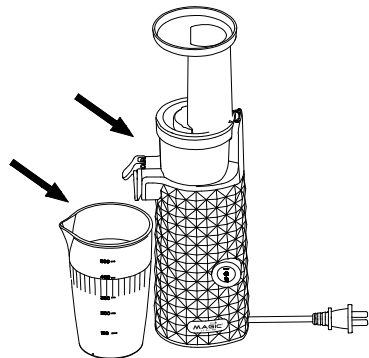

4. Assembling the juice container and the slag container

Align the juice container with the juice container mouth lid and the slag container with the slag mouth. Place it close to the host.

Use this product:

1. Before using, please clean all parts which is contact with the ingredients.
2. Insert the plug into a grounded power outlet.

Operation:




"—" key: Press this key down gently, the product starts to work. If you want to stop, press the "R" key down.

"R" key: When the slag discharge is not smooth or blocked, press the "R" key gently, the screw will start the reverse key. Release the key, stop the reverse, and then press the "—" key at this time, it will return to normal jobs.


04

DISASSEMBLING

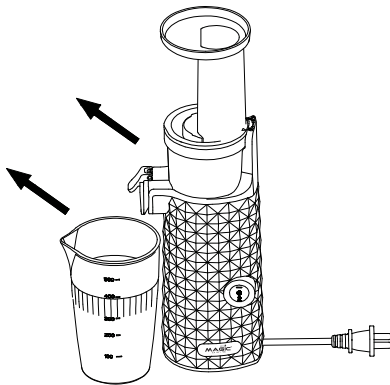


1. Remove the juice container and slag container

Close the leak-proof cap of the juice mouth lid first, and then directly remove the juice container and the slag container.

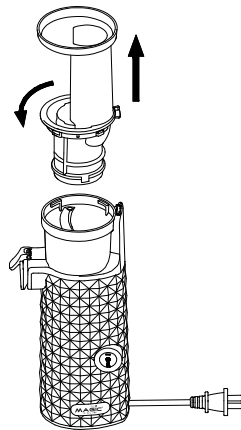


2. Remove the juice cup lid

Rotate the lid of the juice cup counter clockwise until the "▲" symbol is on the "⊞" symbol and then pull it up.

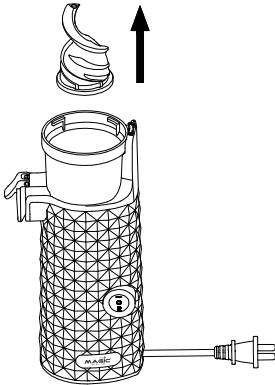

3. Remove the thrusters

Pull the thrusters. If you have difficulty pulling it out, shake it gently left and right before pulling it out.

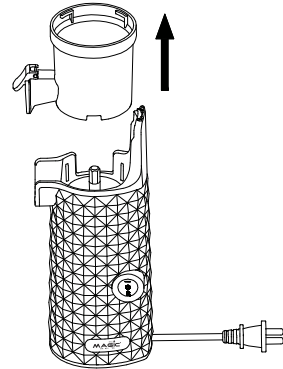


4. Remove the juice cup

Just pull the juice cup.

II

CLEAN & MAINTENANCE

- Before cleaning and maintenance, make sure the product has unplugged and the product has been completely cooled.
- Cannot use banana water, gasoline, decontamination powder, hard brush, etc. to clean all parts of appliance.
- Do not enter the water inside the appliance. Cannot fill in the electric parts inside the water.
- Do not use a dishwasher or dishwasher for cleaning to avoid danger of deformation or explosion.
- The following accessories can be rinsed directly with water:

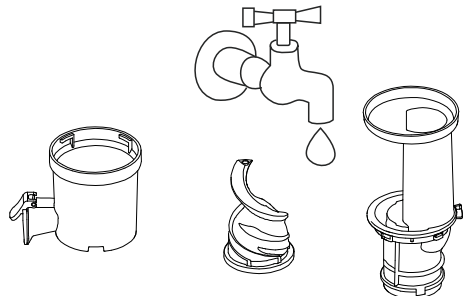



COLUMN	PRECAUTIONS	REASON
1	Do not stir ice.	Ice particles are hard and can easily lead to component damage.
2	Do not stir dry and hard food.	The food is hard, and it is not easy to be cut by the thrusters, which can easily lead to component damage.
3	Fiber food, please cut to 5-10 cm.	The liber is too long and it is easy to disturb the thrusters, which makes it difficult to feed the food, resulting in failure to squeeze juice and damage to components.
4	Fruit acids with hard cores must be used after pitting.	Hard cores can easily lead to component damage.
5	Do not use any objects other than push rods to push ingredients.	If other objects are used to push the ingredients, it may cause mechanical damage.
6	The continuous working time of the product should not be too long, and it can only be used continuously for 20 minutes or less.	If the product is operated for too long, it will cause the motor to heat up, making the motor easily damaged.
7	Never squeeze the juiced fruit residue again.	Juicing the fruit residues easily leads to irregularities in the machine.
8	Do not put in soaked fruits such as wine, honey, sugar.	It is easy to lead the juicer lid to open.
9	Please do not insert spoons, chopsticks, etc. into the feeding opening, juice cup mouth, slag mouth.	Damage to the machine may occur.
10	After squeezing the juice, try to squeeze and drink immediately.	After the juice is squeezed, it is easy to oxidize and should not be stored for a long time.
11	During the juice extraction process, the machine will produce a friction sound, which is normal.	During the juice extraction process, the friction between the fruit and the juice cup sometimes produces a normal sound.
12	During the juice extraction process, the juice cup is slightly deformed, which is normal.	During the juice extraction process, due to the large sparseness of the fruit, the juice cup is deformed, and it returns to normal after shutdown, without affecting the use.

TROUBLE SHOOTING

COLUMN	REASON	SOLUTION
1	Appliance does not work	<ul style="list-style-type: none"> - Please make sure the power cord is in good contact. - Please make sure the juice cup is in place. - Please confirm that the product is assembled in accordance with the instructions. - If none of the above methods can be solved, please bring this product to our maintenance department for repair.
2	Juice cup lid does not open	<ul style="list-style-type: none"> - Please confirm if there is too much residue in the juice cup. If so, please press the "—" button to remove the residue. - Please confirm whether there is a hard nut similar to the core in the juice cup. If so, please press the "R" button to return the hard object to the feeding port. - If none of the above methods can be solved, please bring this product to our maintenance department for repair.
3	Stop operation during work	<ul style="list-style-type: none"> - Are you putting too much or too large ingredients? Press and hold the "R" button to reverse the machine, remove the ingredients and cut the machine before running the appliance. - If none of the above methods can be solved, please bring this product to our maintenance department for repair.
4	Juice leads from the bottom of the cup	<ul style="list-style-type: none"> - Is the silicone seal in the center of the juice cup in place? - If the silicone seal is in place, please pay attention to whether too much ingredients are put in, so that the silicone seal can open the leak. - If none of the above methods can be solved, please bring this product to our maintenance department for repair.
5	The juice cup deforms or shakes during the juice extraction process.	<p>During the work of the product, it is normal for the juice to shake or deform slightly, and it is not a problem. Please rest assured.</p>

III

TECHNICAL SPECIFICATION

Model: AC-130

Voltage: 220V

Frequency: 50Hz

Power: 130W

Working time: ≤ 20 minutes each time



DOWNLOAD APP VAOBEP



WARRANTY REGISTRATION
COOKING RECIPE

NGUON SONG VIET IMEX TRADING CO., LTD

Ho Chi Minh: 235-237 9A Str., Trung Son, Binh Hung Commune, Binh Chanh Dist., HCMC, Vietnam | **Warranty:** 028 54318607

Ha Noi: 109 Trung Hoa Str., Yen Hoa W., Cau Giay Dist., Ha Noi, Vietnam | **Warranty:** 024 37855966

HOTLINE: 1800 6977