



VN

EN

vitapress

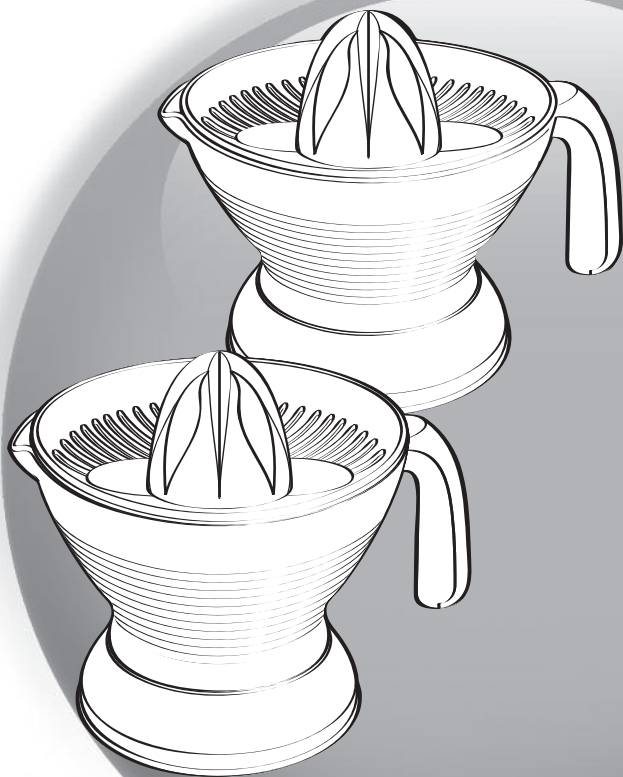

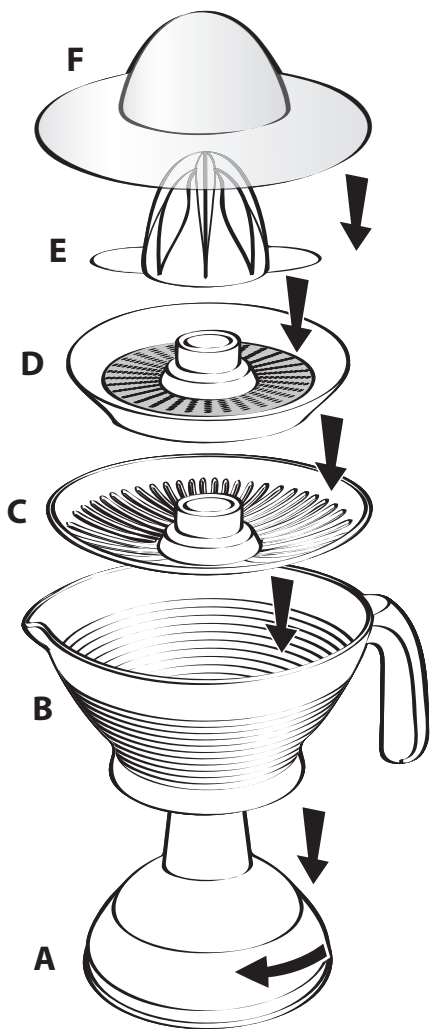

- A Bộ phận động cơ
- B Bình chứa
- C Nắp lọc

- D Nắp lọc kim loại (tùy theo sản phẩm)
- E Trục quay hình nón
- F Nắp đáy bảo vệ

HƯỚNG DẪN SỬ DỤNG

- **Trước khi sử dụng thiết bị lần đầu tiên**, hãy rửa các bộ phận tiếp xúc với thực phẩm.
- Định vị bình chứa **(B)**, nắp lọc **(C)** và trục quay hình nón **(E)** trên bộ phận động cơ **(A)** như trên sơ đồ.
- Cắt đôi một quả cam rồi ấn nhẹ từng nửa quả vào trục quay hình nón. Bạn sẽ thu được nước trái cây trong bình chứa **(B)**.
- Để nước ép không có bã: đặt nắp lọc kim loại **(D)** giữa trục quay hình nón **(E)** và nắp lọc **(C)** để thu được nước ép không có bã.
- Không bao giờ vận hành máy vắt nước trái cây quá 10 phút mỗi lần mà không dừng lại.

VỆ SINH

- Sau khi bạn đã mở bao bì thiết bị của mình và trước khi sử dụng lần đầu tiên, hãy làm sạch tất cả các bộ phận.
- Lau sạch bộ phận động cơ **(A)** bằng khăn ẩm. Không nhúng thiết bị vào nước.
- Tất cả các bộ phận khác (nắp bảo vệ **(F)**, nắp lọc **(C)**, nắp lọc kim loại **(D)**, trục quay hình nón **(E)**, bình chứa **(B)**) có thể được rửa dưới vòi nước hoặc trong máy rửa bát (khay trên).
- Sau khi sử dụng xong, làm sạch ngay các bộ phận khác nhau dưới vòi nước hoặc trong máy rửa bát để bã ép không còn bám trên chúng.
- Không bao giờ sử dụng thuốc tẩy hoặc miếng chùi rửa mài mòn.
- Theo thời gian, nước ép tự nhiên có màu đậm từ thực phẩm như cà rốt và củ dền có thể làm ố một số bộ phận nhựa, điều này là bình thường. Các bộ phận này có thể được làm sạch bằng cách ngâm trong nước tẩy nhẹ (không mài mòn) ngay sau khi sử dụng.

THẬN TRỌNG: SỬ DỤNG NẮP LỌC KIM LOẠI

- Bề mặt của lưới lọc kim loại **(D)** có thể đổi màu sau khi được rửa trong máy rửa chén; tuy nhiên, điều này sẽ không ảnh hưởng đến hoạt động của thiết bị, cũng như không gây hại cho sức khỏe con người.
- Bạn có thể tiếp tục sử dụng nắp lọc này một cách hoàn toàn an toàn.

XỬ LÝ SỰ CỐ

- Kiểm tra xem thiết bị của bạn đã được cắm đúng cách chưa.
- Nếu bạn đã làm theo tất cả các hướng dẫn này một cách cẩn thận mà thiết bị của bạn vẫn không hoạt động, vui lòng liên hệ với Đường dây trợ giúp của chúng tôi để được trợ giúp và tư vấn từ chuyên gia.

DESCRIPTION

- A** Motor unit
- B** Jug
- C** Filter

- D** Metal filter (according to model)
- E** Cone
- F** Protective cover

USING THE APPLIANCE

- **Before using the appliance for the first time**, wash the parts which will be in contact with food.
- Position the jug (**B**), the filter (**C**) and the cone (**E**) on the motor unit (**A**) as shown on the diagram.
- Cut a citrus fruit in half and gently press each half onto the cone. You will recover the juice in the jug (**B**).
- **Pulp-free juice:** position the metal filter (**D**) between the cone (**E**) and filter (**C**) to obtain juice with no pulp.
- Never operate the juice extractor for more than 10 minutes at a time, without stopping.

CLEANING

- Once you have unpacked your appliance and before using it for the first time, clean all parts.
- Clean the motor unit (**A**) with a damp cloth. Do not immerse the appliance in water.
- All the other parts (protective cover (**F**), filter (**C**), metal filter (**D**), cone (**E**), jug (**B**)) can be washed under the tap or in a dishwasher (upper trays).
- After use, immediately clean the various parts under the tap or in a dishwasher so that the pulp doesn't remain stuck on them.
- Never use bleach or an abrasive sponge.
- Over time the strong coloured natural juices from food such as carrots and beetroot may stain some of the plastic parts, this is normal. These parts may be cleaned by soaking in mild bleach (non-abrasive) straight after use.

CAUTION: USING THE METALLIC GRILL

- The surface of the metallic grill (**D**) may change colour after it has been washed in the dishwasher; however, this will not affect the functioning of the device, nor is it harmful to human health.
- You can continue to use the grill in complete safety.

TROUBLESHOOTING

- Check that your appliance is plugged in correctly.
- If you have followed all of these instructions carefully and your appliance still doesn't work, please contact our Helpline for expert help and advice:

0845 602 1454 – UK

(01) 461 0390 – Ireland