


HƯỚNG DẪN SỬ DỤNG

Model: BL1056A-CB

AC220-240 V, 50-60 Hz, 500 W, Cấp II

Đọc kỹ tập sách hướng dẫn này trước khi sử dụng và lưu lại để tham khảo sau này

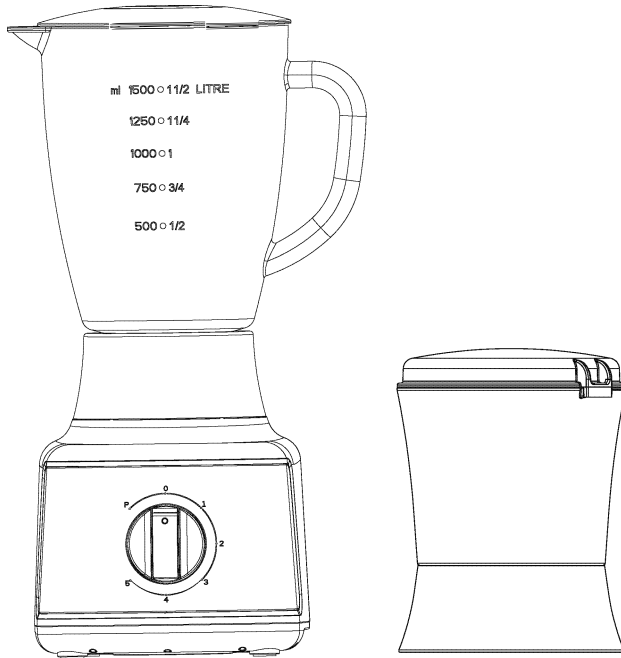


Hướng dẫn an toàn sử dụng:


Khi sử dụng thiết bị điện, Cần tuân thủ các bước an toàn sử dụng sau:

1. Đọc toàn bộ giới thiệu
2. Trước khi sử dụng cần kiểm tra xem nguồn điện áp có tương ứng với nguồn điện được hiển thị trên bảng tên thiết bị không.
3. Không để dây điện trên mép bàn, kệ (cạnh sắc nhọn).
4. Không vận hành bất kỳ thiết bị nào với dây hoặc phích cắm bị hỏng hoặc sau khi thiết bị bị trục trặc hoặc bị hỏng theo bất kỳ cách nào. Đưa thiết bị trở lại cơ sở dịch vụ được ủy quyền gần nhất để kiểm tra, sửa chữa và bảo hành.
5. Nếu dây điện bị hỏng, nó phải được thay thế bởi nhà sản xuất hoặc đại lý dịch vụ của hãng có chất lượng tương tự để tránh nguy hiểm.
6. Cần giám sát thiết bị chặt chẽ khi sử dụng hoặc để gần trẻ em.
7. Tránh tiếp xúc với các bộ phận đang hoạt động.
8. Không cho tay và dụng cụ nhà bếp khác vào trong máy khi máy đang hoạt động để giảm nguy cơ bị thương hoặc làm hỏng máy xay. Có thể sử dụng dụng cụ nạo nhưng chỉ được sử dụng khi máy xay ngừng hoạt động.
9. Việc sử dụng phụ kiện không phải của nhà sản xuất có thể gây hỏa hoạn, điện giật hoặc thương tích
10. Tắt máy, rút phích cắm khỏi ổ cắm khi không sử dụng, trước khi lắp hoặc tháo các bộ phận và trước khi vệ sinh
11. Để giảm nguy cơ thương tích, không bao giờ đặt bộ lưỡi dao trên đế mà không có cối xay gắn đúng cách.
12. Để xa tầm tay trẻ em
13. Thiết bị này không dành cho những người (kể cả trẻ em) bị suy giảm khả năng thể chất, giác quan hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được người chịu trách nhiệm về sự an toàn của họ giám sát hoặc hướng dẫn sử dụng thiết bị.
14. Để máy ở nơi có thể giám sát
15. Khi tháo máy xay từ động cơ máy, cần đợi cho lưỡi dao máy ngưng hẳn.
16. Luôn đậy nắp cối khi xay
17. Luôn đặt máy ở nơi khô thoáng, an toàn
18. Không đặt máy ở trong khu vực có ga nóng và thiết bị điện đốt nóng.
19. Không sử dụng ngoài trời
20. Không sử dụng thiết bị ngoài mục đích sử dụng chính của máy
21. Không chạm vào lưỡi dao hoặc thiết bị đang quay
22. Tắt thiết bị và ngưng kết nối từ nguồn điện trước khi thay đổi phụ kiện hoặc máy đang chạy.
23. Luôn tắt máy, ngắt nguồn điện nếu rời đi và tháo lắp, vệ sinh máy.
24. Thiết bị này được thiết kế để sử dụng trong gia đình và các ứng dụng tương tự như:
 - Khu vực bếp của nhân viên trong cửa hàng, văn phòng và các môi trường làm việc khác;
 - Nhà trang trại;
 - Bởi khách hàng trong khách sạn, nhà nghỉ và các môi trường kiểu dân cư khác;
 - Môi trường kiểu giường và bữa sáng
25. Cần thận với lưỡi dao cắt sắc nhọn khi vệ sinh máy
26. Cần thận khi đổ nước nóng trực tiếp vào thiết bị


Sử dụng trong gia đình

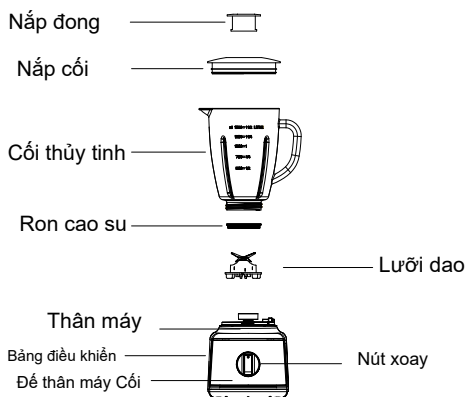

Hình 1.

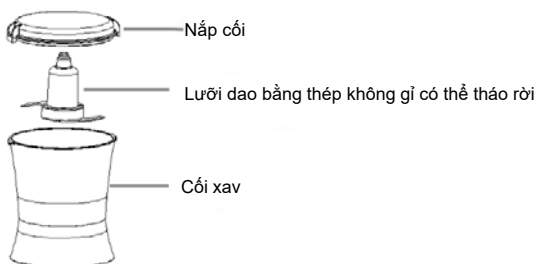

Nút điều chỉnh

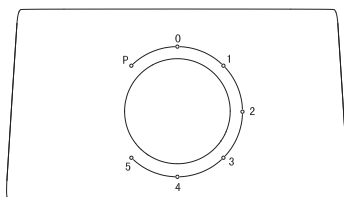

Hình 2.

Cách sử dụng:


Trước khi sử dụng:

1. Trước khi sử dụng, mở khóa thiết bị và đặt tất cả các phần trên mặt phẳng.
2. Vệ sinh cối xay và các phụ kiện tiếp xúc trực tiếp với thực phẩm
3. Đảm bảo máy đang ở mức tốc độ “0”, cắm điện và xoay nút theo tốc độ mong muốn. Có thể giữ và nhấn nút Pulse (xay nhỏ) nếu muốn đẩy nhanh quá trình xay trộn.


Lưu ý: *Đảm bảo nắp cối xay lắp đúng vị trí trước khi xay/trộn, không được mở nắp trong khi máy đang chạy. Để xay/trộn đều, nên sử dụng thanh trộn trên nắp đồng đều hỗn hợp.*

4. Chỉ lắp ráp và sử dụng khi các phụ kiện đã được làm sạch và khô ráo hoàn toàn.
 - 4.1 Lật ngược bình lên mặt phẳng, giữ tay cầm bình, đặt cụm lưỡi dao vào đáy đế bình và cố định cụm lưỡi dao bằng cách xoay ngược chiều kim đồng hồ cho đến khi chặt. (Xem Hình 3.)
 - 4.2 Dựng đứng cối xay với phần miệng hướng lên trên. Quấn vòng đệm I xung quanh đáy nắp và đặt nắp vào cối. Đặt ốc đong chính xác vào nắp bằng cách lắp hình chiếu nhỏ ở hai bên ốc vào các khe của nắp và xoay ốc theo chiều kim đồng hồ cho đến khi chặt. (Xem Hình 4.)
 - 4.3 Cuối cùng, đặt bình đã lắp ráp vào bộ phận động cơ bằng cách căn chỉnh dải trên đáy bình đã lắp ráp. (Xem Hình 5.)


Cẩn trọng: Khi cối và đáy cối đã khớp vào nhau không cố vặn thêm.

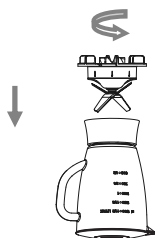

Hình 3.

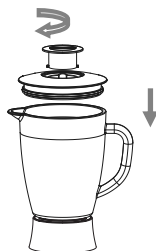

Hình 4.

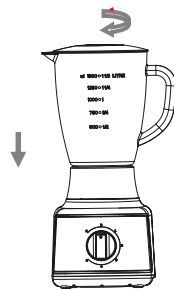

Hình 5.

Cách sử dụng:

1. Gọt vỏ, bảo sơi rau củ quả, thái nhỏ hình hạt lựu.
2. Bỏ thực phẩm vào máy xay (Hình 6.), thêm một ít nước sẽ giúp máy chạy trơn tru hơn. Tỷ lệ thực phẩm và nước là 2: 3, Lượng hỗn hợp không được vượt quá mức tối đa như ghi trên bình.


Công thức:

FOOD TYPE	SPEC	WEIGHT	SPEED
Cà rốt (Táo, Lê,...)	Cắt nhỏ thành 15mm*15mm*15mm	Cà rốt: 600g Nước: 900g	Tốc độ cao
Cà rốt (Táo, Lê,...)	Cắt nhỏ thành 6mm*6mm*6mm	Cà rốt: 50g Nước: 150g	Tốc độ thấp


Lưu ý: Không sử dụng nước đang sôi hoặc chạy máy rỗng.

3. Lắp nắp trên cối và đảm bảo ốc đong lắp đúng vị trí.
4. Cắm dây điện đúng nguồn điện.
5. Chọn tốc độ xay mong muốn.

6. Để xay nhanh và nhạy, nhấn nút “P” giữ trong vài giây và thả, máy sẽ tự động trở về chế độ số “0”. Thao tác nhiều lần cho đến khi đạt được độ đặc bạn muốn.
7. Nếu muốn bỏ thêm nguyên liệu trong khi đang xay, mở nắp cốc đong và thêm qua miệng nắp này. (Hình 7.)

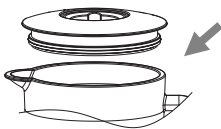

Hình 6. Mở nắp và cho đồ xay vào qua nắp cối



Hình 7. Mở cốc đong và cho đồ xay vào qua nắp cốc đong, khi đang xay.

8. Khi xay đá, hoặc đồ ăn cứng, dùng 1 tay giữ nắp cối xay.
9. Khi đã xay đến mức mong muốn, nhấn nút “0”.


Note:

- 1) Trong khi sử dụng, Không nên chạy máy liên tục quá 2 phút, cho máy nghỉ ít nhất khoảng 10 phút giữa 2 lần xay liên tiếp và để các thiết bị nguội dần trong nhiệt độ phòng trước khi sử dụng cho lần xay tiếp theo.
 - 2) Nếu muốn dừng khi đang xay, nhấn nút “0”.
10. Sử dụng các loại hạt thích hợp (hạt cà phê, đậu,...) vào cối xay hạt. Lưu ý, số lượng hạt cho phép không vượt quá mức MAX trên cối, hoặc không quá 35g và xay không quá 20 giây.
- Để xay tốt nhất (hỗn hợp xay với nước) nên cho nước vào cối xay trước, sau đó cho thực phẩm.
 - Một số trường hợp không khuyến khích dùng để xay: Đánh lòng trắng trứng, kem tươi, khoai tây nghiền, thịt xay, trộn bột, chiết xuất nước ép rau quả, trái cây.
 - Loại thực phẩm không được cho vào cối xay vì khả năng xảy ra nguy hiểm: Xương, vật rắn, đồ đông lạnh, thực phẩm dai, rấp như củ cải.
 - Để xay đá, cho tối đa 6 viên đá. Nếu muốn cho thêm, gỡ cốc đong và thêm lần lượt các viên đá qua miệng cốc đong.

Bảo quản và làm sạch

Sản phẩm này không sử dụng các linh kiện, phụ kiện có thể thay thế. Khuyến khích sử dụng dịch vụ có chất lượng.

1. Trước khi vệ sinh, ngắt kết nối điện.
2. Luôn rửa sạch thiết bị ngay sau khi sử dụng. Đừng để thực phẩm khô bám dính trên cối, gây khó vệ sinh.
3. Cho một ít nước rửa ấm vào cối xay và bấm nút “P”, giữ trong một vài giây, sau đó xả nước ra khỏi cối.
4. Tháo các bộ phận có thể tách rời, nhấc cối ra khỏi thân máy, tháo lưỡi dao bằng cách vận theo chiều kim đồng hồ. Ngoài ra có thể tháo gioăng ra khỏi cối.

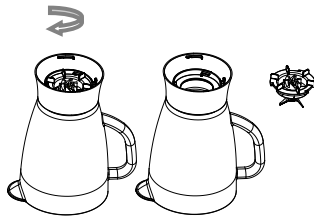

5. Rửa cốc đong, nắp, gioăng, cối xay, lưỡi dao **Hình.8** đặc bằng máy rửa chén, sau đó để khô ráo. Máy rửa chén chứa các thành phần an toàn, nhiệt độ không vượt quá 70°C.
6. Cọ rửa lưỡi dao bằng nước rửa ấm, sau đó rửa lại bằng nước sạch. Cần thận với lưỡi dao sắc nhọn, không ngâm lưỡi dao trong nước. Lật ngược và để khô, tránh xa tầm tay trẻ em.
7. Lau khô hoàn toàn motor với khăn ẩm. Loại bỏ các vết bẩn cứng đầu bằng cách chà xát bằng chất tẩy rửa không bào mòn. Nếu chất lỏng tràn vào động cơ, việc đầu tiên là cần ngắt nguồn điện và lau khô bằng khăn ẩm.
8. Cảnh báo: Chọn mức xay max hoặc hoa quả cứng phải chọn tốc độ cao nhất (mức 5). Nếu tốc độ quá thấp, động cơ dễ bị hỏng do không đủ momen xoắn. Khi tốc độ động cơ chậm, cần chuyển qua tốc độ cao hơn hoặc tắt hẳn.


Cần trọng:

- 1) **Không ngâm động cơ trong nước tránh nguy cơ bị sốc điện**
- 2) **Không sử dụng miếng cọ rửa hoặc chất tẩy rửa thô ráp trên các bộ phận máy.**

Bảo vệ môi trường	
	<p>Thiết bị không được xử lý thải bỏ với chất thải gia đình thông thường. Để ngăn ngừa tác hại có thể xảy ra đối với môi trường hoặc sức khỏe con người từ việc xử lý chất thải không được kiểm soát, hãy tái chế chúng một cách có trách nhiệm để thúc đẩy việc tái sử dụng bền vững các nguồn nguyên liệu. Để trả lại thiết bị đã sử dụng, vui lòng sử dụng hệ thu hồi hoặc liên hệ với đơn vị bán hàng này để có hướng xử lý an toàn cho môi trường.</p>

Blender

INSTRUCTION MANUAL

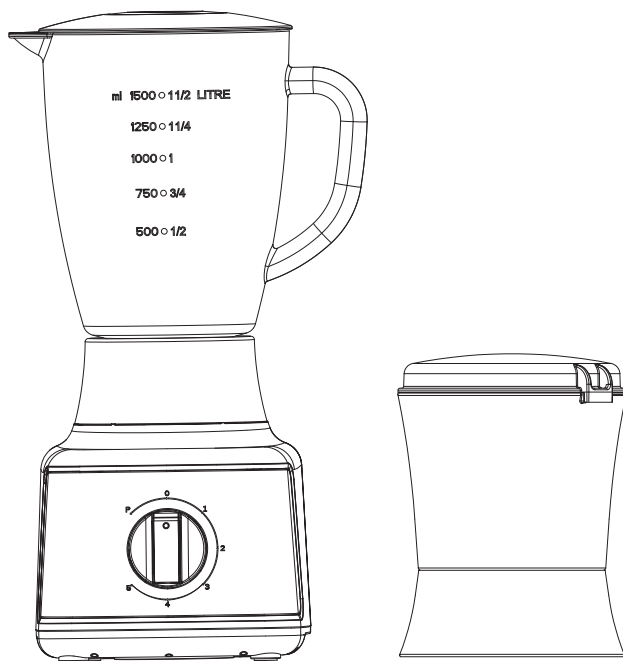

Model: BL 1056A-CB

AC220-240 V, 50-60 Hz, 500 W, Class II

Read this booklet thoroughly before using and save it for future reference

IMPORTANT SAFEGUARDS

When using this electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Before using check that the voltage indicated on the product corresponds with the voltage of your electrical outlet.
3. Do not let cord hang on hot surface or over edge of table or counter.
4. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
5. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
6. Close supervision is necessary when any appliance is used by or near children.
7. Avoid contacting the moving parts.
8. Keep hands and utensils out of container while blending to reduce the risk of severe injury to persons or damage to the blender. A scraper may be used but must be used only when the blender is not running.
9. The use of attachments not recommended or sold by manufacturer may cause fire, electric shock or injury.
10. Unplug from outlet when not in use, before putting on or taking off parts, and before cleaning. To disconnect, turn any control to “off”, then remove plug from wall outlet by grasping the plug, not the cord.
11. To reduce the risk of injury, never place blade assembly on motor unit without the jar properly attached.
12. This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
13. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Children shall not play with the appliance.
14. Do not leave the machine on unattended.
15. When removing the blender from the motor unit, wait until the blades have completely stopped.
16. Always operate blender with cover in place.
17. Always use the appliance on a secure, dry level surface.
18. Never place this appliance on or near a hot gas or an electric burner or where it could touch a heated appliance.
19. Do not use outdoors.
20. Do not use appliance for other than its intended use.
22. Avoid any contact with blades or moveable parts.
23. Switch off the appliance and disconnect from supply before changing accessories or approaching parts that move in use.
24. Always disconnect the appliance from the supply if it is left unattended and before

assembling, disassembling or cleaning.

25. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

26. Care shall be taken when handling the sharp cutting blades, emptying the bowl and during cleaning.

27. Be careful if hot liquid is poured into the appliance as it can be ejected out of the appliance due to a sudden steaming.

HOUSEHOLD USE ONLY

KNOW YOUR BLENDER



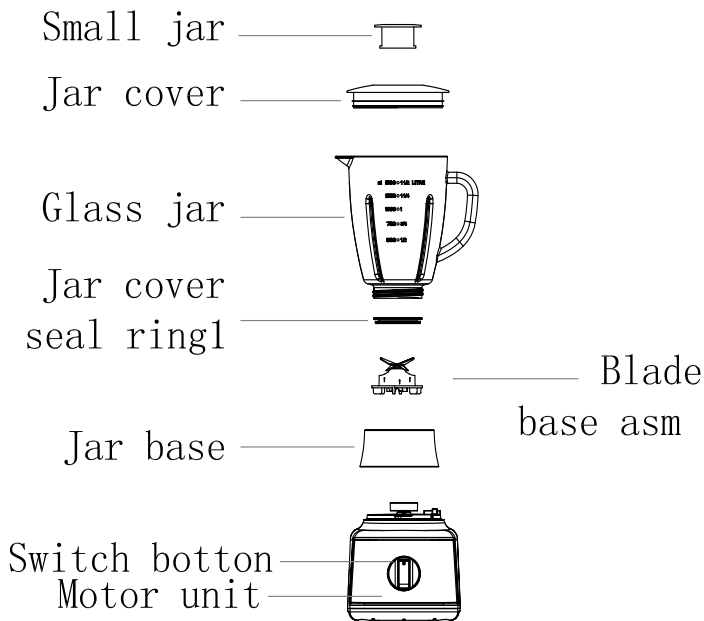


Fig.1

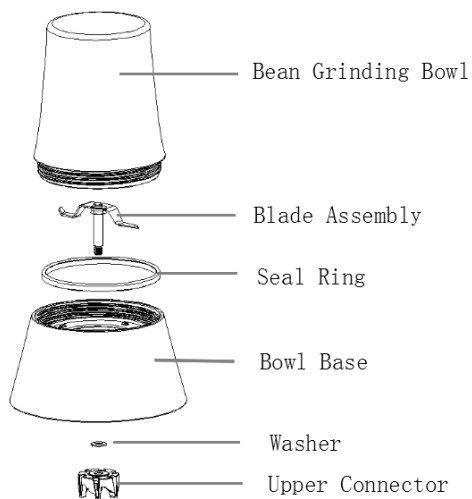

GRINDING ATTACHMENT

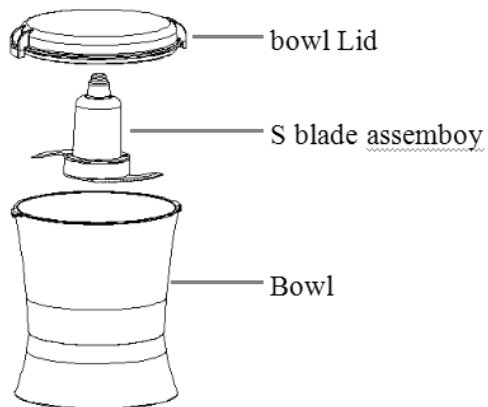

CHOPPER_BOWL

SWITCH BOTTON

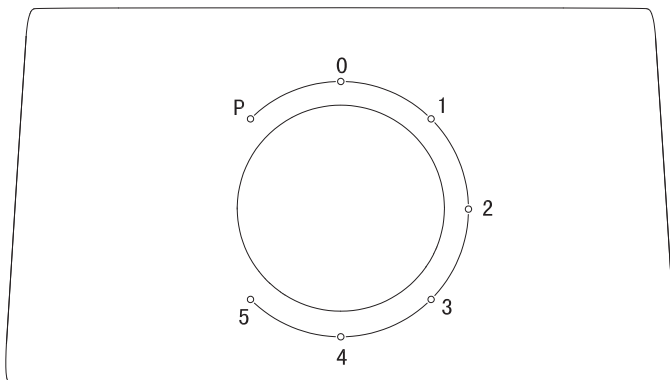


Fig.2

HOW TO USE

Before initial use

1. Before first use, unpack the appliance and place all parts on a horizontal surface.
2. The jar assembly (including the measure cup, lid, seal ring 1, jar, seal ring 2, blade assembly and jar base) has already been assembled into the motor unit. Disassemble to wash all detachable parts except the motor unit. Refer to the latter chapter CARE AND CLEANING.
3. Once all pieces have been cleaned and dry thoroughly, reassemble.
 - 1) Invert the jar onto a level surface, holding the jar handle, put the seal ring 2 and blade assembly onto the jar base bottom and secure the blade assembly by turning it anti-clockwise until tight (See Fig.3)
 - 2) Reposition the jar assembly with its opening upwards. Wrap the seal ring 1 around the lid bottom and put the lid onto the jar assembly. Place the measure cup exactly into the lid by fitting the small projection on the both sides of the cup into the slots of the lid and turning the cup clockwise until tight. (See Fig.4)
 - 3) Finally, place the assembled jar onto the motor unit by aligning the strip on the assembled jar bottom. (See Fig.5)

CAUTION: Jar and jar base is now secure. Do not try to twist the jar and jar base onto motor unit

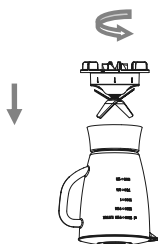


Fig.3

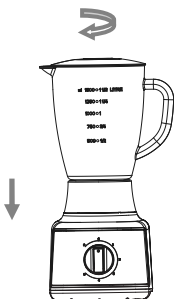


Fig.5

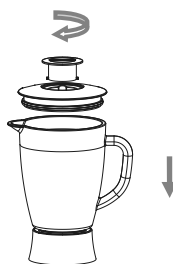


Fig.4

How to use

1. Peeled or cored the fruit or vegetables and then cut it into small dices.
2. Place the food to be blended into the jar (See Fig.6) . Usually, certain amount of purified water has to be added to facilitate the smooth running of appliance. The proportion of the food and water is 2:3. The amount of mixture should not exceed the max level as indicated on the jar.

RECIPE

FOOD TYPE	SPEC	WEIGHT	SPEED
Carrot (apple, pear etc.)	Cut into 15mm*15mm*15mm	Carrot: 600g Water: 900g	High speed
Carrot (apple, pear etc.)	Cut into 6mm*6mm*6mm	Carrot: 50g Water: 150g	Low speed

Note: never use boiling liquids or run the appliance empty.

3. Put the lid on the jar. Be sure the measuring cup is in place.
4. Plug the power cord into a standard wall outlet.
5. Choose to the appropriate speed setting for your task(**Please stir food at the highest speed, but not at low speed**).
6. For quick or delicate blending tasks, press the key to “ P2” position and hold for a few seconds and then release, the key will reset to “OFF” position automatically. Operate several times until the consistence you want is obtained
7. If you want to add ingredients while the blender is working, remove the measuring cup and place through the lid opening. (See Fig.7)
8. When crushing ice or hard food, keep one hand firmly on the lid.
9. When the consistence you desire is obtained, press the key to “OFF” position.

Note: 1) For each use, the consecutive operation time should not exceed 2 minutes. at least 10 minutes rest time must be maintained between two continuous cycles, let the unit cool to room temperature before performing next operation cycle.

2) If you want to stop the machine during operation, press the key to “OFF” position anytime.

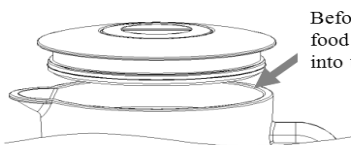


Fig.6

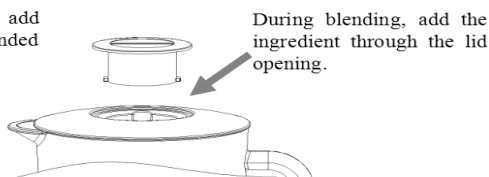


Fig.7

Important operating tips

10. Fill the grinding bowl with proper bean (such as coffee bean), then assemble the grinding blade assembly and grinding bowl together. Please see.

NOTE: The quantity of bean to be allowed to grind by the grinding bowl is Max 35g, and the finished time is about 15s.

11. Then place the prepared chopping food into the bowl. The food must be cut into small size firstly (such as 2cm*2cm*6cm for beef).

NOTE: The appliance allows you to chop the maximum quantity of beef or meat is 150g. Select the highest speed and operate for 40s.

- For best circulation of food that are to be blended with some liquid, pour the liquid into the jar first, then add solids.
- Some of the tasks that cannot be performed efficiently with a blender are: beating egg whites, whipping cream, mashing potatoes, grinding meat, mixing dough, extracting juice from fruit and vegetable
- The following items should never be placed in the unit as they may cause damage: bones, large pieces of solid, frozen food, or tough foods such as turnips.
- To crush ice, add up to 6 ice cubes. If more ice is needed, remove the cup and add cubes one by one through the lid opening.

CARE AND CLEANING

This product contains no user serviceable parts. Refer service to qualified service personnel.

1. Before cleaning, unplug the blender.
2. Always wash immediately after use for easier cleaning. Don't let food dry on the jar assembly as this will make cleaning difficult.
3. Pour a little warm soapy water into the jar and turn the knob to "P2" position for a few seconds. And then empty the jar.
4. Dismantle all detachable parts. Lift the jar assembly off the motor unit, To detach the blade assembly by turning it clockwise from the jar base bottom , and remove the seal ring 2 and blade assembly (see fig.8). In addition, detach the jar cover seal ring 1 from the jar cover.

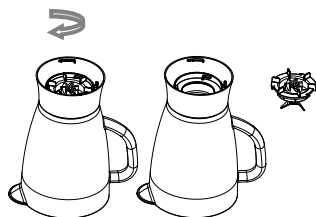



Fig.8

5. Rinse the measure cup, lid, seal ring 1, jar, seal ring 2 and blade assembly by hands or in a dishwasher and then dry. They are dishwasher safe components, but the temperature setting shall not exceed 70°C.
6. Brush the blade clean using warm soapy water, then rinse thoroughly under the tap. Don't touch the sharp blades, handle carefully. **Don't immerse the blade assembly in water.** Leave to dry upside down away from children.
7. Wipe the motor unit with a damp cloth and dry thoroughly. Remove the stubborn spots by rubbing with non-abrasive cleaner. If liquids spill into the motor unit; first unplug the unit, then wipe with a damp cloth and dry thoroughly.
8. Warning: Blending maximum level load or hard fruits and vegetables must be sure that the speed selector is setting at highest speed (speed 6). If the speed is used too low, the motor will be damaged due to insufficient torque. When the motor speed is found to be too slow, you must immediately use a higher speed setting to blend or turn the speed selector to "0" to stop blend!
9. Warning: Blending maximum level load or hard fruits and vegetables must be sure that the speed

selector is setting at highest speed (speed 5). If the speed is used too low, the motor will be damaged due to insufficient torque. When the motor speed is found to be too slow, you must immediately use a higher speed setting to blend or turn the speed selector to “0” to stop blend!

CAUTION

- 1) **Do not immerse the motor unit in liquid to prevent the risk of electric shock.**
- 2) **Do not use rough scouring pads or cleansers on parts or finish.**

Correct Disposal of this product	
	This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

