



HƯỚNG DẪN SỬ DỤNG

BÌNH THỦY ĐIỆN

Model: NK-A611



Vui lòng đọc kỹ hướng dẫn này trước khi sử dụng sản phẩm.

DỰ PHÒNG

Trước khi sử dụng, hãy đọc kỹ những hướng dẫn và cảnh báo này nhằm mục đích tránh cho bạn và những người khác khỏi bị thương và thiệt hại, đảm bảo hoạt động an toàn, vui lòng làm theo cách cẩn thận.

CẢNH BÁO

1. Bình thủy điện chỉ nên được sửa chữa bởi một kỹ thuật viên có chuyên môn, trung tâm bảo hành.
2. Để vòi lấy nước tránh xa tầm tay trẻ sơ sinh. Không cho phép trẻ em sử dụng thiết bị lấy nước mà không có sự giám sát.
3. Không ngâm bộ phận lấy nước trong nước hoặc để bộ phận lấy nước bị bắn tung tóe. Không đặt bộ phận lấy nước trên bề mặt ẩm ướt chẳng hạn như bồn rửa.
4. Không thêm nước quá vạch cấp nước đầy đủ.
5. Không đóng mạnh nắp trên.
6. Không để bình thủy điện bị nghiêng hoặc đổ.
7. Không mang bình thủy điện trên tay, nghiêng hoặc lắc, không di chuyển hoặc đổ nước nóng khi đang giữ nắp.
8. Không đặt vải hoặc bất kỳ thứ gì khác lên lỗ thông hơi.
9. Nếu các lưỡi hoặc bề mặt của phích cắm điện bị bẩn, hãy lau sạch.
10. Không sử dụng bộ phận phối nếu phích cắm điện hoặc dây nguồn bị hỏng hoặc phích cắm được cắm lỏng lẻo vào ổ cắm điện.
11. Không làm xước, làm hỏng, sửa đổi, bẻ cong, kéo, xoắn hoặc gấp dây nguồn làm hư hại. Không đặt vật nặng lên dây nguồn, không để dây bị kẹp giữa các vật.


THẬN TRỌNG

1. Không để ghim hoặc các vật kim loại khác tiếp xúc với phích cắm của thiết bị.
2. Luôn nắm chặt phích cắm của nguồn điện khi rút dây nguồn.
3. Đừng cố đổ nước nóng khi nó đang sôi hoặc ngay sau khi nó đã sôi.
4. Rút phích cắm điện khi bình thủy điện không được sử dụng trong một thời gian dài.
5. Để tránh bị cháy, không che lỗ thoát hơi nước.
6. Khi mở nắp, không để hơi nước tiếp xúc với da của bạn.

LƯU Ý

1. Không bật vòi rót nước khi bình thủy điện đang trống.
2. Không sử dụng bình thủy điện trên kệ để đồ trong nhà bếp hoặc cách tường hoặc đồ nội thất trong vòng 30cm.
3. Không sử dụng vòi lấy nước gần nguồn nhiệt.
4. Không đổ đầy những thứ khác vào bình thủy điện ngoại trừ nước.

CẤU TẠO VÀ CHỨC NĂNG

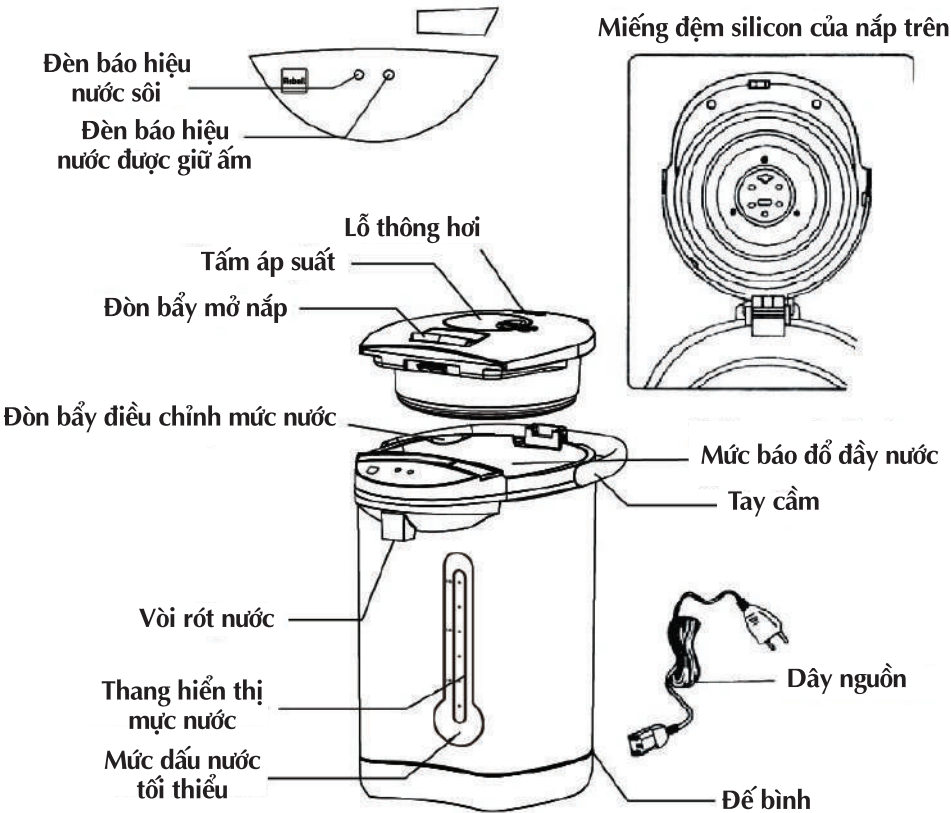

THÔNG SỐ KỸ THUẬT

Dung tích: 4L

Điện thế: 220V/50Hz


Công suất: 730W

Công suất giữ ấm: 35W


CÁCH SỬ DỤNG

Trong lần sử dụng đầu tiên, đổ đầy nước và đun sôi.

Theo hướng dẫn bên dưới. Bạn có thể nhận thấy mùi nhựa trong lần đầu tiên bạn sử dụng bình thủy điện. Điều này là bình thường và sẽ giảm dần theo thời gian.

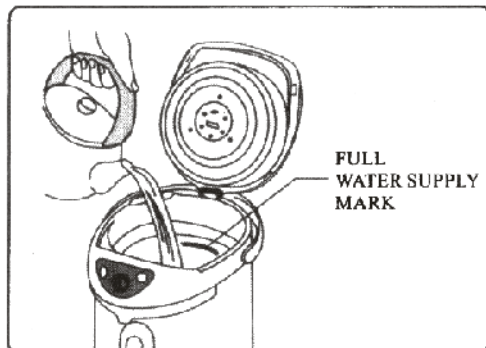

Đổ đầy nước

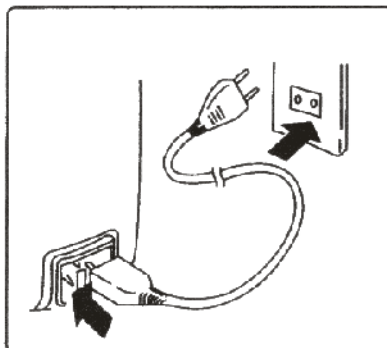

Kết nối với nguồn điện

THẬN TRỌNG

- Không đổ nước quá vạch cấp nước đầy (nếu bạn làm vậy, nước nóng sẽ tràn ra ngoài).
 - Không để đáy bình thủy điện bị ướt.
 - Luôn đóng nắp an toàn.
 - Không cắm điện khi ruột bình thủy điện bên trong đang trống.
 - Khi bạn cắm điện, đèn “BOIL” sáng lên.
 - Khi đun sôi xong, đèn “KEEP WARM” sáng lên.
 - Thời gian cần thiết để đun sôi 26 phút (khoảng).
- (Thời gian khác nhau tùy theo khu vực)

* Trước khi đun sôi lại, hãy đảm bảo mực nước cao hơn vạch đổ đầy.


* Nút “Re-boil” không có tác dụng ngay sau khi nước đã sôi.

THẬN TRỌNG


- Không mở nắp khi nước đang được đun sôi.
- Cần thận với hơi nước thoát ra từ lỗ thoát hơi.
- Không đặt bất cứ thứ gì trên lỗ thoát hơi nước.




Rót đầy nước bằng bơm tay

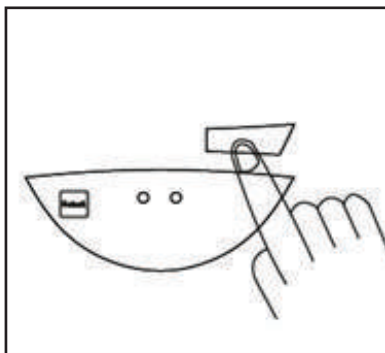

**Rót đầy nước bằng nút điện
bên phải hoặc bên trái**

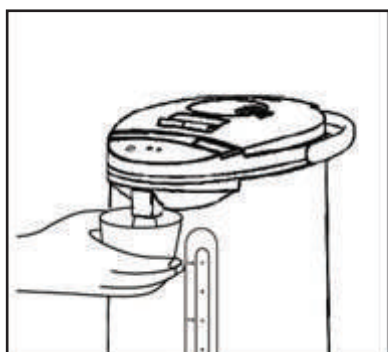


Rót đầy nước với chạm cốc

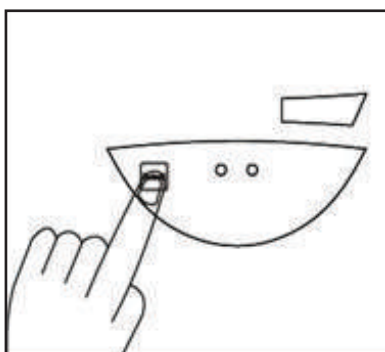

Nhấn nút Đun sôi lại.

Đun sôi lại một bình đầy nước mất ít nhất 5 phút

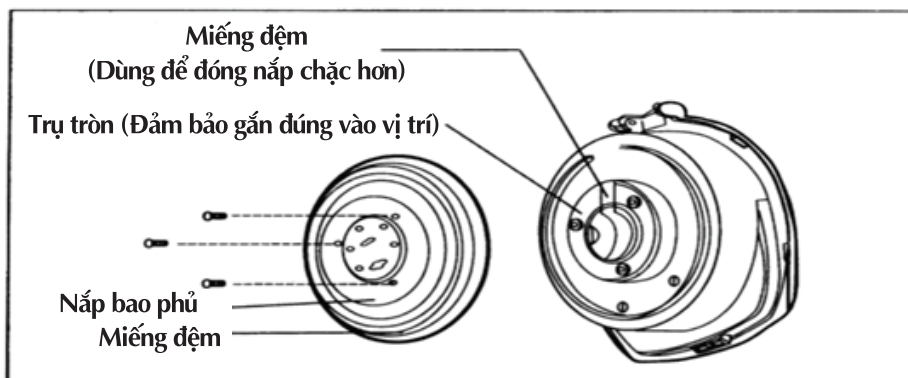

Miếng đệm silicon của năm trên:

Nếu các miếng đệm bị mất khả năng sử dụng, vì bất kì lý do nào khác, hơi nước thoát ra giữa hộp đệm và nắp, hãy thay thế chúng.

CÁCH VỆ SINH VÀ BẢO TRÌ

Trước khi làm sạch:

- Tháo phích cắm.
- Xả hết lượng nước nóng còn lại và để bình thủy điện nguội trước khi làm sạch.

Thân và nắp

- Lau sạch thân bằng khăn ẩm.
- Không sử dụng benzen, chất pha loãng sơn.
- Không làm ướt thân, nắp hoặc ngâm chúng vào nước.
- Lau sạch bụi bẩn bám trên nắp và miếng đệm.

Ruột bình thủy điện bên trong:

- Rửa sạch bằng một miếng bọt biển.
- Không sử dụng bột cọ rửa.
- Không để nước tràn vào.

***Nếu việc làm sạch bằng bọt biển không thể làm sạch ruột bình thủy điện bên trong:**

- 1) Đổ đầy nước và vắt một hoặc hai quả chanh hoặc axit trung bình vào, đun sôi nước và để ấm giữ ấm cho khoảng một giờ.
 - 2) Chà bằng bàn chải nylon và rửa sạch.
- Có những đốm màu đỏ bên trong là do tác động của chất trong nước, nó không làm biến màu, không ăn mòn ruột bình và không có hại.
 - Vệ sinh cẩn thận tránh bị bắn và bạc màu.

TRƯỚC KHI GỌI CHO BỘ PHẬN KỸ THUẬT

Thông tin cần kiểm tra:

Biểu hiện lỗi	Nguyên nhân	Giải pháp
Nước không sôi	Đã rút dây nguồn	Cắm phích vào ổ cắm
Nước nóng không chảy ra hoặc chảy ra rất ít	Đã rút dây nguồn. Các miếng đệm silicon bên trong bị mất khả năng sử dụng.	Cắm phích vào nguồn điện Thay thế chúng



INSTRUCTION MANUAL

ELECTRIC THERMO POT

Model: NK-A611



Before use the unit. Please read these instructions completely

PRECAUTION

Before use, these warnings and cautions are intended to prevent you and other persons from injury and damage. To ensure safe operation, please follow them carefully.

WARNING

1. It should be repaired only by an authorized repair technician.
2. Keep the dispenser out of the reach of infants. Don't allow children to use the dispenser without supervision.
3. Don't soak the dispenser in water or allow it to be splashed. Don't place the dispenser on a wet surface such as a sink.
4. Don't add water above the full water supply mark.
5. Don't close the upper lid forcefully.
6. Don't allow the pot to tilt or fall over.
7. Don't carry the dispenser in your arms, tilt or shake it. Don't move it or pour hot water while holding the lid.
8. Don't place cloth or any other things over the steam vent.
9. If the blades or surface of the electrical plug are soiled, wipe it clean.
10. Don't use the dispenser if the electrical plug or power cord is damaged or the plug is loosely inserted into the electrical outlet.
11. Don't scratch, damage, modify, forcefully bend, pull, twist, or fold the power cord. Don't place heavy things on power cord, don't let it be pinched between objects, or modify it.


CAUTION

1. Don't allow pins or other metal objects to contact the appliance plug.
2. Always grasp the power supply plug when unplugging the power cord.
3. Don't attempt to pour hot water while it is boiling or immediately after it has boiled.
4. Unplug the electrical plug when the dispenser is not being used for a long time.
5. To avoid burning, don't overlay the steam vent.
6. When open the lid, don't allow the steam to contact your skin.

NOTES

1. Don't turn on the dispenser when it is empty.
2. Don't use the dispenser on a kitchen storage shelf or within 30cm of a wall or furniture.
3. Don't use the dispenser near a heat source.
4. Don't fill the dispenser with other things except water.

PARTS NAMES AND FUNTION

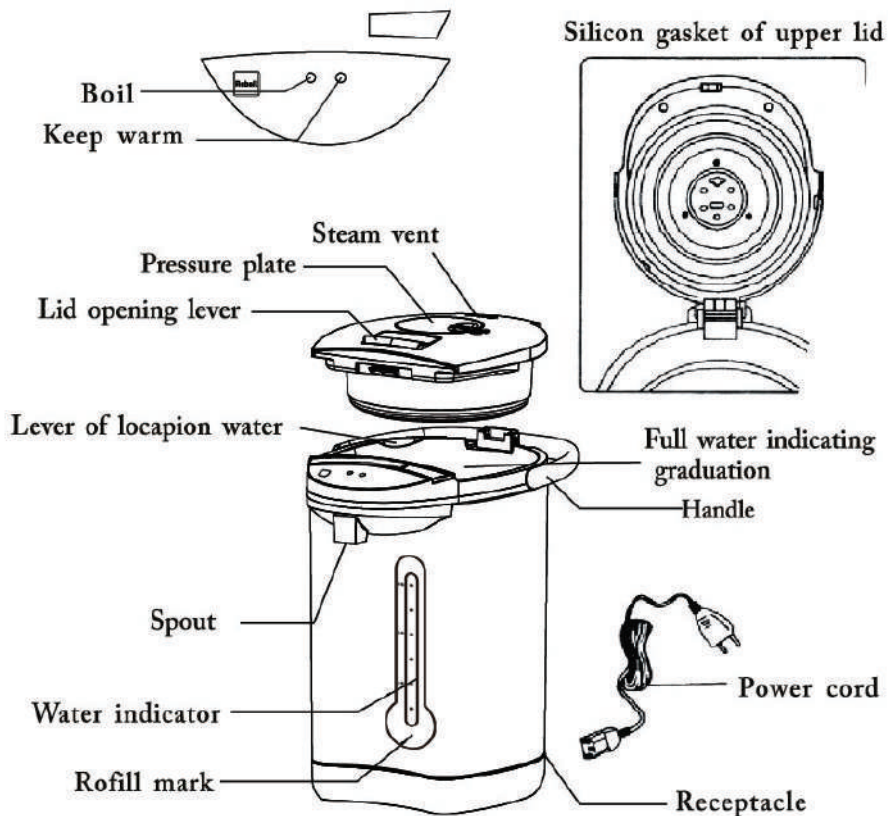

SPECIFICATIONS

Capacity: 4L

Rating: 220V/50Hz


Power: 730W

Keep warm power: 35W


HOW TO USE

On first usage full fill water and boil.

According to the instructions below. You may Notice a smell of plastic the first time you use the dispenser. This is normal and will fade over time.

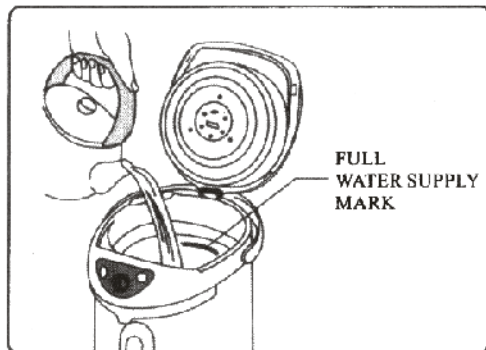

Pouring In Water

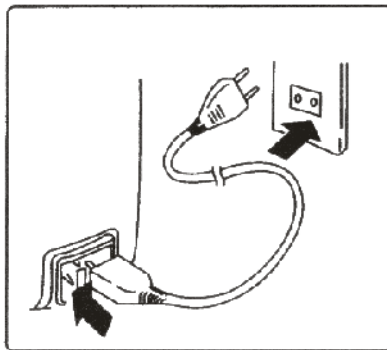

Connect

CAUTION

- Do not pour in water above the full water Supply mark (if you do, hot water will overflow).
 - Do not get bottom of this pot wet.
 - Always close the lid securely.
 - Do not plug in when the inner container is empty.
 - When you plug in, the "BOIL" lamp lights up.
 - When the boiling is completed, the "KEEP WARM" lamp lights up.
 - Time required for boiling 26 minutes (about).
- (Timing different according to regions)


- * Before re-boiling, make sure the water level is above the refill mark.
- * The re-boil key has no effect right after the water has boiled.

CAUTION


- Do not open the lid while the water is being boiled.
- Be careful of the steam coming out from the steam vent.
- Do not place anything over steam vent.




Pour water with air pump

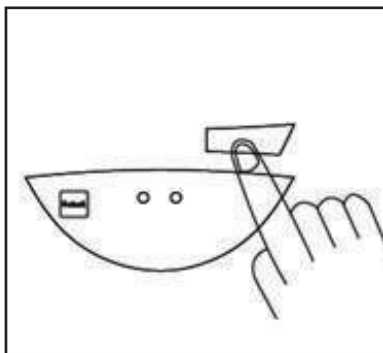

**Pour water with left or right
electrical button**

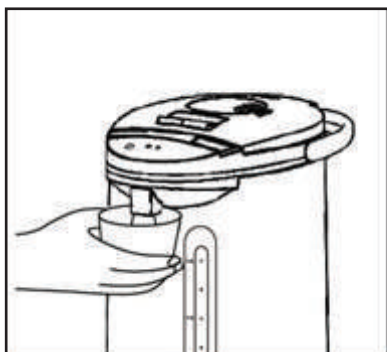


Pour water with cup touch

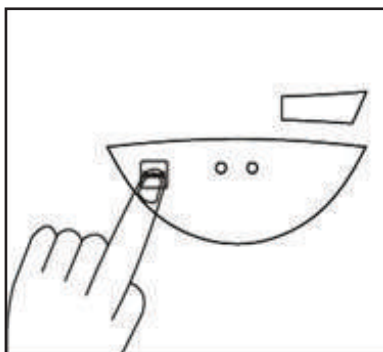

Press the re-boil button.

Re-boiling a full container takes about 5 minutes

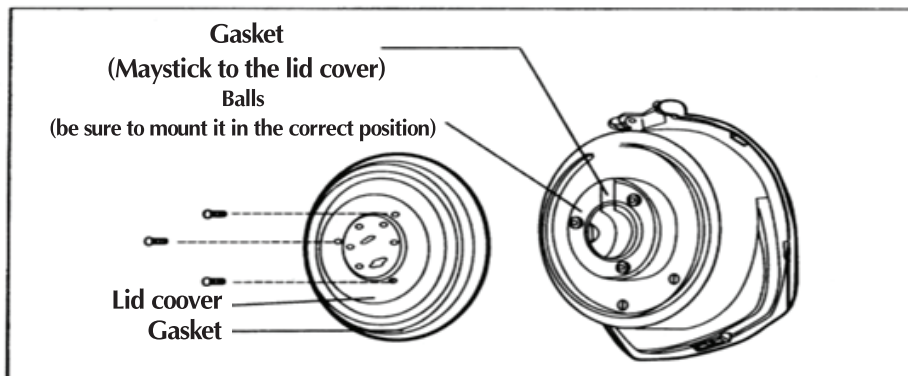

Silicon gasket of the upper lid:

If the gaskets lose their pliancy, or for any other reason steam to escape from between the cotainer and lid, replace them.

HOW TO CLEAN AND MAINTAIN

Before cleaning:

- Remove the plug.
- Exhaust the remaining hot water and let the pot cool off before cleaning its.

Body and lid

- Clean the body with a damp,well-squeezed cloth.
- Do not use benzine,paint thinner.
- Do not wet the body or the lid or soak them into water.
- Wipe any moisture and grime off the lid and gasket.

Inner container

- Wash with a sponge.
- Do not use scouring powder.
- Do not let the water overflow.

* If the sponge cleaning can not get inner container clean:

1) Fill the container with water and the juice

Of one or two lemons or citric acid, boil the water, and let the pot hold warm for about an hour.

2) Rub with a nylon scrub brush and rinse well.

- These are reddish stain spots caused by the action of substance in the water, it is not discoloration or corrosive of the inner container itself and is not harmful.
- Careful washing prevents grime and discoloration.

BEFORE CALLING FOR SERVICE

What to check:

Symptom	Cause	Solution
The water does not boil	The power cord is unplugged	Plug it in
The hot water does not come or only a little does	The power cord is unplugged. Silicon gasket of the inner lid Gaskets lose their pliancy	Plug it in. Replace them