

**SUNHOUSE®**  
**MAMA**

www.sunhouse.com.vn

**Hotline: 1800 6680**

**Trung tâm bảo hành Miền Bắc**

Km8, Đại lộ Thăng Long, Hoài Đức, Hà Nội - ĐT: +84 24 3200 8339 / 3200 5230

**Trung tâm bảo hành Miền Trung**

685 Điện Biên Phủ, Q. Thanh Khê, Đà Nẵng - ĐT: +84 23 6372 6821

**Trung tâm bảo hành Miền Nam**

Lô 8 - 10 đường số 1, KCN Tân Tạo, P. Tân Tạo A, Q. Bình Tân, TP Hồ Chí Minh

ĐT: +84 28 3869 1014 / Fax: +84 28 3869 1013

**Nhập khẩu & Phân phối:** Công ty Cổ phần Tập đoàn SUNHOUSE

**Địa chỉ:** Số 139, Nguyễn Thái Học, P.Điện Biên, Q.Ba Đình, TP.Hà Nội

**Điện thoại:** +84 24 3394 0848 - **Fax:** +84 24 3394 0878

Sản phẩm được sản xuất tại Trung Quốc

**Website:** www.sunhouse.com.vn

# **SUNHOUSE®**

## **MAMA**

### **HƯỚNG DẪN SỬ DỤNG**



**NỒI CƠM ĐIỆN 1.8L SUNHOUSE MAMA**  
**Model: SHD8665G/B**

*Đọc kỹ hướng dẫn sử dụng trước khi dùng*

**Hướng dẫn cách xác nhận sản phẩm chính hãng, đăng ký và kiểm tra thời hạn bảo hành của sản phẩm áp dụng bảo hành điện tử SUNHOUSE:**

Bước 1: Cào nhẹ lớp phủ bạc ở tem chính hãng ( vui lòng tìm Tem chính hãng dán trên sản phẩm) để lấy Mã tem cào.

Bước 2: Soạn tin nhắn cú pháp

**SHG<đấu cách>MODEL<đấu cách>MÃ TEM CÀO** gửi đến số **8077**

**Ví dụ: SHG SHD8265G 012345678** gửi đến số **8077**

Sau khi nhận được tin nhắn, tổng đài sẽ gửi thông báo xác nhận đến Quý khách hàng.


### Quý khách hàng thân mến,

Xin chân thành cảm ơn vì đã tin dùng và lựa chọn sản phẩm của SUNHOUSE. Chúng tôi tin rằng, sản phẩm làm bằng những chất liệu cao cấp hàng đầu này sẽ đáp ứng mọi yêu cầu và làm hài lòng quý khách.

Quý khách hàng vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng để đảm bảo an toàn và đạt hiệu quả tốt nhất.

Nhà sản xuất không chịu trách nhiệm pháp lý về con người và tài sản trong những trường hợp thiệt hại do lắp đặt sai hoặc sử dụng thiết bị không đúng cách.

## THÀNH PHẦN CẤU TẠO

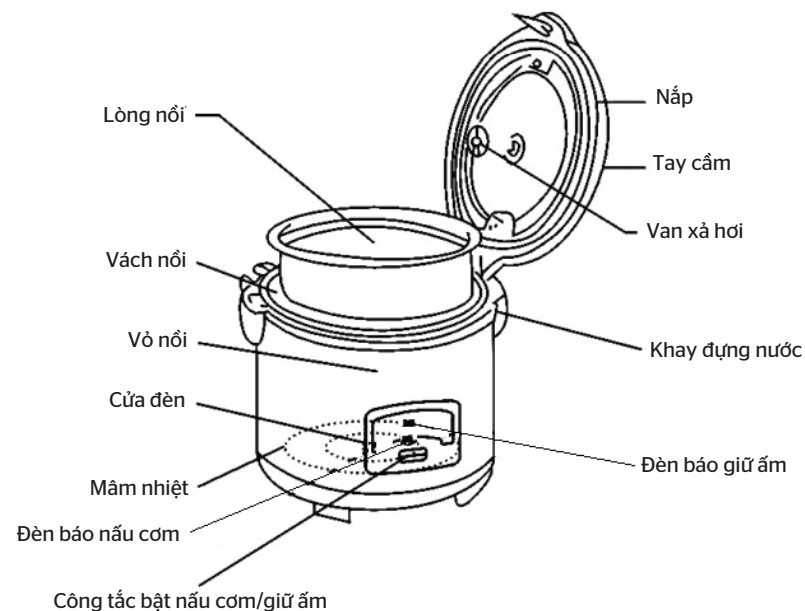

| Cốc đong gạo                                                                         | Muỗng xới cơm                                                                        |
|--------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------|
|  |  |

## THÔNG SỐ KỸ THUẬT

|                    |              |
|--------------------|--------------|
| Sản phẩm           | SHD865B/G    |
| Dung tích          | 1.8 L        |
| Công suất tiêu thụ | 700W         |
| Hiệu điện thế      | 220 V-/50 Hz |
| Trọng lượng        | 3.7 kg       |

## LƯU Ý TRƯỚC KHI SỬ DỤNG

1. Đọc kỹ hướng dẫn sử dụng trước khi dùng để sản phẩm phát huy tối đa công năng và đảm bảo an toàn cho người sử dụng.
2. Trước khi dùng, kiểm tra lại điện áp xem có tương thích với điện áp quy định trên sản phẩm hay không (220V-50Hz).
3. Đảm bảo lòng nồi và mâm nhiệt khô ráo, không có tạp vật bám trên bề mặt.
4. Không che phủ lỗ thông hơi bằng giấy, khăn hay bất kỳ vật nào khác.
5. Không đặt ruột nền lên ngọn lửa trực tiếp để nấu nướng.
6. Nồi cơm điện này chỉ dùng cho mục đích nấu cơm và giữ ấm, không phù hợp cho các mục đích khác như nấu cháo hoặc luộc rau vì có thể làm tràn nước, gây nguy hiểm cho người sử dụng.
7. Luôn ngắt kết nối với nguồn điện trước khi vệ sinh sản phẩm.
8. Không sử dụng dụng cụ sắc nhọn để làm sạch, tránh làm xước lòng nồi và làm bong lớp chống dính.
9. Khi thấy dây điện hoặc phích cắm gặp trục trặc, không nên tự ý sửa chữa. Hãy mang sản phẩm đến trung tâm bảo hành chính hãng hoặc cơ sở sửa chữa uy tín để được hỗ trợ.
10. Thiết bị này không phù hợp cho những người bị giảm khả năng thể chất, cảm giác hoặc tinh thần - trừ khi họ được giám sát hoặc hướng dẫn bởi người có trách nhiệm.
11. Trẻ em cần được giám sát để đảm bảo không chơi đùa với sản phẩm.

## HƯỚNG DẪN SỬ DỤNG

**Bước 1:** Ấn nút mở nắp để lấy lòng nồi (chống dính ceramic) ra và rửa sạch bằng nước máy, sau đó tráng qua nước sôi để khử mùi dầu mỡ, bụi bẩn.

**Bước 2:** Vo gạo bằng giá đựng riêng rồi đổ vào lòng nồi, sau đó căn cứ vào lượng gạo cần nấu và đặc tính từng loại gạo để cho lượng nước phù hợp vào trong nồi. Sau khi cho nước vào nồi, ta dùng vải khô mềm lau khô mặt ngoài của lòng nồi rồi mới cho lòng nồi vào trong nồi cơm. (Chú ý: trước khi cho lòng nồi vào trong nồi cần kiểm tra xem trong nồi có bám bụi hay vật lạ bám trên lòng nồi hoặc mâm nhiệt hay không. Nếu có, cần dùng vải khô mềm để vệ sinh sạch sẽ trước khi nấu).

Sau khi cho lòng nồi vào trong thân nồi xong, xoay lòng nồi một vòng quanh thân nồi để lòng nồi được tiếp xúc ổn định trên bề mặt của mâm nhiệt, cuối cùng đậy nắp nồi lại.

**Bước 3:** Cắm phích điện vào ổ điện 200V, đèn xanh (warm) sẽ sáng.

Ghi chú: Sau khi cắm điện xong cần kiểm tra xem phích cắm và ổ điện đã chắc chắn chưa để tránh điện áp tiếp xúc chập chờn gây ra sống cơm hoặc không vào điện.

**Bước 4:** Ấn nút điều khiển xuống dưới (cook) để bắt đầu quá trình nấu cơm. Khi cơm được nấu chín, nồi sẽ tự động chuyển sang đèn xanh (warm) để giữ ấm cơm.

**Ghi chú:** Để cơm chín đều và ngon hơn thì sau khi nồi chuyển sang đèn xanh từ 5 - 10 phút, nên mở nắp ra và dùng đũa hoặc muôi xới cơm đảo đều từ trên xuống dưới, sau đó đóng nắp lại và để cho nồi giữ ấm khoảng 15 - 20 phút.

## VỆ SINH SẢN PHẨM

Trước khi vệ sinh, rút điện ra khỏi thiết bị và đảm bảo các bộ phận đã nguội hoàn toàn.

Vệ sinh lòng nồi, xúng hấp và vùng nổi trong:

- Tháo và làm sạch lòng nồi, xúng hấp và vùng nổi trong sau mỗi lần sử dụng. Ngâm chúng trong nước ấm.

- Rửa sạch bằng miếng bọt biển hoặc vải mềm.

- Không sử dụng bất kỳ chất tẩy rửa có tính mài mòn, đồ lau chùi thô ráp hoặc những sản phẩm không an toàn cho chất chống dính phủ trên lòng nồi.

Vệ sinh thân nồi và nắp ngoài:

- Chỉ sử dụng một miếng vải ẩm để lau bên ngoài thiết bị.

- Không ngâm toàn bộ nồi vào trong nước.

## CẢNH BÁO AN TOÀN

Trong thời gian mưa bão và đặc biệt là vào mùa hè, do nhu cầu sử dụng điện nhiều dẫn đến quá tải và thường xuyên sửa chữa đường điện gây ra hiện tượng điện áp ở một số vùng thường không ổn định. Do vậy, trong quá trình nấu cơm vào những thời điểm này dễ xảy ra hiện tượng rơ le nhảy sớm gây hiện tượng sống cơm. Lúc này cần thực hiện các thao tác sau:

- Nên lắp đặt ổn áp trong nhà để duy trì điện áp ổn định và nâng cao tuổi thọ (độ bền) cho các đồ dùng trong nhà.

- Kiểm tra xem phích cắm và ổ cắm có tiếp xúc tốt không.

- Kiểm tra điện áp của nhà tại thời điểm nấu cơm có ổn định không (bóng đèn nhấp nháy trong nhà có nhấp nháy hoặc ánh sáng bị tối không).

- Kiểm tra lượng nước cho vào nồi có đủ không.

- Nấu thử 2 - 3 lần vào từng thời điểm khác nhau để kiểm tra chất lượng nồi. Nếu nấu 2-3 lần vào những thời điểm khác nhau mà vẫn có hiện tượng rơ le nhảy sớm không trong khi điện áp ổn định. Lúc này hãy gửi sản phẩm về cho trung tâm bảo hành để kiểm tra và sửa chữa kịp thời.

# SUNHOUSE<sup>®</sup>

## MAMA

### INSTRUCTION MANUAL



**SUNHOUSE MAMA ELECTRIC RICE COOKER 1.8L**  
**Model: SHD8665G/B**

*Please read these instructions carefully before use*

**Instruction to verify genuine product, register and check warranty period for product applied SUNHOUSE E-warranty sticker.**

Step 1: Scratch slightly Silver cover in E-warranty sticker to get **CODE NUMBER** (Please find the E-warranty sticker in product)

Step 2: Compose message as below:

**SHG** (Space) **MODEL** (Space) **CODE NUMBER** send to **8077**

**For example: SHG SHD8625G 012345678 send to 8077**

**After receiving message, Exchange will send confirmation to customer.**


**Dear beloved customers,**

Thank you for trusting and choosing SUNHOUSE's products. We do believe that this is the most useful and modern product which is manufactured by leading materials. SUNHOUSE's products will meet your requirements and satisfy you.

Please kindly read carefully manual before usage to assure safety and effectiveness.

Manufacturer does not bear any legal responsibilities to human and treasure in case of damage arisen from wrong installation and usage.

## PARTS IDENTIFICATION

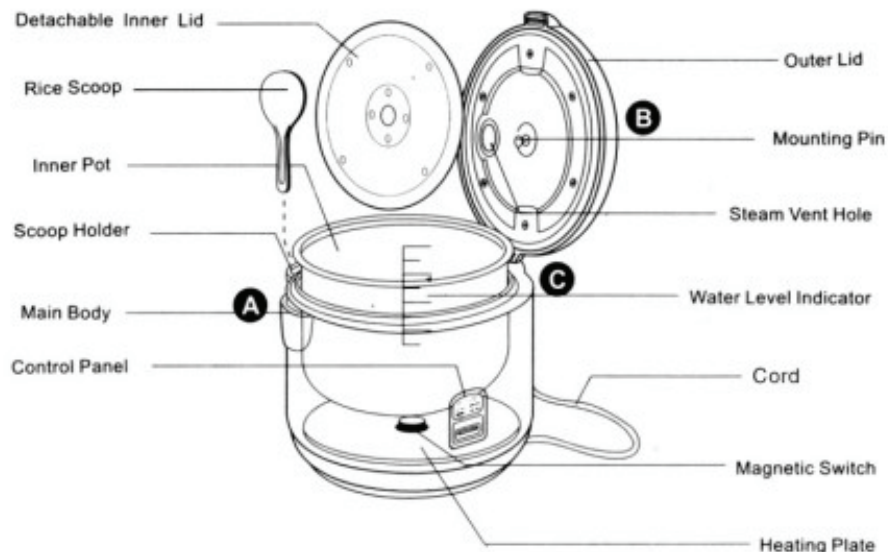

## ACCESSORIES



Measuring Cup




Rice Scoop




Scoop Holder

**A**

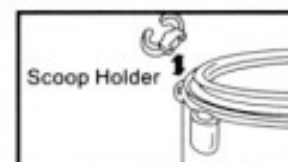




**B**

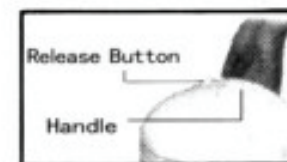

**C**



## ILLUSTRATION

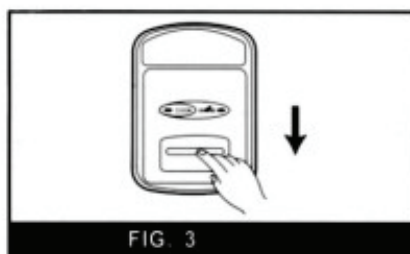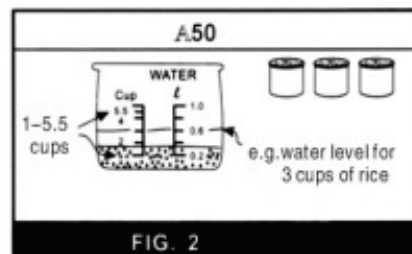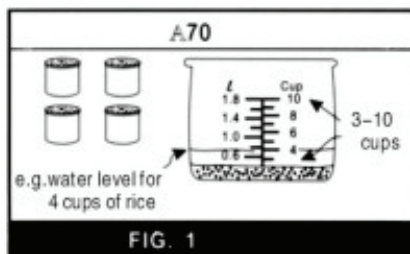

## PRECAUTION

- Please read this instruction manual thoroughly and carefully before you start operating the unit to ensure safe and reliable performance.
- Before use. Check if the voltage indicated underneath the rice cooker corresponds to the main voltage at your home.
- Before placing the inner pot into the rice cooker, make sure that the heating plate and the magnetic switch are clean and dry.
- Do not switch on when the main body is empty.
- Do not obstruct the steam vent hole with any article, e.g., a piece of cloth.
- Do not place the inner pot directly over an open flame for cooking.
- During operation (i.e., cook or keep warm function). Avoid touching hot parts: outer lid, inner pot, inner lid, steam tray and especially the steam vent hole.
- This rice cooker can only be used for cooking plain rice and keeping warm, and is NOT suitable for other purposes such as making congee or vegetables. Otherwise, water may overflow which affects the safe use of rice cooker.
- For best rice quality. It is recommended to keep warm for less than 2 hours. To stop the keep warm function, simply unplug the unit from the mains.
- Always disconnect the power from the mains before cleaning.
- During cleaning, do not immerse the main body in or rinse it with water.
- Do not use sharp instruments for cleaning to avoid damage to the surface of the inner pot.

- Do not operate with broken cord or plug. When it is found malfunctioning, or when damaged, please consult ELEPHANT local service station for any repair or replacement of parts.
- The appliance must not be immersed in water.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, unless they have been given supervision or instruction conceding use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacture or its service agent. (for plug socket)
- If the supply cord is damaged, it must be replaced by the manufacture, its service agent or similarly qualified persons in order to avoid a hazard. (for wire splice)

## PLAIN RICE COOKING

### 1. measure the plain rice volume

Use the measuring cup provided. Each cup of uncooked plain rice normally can give about 2 bowls of cooked rice. Do not cook rice outside the range indicated inside the pot. The rice cooker cannot perform the normal rice cooking function outside the specified range.

### 2. wash the rice

Wash the rice gently and thoroughly, we advise you to use a separate container non-stick coating of the inner pot.

### 3. Add water according to the marking inside the pot

Pour the pre-washed rice into the inner pot. Add water according to the marking indicated inside the pot that is corresponded then smooth the rice surface. The level marked inside the pot is just an indication. You can always adjust the water level for different types of rice and your own preference.

### 4. Check to ensure the pot is in good contact

Before connecting the power ensure the outside of the inner pot is dry and clean and that no foreign object is on the heating plate or the magnetic switch. Close the lid firmly until it gives a 'click' sound to avoid improper rice cooking.

### 5. Connect to the main power supply

Connect the unit to the mains. The light of the 'cook' mode will be on.

### 6. Press the control button to start cooking

To start the rice cooking process, press down the control button and the light of the 'cook' mode will stay on to indicate that rice cooking is in progress.

If you do not press down the control button after a few minutes the light of the 'cook' mode will go off and the light of 'WARM' mode will be on automatically to protect the normal function of the rice cooker.

### 7. Keep warm

When the cooking process is finished, the light of the 'Cook' mode will go and the light of 'WARM' mode will be on automatically.

### 8. Stir the rice

For best results, open the lid after the light of the 'WARM' mode goes on and stir the rice to allow excessive water to escape. Then close the lid firmly to continue the keep warm function.

### 9. Power off

To stop the keep warm function. Simply unplug the unit from the mains.

## HOW TO CLEAN

### The inner pot, steam tray and inner lid:

1. Before cleaning. Unplug the unit from the mains and let it cool down completely.
2. Remove and clean the inner lid, the inner pot, and steam tray and dew collector after every use. Soak them in lukewarm water.
3. Wash with a sponge or a soft cloth.
4. Do not use any abrasive cleansers, steel wool or metal utensils to clean the non-stick inner pot as these will damage the non-stick coating.

### The main body and outer lid:

1. Before cleaning, unplug the unit from the mains and let it cool down completely.
2. Use only a damp cloth to wipe the outside of the unit. DO NOT immerse the main body in water.