


CRYSTAL

HƯỚNG DẪN SỬ DỤNG


Nồi lẩu điện đa năng Crystal MS-EA4001




MÔ TẢ SẢN PHẨM

THÔNG SỐ KỸ THUẬT	
Model	MS-EA4001
Dung tích	5 lít
Công suất	1000W
Điện áp	220V, 50Hz

- 1. Tay cầm nắp nồi
- 2. Nắp nồi
- 3. Thân nồi
- 4. Vỏ nồi
- 5. Nút điều chỉnh

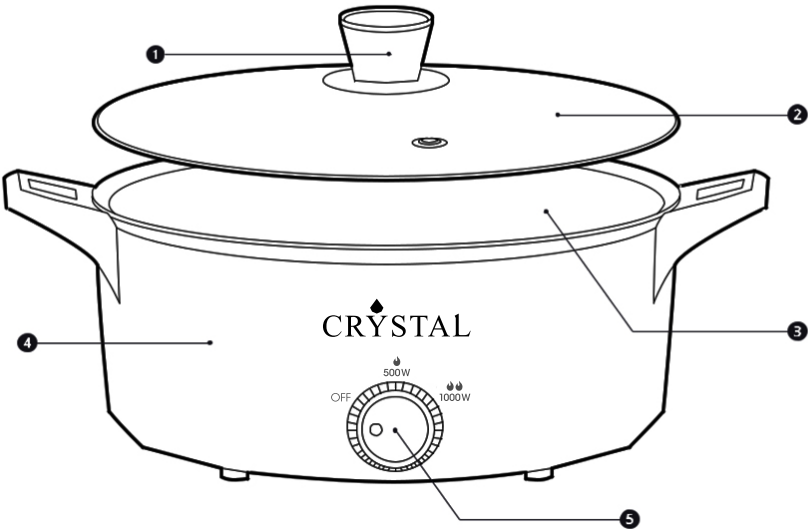

NÚT ĐIỀU CHỈNH



OFF	Tắt thiết bị
500w	Mức điều chỉnh công suất 500W
1000w	Mức điều chỉnh công suất 1000W

CẢNH BÁO AN TOÀN

Để đảm bảo an toàn và tránh xảy ra các sự cố không mong muốn, Quý khách xin lưu ý những điểm sau:

1. Đảm bảo đọc và hiểu hướng dẫn sử dụng này trước khi sử dụng;
2. Trước khi kết nối sản phẩm với nguồn điện, hãy kiểm tra xem điện áp trên bảng thông số có phù hợp với điện áp của nguồn điện hay không.
3. Phải sử dụng ổ cắm có nối đất từ 10A trở lên, phích cắm phải được cắm kỹ vào ổ cắm để tránh hiện tượng quá nhiệt và cháy linh kiện do tiếp xúc kém dẫn đến chập mạch hoặc cháy nổ;
4. Vận hành không đúng cách có thể làm hỏng thiết bị hoặc gây thương tích cho người.
5. Sản phẩm chỉ dành cho mục đích sử dụng trong gia đình và Công ty sẽ không chịu trách nhiệm về bất kỳ hỏng hóc nào do sử dụng cho mục đích thương mại, sử dụng không đúng cách hoặc không tuân thủ hướng dẫn sử dụng này. Những hư hỏng do lỗi như vậy không được bảo hành.
6. Tránh tiếp xúc với vỏ sản phẩm trong quá trình sử dụng vì sản phẩm sẽ sinh ra nhiệt độ cao trong quá trình sử dụng, cần thận có vết bỏng;
7. Sản phẩm này không dành cho trẻ em hoặc những người bị khuyết tật về thể chất, giác quan và tinh thần. Trừ khi họ được giám sát và hướng dẫn bởi người chịu trách nhiệm về sự an toàn của họ liên quan đến việc sử dụng sản phẩm. Trẻ em nên được giám sát để đảm bảo rằng chúng KHÔNG chơi với thiết bị.
8. Nếu dây cáp nguồn bị hỏng, phải thay thế bằng dây nguồn hoặc linh kiện mua từ nhà sản xuất hoặc bộ phận bảo hành;
9. Nếu sản phẩm bị hư hỏng do va chạm, vui lòng không tiếp tục sử dụng;
10. Không ngâm sản phẩm trong nước hoặc các chất lỏng khác để làm sạch. Để giảm nguy cơ bị điện giật, không để lộ hoặc nhúng phích cắm hoặc dây nguồn vào nước hoặc các chất lỏng khác.

11. Ngắt nguồn điện khi dọn dẹp, di chuyển hoặc khi không sử dụng;
12. Khi rút phích cắm, hãy giữ phích cắm để rút ra. Không kéo hoặc xoắn dây nguồn một cách cưỡng chế để tránh làm hỏng dây nguồn và nguy cơ rò rỉ;
13. Đảm bảo không để đường dây điện tiếp xúc với các cạnh sắc, gờ, các vật sắc nhọn khác hoặc các vật nóng trên bề mặt để tránh rò rỉ dẫn đến điện giật hoặc cháy nổ;
14. Không cắm chốt, dây sắt hoặc các vật kim loại khác vào bất kỳ khe hở nào của vỏ và để để tránh bị thương do điện giật;
15. Cáp điện nhô ra có thể gây ra tai nạn. Nên bố trí dây cáp điện ở vị trí hợp lý để tránh vấp ngã.
16. Vui lòng sử dụng sản phẩm trên bề mặt phẳng, không sử dụng sản phẩm trên thảm, khăn, nhựa, giấy và các vật dễ cháy khác, tránh thiết bị bị hư hỏng, hỏng hóc hoặc hỏa hoạn;
17. Không đặt sản phẩm trên bề mặt không ổn định, ẩm ướt, nhiệt độ cao, nắng, chịu nhiệt để sử dụng để tránh bị điện giật, cháy, trượt và các thương tích khác và tổn thất tài sản;
18. Không đặt sản phẩm gần nơi có nhiệt độ cao, từ tính mạnh, khí dễ cháy và nổ (như khí thiên nhiên, metan, v.v.), tránh thiết bị bị hư hỏng, hỏng hóc hoặc hỏa hoạn;
19. Không để sản phẩm hoạt động tự do phòng khi hỏa hoạn và các nguy cơ khác.
20. Trong trường hợp sản phẩm bị hỏng hóc, để tránh nguy hiểm, vui lòng không tự mình tháo dỡ thân chính hoặc đế nguồn. Người dùng không được tự ý sửa chữa, vui lòng gửi sản phẩm đến trung tâm bảo hành để sửa chữa trước khi sử dụng;
21. Không cài đặt bộ hẹn giờ bên ngoài hoặc hệ thống điều khiển từ xa vì có thể gây đoản mạch hoặc cháy nổ
22. Trong quá trình sử dụng sản phẩm, vui lòng đảm bảo đậy nắp nồi đúng cách. Không chạm vào nắp, để tay tránh lỗ thoát hơi nước và không chạm vào các bộ phận làm nóng để tránh bị bỏng do hơi nước và bộ phận làm nóng;
23. Không để sản phẩm bị cạn khô, nhằm tránh gây hư hỏng, hỏng lớp mạ của thân nồi hoặc gây ra tai nạn thương tích do hỏa hoạn

- và thiệt hại về tài sản. Luôn đảm bảo rằng có một lượng nước thích hợp trong nồi trước khi sử dụng.
24. Khi sử dụng sản phẩm này, lượng nước không được vượt quá mực nước tối đa. Nếu nước quá đầy, nước sôi có thể trào ra ngoài gây nguy hiểm hoặc nước chảy vào bộ điều khiển nhiệt độ dẫn đến hỏng.
 25. Sau khi sử dụng, vui lòng rút phích cắm điện kịp thời, vệ sinh sản phẩm, lau khô và đặt ở nơi an toàn. Khi chưa đóng công tắc số, không nên rút phích cắm điện ra vì như thế sẽ làm cho sản phẩm trong tình trạng đốt nóng lặp đi lặp lại, điều này sẽ làm giảm đáng kể tuổi thọ của sản phẩm và phá hủy lớp phủ trong tấm gia nhiệt, và có thể gây ra tai nạn hỏa hoạn;
 26. Không cắm / rút phích cắm bằng tay ướt hoặc lau ổ cắm bằng vải ướt, nếu không sẽ gây điện giật;
 27. Sản phẩm này chỉ sử dụng trong nhà, không tự ý sửa chữa sản phẩm này khi chưa được phép, để tránh nguy hiểm;
 28. Bề mặt của thiết bị sẽ trở nên nóng trong quá trình sử dụng. Nhiệt độ bề mặt sản phẩm rất cao, không nên chạm tay vào để tránh bị bỏng.

HƯỚNG DẪN SỬ DỤNG

SỬ DỤNG LẦN ĐẦU TIÊN

Để loại bỏ mùi khó chịu và hiện tượng bốc khói trong lần đầu tiên sử dụng, vui lòng thực hiện các bước sau:

1. Tháo bỏ bao bì đóng gói
2. Kiểm tra nồi và dây nguồn có đảm bảo không
3. Vệ sinh kỹ nồi nấu và nắp kính bằng dung dịch tẩy rửa trung tính và miếng bọt biển không mài mòn. Trước khi làm sạch, đảm bảo nắp nồi được đóng kín. Cần thận không làm ướt đế nồi trong quá trình vệ sinh
4. Lau thân nồi bằng khăn ẩm rồi dùng khăn khô lau khô
5. Làm khô nồi hoàn toàn trước khi sử dụng

6. Thêm nước vào nồi nấu với một lượng vừa phải, sau đó đun sôi và đổ đi.

HƯỚNG DẪN SỬ DỤNG

1. Cho nước và các nguyên liệu vào nồi nấu ở mức vừa phải
2. Đảm bảo than nồi khô hoàn toàn trước khi vận hành. Nếu không, lau bằng vải khô
3. Đóng chặt nắp
4. Cắm dây nguồn sau đó kết nối với nguồn điện
5. Xoay công tắc theo kim đồng hồ để bật thiết bị và điều chỉnh công suất mong muốn. Có thể điều chỉnh công suất 500W hoặc 1000W
6. Khi nước sôi, có thể cho các nguyên liệu yêu thích vào nồi
7. Khi nấu xong, xoay núm công tắc ngược chiều kim đồng hồ để tắt bếp
8. Sau khi sử dụng, để nồi khô hoàn toàn trước khi cất giữ

LÀM SẠCH VÀ LƯU TRỮ

1. Trước khi vệ sinh nồi, hãy đảm bảo rằng nồi đã nguội hoàn toàn, tắt và ngắt nguồn điện
2. Nồi phải được vệ sinh kỹ trước khi làm sạch
3. KHÔNG nhúng nồi vào nước
4. Nên đổ nước ấm vào nồi trong 5 phút rồi dùng khăn khô để lau bề mặt bên trong.
5. KHÔNG sử dụng chất tẩy rửa mạnh, dung môi pha loãng, xăng, chất tẩy rửa ăn mòn, miếng cọ rửa kim loại để lau bất kỳ bộ phận nào của nồi
6. Sau khi làm sạch, nên lau nồi bằng khăn khô hoặc để khô tự nhiên
7. Bảo quản nồi nơi khô thoáng sau khi sử dụng
8. KHÔNG làm khô hoặc tiệt trùng nồi trong máy tiệt trùng hoặc máy sấy bát đĩa.

TẮY CẶN/ VẾT Ó

1. Sau khi sử dụng thiết bị nhiều lần, nồi nấu có thể bị đóng cặn, điều này là bình thường và vẫn có thể sử dụng sản phẩm một cách an toàn.
2. Nếu thấy cặn. hãy dùng axit xitric để loại bỏ.


CRYSTAL

INSTRUCTION MANUAL


Versatile Electric Hot Pot Crystal MS-EA4001




PRODUCT DESCRIPTION

SPECIFICATION	
Model	MS-EA4001
Capacity	5 liters
Power	1000W
Voltage	220V, 50Hz

- 1. Lid handle
- 2. Lid
- 3. Pot body
- 4. Pot housing
- 5. Knob switch

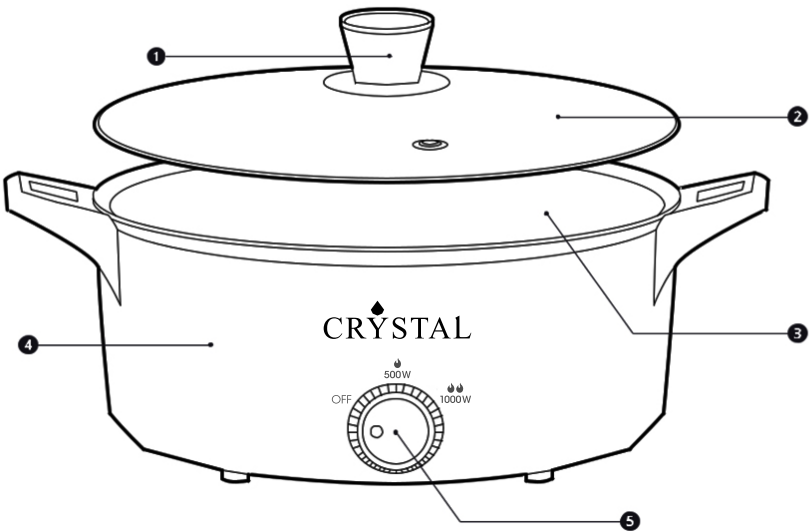

THE KNOB SWITCH



OFF	Switch of the cooker
500w	Set the heating power to 500W
1000w	Set the heating power to 1000W

SAFETY PRECAUTIONS

To ensure safety and avoid injury and property loss to you and others, you must observe the following safety precautions.

1. Be sure to read and understand this instruction manual before use;
2. Before connecting the product to the power supply, check whether the marked voltage is consistent with the local power supply voltage.
3. A socket with grounding of 10A or above must be used separately, and the plug must be thoroughly inserted into the socket to prevent overheating and burning of components due to poor contact, resulting in short circuit or fire hazards;
4. Improper operation may damage the equipment or cause personal injury.
5. The product is only for family use, and the company shall not be liable for any failure caused by commercial use, improper use or failure to comply with this manual. Such failure damage is not included in the warranty.
6. Avoid contact with the shell during use, the product will produce high temperature during use, be careful of scalding;
7. This product is not intended for use by children or persons with physical, sensory or mental disabilities. Unless they are supervised and directed by someone responsible for their safety in relation to the use of the product. Take good care of children to ensure that they do not play with the product;
8. If the power supply cord is damaged, it must be replaced with special cord or special component bought from its manufacturer or maintenance department;
9. If the product is damaged by collision, please do not continue to use;
10. Do not soak the product in water or other liquids to clean it. To reduce the risk of electric shock, do not expose or immerse plugs or power cords in water or other liquids.

11. Disconnect the power supply when cleaning, moving or not in use;
12. When unplugging the plug, hold the plug to pull it out. Do not pull or twist the power cord forcibly to prevent damage of the power cord and leakage risk;
13. Ensure that the power line will not be in contact with sharp edges, burrs, other sharp objects or hot objects on the surface to prevent leakage, resulting in electric shock or fire;
14. Do not insert pins, iron wires or other metal objects into any gap or opening of the shell and base to avoid injury caused by electric shock;
15. Overhanging power cables may cause accidents. It is recommended to arrange power cables in a reasonable position to avoid tripping.
16. Please operate the product on the horizontal table, do not operate the product on the carpet, towel, plastic, paper and other inflammable objects, in case of device damage, failure or fire;
17. Do not put the product on the unstable, damp, high temperature, smooth, heat resistant surface to use, so as to avoid electric shock, fire, slide and other injuries and property losses;
18. Do not put the product near high temperature, strong magnetic, flammable and explosive gas (such as natural gas, methane, etc.), in case of device damage, failure or fire;
19. Do not let the product work unattended in case of fire and other hazards caused by product emergencies;
20. In case of any failure of the product, in order to avoid danger, please do not dismantle the main body or power base by yourself. Users must not repair by themselves, please send the product to a professional maintenance station for repair before use;
21. Cannot run under external timer or independent remote control system;
22. During the use of the product, please make sure that the lid of the pot is properly covered. Do not touch the lid, keep your hands away from the steam discharge hole, and do not touch the heating parts to avoid scalding by steam and heating parts;

23. Do not allow the product to dry burn, so as not to cause damage or failure of the coating of the pot body or cause fire injury accidents and property losses. Please confirm that there is a proper amount of cold water in the pot before use.
24. When using this product, the water quantity should not exceed the maximum water level. If the water is too full, the boiling water may spew out and cause danger or the water flows into the temperature controller and lead to failure.
25. After the work is completed, please pull out the power plug in time, clean the product, wipe it dry and place it in a safe place. When the gear switch is not closed, it is not timely to dial out the power plug will make the product charged for a long time, the product will enter a repeated dry burning protection and then dry burning - and then protect to the reciprocating cycle, which will greatly shorten the life of the product, and destroy the coating in the heating plate, and may cause fire accidents;
26. Do not plug/unplug the plug with wet hands or clean the socket with wet cloth, otherwise it will cause electric shock;
27. This product is only for indoor use, do not modify this product without permission, in order to avoid danger;
28. The surface of the appliance will become hot during use. The temperature of the product surface is very high, so do not touch it to avoid scalding.

OPERATING INSTRUCTIONS

INITIAL USE

To eliminate peculiar smell and smoke phenomenon for the first time, please do following steps:

1. Make sure that all packing materials have been removed
2. Check if the cooker and cord are in good conditions
3. Thoroughly clean cooking pot and the lid with little neutral detergent and a non- abrasive sponge. Before cleaning, make sure

the receptacle of the cooker is well- covered. Be careful not to wet the base of the cooker during cleaning.

4. Wipe the cooker body with a slightly damp cloth and dry with a dry cloth
5. Air-dry the cooker completely before use
6. Add water to the cooking pot to its maximum water level, then boil and pour it off.

INSTRUCTION FOR USE

1. Add water and ingredients into the cooking pot. Water filled should not exceed the maximum scale marked.
2. Make sure the body of the cooker is completely dried before operation. Otherwise, wipe it with a dry cloth
3. Close the lid tightly
4. Plug in the power cord, then connect with the power
5. Turn the knob rotary switch in clockwise direction to switch on and adjust the heating power. You can either set the heating power to 500W or 1000W. The cooking indicator light will be on during heating.
6. When water is boiled, you may add your favorite ingredients into the cooker.
7. When cooking is finished, turn the knob rotary switch in anti – clockwise direction to turn the cooker off.
8. After use, air- dry the cooker completely dried before storing.

CLEANING AND MAINTENANCES

1. Before cleaning the cooker, make sure that it is completely cooled down, switched off and disconnect from the power supply
2. The receptacle must be well- covered before cleaning
3. DO NOT immerse the cooker in water
4. It is suggested to soak the cooking pot with warm water for 5 minutes first then use a dry cloth to clean the inner surface

5. DO NOT use strong detergents, thinner solvent gasoline, abrasive cleaners, metal scouring pads, steel – wool pads or rough surfaced washcloths to clean any parts of the cooker
6. After cleaning, it is recommended to wipe the cooker with a dry cloth or air- dry it naturally
7. Please keep the cooker well after use and store it in a dry and safe place
8. DO NOT dry and sterilize the cooker in a sterilizers or dish dryers.

DESCALING

1. After using the product for several times, the cooker pot may have scale i.e. red or grayish spots, which is normal and the product can still be used safely
2. If the scale is noticeable, use citric acid to remove it.

