


Bear

HƯỚNG DẪN SỬ DỤNG

máy xay thịt


QSJ-C03M1

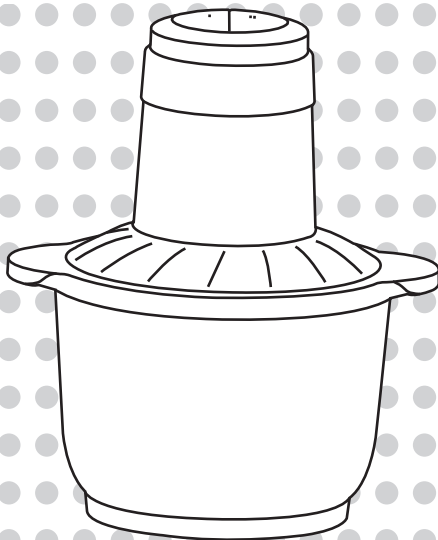

Vui lòng đọc kỹ hướng dẫn sử dụng này trước khi sử dụng thiết bị.
Sản phẩm này chỉ dành cho mục đích sử dụng trong gia đình.



Các bộ phận và cài đặt

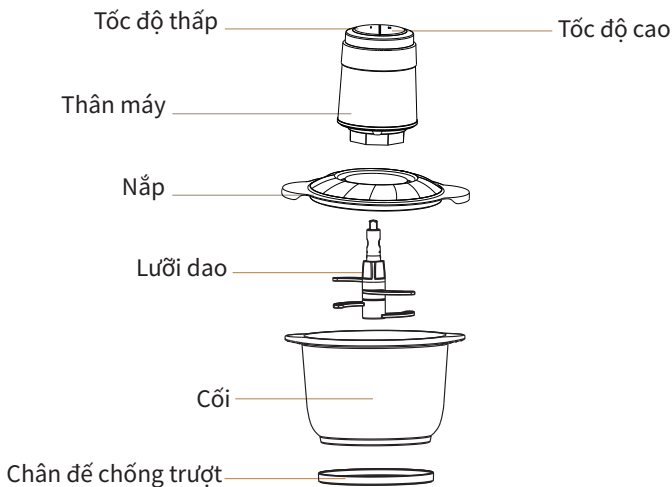

Đặc điểm nổi bật

1. Thiết kế hình dáng độc đáo;
2. Lưỡi dao 4 mảnh , dễ dàng cắt nhỏ thực phẩm
3. Thiết kế công tắc an toàn, kiểm soát việc cắt nhỏ thực phẩm, sử dụng an toàn;
4. Cối thủy tinh trong suốt, tốt cho sức khỏe và dễ làm sạch;
5. Thân máy có thể tháo rời, thuận tiện cho việc vệ sinh
6. Tốc độ cao và thấp, nhiều lựa chọn.



Hướng dẫn

1. Trước khi sử dụng, hãy tham khảo hướng dẫn vệ sinh và bảo dưỡng để làm sạch cối, dao thớt và nắp đập;
2. Tháo thân và nắp chính, sau đó đặt cối ở nơi bằng phẳng, sạch sẽ và khô ráo;
3. Đảm bảo rằng dao được đặt chính xác vào tâm của cối;
4. Tham khảo hướng dẫn những thực phẩm được cắt nhỏ và cho phần thức ăn thích hợp vào cối.
5. Đậy nắp. Sau đó đặt thân máy lên nắp cối, đảm bảo rằng thân máy, dao và nắp được lắp vào đúng vị trí;
6. Cắm dây nguồn và bật nguồn;
7. Giữ thân máy bằng tay của bạn. Nhấn công tắc (I hoặc II). Máy bắt đầu hoạt động, nếu nhà công tắc thì máy ngừng hoạt động. Tham khảo thời gian xay nhỏ theo hướng dẫn. Người tiêu dùng có thể rút ngắn thời gian băm nhỏ thức ăn theo sở thích cá nhân;

Lưu ý:

Để kéo dài tuổi thọ của sản phẩm này. Thời gian làm việc tối đa không quá 30 giây. Nếu quá trình xay nhỏ vẫn chưa hoàn thành sau 30 giây, vui lòng để sản phẩm nghỉ 2 phút trước khi tiếp tục làm việc.

8. Sau khi nhà công tắc, vui lòng không tháo thân máy ngay lập tức. Sau khi lưỡi dao ngừng quay, rút phích cắm để ngắt điện rồi tháo thân máy ra;
9. Mở nắp. Lấy dao và lấy thức ăn ra.
(Dao rất sắc, vì vậy hãy cẩn thận để không cắt vào tay hoặc các bộ phận khác của thân máy khi bạn lấy nó ra.)

Lời khuyên:

Không cho nước hoặc nguyên liệu quá 50 ° C vào cối để tránh nứt do nhiệt.



Hướng dẫn sơ chế thực phẩm

Để kéo dài tuổi thọ của máy và có được hiệu quả xay nhỏ tốt, vui lòng tham khảo “Hướng dẫn sơ chế thực phẩm” sau đây để sử dụng đúng cách.

Món ăn	Số lượng	Thời gian xay lâu nhất	Ghi chú
Thịt heo /Thịt bò	≤850g (cắt thành các miếng nhỏ khoảng 20x20x50mm)	30s	Cần rút xương, bỏ gân để sử dụng tốc độ xay cao nhất
tỏi	300g	15s	Sử dụng tốc độ xay thấp
Hạt tiêu nhỏ	300g	15s	Sử dụng tốc độ xay thấp
củ cà rốt	300g (cắt thành các miếng nhỏ khoảng 20x20x20mm)	15s	Sử dụng tốc độ xay thấp
rau cần tây	300g	15s	Sử dụng tốc độ xay thấp

Lưu ý:

Đối với các loại thực phẩm không được nêu trong bảng, vui lòng tham khảo các nguyên liệu tương tự trong bảng trên

Mẹo nhỏ:

Sau khi sử dụng, cho một ít nước ấm vào cối, thêm một ít chất tẩy rửa và khởi động máy trong vài giây để làm sạch dễ dàng.



Các biện pháp phòng ngừa

1. Không sử dụng nguồn điện không phải là AC 220V, nếu không sẽ có nguy cơ bị điện giật hoặc cháy nổ.
2. Vui lòng sử dụng riêng ổ cắm 6A trở lên. Nếu dùng chung ổ cắm với các thiết bị điện khác, phần dây dẫn của ổ cắm có thể gây nóng và cháy bất thường.
3. Dùng tay giữ phích cắm dây nguồn và cắm phích cắm dây nguồn vào ổ điện.
4. Dùng tay giữ phích cắm dây nguồn và kéo phích cắm dây nguồn ra khỏi phích cắm.
5. Không dùng các vật bằng sắt để cạo máy.
6. Sau khi sử dụng máy, phải rút phích cắm của dây nguồn, nếu không sẽ có nguy cơ bị điện giật, rò rỉ điện hoặc cháy nổ.
7. Sản phẩm này không thể được sử dụng để chế biến những thứ cứng, chẳng hạn như: xương, hạt cà phê, hạt tiêu, đá hoặc thực phẩm đông lạnh.
8. Cối thủy tinh có thể chịu được nhiệt độ từ 0 ~ 50 ° C. Nghiêm cấm đưa cối vào lò nướng để làm nóng, hoặc cho thực phẩm vào cối vượt quá phạm vi nhiệt độ của nó.
9. Trước khi thêm thực phẩm, hãy kiểm tra xem lưỡi dao đã ở đúng vị trí và đã hoạt động hay chưa. Nếu lưỡi dao không quay hoặc quay chậm, trước tiên hãy rút phích cắm và kiểm tra xem có vật cản nào trong cối không. Nếu có thể, hãy loại bỏ chướng ngại vật trước.

10. Sau khi thêm thực phẩm, vui lòng kiểm tra xem dao có bị lệch khỏi vị trí chính xác hay không. Nếu lưỡi dao không chạy nhanh trong vài giây, vui lòng rút phích cắm, lấy thực phẩm ra bớt, sau đó tiếp tục sử dụng.
11. Lưỡi dao rất sắc bén. Vui lòng không chạm trực tiếp vào lưỡi dao bằng tay.
12. Thời gian làm việc liên tục của sản phẩm này không được vượt quá 30 giây. Sau 30 giây hoạt động liên tục, phải cho máy nghỉ 2 phút trước khi sử dụng. Máy nên được sử dụng trong 30 giây và 2 phút cho một chu kỳ. Sau khi hoạt động 3 chu kỳ liên tục, nên cho máy nghỉ 15 phút trước khi hoạt động trở lại.
13. Nếu dây nguồn bị hỏng, phải được thay thế bởi nhà sản xuất, bộ phận dịch vụ của hãng để tránh nguy hiểm.
14. Lưỡi của máy này rất sắc, cần cẩn thận khi tháo lưỡi, lấy thực phẩm ra khỏi cối và vệ sinh.
15. Nếu sản phẩm ngừng hoạt động trong khi hoạt động, có thể do chức năng tự ngắt khi quá nhiệt của động cơ. Vui lòng tắt nguồn và đợi từ 20 đến 30 phút để máy nguội.
16. Sản phẩm nên được bảo quản ở nơi không thích hợp cho trẻ em. Không sử dụng hoặc đưa sản phẩm này cho những người (kể cả trẻ em) không đủ thể chất, cảm thấy hoặc có vấn đề với kinh nghiệm hoặc kiến thức của họ.




Bảo trì và bảo dưỡng

1. Sau khi sử dụng, vui lòng rút dây nguồn khỏi ổ cắm điện.
2. Khi vệ sinh dao thớt, nên đeo găng tay để đảm bảo an toàn.
3. Các bộ phận có thể được làm sạch bằng chất tẩy rửa và bọt biển. Không sử dụng dây thép cứng để tránh làm hỏng bề mặt.
4. Không ngâm toàn bộ máy trong nước. Bề mặt bên ngoài của sản phẩm chỉ có thể được lau bằng khăn ướt. Không rửa lại bằng nước để tránh rò rỉ và hỏng hóc.
5. Khi sản phẩm lâu ngày không sử dụng, vui lòng vệ sinh sạch sẽ, cho vào hộp, để nơi khô ráo tránh ẩm ướt.



THÔNG SỐ KỸ THUẬT

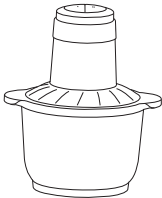
Sản phẩm	Máy xay thịt
Model	QSJ-C03M1
Điện áp định mức	220V
Tần số ư	50Hz
Dung tích cối	2.0L
Công suất định mức	300W
Kích thước sản phẩm (L×W×H)	219*175*258mm
Hình ảnh	



User Manual

Instruction Manual for Chopper


QSJ-C03M1

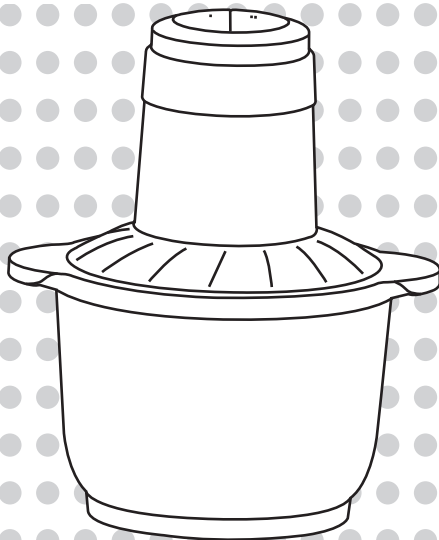

Please read through this manual carefully before using the appliance.
This product is only for the household use.



Parts and installation

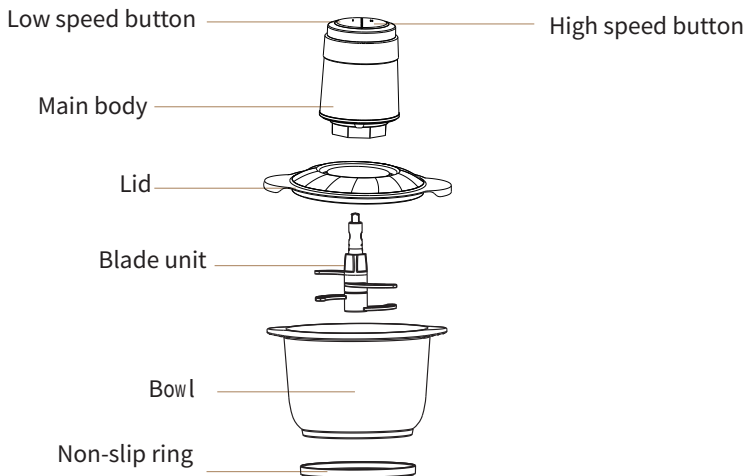

Performance characteristics

1. Unique shape design;
2. "6" shape 4-piece knife design, the effect of chopped meat chopping is more outstanding;
3. Safety switch design, free control of food shredding, safe use;
4. Transparent glass chopping cup, healthy and easy to clean;
5. Detachable crocodile, convenient for dripping;
6. High and low gear design, a variety of options.



Instruction

1. Before use, refer to the cleaning and maintenance instructions to clean the chopping cup, chopping the knife and the lid;
2. Remove the main body and lid, then place the chopped cup in a flat, clean, dry place;
3. Ensure that the chopping knife is accurately placed in the center of the chopping cup;
4. Refer to the chopped food guide and put the appropriate portion of the food into the cup. For example, after placing the food, the position of the chopping knife is deviated, and the first cutting point is cut and the third point above is ensured;
5. Cover the lid. Then put the fuselage on the lid of the cup, check if it is placed, and ensure that the fuselage and the chopping knife and the lid are assembled in place;
6. Plug in the power cord and turn on the power;
7. Hold the body with your hand. Press the switch (I or II). The machine starts to work and releases the switch, and the machine stops working. Chopping time reference shredded food guide. Consumers can shorten the chopping time according to their personal preference for chopping food;

Note:

In order to extend the life of this product. The maximum working time does not exceed 30 seconds. If the chopping is not completed after 30 seconds, please let the product rest for 2 minutes before continuing to work.

8. After releasing the switch, please do not remove the body immediately. After the blade stops rotating, pull out the plug to cut off the power and then remove the body;
9. Open the lid. Remove the chopping knife and remove the food. (The chopping knife is very sharp, so be careful not to cut your hands or other parts of the body when you take it out.)

Tips:

Do not put more than 50°C water or ingredients into the cup to avoid heat cracking.



Chopped food instruction

In order to extend the life of the machine and obtain good chopping effect, please refer to the following “Chopped Stirring Food Guide” for proper use.

Food	Amount	Longest chopping time	Note
Pork /Beef	≤850g (cut into small pieces of about 20x20x50mm)	30s	Need to remove bones and remove the tendons to use high-grade switches
garlic	300g	15s	Use low gear switch
Small pepper	300g	15s	Use low gear switch
carrot	300g (cut into small pieces of about 20x20x20mm)	15s	Use low gear switch
celery	300g	15s	Use low gear switch

Remarks:

For foods not specified in the table, please refer to the similar food operation in the above table.

hint:

After use, add a small amount of warm water to the chopping cup, add some detergent, and start the machine for a few seconds to clean easily.



Precautions

1. Do not use a power source other than AC 220V, otherwise there is danger of electric shock or fire.
2. Please use the socket of 6A or above separately. If the socket is shared with other electrical appliances, the wiring part of the socket may cause abnormal heat and fire.
3. Hold the power cord plug with your hand and plug the power cord plug into the power outlet.
4. Hold the power cord plug with your hand and pull the power cord plug out of the power plug.
5. Do not use iron objects to scrape the machine.
6. After the machine is used, the power cord plug must be unplugged, otherwise there is a danger of electric shock, electric leakage or fire.
7. This product can not be used to process hard things, such as: bone meat, coffee beans, pepper, pepper, ice or frozen food.
8. The glass chopping cup can withstand a temperature range of 0~50°C. It is strictly forbidden to put the chopping cup into the famous oven to heat it, or put something in the cup that exceeds its temperature tolerance range.
9. Before adding food, check that the blade is in place and that it is working freely. If the blade does not turn or rotate slowly, first unplug the plug and check for any obstructions in the cup. If possible, remove the obstacle first.

10. After adding food, please check if the chopper is deviated from the correct position. If the blade does not run fast in a few seconds, please unplug the plug, level or take out too much food, and then continue to use it.
11. The blade is very sharp. Please do not touch the blade directly with your hand. Hold the knife bar on the blade when removing and installing.
12. The continuous working time of this product can not exceed 30 seconds. After 30 seconds of continuous operation, it must be rested for 2 minutes before use. It should be used for 30 seconds and 2 minutes for one cycle. It should work continuously for 3 cycles, and must be separated by 15 minutes.
13. If the power cord is damaged, it must be replaced by a professional from the manufacturer, its service department, or similar to avoid hazards.
14. The blade of this machine is sharp, and care should be taken when removing the blade, emptying the mixing bowl and cleaning.
15. If the product stops working during operation, it may be caused by temperature control of the motor. Please turn off the power and wait for 20 to 30 minutes for cooling.
16. The product should be stored in a place that is unsuitable for children. Do not use or play this product for people (including children) who are not physically fit, feel or have problems with their experience or knowledge.



Maintenance and maintenance

1. After use, please unplug the power cord from the power outlet.
2. When cleaning the chopping knife, it is recommended to wear gloves for safety.
3. The parts can be cleaned with detergent and sponge. Do not use hard steel wire to avoid damage to the surface.

4. Do not immerse the whole machine in water. The outer surface of the product can only be wiped with a wet towel. Do not rinse with water to avoid leakage and malfunction.
5. When the product is not used for a long time, please clean it, put it in the box, and put it in a ventilated and dry place to protect it from moisture.



SPECIFICATIONS

Product	Food Chopper
Model	QSJ-C03M1
Rated Voltage	220V
Rated Frequency	50Hz
Capacity of mixing bowl	2.0L
Rated Power	300W
Product Dimension(L×W×H)	219*175*258mm
Picture	