

Instruction Manual
Hướng dẫn sử dụng

AVA®

Slow juicer
máy ép trái cây chậm





AVA®

THÔNG SỐ KỸ THUẬT

Điện áp	: 100-120V ~ 50-60Hz; 220-240V ~ 50-60Hz
Công suất	: 200W
Dung tích cốc ép	: 800ml
Dung tích cốc đựng bã	: 600ml
Kích thước	: 178 x 152 x 450 mm
Trọng lượng	: 2.6 kg

QUAN TRỌNG :

1. Thiết bị được thiết kế chỉ để sử dụng cho gia đình.
2. Người dùng thương mại sẽ không nhận được bảo hành thường xuyên như đã nêu trong các điều khoản của thẻ bảo hành.
3. Đây không phải là đồ chơi. Đừng để trẻ em chơi với máy hoặc sử dụng máy.
4. Đọc tất cả các hướng dẫn trước khi sử dụng cẩn thận.
5. Giữ hướng dẫn này để tham khảo.

CÁC BIỆN PHÁP BẢO VỆ QUAN TRỌNG

1. Đảm bảo sử dụng nguồn điện áp phù hợp
2. Đơn vị này chỉ dành cho sử dụng cho gia đình. Không sử dụng thiết bị ở ngoài trời hoặc cho mục đích khác ngoài dự định.
3. Chỉ sử dụng thiết bị như được mô tả trong hướng dẫn này.
4. Để tránh bị điện giật, không ngâm thiết bị, đặt dây và cắm vào nước.
5. Đây không phải là một món đồ chơi và không được sử dụng bởi trẻ em. Cần giám sát chặt chẽ khi thiết bị được sử dụng gần trẻ em.
6. Đảm bảo rút phích cắm thiết bị khi không sử dụng, lắp ráp hoặc tháo rời, và trước khi dọn dẹp.
7. Thời gian hoạt động liên tục của sản phẩm này phải trong vòng 20 phút.
8. Không tải hoặc quá tải hoạt động của máy bị cấm.

9. Không chạm hoặc di chuyển bất kỳ bộ phận chuyển động nào trong quá trình hoạt động của máy.
10. Không sử dụng ngón tay, thìa hoặc đũa để đẩy trái cây hoặc rau quả vào máng máy. Chỉ được phép sử dụng thanh đẩy
11. Không mở thiết bị khi nó đang hoạt động.
12. Không đặt thiết bị gần bất kỳ chất nổ, lò nung nóng hoặc bề mặt nóng.
13. Chỉ vận hành thiết bị trên bề mặt phẳng.
14. Đừng để dây điện trên mép bàn hoặc những thứ tương tự.
15. Vui lòng giữ phích cắm để ngắt kết nối với ổ cắm điện.
16. Nếu các bộ phận của cấu trúc sản phẩm bị phát hiện bị hư hỏng (đặc biệt là thiết bị an toàn và dây nguồn), vui lòng ngừng sử dụng và gửi nó đến trung tâm dịch vụ để được sửa chữa.
17. Sản phẩm này không được sử dụng bởi những người (bao gồm cả trẻ em) với tình trạng thể chất yếu, phản ứng chậm, chậm phát triển tâm thần, thiếu kinh nghiệm và ý thức chung, trừ khi họ được giám sát hoặc hướng dẫn. của người chịu trách nhiệm về sự an toàn của họ.
18. Nếu trục ép bị cản trở, hãy chuyển máy ép trái cây ở chế độ 'rev ' trong khoảng 2 đến 3 giây để cho nó quay theo hướng ngược lại. Sau đó, để cho trục quay đúng hướng một lần nữa.
19. Không sử dụng nước ấm hơn 40 ° C để rửa các bộ phận thiết bị
20. Không sử dụng thiết bị bằng các loại thực phẩm không rõ nguồn gốc.
21. Hãy chắc chắn rằng thân máy của thiết bị không bị ướt.
22. Thiết bị này phù hợp để sử dụng trong môi trường gia đình và trong môi trường tương tự như:

- Nhà bếp cho nhân viên của các cửa hàng, văn phòng tương tự như

môi trường xung quanh chuyên nghiệp

- Phòng khách sạn hoặc nhà nghỉ
- Phòng khách hoặc tương tự
- Du lịch

Chú ý: Thiết bị này không thể được sử dụng với bộ hẹn giờ bên ngoài hoặc điều khiển từ xa riêng biệt.

LƯU Ý :


Để tránh nguy cơ điện giật, rút phích cắm thiết bị khỏi ổ cắm điện khi không sử dụng hoặc trước khi làm sạch. Nếu dây điện bị hỏng, hãy ngừng sử dụng ngay lập tức và mang nó trở lại trung tâm dịch vụ để sửa chữa.

MẸO NHỎ:

Máy ép trái cây này không thích hợp để ép các loại trái cây hoặc rau quả rất cứng hoặc xơ và tinh bột như Mía.

Có một số loại trái cây chứa quá nhiều tinh bột để ép. Chúng bao gồm Bơ, Chuối, Quả sung, Xoài và Đu đủ, Thanh long, Dâu tây, Nho không hạt. Chúng sẽ làm tắc nghẽn rây bằng thép không gỉ.

SƠ ĐỒ BỘ PHẬN

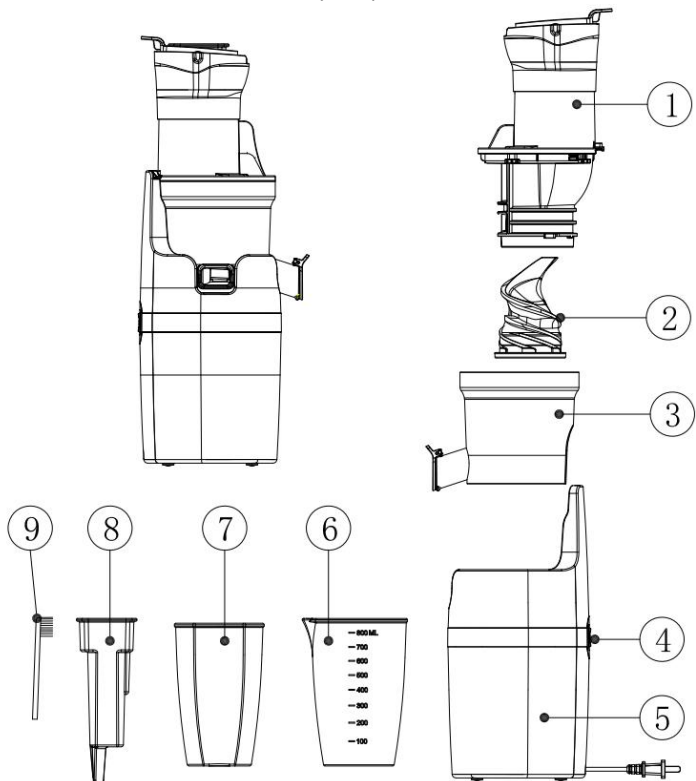

1	Ống tiếp nguyên liệu & bộ lọc	6	Cốc đựng nước ép
2	Trục ép	7	Cốc chứa bã
3	Khay chứa nước ép	8	Thanh đẩy
4	Bật / Tắt / Công tắc đảo ngược	9	Bàn chải làm sạch
5	Thân máy		

SỬ DỤNG LẦN ĐẦU

- Loại bỏ tất cả các vật liệu đóng gói, túi nhựa và nhãn.
- Hãy chắc chắn rằng nguồn cung cấp điện là 100-120V ~ 60Hz hoặc 220- 240V ~ 50-60Hz.
- Làm sạch khay thực phẩm / Lắp ráp máng và lọc / Trục ép / Khay chứa nước ép / Thanh đẩy bằng nước xà phòng. Sau đó rửa sạch và lau khô kỹ.

LƯU Ý: KHÔNG NGÂM THÂN MÁY TRONG NƯỚC.


- Lắp ráp các bộ phận theo hướng dẫn trong phần phương pháp lắp ráp.
- Kết nối dây nguồn với nguồn điện.

Thiết bị đã sẵn sàng để sử dụng ngay bây giờ.

PHƯƠNG PHÁP LẮP RÁP

Vui lòng đảm bảo thiết bị không được cắm và công tắc được chuyển sang cài đặt "O" trước khi lắp ráp máy.


1. Đặt khay chứa trên đế, căn chỉnh vị trí của vòi và trục. (Hình 1)
2. Đẩy trục ép chắc chắn vào trung tâm của bát, đảm bảo rằng nó chạm xuống đáy, nếu không nắp không thể được đóng lại. (Hình 2)
3. Đặt ống tiếp nguyên liệu trên bát để căn chỉnh ▲ với “” và xoay nó theo chiều kim đồng hồ cho đến khi nó nhấp vào khóa an toàn. Vui lòng đảm bảo rằng mũi tên ▲ trên Ống tiếp nguyên liệu thẳng hàng với kí hiệu Khóa "" trên khay chứa (Hình 3)
4. Đặt cốc đựng nước trái cây và cốc đựng bã dưới vòi tương ứng. (Hình 4)

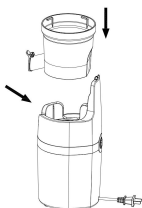


Hình 1



Hình 2



Hình 3

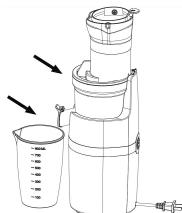

Hình 4

HƯỚNG DẪN VẬN HÀNH

1. Kết nối thiết bị với nguồn điện.
2. Kiểm tra và đảm bảo tất cả các bộ phận được lắp ráp tốt ở vị trí chính xác.
3. Hãy chắc chắn rằng máy ở vị trí "O".
4. Hãy chắc chắn rằng các cốc chứa nước trái cây và bã ở vị trí đúng
5. Hãy chắc chắn rằng nắp vòi nước trái cây được đóng lại.
6. Chuẩn bị trái cây hoặc rau quả và cắt chúng thành miếng tối đa 2cm x 5cm dài hoặc khối 3cm x 3cm.
7. Đặt thực phẩm vào ống tiếp nguyên liệu
8. Nhấn công tắc sang Cài đặt " — " để bắt đầu thao tác ép.
9. Đây thức ăn xuống chỉ bằng thanh đẩy.
10. Trong trường hợp thực phẩm bị mắc kẹt bên trong khay chứa, vui lòng chuyển sang chức năng đảo ngược "R" ngay lập tức.

GHI CHÚ

Vui lòng không sử dụng máy ép trái cây liên tục lâu hơn 20 phút.

Mở & đóng nắp vòi nước trái cây

Trong quá trình ép, bạn có thể giữ nắp nhỏ giọt đóng lại trước khi nước ép đầy trong khay chứa. (Hình 5)



Vòi nước ép trái cây được mở

Hình 5



Vòi nước ép trái cây đóng

LỢI ÍCH CỦA NẮP NHỎ GIỌT:

- Để ngừng nhỏ giọt vào cuối quy trình
- Để trộn nước ép với các loại trái cây và rau khác nhau.

MẸO SỬ DỤNG :

1. Loại bỏ hạt cứng trước khi ép để ngăn ngừa thiệt hại có thể xảy ra cho trục ép.
2. Nếu nước ép hỗn hợp được làm, vui lòng bắt đầu với trái cây cứng hơn, và sau đó ép trái cây mềm.
3. Vui lòng để máy ép trái cây chạy trong 30 giây sau khi thành phần cuối cùng.

CHÚ Ý :

Máy ép trái cây không thích hợp để ép các loại trái cây hoặc rau quả rất cứng hoặc xơ và tinh bột như Mía. Có một số loại trái cây chứa quá nhiều tinh bột để ép. Một số ví dụ như Bơ, Chuối, quả sung, Xoài, Đu đủ, Thanh long, Dâu tây, Nho không hạt, v.v. Chúng sẽ làm tắc nghẽn rây bằng thép không gỉ.

PHƯƠNG PHÁP THẢO RỜI


LƯU Ý :

Nếu máy ép trái cây bị quá nóng, nó sẽ tự động tắt để bảo vệ máy. Trong trường hợp này, vui lòng tắt máy ép trái cây "O". Đợi 10 phút để máy ép trái cây hạ nhiệt và sau đó bật lại.

Để tháo rời thiết bị sau khi sử dụng và trước khi làm sạch. Vui lòng chuyển máy ép trái cây sang vị trí "O" và ngắt kết nối máy ép trái cây khỏi nguồn điện.

Sau đó, vui lòng làm theo các bước dưới đây:

- Loại bỏ các cốc chứa nước trái cây và bã. (Hình 6)
- Tháo ống tiếp nguyên liệu. Xoay ống ngược chiều kim đồng hồ cho đến khi ▲ thẳng hàng với kí hiệu "O". (Hình 7)
- Tháo trục ép bằng cách kéo nó lên trên. Nếu khó khăn khi kéo, xoay nhẹ nhàng và kéo. (Hình 8)
- Loại bỏ khay chứa bằng cách nâng nó lên theo chiều dọc. (Hình 9)

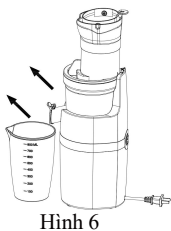

Hình 6



Hình 7



Hình 8



Hình 9


LÀM SẠCH VÀ BẢO TRÌ

QUAN TRỌNG :

Vui lòng rửa các bộ phận ép ngay sau mỗi lần sử dụng, vì bã ép có thể dính chặt trong khay chứa và trục ép, điều này sẽ ảnh hưởng đến việc tháo rời, làm sạch máy

1. Tắt và rút phích cắm máy ép trái cây.
2. Rửa sạch các bộ phận tháo rời (Hình 10) bằng nước. Nếu lưới bị tắc với bã ép, vui lòng sử dụng bàn chải làm sạch được cung cấp để loại bỏ.

LÀM SẠCH VÀ BẢO TRÌ

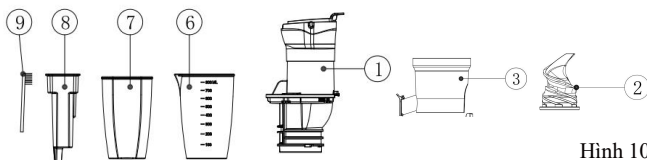

Hình 10

Chú ý:


- **Không sử dụng bàn chải dây sắt, dụng cụ mài mòn hoặc vật sắc nhọn để làm sạch thiết bị.**
 - **Vui lòng không sử dụng nước trên 40 °C.**
 - **Không bao giờ làm sạch bất kỳ bộ phận nào trong máy rửa chén để tránh thiệt hại do nước nóng.**
3. Trong trường hợp có bất kỳ dư lượng nào còn sót lại trong miệng vòi ép, vui lòng rút van silicon như trong hình (Hình 11) bên dưới và làm sạch dưới vòi nước chảy.




Hình 11

Nhấn van silicone để đóng lại chặt chẽ sau khi làm sạch.


4. Để làm sạch ron ở giữa khay chứa, vui lòng làm theo các bước như sau:
- **Lật ngược Khay chứa để xử lý dễ dàng hơn, đẩy ron ra bằng ngón tay cái của bạn (Hình 12a) và làm sạch nó bằng nước.**
 - **Sau khi làm sạch, vui lòng đặt nó trở lại lỗ trung tâm. Bề mặt gân nhỏ nên hướng lên trên (Hình 12b) Đảm bảo rãnh của ron khớp với khay chứa.**
 - **Mặt phẳng lớn sẽ ở bên trong trong khi mặt nhỏ và gân nằm bên ngoài Khay chứa. (Hình 12c)**



Hình 12a



Hình 12b



Hình 12c

5. Không đặt để điện vào nước để làm sạch. Chỉ lau nó bằng vải ẩm.

6. Sau khi làm sạch, vui lòng lau khô kỹ các bộ phận và bảo quản chúng ở nơi khô ráo, thoáng mát.

BẢO QUẢN

- Làm theo hướng dẫn làm sạch thiết bị trước khi bảo quản.
- Xếp gọn bộ dây nguồn.
- Giữ cho thiết bị tránh xa tầm tay của trẻ em.
- Bảo quản thiết bị và các phụ kiện ở nơi khô ráo, mát mẻ.

LƯU Ý :

Hãy chắc chắn rằng thiết bị và các bộ phận khô ráo trước khi lưu trữ nó.

MẸO HỮU ÍCH

1	Thành phần có chất xơ dài cần được cắt giảm xuống các dải mỏng 5-10 cm hoặc khối 3 x 3 cm.	Thức ăn chất xơ dài rất dễ chặn vòi.
2	Vỏ và hạt phải được loại bỏ khỏi cam, chanh, bưởi và dưa trước khi sử dụng.	Hạt cứng có thể làm hỏng các bộ phận ép. Vỏ có thể chặn vòi bã ép.
3	Không sử dụng phụ kiện khác không phải của thiết bị	Nó có thể làm hỏng máy ép trái cây và gây thương tích
4	Mỗi chu kỳ ép không quá 20 phút.	Hoạt động quá thời gian có thể gây ra thiệt hại cho động cơ.
5	Không bao giờ đặt thìa, đũa vào ống tiếp nguyên liệu, vòi nước ép và vòi bã ép	Nó có thể làm hỏng máy ép trái cây.

MỘT SỐ VẤN ĐỀ

Vấn đề	Nguyên nhân	Giải pháp
Máy ép trái cây dừng đột ngột	Quá nhiều nguyên liệu cho vào máy ép trái cây.	Chuyển sang vị trí "R" ngay lập tức để đảo ngược thực phẩm. Nếu máy vẫn ngừng chạy, vui lòng vệ sinh máy trước khi sử dụng.
	Trái cây cứng hoặc rau không được cắt nhỏ Miếng.	Trái cây và rau quả cứng (chẳng hạn như cà rốt) phải được cắt thành các dải mỏng hoặc khối nhỏ trước khi đưa vào ống
Tỷ lệ nước ép thấp hoặc nước ép chảy ra thân máy	Khay chứa và van silicon chưa cài đặt đúng.	Vui lòng lắp ráp lại van silicon bằng cách tham khảo phương pháp lắp ráp.
Tiếng ồn bất thường.	Âm thanh gây ra bởi quá trình ép	Âm thanh được gây ra bởi sự đùn của trái cây và rau quả, đó là hiện tượng bình thường.
Không thể tháo ống tiếp nguyên liệu và bộ lọc .	Có quá nhiều bã bên trong khay chứa.	Nhấn chuyển sang cài đặt "R" để đẩy bột giấy về phía sau.
	Có những thực phẩm cứng bị mắc kẹt bên trong.	Nhấn chuyển sang "R" để đẩy thực phẩm lên trên.
	Bã bị mắc kẹt.	Đổ nước vào máng để làm mềm bã ép bị mắc kẹt qua đêm.
Khay chứa & phụ kiện bị ứ màu sau khi sử dụng.	Do màu tự nhiên của trái cây/ rau.	Đây là màu sắc tự nhiên và không thể tránh khỏi.



Voltage	: 100-120V~50-60Hz;220-240V~50-60Hz
Power	: 200W
Juicing cup capacity	: 800ml
Pulp container capacity	: 600ml
Unit size	: 178 x 152 x 450 mm
Bare weight	: 2.6 kg

IMPORTANT:

1. The Unit is designed for household use only.
2. Commercial users will not obtain the regular warranty as stated in the terms of the warranty card.
3. This is not a toy. Please do not let children play with it or use it.
4. Read all instructions before use carefully.
5. Keep this instructions for ever.

IMPORTANT SAFEGUARDS

1. Make sure the electricity supply is suitable for this unit.
2. This unit is intended for household use only. Do not use the unit at outdoors or for other purpose than intended.
3. Use the unit only as described in this manual.
4. To prevent from electrical shock, do not immerse the unit, cord set and plug into water.
5. This is not a toy and not to be used by children. Close supervision is required when the unit is used near children.
6. Ensure to unplug the unit when not in use, assembling or disassembling and before cleaning.
7. The continuous operation time of this product should be within 20 minutes.
8. No-load or overloaded operation of machine is prohibited.

9. Do not touch or move any moving parts during operation of machine.
10. Do not use finger, spoon or chopsticks to push fruits or vegetables into the chute of machine. Only pusher is allowed.
11. Do not open the unit when it is operating.
12. Do not place the unit near any explosives, heated oven or hot surfaces.
13. Operate the unit only on flat surface.
14. Do not let the cords hang over the edge of table or the like.
15. Please hold the plug to disconnect from the power socket.
16. If the parts of product structure is found to be damaged (especially the safety device and power cord), please stop using and send it to service centre to be repaired by qualified technician.
17. This product is not intended operated by persons (including children) with weak physical condition, slow reaction, mental retardation, lack of experience and common sense, unless they are under supervision or instruction by the person who is responsible for their safety.
18. If the screw press should get obstructed, put the juicer in 'rev' mode for about 2 to 3 seconds to let it turn in the opposite direction. After this, try to let the screw turn in the right direction again.
19. Don't use the water that is warmer than 40°C to rinse the appliance parts
20. Never fill the appliance with unknown foods.
21. Make sure that the base of the unit does not get wet.
22. This appliance is suitable to be used in a household environment and in similar surroundings such as:
 - Kitchen for personnel of shops, offices or other similar professional surroundings
 - Hotel or motel rooms and other surroundings with a residential character
 - Guest rooms or similar
 - Travel

Attention: This appliance cannot be used with an external timer or a separate remote control.

NOTE :


To avoid hazard of electric shock, unplug the unit from power outlet when not in use or before cleaning. If the supply cord is damaged, stop using immediately and bring it back to service centre for repair.

HINT:

This Juicer is not suitable for juicing very hard or fibrous and starchy fruits or vegetables such as Sugar Cane.

There are some fruits which contain too much starch to juice. They include Avocado, Bananas, Figs, Mango and Papaya, Dragon fruit, Strawberry, Grape without seeds. They will clog up the stainless steel sieve.

PARTS DIAGRAM

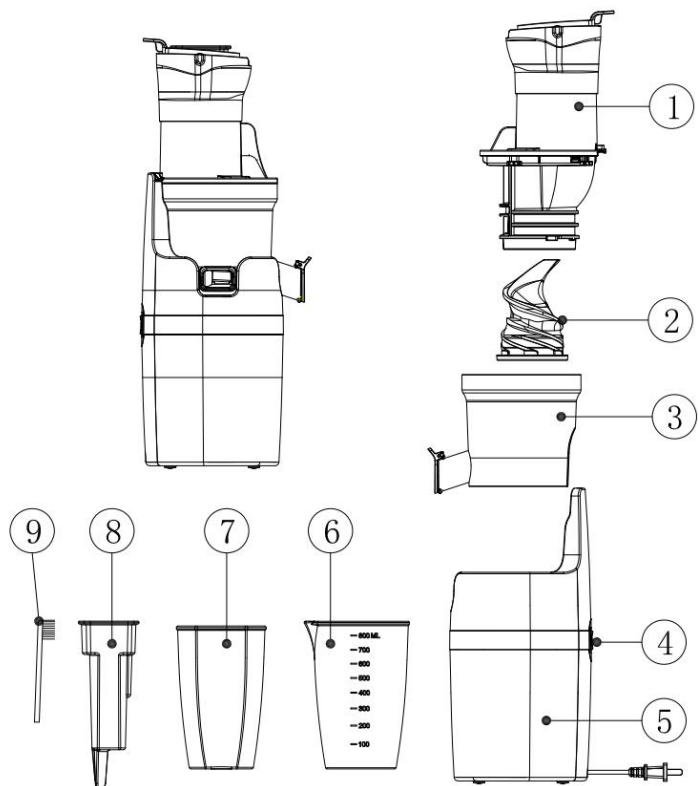

1	Chute & Strainer Assembly	6	Juice Container
2	Squeezing Auger	7	Pulp Container
3	Juicing Bowl	8	Pusher
4	On / Off / Reverse Switch	9	Cleaning Brush
5	Power Base		

USING FOR FIRST TIME

1. Remove all packaging materials, plastic bags and labels.
2. Make sure the electricity supply is 100-120V~60Hz or 220-240V~50-60Hz.
3. Clean the Food Tray / Chute & Strainer Assembly / Squeezing Auger / Juicing Bowl/ Pusher with Soapy water. Then rinse and dry thoroughly.

NOTE : DO NOT IMMERSE THE POWER BASE UNIT IN WATER.

4. Assemble the parts per the instruction in the assembling method section.
5. Connect the power cord to the power source.

The unit is ready to use now.

ASSEMBLING METHOD

Please make sure the unit is not plugged and the switch is turned to “O” setting prior to assembling the machine.

1. Position the squeezing bowl on the Power base aligning the position of the spouts and the axle. (Fig 1)
2. Push the squeezing auger firmly into the center of the bowl, making sure that it touches down the bottom, or else the cover cannot be closed. (Fig 2)
3. Position the chute on the bowl to align the ▲ to the “☞” and twist it clockwise until it clicks the safety lock. Please make sure that the arrow ▲ on “☞” the cover aligns with the Lock graphic on the Bowl. (Fig 3)
4. Place the juice container and the pulp container under the relevant spouts. (Fig4)

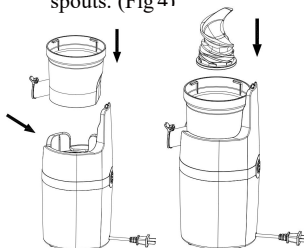


Fig 1

Fig 2

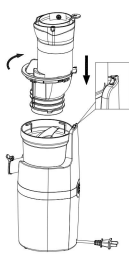


Fig 3

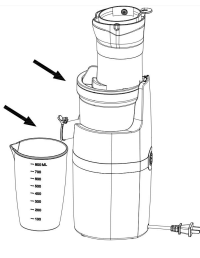


Fig 4

OPERATION INSTRUCTION

1. Connect the unit with Power.
2. Check and make sure all parts are well assembled in correct position.
3. Make sure the machine is at off “O” position.
4. Make sure the juice and pulp containers are in position.
5. Make sure the juice spout cover is closed.
6. Prepare the fruits or vegetables and cut them into pieces max 2cm x 5cm strips or 3cm x 3cm cubes.
7. Put fruit strips/cubes into the chute.
8. Press the switch to Setting “ — ” to start the juicing operation.
9. Push the food down with the pusher only.
10. In case of food stuck inside the Bowl, please switch to “R” reverse function instantly.

NOTE

Please do not use the juicer continuously longer than 20 minutes.

Open & close of juice spout cover

During the juicing process, you could keep the Drip-stop Cover closed before the juice is full in the juicing bowl. (Fig 5)




Fig 5

BENEFITS OF DRIP-STOP COVER :

- To stop dripping at the end of juicing.
- To mix the juice with different fruits and veggies.

USAGE TIPS :

1. Remove hard pits or seeds prior to pressing to prevent possible damage to the squeezing screw.
2. If mixed juices are to be made, please begin with harder fruit, and then squeeze the soft fruit.
3. Please let the juicer to run for 30 seconds after the last ingredient was fed.

ATTENTION :

The juicer is not suitable for juicing very hard or fibrous and starchy fruits or vegetables such as Sugar Cane. There are some fruits which contain too much starch to juice. Some examples are Avocado, Bananas, figs, Mango, Papaya, Dragon Fruit, Strawberry, Grape without seeds etc. They will clog up the stainless steel sieve.

DISASSEMBLING METHOD

NOTE:

If the juicer gets overheated, it will turn off automatically to protect the machine. In this case, please turn the juicer off “O”. Wait 10 minutes to let the juicer cool down and then turn it on again.

To disassemble the unit after using and before cleaning. Please turn the juicer to “O” position and disconnect the juicer from power source. Then, please follow the steps below :

1. Remove the Juice and Pulp containers. (Fig 6)
2. Remove the Chute. Turn the chute anti-clockwise until the ▲ aligns with the “⌘” sign. (Fig 7)
3. Remove the Squeezing Auger by pulling it out upward. If it is very hard, swing gently and pull. (Fig 8)
4. Remove the Squeezing Bowl by lifting it upward vertically. (Fig 9)

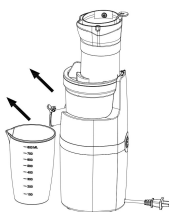


Fig 6



Fig 7



Fig 8



Fig 9

CLEANING & MAINTENANCE

IMPORTANT :

Please wash the juicing parts every time immediately after each used, otherwise the pulp might stick tightly in Juicing Bowl & Squeezing Auger which will then affect the disassembly, cleaning and juicing performance.

1. Switch off and unplug the juicer.
2. Wash the disassembled parts (Fig 10) with water. If the meshes are clogged with pulp, please use the provided cleaning brush to remove the dregs.

CLEANING & MAINTENANCE

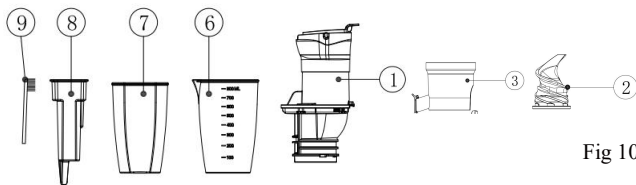


Fig 10

ATTENTION:

- **Do not use iron wire brush, abrasive or sharp object tool to clean the unit.**
 - **Please do not use water above 40°C.**
 - **Never clean any parts in dishwasher to avoid damage by hot water.**
3. In case there is any residues remained in the mouth of the pulp spout, please pull out the silicone valve as shown in (Fig 11) below and clean under running water.

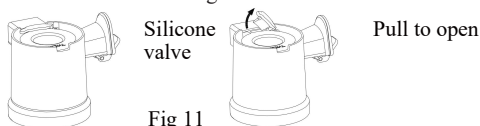


Fig 11

Press the silicone valve to close it property and tightly after cleaning.

4. To Clean the seal ring in the center of the squeezing bowl, please follow the steps as below :
- Turn the Squeezing Bowl upside down for easier handling, Push the seal ring out with your thumb (Fig 12a) and clean it with water.
 - After Cleaning, please put it back to the center hole. The small ribbed surface should be should face upward (Fig.12b) Make sure the groove of the seal ring well fit in the squeezing bowl.
 - The big flat size of the seal ring will be inside while the small and ribbed side is outside the Squeezing Bowl. (Fig 12c)




Fig 12a




Fig 12b



Fig 12c

5. Do not put the Power Base into water for cleaning. Wipe it with damp cloth only.

6. After cleaning, please dry the parts thoroughly and store them in a dry, cool place.

STORAGE

- Follow cleaning instructions to well maintain the unit before storage.
- Tidy up the power cord set.
- Keep the unit away from children's easy access.
- Store the unit and the accessories at a dry, cool place.

NOTE :

Please make sure the unit and parts are dry before storing it.

USEFUL TIPS

Item	Warning	Reason
1	Not for Ice cube.	The ice cube is too hard. It may damage the squeezing parts.
2	The ingredient with long fiber needs to be cut down to 5-10 cm thin strips or 3 x 3 cm cubes.	Long fiber food is easy to wind and block the spout.
3	The peel and pits/seeds must be removed from oranges, lemons, grapefruit and melons before use.	The hard pit or seeds may damage the squeezing parts. The peel may block the spout of pulp.
4	Do not use other accessory as a pusher.	It may damage the juicer and cause injury.
5	Each juicing cycle not longer than 20 minutes.	Working over time may cause damage to the motor.
6	Never put the spoon, chopsticks into the opening of the Chute, the juice and pulp spouts.	It may damage the juicer.

TROUBLE SHOOTING

Trouble	Cause	Solutions
The juicer stops running suddenly.	Too many ingredients put into the juicer.	Switch to “R” position instantly to make the ingredients return upwards. If the machine still stops running, please clean the machine before use.
	Hard fruits or vegetables have not been cut in small pieces.	Hard fruits and vegetables (such as carrot) shall be cut into thin strips or small cubes before putting into chute.
The juice yield is low or juice flows out of the main housing.	The Bowl and the silicone valve are not installed properly.	Please re-install the Bowl silicone valve by referring to the installation method.
Abnormal noise.	Parts cause extrusion sound during squeezing.	The sound is caused by extrusion of fruits and vegetables, which is normal phenomenon.
The Chute & Strainer Assembly cannot be opened.	There is too much pulps inside the bowl.	Press switch to “R” setting to eject the pulps backward.
	There is hard foods stuck inside.	Press switch to “R” to eject the object backward.
	The pulp mess is stuck.	Pour water into the Chute to soften the stuck pulp mess overnight.
The container & accessories are dyed after use.	Dyed parts are due to natural color of specific fruits/veggies.	This is natural color and unavoidable.

