

ELECTRIC JUICER

MODEL NO.: JEE-3898



**POWER UP TO
200W**



INOX 304

SAFE FOR HEALTH



83MM

WIDE FEEDING CHUTE

**MADE BY
ELMICH EUROPEAN**



ENG

ELECTRIC JUICER

Model: JEE-3898

PRECAUTIONS FOR SAFETY USE

1. Input voltage of this product is 220V~50Hz. Please confirm before use.
2. Be sure to disconnect power supply before taking apart, packing or commissioning of any part of this product.
3. If power supply cords are damaged, please contact with the Customer Service Department of this company in order to avoid risks or come to appointed maintenance point of this company to change. Be sure not to take apart or repair by yourself.
4. Please check before use, whether power supply cord, plug, screening net, spiral push rod and other parts are damaged. If any, please stop using this product and timely contact with the Customer Service Department of this company. Be sure not to take apart or repair by yourself in order to avoid risks
5. If this product needs to be repaired in the course of application, please contact with the Customer Service Department of this company in order to avoid risks or come to appointed maintenance point of this company to change. Be sure not to take apart or repair by yourself in order to avoid risks.
6. Before connecting with power supply, make sure that the cover is installed with the machine body
7. When this product works, not allow hands or sharp objects to access to feed inlet. No object can replace the push rod. Not allow eyes to be close to feed inlet in order to avoid accident.
8. When this product works, not allow to touch the spiral propeller and other detachable parts in order to avoid any injury or damaging this product.

9. This product is possessed of intelligent protection chip, so that this product can stop after continuous working for 20 minutes. At this period, be sure to use this product again when the motor cools down after 20-30 minutes to extend product lifetime.
10. The product is designed with current limiter and can stop operating after several seconds of automatic back action when the current exceeds 1.5A, which can render over-current protection for the motor and prolong the service life of motor.
11. The motor is designed with overheat protector. When the motor runs for too long time or with excessively large load and the temperature rises to a certain degree, the overheat protector of the motor will power off automatically (EO will be displayed after the control panel is opened); at this moment, the user should stop the host for about 30min for cooling down of the motor before further usage, which is favorable for extending the service life of the product.
12. After application, take down detachable parts when the motor and spiral propeller stop rotating and power supply is disconnected.
13. Race rotation or overloading application is not allowed.
14. After squeezing some fruits and vegetables, screening net, the cover and spiral propeller are possibly dyed, which is normal and generates no influence on consumption and users' health.
15. All accessories of this product cannot be disinfected using hot water beyond 80°C and microwave oven in order to avoid temperature distortion and damage. Materials that touch with foods conform to food hygiene certification, and are clean and reliable.
16. Do not place the machine body into water or other liquids, and the

machine body cannot be washed using water or other liquids in order to damage the machine body.

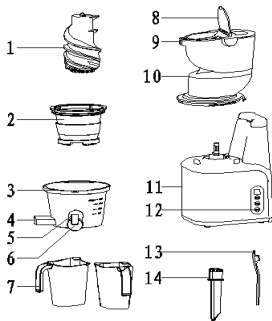
17. Not allow to use steel wool, abrasive cleaner or corrosive liquid (e.g. petrol or acetone) to wash this product.

18. This product should be stored in a place that children cannot reach. No allow persons with unsound extremities and sensation or mental disorders and persons who are short of related experience and knowledge (including children) to use or play with this product.

19. This product is only applicable to individual or home application.

20. This product belongs to type I electric appliance, and therefore grounding wire of socket has to maintain satisfactory ground connection.


PARTS AND FUNCTIONS



1. Spiral propeller	8. Safety guard cap
2. Juice screening net	9. Uncapping push button
3. Juicing body	10. Juicing body-cover connector
4. Slag-drip opening	11. Main body
5. Juice mouth	12. Key switch
6. Juice mouth cover	13. Cleaning brush
7. Juice/fruit residual cup	14. Pushing ram

METHOD OF APPLICATION

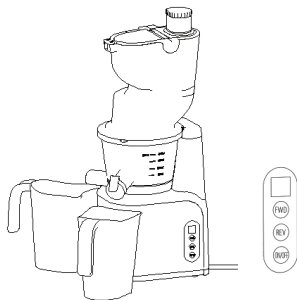Before using this product for the first time, please thoroughly wash parts that touch with foods (see “Maintenance and Preservation”)



Forward Reversal On/Off

Instruction for key operation:

“On/Off” key: switch on, press On/Off key and then the buzzer will beep once for prompting and the digital tube is displayed as in ready mode “00”; press On/Off key again and then the buzzer will beep again for prompting and the motor will stop running, the digital tube goes out and other contact switches fail to operate; press On/Off key in forward and reversal operating modes and then the motor stops working and the digital tube is displayed as in ready mode “00”.

“Forward” key: in ready mode, press “Forward” key and then the buzzer will beep once for prompting and the digital tube is displayed as in (), the display board rotates clockwise; pressing “Forward” key will fail during forward operating of the motor, while reversal key and “On/Off” key can be operated;

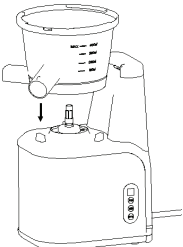
“Reversal” key: in ready mode, press “Reversal” key and then the buzzer will beep once for prompting and the digital tube is displayed as “—” and after 8s of motor reversal, the digital tube is displayed as in ready mode “00”; pressing “Reversal” key will fail during reversal operating, while forward key and “On/Off” key can be operated;


Status conclusion: the buzzer beeps once shortly for every valid key pressing;

Application of this product

This product is provided with double safety systems, and will not work until all parts are correctly installed.


Please install and use this product as per the following steps:

	1	Align three concave positions with three raised positions on the juicing body and put it on the machine body.
---	---	---

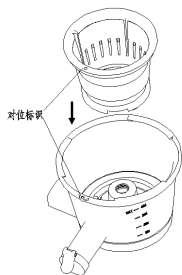




2

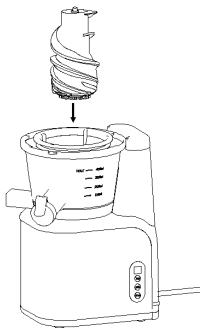
Pomace outlet on the juicing screening net (compound net) is aligned with the pomace outlet on the juicing body, and placed into the juicing body.



3

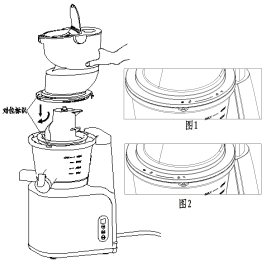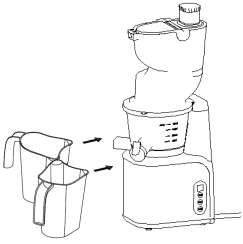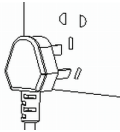The spiral propeller is inserted into the center of juicing screening net, and then turns to the left and right to make the spiral propeller properly insert into the net.

	4	Align juicing body-cover connector with “●” on the right juicing body, rotate juicing body-cover connector in “🔒” direction and fasten it tightly and correctly (“Tick” closing sound from the safety switch indicates fastening success). In case of need to remove juicing body-cover connector, unscrew in “🔓” direction.
	5	Juice glass and pomace glass are placed under the juicing outlet and pomace outlet, respectively.
	6	Connect the power supply and start to work (before connecting the power supply, please ensure that the switch is in off state.)

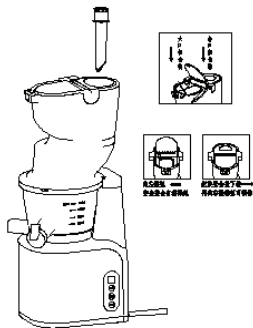



7

Put food into the charging opening of juicing body and then push the food inside by the pushing ram.

Food of large piece (with diameter smaller than 83mm, such as apple/snow pear) can be put inside directly through the large-diameter charging opening, while thinner and longer ones (with diameter smaller than 32mm, such as celery, cherry tomato and grape) can be put inside through the small-diameter charging opening.

It is advisable to push the food with proper force for cutting off the food.

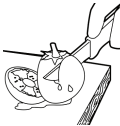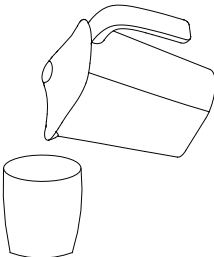(Please do not put fingers or other objects into the charging opening of juicing body cover! If the fruit residual cup or juice cup is full, switch off the power and clean the machine before use again. Make the juice mouth in open state for receiving juice by the juice cup; if the juice mouth is in closed state, juice in the juicing body cannot exceed the MAX position.)




	8	Please remove the core, hard seeds, thick skin or hard shell from fruits and vegetables.
	9	Press “On/off” button on the control panel, and then select “Forward” button. Then, this product starts to work at most for 20 minutes. <i>Not allow to touch the power switch with wet hands in order to avoid electric shock, electric leakage and fire.</i>
	10	When foods are processed and no juice is extracted from the juice outlet, turn off the switch and disconnect the power supply. Juice glass cannot be removed from the juice outlet until the spiral propeller and juice screening net stop working. (Juice should be immediately drunk. If it is exposed to the air for a long time, its taste and nutritional values will be affected.) <i>Residues cannot be kept for a long time. Do not touch the power switch in order to avoid electric shock, electric leakage and fire.</i>

NOTE FOR FRUITS SELECTION

1. Select fresh fruits and vegetables: they contain more juices. Applicable fruits: pineapple, beetroot, celery stalks, apple, cucumber, spinach, cucurbites, tomato, mandarin orange and grape, etc.
2. It is not necessary to remove thin skin but thick skin like mandarin orange, pineapple, lettuce and beetroot, etc. Seeds of citrus fruits should be removed, since they make juice bitter.
3. When squeezing apples, juice concentration depends on the type of selected apples; juicy apples will squeeze out more pure juices. Therefore, select the type of apples according to required juice concentration.
4. Newly squeezed apple juice immediately turns brown, several drops of lemon juice will slow down the course of color change.

MAINTENANCE AND PRESERVATION

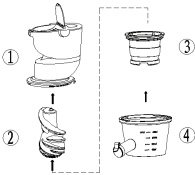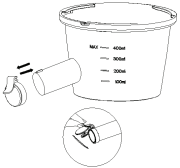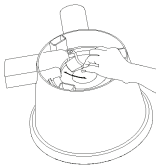1. Before washing this product, be sure to turn off the switch and disconnect the power supply.
2. Please timely wash this product after application.
3. The machine body cannot be washed using water. Instead, use dried duster cloth or cotton cloth to wipe blots.
4. Before storing this product, make sure that this product is clean and dried.
5. Before washing, detach this product as per the following procedures:

	1	The touching rod of the cover of the juicing body is removed from the machine body. If not, the cover cannot be opened.
	2	Break down all components (①②③④) in negative direction of assembly respectively.
	3	Juice mouth cover connector can be assembled after disassemble and cleaning.
	4	If there are pomaces in pomace outlet, sealing gum can be removed from the pomace outlet and washed using water, and then installed for next application.

PRODUCT SAFETY INDEXES

Rated voltage	220VAC
Rated power	200W
Rated frequency	50Hz
Duration of continuous working	≤15 minutes
Interval	≥30 minutes

FAULT ANALYSIS AND RESOLUTION

Fault phenomenon	Analysis of causes	Fault resolution
After connecting the power supply, turn on the switch, but this product cannot work.	The cover of juicing body cannot be installed into the machine body, and thus safety touching switch cannot be started.	The cover of juicing body should be properly installed.
When this product is used initially, the motor smells terrible.	This is not an abnormal phenomenon	If this product is used repeatedly and this product still smells terrible, please come to the maintenance point of ANMIR Corporation for detection.

This machine stops during the application.	1 The voltage is too low. 2. Excessive foods are to be processed. 3. Press the push rod with too much force.	1. Check whether the voltage is too low. 2. Excessive foods are removed after the power supply is disconnected. 3. Gently press the push rod.
There are noises when working.	1. The spiral propeller and juice screening net are not properly installed, and thus the machine works unstably. 2. The starting motor in the machine body is damaged.	1. The spiral propeller and juice screening net should be properly installed. 2. Please come to the maintenance point of ANMIR Corporation for detection.

VN

MÁY ÉP TRÁI CÂY ELMICH

Model: JEE-3898

CHỈ DẪN SỬ DỤNG AN TOÀN

1. Điện áp đầu vào của sản phẩm này là 220V ~ 50Hz. Vui lòng xác nhận trước khi sử dụng.
2. Đảm bảo ngắt nguồn điện trước khi tháo rời, đóng gói hoặc vận hành bất kỳ bộ phận nào của sản phẩm này.
3. Nếu dây cấp nguồn bị hỏng, vui lòng liên hệ với bộ phận CSKH của công ty để tránh rủi ro hoặc liên hệ điểm bảo hành chỉ định của công ty để thay. Yêu cầu không tự tháo lắp hoặc sửa chữa.
4. Vui lòng kiểm tra trước khi sử dụng, xem dây cấp nguồn, phích cắm, lưới lọc, thanh nhồi và các bộ phận khác có bị hư hỏng hay không. Nếu có, vui lòng ngừng sử dụng sản phẩm này và liên hệ kịp thời với Bộ phận Dịch vụ Khách hàng của công ty. Yêu cầu không tự ý tháo lắp, sửa chữa để tránh rủi ro.
5. Nếu trong quá trình sử dụng sản phẩm, cần sửa chữa, vui lòng liên hệ với bộ phận CSKH của công ty để tránh rủi ro hoặc liên hệ điểm bảo hành chỉ định của công ty này để đổi trả. Yêu cầu không tự ý tháo lắp, sửa chữa để tránh rủi ro.
6. Trước khi kết nối với nguồn điện, hãy đảm bảo rằng các bộ phận của máy được lắp khớp với nhau.
7. Khi sản phẩm này hoạt động, không được cho tay hoặc vật sắc nhọn vào cửa tiếp nguyên liệu. Không dùng bất kỳ vật nào khác để thay thế thanh đẩy. Không nhìn gần cửa tiếp liệu để tránh tai nạn.
8. Khi sản phẩm này hoạt động, không được phép chạm vào trực tiếp ép các bộ

phận có thể tháo rời khác để tránh bất kỳ thương tích hoặc làm hỏng sản phẩm này.

9. Sản phẩm này được sở hữu chip bảo vệ thông minh, do đó sản phẩm này có thể dừng sau khi làm việc liên tục trong 20 phút. Tại thời điểm này, chỉ sử dụng lại sản phẩm khi động cơ nguội sau 20-30 phút để kéo dài tuổi thọ của sản phẩm.

10. Sản phẩm được thiết kế với bộ giới hạn dòng điện và có thể ngừng hoạt động sau vài giây tự động quay lại khi dòng điện vượt quá 1.5A, có thể bảo vệ quá dòng cho động cơ và kéo dài tuổi thọ của động cơ.

11. Động cơ được thiết kế với bộ bảo vệ quá nhiệt. Khi động cơ chạy trong thời gian quá dài hoặc tải quá lớn và nhiệt độ tăng đến một mức độ nhất định, bộ bảo vệ quá nhiệt của động cơ sẽ tự động tắt nguồn (EO sẽ hiển thị trên bảng điều khiển); tại thời điểm này, người dùng nên dừng máy trong khoảng 30 phút để động cơ tắt máy trước khi sử dụng tiếp, điều này có lợi cho việc kéo dài tuổi thọ của sản phẩm.

12. Sau khi sử dụng, tháo rời các bộ phận khi động cơ và trục ép ngừng quay và ngắt nguồn điện.

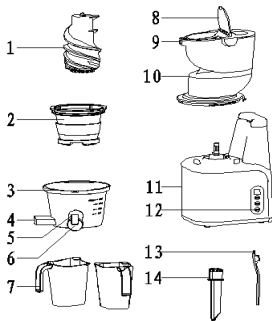
13. Không nên sử dụng động cơ khi quá tải.

14. Sau khi ép một số loại trái cây và rau quả, lưới lọc, nắp và trục ép có thể thay đổi màu, điều này là bình thường và không ảnh hưởng đến việc sử dụng và sức khỏe của người sử dụng.

15. Không nên khử trùng tất cả các phụ kiện của sản phẩm này bằng nước nóng trên 80°C và lò vi sóng để tránh bị biến dạng và hư hỏng.

16. Không đặt thân máy vào nước hoặc các chất lỏng khác và không nên rửa thân máy bằng nước hoặc các chất lỏng khác để tránh làm hỏng thân máy.
17. Không nên sử dụng giẻ thép, chất tẩy rửa ăn mòn hoặc chất lỏng ăn mòn (ví dụ: xăng hoặc axeton) để rửa sản phẩm này.
18. Sản phẩm này nên được cất giữ ở nơi mà trẻ em không thể với tới. Không cho phép những người không đảm bảo thể chất hoặc rối loạn tâm thần và những người thiếu kinh nghiệm và kiến thức liên quan (bao gồm cả trẻ em) sử dụng hoặc chơi với sản phẩm này.
19. Sản phẩm này chỉ được áp dụng cho cá nhân hoặc gia đình.
20. Ổ cắm điện cho sản phẩm cần có dây nối đất phù hợp.


CẤU TẠO SẢN PHẨM VÀ CHỨC NĂNG CỦA TỪNG BỘ PHẬN



1. Trục ép	8. Nắp cửa tiếp nguyên liệu
2. Lưới lọc nước ép	9. Nút ấn mở nắp cửa tiếp liệu
3. Cối ép	10. Phần nối nắp trên và thân nắp
4. Cửa thoát bã	11. Thân máy
5. Cửa thoát nước ép	12. Công tắc điều khiển
6. Nắp chặn cửa thoát nước ép	13. Bàn chải vệ sinh
7. Cốc chứa nước ép/bã	14. Thanh nhồi

CÁCH THỨC SỬ DỤNG

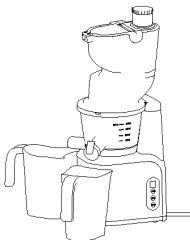Trước khi sử dụng sản phẩm một thời gian, hãy rửa sạch các bộ phận tiếp xúc với thực phẩm (Xem Mục “Bảo trì và bảo quản sản phẩm”)



Forward

Reversal

On/Off

Chỉ dẫn sử dụng các phím điều khiển:

Phím **“On/Off”** - **“Bật/tắt”**: Khởi động máy, nhấn phím On/Off và sau đó máy sẽ phát ra tiếng bip một lần để nhắc người sử dụng và màn hình LED mặt điều khiển sẽ hiển thị ở chế độ sẵn sàng “00”; nhấn phím On/Off một lần nữa và sau đó sẽ lại phát ra tiếng bip một lần nữa và động cơ sẽ ngừng chạy, màn hình LED tắt và các công tắc tiếp xúc khác không hoạt động; Khi máy đang ở chế độ vận hành tiến (forward) và lùi (reversal), nhấn phím On/Off động cơ sẽ ngừng hoạt động và màn hình LED hiển thị ở chế độ sẵn sàng “00”.

Phím **“Forward”**- chuyển động tiến: Ở chế độ sẵn sàng, nhấn phím “Forward” và sau đó máy phát ra tiếng bip và màn hình LED hiển thị đèn nháy [], bảng đèn LED quay theo chiều kim đồng hồ và sau đó khởi động phần mềm này, kéo dài trong khoảng 1 giây; Khi động cơ đang chuyển

động tiến, bạn không thể nhấn phím “Forward” – tiến mà chỉ có thể nhấn phím “**Reversal**”- Đảo chiều hoặc phím “On/off”- Bật/tắt;

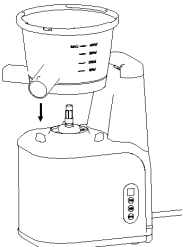
Phím “Reversal” – Đảo chiều: Ở trạng thái sẵn sàng, ấn phím “Reversal” – Đảo chiều, sau đó có tiếng bip phát ra, màn hình LED sẽ hiển thị “—”, và sau đó động cơ sẽ chạy đảo chiều trong vòng khoảng 8 giây, máy sẽ dừng ở trạng thái sẵn sàng “00”; khi động cơ đang hoạt động đảo chiều, không thể ấn phím “Reversal”- đảo chiều, tuy nhiên có thể ấn phím “Forward” – chuyển động tiến, và phím “On/off”


Kết luận: Sau mỗi lần ấn phím, phát ra một tiếng kêu bip nghĩa là phím ấn có hiệu lực.

Trình tự sử dụng máy ép

Sản phẩm này có hệ thống an toàn kép và sẽ không hoạt động cho đến khi tất cả các bộ phận được lắp đặt chính xác.


Vui lòng lắp ráp và sử dụng sản phẩm này theo các bước sau:

	1	Căn chỉnh lắp cối ép vào thân chính sao cho ba vị trí lõm trên cối ép khớp với ba vị trí lồi trên thân máy ép và đặt vào thân máy.
---	---	---

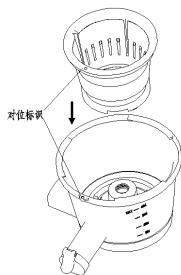




2

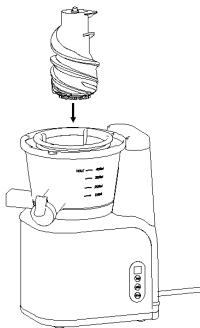
Cửa xả bã trên lưới ép được căn chỉnh đặt ứng với với cửa xả bã cối ép, và được lắp kết cấu gắn vào thân máy ép.



3

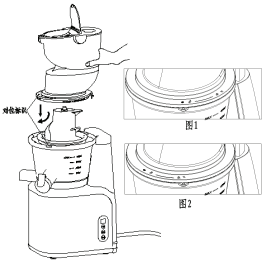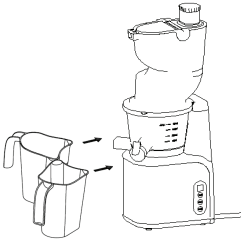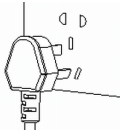Trục ép được đưa vào giữa lưới lọc, sau đó quay sang trái và phải sao cho trục ép lắp cố định đúng vào lưới.

	4	Căn chỉnh lắp đầu nối nắp trên máy ép với ký hiệu “●” vào trên thân máy ép bên phải, xoay đầu nối nắp theo hướng ký hiệu “🔒”; vặn chặt và chính xác cho khớp (âm thanh đóng “Tích” từ công tắc an toàn thể hiện rằng bạn đã lắp thành công). Trong trường hợp cần tháo đầu nối nắp trên máy ép, hãy tháo vặn theo hướng “🔓”.
	5	Đặt cốc đựng nước ép và bã tương ứng dưới vị trí của thoát nước và thoát bã.
	6	Kết nối nguồn điện và bắt đầu hoạt động (trước khi kết nối nguồn điện, hãy đảm bảo rằng công tắc ở trạng thái tắt.)

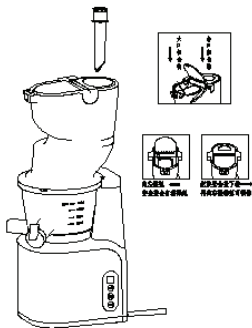



7

Cho thực phẩm vào cửa tiếp liệu của máy ép, sau đó đẩy thực phẩm vào trong bằng thanh nhồi.

Thực phẩm dạng miếng lớn (có đường kính nhỏ hơn 83mm, chẳng hạn như táo / lê tuyết) có thể được đưa trực tiếp vào bên trong qua cửa nạp đường kính lớn, trong khi những loại mỏng hơn và dài hơn (có đường kính nhỏ hơn 32mm, chẳng hạn như cần tây, cà chua bi và nho) có thể được đưa vào bên trong thông qua cửa nạp có đường kính nhỏ.

Nên cắt nhỏ thực phẩm và cho vào máy ép với lực từ từ.

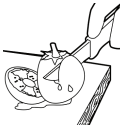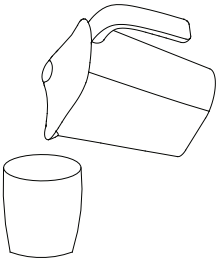(Vui lòng không đặt ngón tay hoặc các vật khác vào cửa tiếp liệu của nắp đậy thân trên máy ép! Nếu chứa bã hoặc nước ép đầy, hãy tắt nguồn và vệ sinh máy trước khi sử dụng lại. Mở nắp đậy cửa thoát nước ép để nước ép chảy ra cống; nếu đầy cửa thoát nước ép, lượng nước chứa trong cối ép không được vượt quá vị trí TỐI ĐA.)




	8	Hãy loại bỏ lõi, hạt cứng, vỏ dày hoặc vỏ cứng khỏi trái cây và rau quả khi ép.
	9	Nhấn phím “On/off”- “Bật / tắt” trên bảng điều khiển, sau đó chọn phím “Forward”- chuyển động tiến. Sau đó, máy bắt đầu hoạt động tối đa trong 20 phút. <i>Không được chạm tay ướt vào công tắc điện để tránh điện giật, rò rỉ điện và cháy nổ.</i>
	10	Khi máy ép đã ép xong, và không còn nước ép chảy ra từ cửa thoát nước ép, hãy tắt công tắc và ngắt nguồn điện. Không lấy cốc đựng nước ép ra khỏi cửa xả nước ép cho đến khi trục ép và lưới lọc ngừng hoạt động. (Nước trái cây nên được uống ngay lập tức. Nếu để lâu ngoài không khí, mùi vị và giá trị dinh dưỡng của nó sẽ bị ảnh hưởng.) <i>Không nên giữ bã quá lâu.</i> <i>Không chạm vào công tắc nguồn để tránh điện giật, rò rỉ điện và cháy nổ.</i>

LƯU Ý LỰA CHỌN THỰC PHẨM ÉP

1. Chọn trái cây và rau quả tươi vì chúng chứa nhiều nước hơn. Các loại trái cây có thể ép là: dưa, củ dền, cần tây, táo, dưa chuột, rau bina, bầu bí, cà chua, cam quýt và nho
2. Không nhất thiết phải loại bỏ vỏ trái cây mỏng nhưng các trái cây có vỏ dày như quýt, dưa, xà lách và củ dền, ... cần bỏ vỏ. Nên loại bỏ hạt của các loại quả có múi vì chúng làm cho nước ép có vị đắng
3. Khi ép táo, lượng nước ép phụ thuộc vào loại táo được chọn; táo mọng nước sẽ ép ra nhiều nước hơn. Do đó, hãy chọn loại táo theo lượng nước ép yêu cầu.
4. Nước táo mới ép sẽ chuyển ngay sang màu nâu, vài giọt nước cốt chanh sẽ làm chậm quá trình chuyển màu.

BẢO TRÌ VÀ BẢO QUẢN

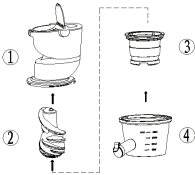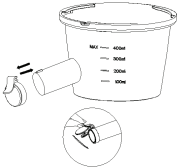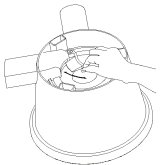1. Trước khi vệ sinh sản phẩm này, hãy nhớ tắt công tắc và ngắt nguồn điện.
2. Hãy kịp thời vệ sinh sản phẩm này sau khi sử dụng.
3. Không nên rửa thân máy bằng nước. Thay vào đó, hãy sử dụng khăn lau bụi khô hoặc vải bông để lau vết bẩn.
4. Trước khi bảo quản sản phẩm này, hãy đảm bảo rằng sản phẩm này được làm sạch và khô.
5. Trước khi vệ sinh, hãy tháo sản phẩm này ra theo trình tự sau:

	1	Xoay nắp trên thân máy theo chiều ngược với chiều đã lắp để tháo khỏi thân máy chính
	2	Tháo rời các phần (①②③④) theo chiều ngược với trình tự lắp.
	3	Tháo rời đầu nắp chặn của thoát nước ép để vệ sinh. Nắp chặn này nên được lắp vào khi sử dụng.
	4	Nếu có bã kẹt trong cửa thoát bã, có thể tháo gioăng cao su bịt kín khỏi cửa thoát bã và rửa sạch bằng nước, sau đó lắp đặt vào theo đúng trình tự và vị trí.

THÔNG SỐ KỸ THUẬT

Điện áp	220VAC
Công suất	200W
Tần số	50Hz
Thời gian hoạt động liên tục	≤15 phút
Khoảng thời gian nghỉ giữa 2 lần hoạt động liên tục	≥30 phút

PHÂN TÍCH LỖI VÀ GIẢI PHÁP XỬ LÝ

Hiện tượng lỗi	Phân tích nguyên nhân	Giải pháp xử lý
Sau khi kết nối nguồn điện, bật công tắc, nhưng máy không hoạt động	Nắp trên thân không được lắp khớp vào thân chính, và do đó công tắc an toàn chưa khởi động	Lắp khớp lại nắp trên thân máy ép
Động cơ có mùi khó chịu khi lần đầu tiên sử dụng máy ép	Đây không phải là hiện tượng bất thường	Nếu sản phẩm đã sử dụng nhiều lần và vẫn có mùi khó chịu, hãy đem máy đến các điểm bảo hành để kiểm tra

Máy dừng hoạt động đột ngột	1. Điện áp quá thấp 2. Cho quá nhiều thực phẩm ép 3. Dùng thanh đẩy với lực quá mạnh	1. Kiểm tra lại điện áp 2. Ngắt nguồn điện, và bỏ bớt thực phẩm ra 3. Dùng thanh đẩy thực phẩm từ từ
Máy phát ra tiếng ồn khó chịu	1. Trục ép và lưới lọc không được lắp khớp, và do đó máy không hoạt động ổn định 2. Động cơ trong thân máy bị hỏng	1. Lắp lại trục ép và lưới lọc cho khớp 2. Đến trung tâm bảo hành để kiểm tra và xử lý



www.elmich.vn