



HAWONKOO

한국 주방 가전

Hawo NAEM

뜨거운 냄비
전기



Manual
2.5L
HEH-100



Features	2
Specification	2
Electrical Diagram	2
Structure diagrams	3
How to use	4
Notice	5
Trouble Shooting	6

Dear users, thank you for using the electric hot pot products produced by our company. In order to give full play to the performance of the multi- functional electric hot pot, achieve the best use effect, and let you feel the fun of modern life, please read the instructions carefully before use.


Features

- 1. The temperature can be adjusted by turning the knob.
- 2. Split structure, easier to use and clean.


Specification

Rated power	1200W
Rated voltage	220V~50Hz
Rated capacity	2.5L


Electrical diagram

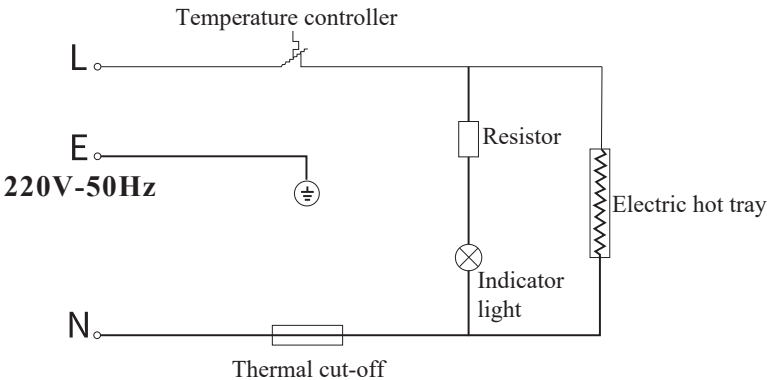

Structure diagrams

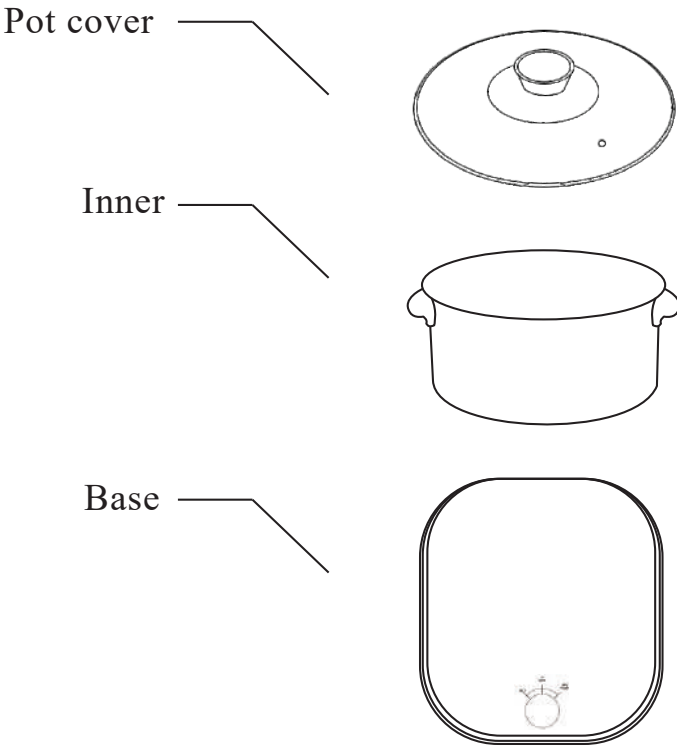

Control panel

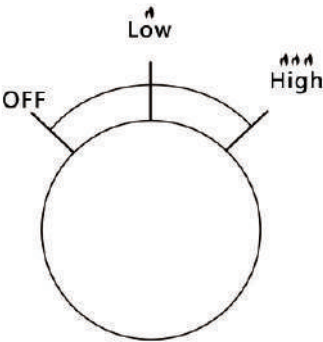

HOW TO USE

1. Before use, please check the surface of the electric heating plate of the heat source base, and remove any foreign matters.
2. Put the hot pot with soup (clear water) on the heat source base, put on the glass cover, and slightly rotate to connect the bottom of the pot with the surface of the electric heating plate.
3. Turn the knob to the "off" position, and then plug the power cord into the power socket on the wall.
4. Turn the knob to the "high" position, and the indicator light is on, indicating that it is heating (Note: in the process of use, if you feel that the firepower is too large, you can turn the knob counterclockwise to the low and middle position, you can achieve intermittent heating, to achieve the temperature to any adjustment function.)
5. When the water is boiling, you can start to put food.
6. After use, turn the knob to the "off" position, and then pull off the power cord plug.

Notice

1. This product uses electricity of 220 V, and has a special socket for grounding. When it is used for the first time, the base of the hot pot will have a slight peculiar smell, or even a little smoke, which is a normal phenomenon. It is recommended that the phenomenon of smoke and peculiar smell will disappear after two times of water burning.
2. Before use, the sundries on the surface of the heating plate and the bottom of the pan must be removed to make the heating plate and the pan contact well.
3. Do not power on and dry when the pot is not filled with water. 4. During use, the surface temperature of the product is high, and steam is discharged from the exhaust hole of the glass cover. Please do not approach or touch it to avoid scalding.
5. When the hot pot is used, the temperature of waste heat on the base of the hot pot is still high. Please do not touch or approach it to avoid scalding.
6. The cleaning work should be carried out after the power plug is removed and the hot pot is cooled. The pot can be washed completely. Please wipe the scattered cooking residue or oil on the base of the hot pot with a twisted cloth. Do not immerse the base of the hot pot in water or damp the electrical parts, Otherwise, it will directly affect the insulation performance of electrical parts, resulting in leakage or short circuit.
7. After the hot pot is cleaned, store it in a well ventilated, dry place without sunlight.
8. If the power cord is damaged, in order to avoid danger, it must be replaced by professional personnel of the manufacturer, its maintenance department or similar parts.
9. This product is not intended for use by people with weak physical strength, slow reaction or mental disorder, unless it is used safely under the guidance or help of the person responsible for its safety. 10. Children should be supervised to ensure that they don't play with equipment to avoid accidents.

Trouble Shooting

	Fault Condition		Problem explain	Solution
1	The indicator light doesn't work	The hot plate is not hot	The circuit is not connected to the power supply	Check whether the switch, plug, socket, fuse and power lead are in good condition, and plug in the plug
		The hot plate is hot	1.Indicator light wiring is loose 2.Indicator light damaged	Send it for maintenance
2	The indicator light work	The hot plate is not hot	1.The middle wiring is loose 2.The electric heating tube element is burnt out	Send it for maintenance
3	Boil water for too long		1.Wire coil deformation 2.The inner pot indined 3.There is a foreign matter between the inner pot and the electric heating plate 4.The bottom of the inner pot is distorted	1. If there is slight deformation, polish it with fine sandpaper, If it is seriously deformed, it should be sent to for maintenance 2. Tum the iner pan slightly make it return to normal 3. Remove sandpaper 4. Send it for mainteanance
4	Overflow		1. The food cooked exceeds the rated capacity 2. The food boiled without opening the lid	1. According to the normal proportion of food 2. Refer to the instructions for how to use
5	Shell electric leakge	Feel numb when touching the shell		1. Wipe the shell clean. If the power cord plug is carbonized seriously, it should be replaced 2. Please well grounded plug

Note: fault types and common problems indude but are not limited to the above. If the problem still exists or other problems appear, please contact the after-sales service center for more help.



Đặc điểm	2
Thông số kỹ thuật	2
Sơ đồ mạch điện	2
Cấu trúc sản phẩm	3
Hướng dẫn sử dụng	4
Ghi chú	5
Cách khắc phục sự cố	6

Cảm ơn quý khách hàng đã tin dùng sản phẩm nồi lẩu điện của chúng tôi. Để sản phẩm phát huy hết công năng, đạt được hiệu quả sử dụng tốt nhất, mang đến bạn trải nghiệm trọn vẹn, vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng.


Đặc điểm

- 1. Nhiệt độ nồi có thể điều chỉnh được bằng cách xoay núm điều khiển.
- 2. Nồi cấu tạo riêng biệt với đế nguồn để dùng và vệ sinh.

Thông số kỹ thuật


Công suất chỉ định	1200W
Điện áp	220V~50Hz
Dung tích	2.5L

Sơ đồ mạch điện

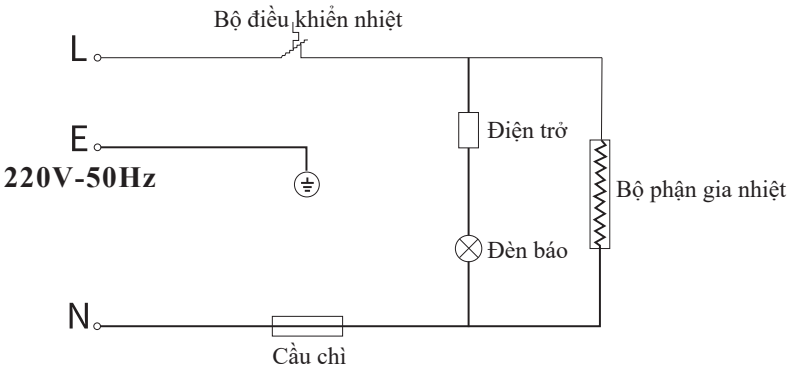


Cấu trúc sản phẩm


Nắp nồi

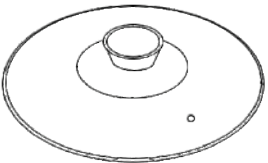


Thân nồi

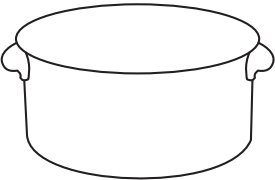

Đế nguồn

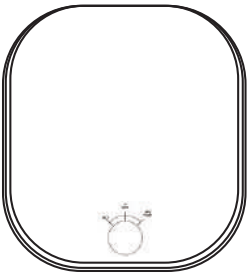

BẢNG ĐIỀU KHIỂN

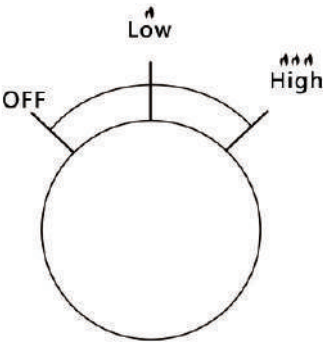

HƯỚNG DẪN SỬ DỤNG

1. Trước khi sử dụng, hãy kiểm tra bề mặt của lòng nồi và loại bỏ các vật thể lạ.
2. Đặt nồi chứa thực phẩm lên trên đế nguồn, đẩy nắp rồi xoay nhẹ để nồi tiếp xúc với đế nguồn.
3. Xoay núm điều khiển về vị trí “off” sau đó cắm dây nguồn vào ổ cắm điện.
4. Xoay núm điều khiển về vị trí “high”, đèn báo sáng, báo mâm nhiệt đang hoạt động. (Ghi chú: trong quá trình sử dụng, nếu bạn cảm thấy lượng nhiệt quá lớn, hãy xoay núm điều khiển ngược chiều kim đồng hồ đến vị trí thấp và trung bình, việc làm nóng ngắt quãng có thể giúp bạn đạt được nhiệt lượng mong muốn.)
5. Khi nước sôi, có thể bắt đầu cho thức ăn vào.
6. Sau khi sử dụng, xoay núm về vị trí “off”, sau đó rút phích cắm của dây nguồn.

Ghi chú

1. Sản phẩm này dùng điện 220V, và cần sử dụng ổ cắm điện nối đất. Khi sử dụng nồi lẩu trong thời gian dài, đế nguồn sẽ nóng và có mùi khét nhẹ, thậm chí một chút khói, đó là các hiện tượng bình thường. Hiện tượng bốc khói và mùi khét sẽ mất đi sau hai lần sử dụng.
2. Trước khi sử dụng, cần loại bỏ các cặn bẩn bám trên bề mặt đế nguồn và đáy nồi để nồi tiếp xúc tốt với đế nguồn.
3. Không bật nguồn khi nồi trống, không có nước trong nồi.
4. Trong quá trình sử dụng, nhiệt độ bề mặt cao, hơi nước thoát ra từ lỗ thoát khí của nắp kính. Vui lòng không đến gần hoặc chạm tay vào để tránh bị bỏng.
5. Khi nồi lẩu đang hoạt động, nhiệt độ dư thừa sẽ làm đế của nồi nóng. Vui lòng không chạm hoặc đến gần tránh bị bỏng.
6. Công việc vệ sinh nên được thực hiện sau khi rút phích cắm và khi nồi đã nguội hoàn toàn. Nồi có thể được rửa sạch hoàn toàn. Hãy lau sạch cặn hoặc dầu thừa trên đáy của nồi lẩu bằng khăn mềm. Không nhúng đế nguồn vào nước hoặc làm ẩm các bộ phận điện. Nếu không sẽ ảnh hưởng trực tiếp đến hiệu suất cách điện của các bộ phận điện, dẫn đến rò điện hoặc đoản mạch.
7. Sau khi làm sạch nồi lẩu, bảo quản ở nơi thoáng gió, khô ráo, không có ánh nắng mặt trời.
8. Nếu dây nguồn bị hỏng, để tránh nguy hiểm, phải được thay thế bởi chính hãng hoặc các trung tâm bảo hành được ủy quyền bởi hãng.
9. Sản phẩm không khuyến cáo sử dụng bởi những người suy giảm khả năng thể chất, giác quan hoặc rối loạn tâm thần, trừ khi có sự giám sát và hướng dẫn của người chịu trách nhiệm về an toàn.
10. Trẻ em nên được giám sát để đảm bảo không chơi với thiết bị tránh tai nạn.

Cách khắc phục sự cố

	Lỗi		Nguyên nhân	Giải Pháp
1	Đèn báo không sáng đèn	Bộ phận gia nhiệt không nóng	Mạch không kết nối nguồn	Kiểm tra xem công tắc, phích cắm, ổ cắm, cầu chì và dây dẫn điện có ở tình trạng tốt không và phích cắm có đúng vị trí chưa
		Bộ phận gia nhiệt nóng	1. Hệ thống dây điện của đèn báo bị hỏng 2. Đèn báo bị hỏng	Gửi đến đơn vị bảo hành được chỉ định
2	Đèn báo sáng	Bộ phận gia nhiệt không nóng	1. Hệ thống dây điện kết nối giữa bị lỏng 2. Bộ phận gia nhiệt bị hỏng	Gửi đến đơn vị bảo hành được chỉ định
3	Thời gian để nước sôi lâu		1. Dây gia nhiệt bị biến dạng 2. Thân nồi bị nghiêng 3. Có vật lạ giữa thân nồi và đế nồi 4. Dây nối trong bị biến dạng	1. Nếu biến dạng nhẹ, có thể dùng giấy nhám đánh mịn lại. Nếu hư hỏng nặng cần được thay thế bởi chính hãng hoặc trung tâm bảo hành ủy quyền 2. Xoay nhẹ nồi để khớp với đế nguồn 3. Hãy loại bỏ vật thể lạ trước khi đặt nồi 4. Gửi đến trung tâm bảo hành của chính hãng
4	Nước bị trào ra ngoài		1. Lượng thức ăn vượt mức tối đa cho phép của nồi 2. Thức ăn sôi không được dậy nắp	1. Chỉ sử dụng với lượng sản phẩm không quá mức tối đa cho phép 2. Đọc kỹ hướng dẫn sử dụng
5	Thân nồi bị rò rỉ điện	Cảm giác tê khi chạm vào vỏ		1. Lau sạch vỏ, nếu dây nguồn bị hỏng cần được thay thế ngay 2. Sử dụng phích cắm điện tiếp đất

Ghi chú: Tất cả các lỗi trên là bao gồm nhưng không giới hạn trong các lỗi có thể xảy ra. Nếu sự cố vẫn xảy ra hoặc xuất hiện những vấn đề khác, vui lòng liên hệ bộ phận chăm sóc khách hàng để được hướng dẫn và trợ giúp.



HAWONKOO
한국 주방 기전