


FUJI
LUXURY

Deluxe

Massage Chair

FJ 999

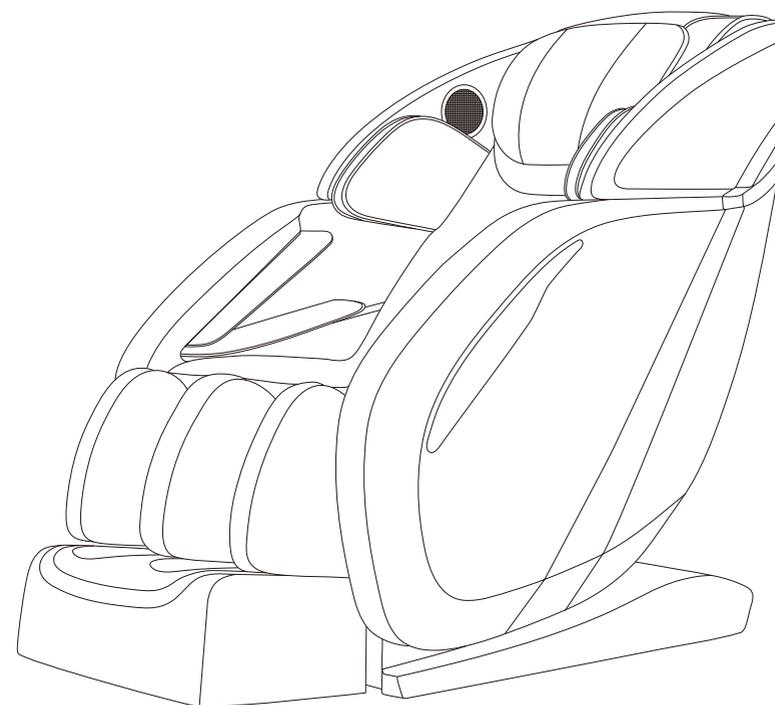

Thank you for choosing our product and your support. In order to understand the directions fully, please read user's manual carefully. And after reading, please keep it for next browsing. We reserve the right of final explanation to the design of product. Dimensions and specifications are subject to change without notice for further improvement.

Contents

Safety	1-6
Components	7-9
Outer Structure	7
Shortcut Buttons	7
Controller	8
Controller Intruction	9
Control Display	10
Preparation Before Use	11-14
Move the Chair	11
Place the Chair	11
Install Legrest	12
Install Backrest Pad and Pillow Pad	13
Remote Controller Connection	14
Connect power	14
Troubleshoot	15
Cleaning and Maintenance	16
Specifications	16

Safety

IMPORTANT SAFETY INSTRUCTIONS

This massage chair is intended for household only. When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this massage chair.

DANGER

-To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry - Do not operate in a wet or moist condition.

WARNING

-To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.

Safety

- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce risk of blistering.
- 14) Do Not Crush - Avoid sharp folds.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with
- 19) liquids, such as vases, shall be placed on the apparatus.
- 20) An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection
- 21) The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operatable.
- 22) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 23) If it is not in use for a long time or after use, please turn off the power and pull out the power plug.
- 24) Do not damage, break, over-bend, compress, tighten, wind, rotate or knot the power cord.

Safety

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

● Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.

Caution

- The massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

IMPORTANT SAFETY INSTRUCTIONS

● Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g., behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.

Safety

- Do not rest or place heavy objects on the armrests, leg rest or backrest as this may result in malfunction or injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
It is not recommended to use the massage for more than 15 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- Please do not use the product if you are not feeling well.
- Remove all scarves, neckties, necklaces and jewelry before using the massager.

● People with Medical Conditions

Consult your doctor before use if you:

- are under medical rest as ordered by a doctor.
- have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- have back problems.
- have diabetes, osteoporosis or sensory impairment.
- have joint dysfunction.
- have a pacemaker or other electronic medical devices.
- may be pregnant.
- have phlebitis or thrombosis.
- have an increased risk for blood clots.
- had recent surgery.
- have surgical pins, screws, or anything mechanical implanted in your body.

Safety

● Instances When the massage chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

● Assembly and Repair of the massage chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electric shock.
- The massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

● Things to Note About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.


Safety

● Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.


DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.

This product is for use on a nominal 100-240V~ circuit and has a grounding plug that looks like the plug illustrated in sketch A as following illustration. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

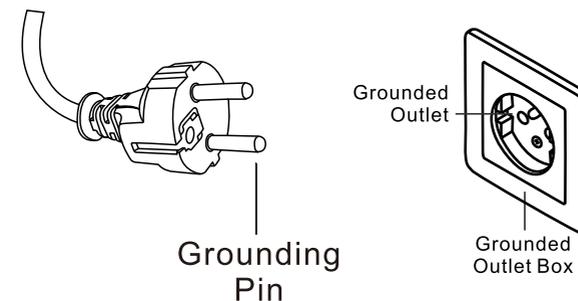

Components

Outer Structure

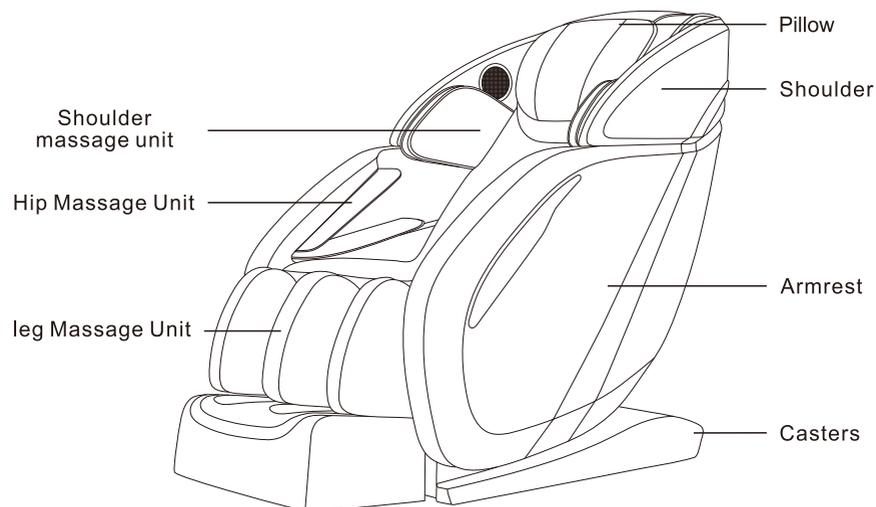


Shortcut Buttons

	POWER BUTTON: to turn on/off the power.
	AUTO MODE: Press the button to switch the Auto Mode. There are 12 Auto Modes: Intelligence, Relaxation, Stretch, Sleep Aid, Meridian, Wake up, For old man, SPA, For Sporters, Neck Focus, Waist Focus, Hips Focus. Every time the button is pressed, the auto mode can be selected circularly.
	PAUSE: Press this button to pause the massage function. Press again to resume the original massage function.
	BACK UP: Press the button to raise the Back. Press the button again to confirm the position when the Back is at the desired angle.
	BACK DOWN: Press the button to lower the Back. Press the button again to confirm the position when the Back is at the desired angle.

Components

Controller

(The specific display is subject to the actual product.)

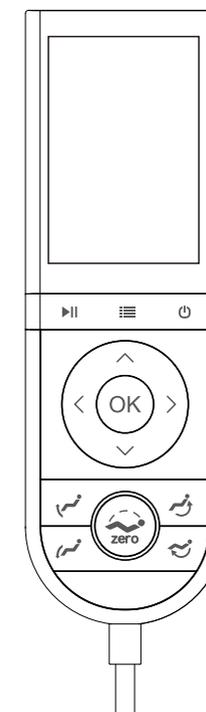

Caution

- Do not sit, step or place heavy objects on the controller.
- Do not drop the controller. It is recommended that the controller unit be placed in the controller side pocket when not in use.
- Do not exert excessive force on the controller.
- Do not handle the controller with wet hands.
- Do not operate the controller by using sharp-edged or hard objects. It may result in damage.


Components

Controller Intruccion

Function	Button	Instruction
Power		Connect the power supply, press this button to start the massage chair. It will start the body diction and then start the default automatic program for massage.
Menu		Press this button to enter the UI interface.
Stop		Press this button to pause the massage function. Press again to resume the original massage function.
4-Way Direction & OK Button		Under the menu UI interface, press the arrow keys to select the corresponding function, press the OK button to confirm the function.
Zero-G		Press the button to recline chair to Zero-G angle. The screen shows the Zero-G icon. If the icon doesn't appear on the screen, the Zero-G function is turned off.
Leg Up/ Down		Press the Leg Up/ Down button to adjust the leg angle.
Back Up/ Down		Press the Backrest Up/ Down button to adjust the backrest angle.

Components

Control Display

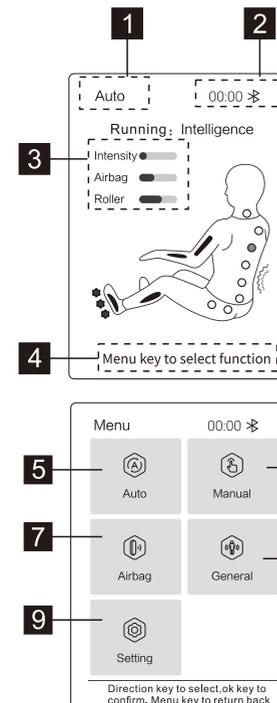

(The specific display is subject to the actual product.)


- 1** Message Mode.
- 2** Message Time.
- 3** Message Intensity.
- 4** Operation Instruction.

- 5** Can choose a variety of automatic massage procedures for targeted massage (Recommend).
- 6** Can choose a variety of manual massage procedures for targeted massage.
- 7** Can adjust air bag massage part and air bag strength.
- 8** Press this button to adjust the zero gravity,roller,heating function.
- 9** Can adjust the massage time. Multiple choice of language.

Preparation Before Use


Move the Chair

- Please turn off the main power and unplug the power from the electrical outlet.
- Tilt the chair backward as shown in the picture below and wheel it to the desired location.
- Please cover the floor with mat when move the massage chair in case of any damage of floor will be made.

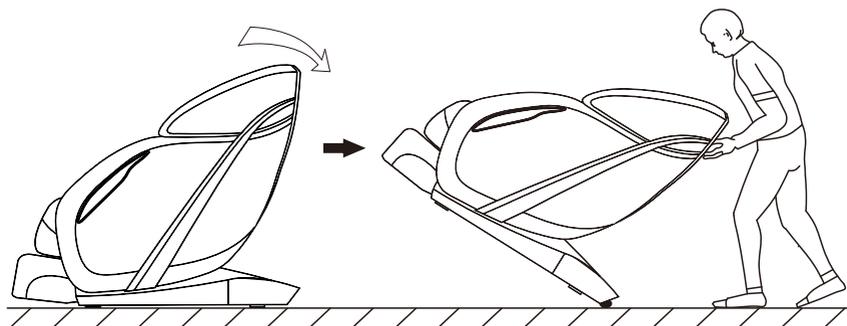

Place the Chair



Please make sure that there is an allowance of more than 5cm behind the massage chair, and more than 35cm in front of the massage chair to allow the backrest to recline without obstruction during operation.

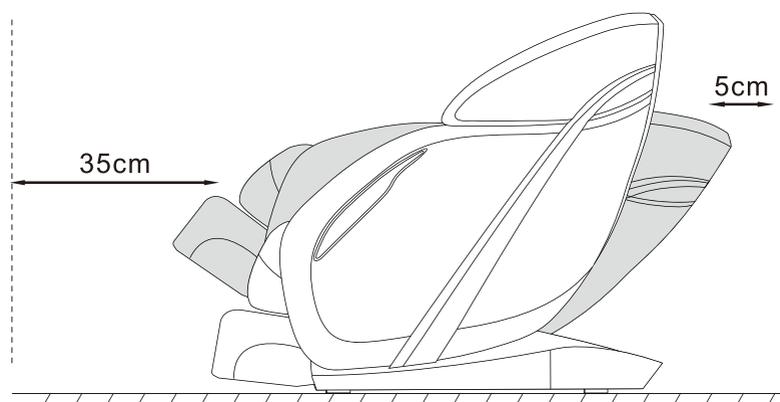



Preparation Before Use

Install Legrest



- As shown in the figure, insert the air tube ① and DC cable ② into the slots.

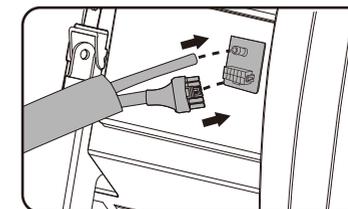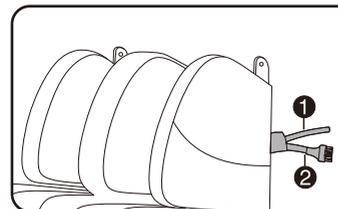

As shown in the figure, install the slots ③ of legrest into fixed part ④.

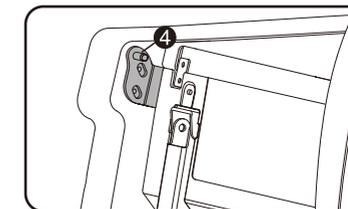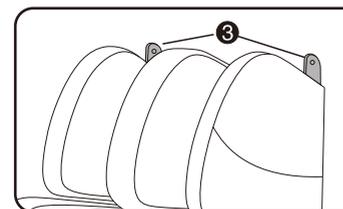

- As shown in the figure, insert the lock buckle ⑤ into each side, installation finished.

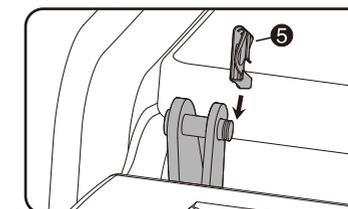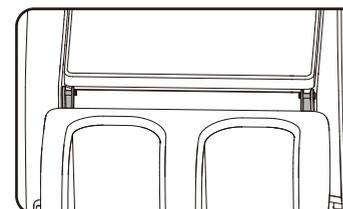


Preparation Before Use

Install Backrest Pad and Pillow Pad

- Attach the upper backrest pad to backrest with zipper.
- Attach the pillow pad to backrest with velcro.




- Attach the left side of backrest pad to backrest with zipper, same as the other side.

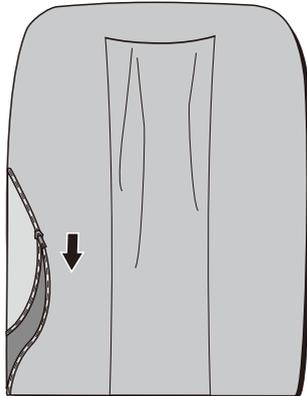

Preparation Before Use


Remote Controller Connection

- Connect the cable of remote controller with the cable under seat.

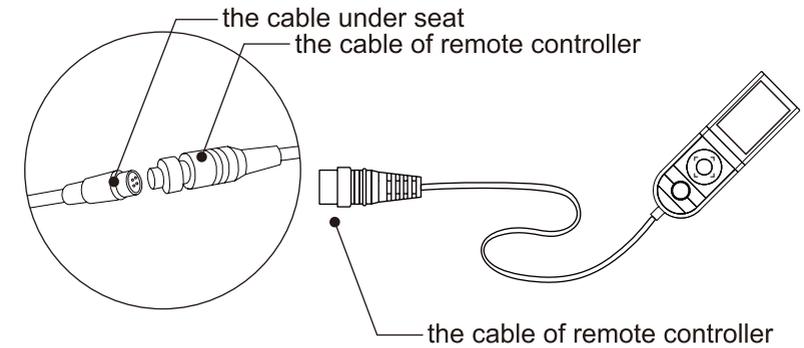

Connect power

- Plug the power cord into power inlet, turn on the power switch.

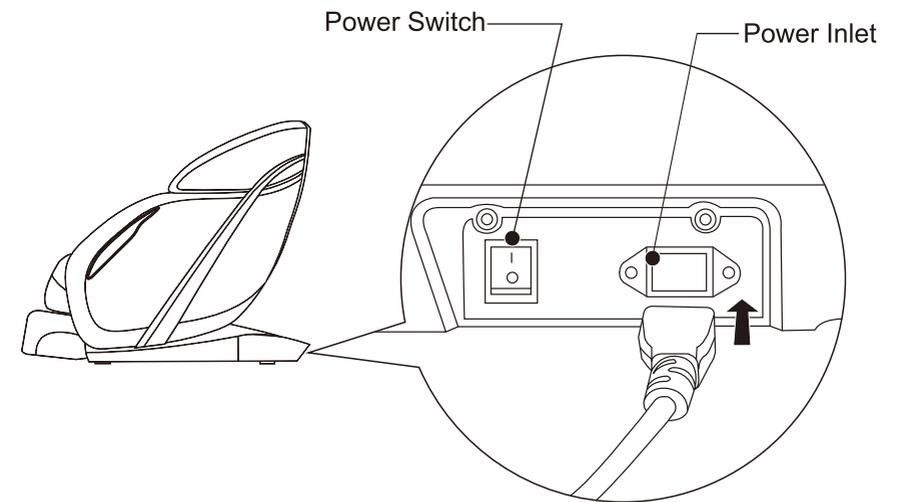

Troubleshoot

If there is still an abnormality after the following checks, to prevent any accident, please stop using the massage chair immediately. Please unplug the power cord from the outlet and contact with the dealer or the nearby customer service center.

Problem	Possible cause/action	
The massage rollers move up and then stop.	<ul style="list-style-type: none"> In order not to affect the body, the automatic timer function will move the massage roller to the upper end when the massage is over . 	Inevitable in structure, not abnormal
Noise during the massage	<ul style="list-style-type: none"> The sound of clapping; Friction sound of the massage wheel and fabric during kneading; The sound of the massage wheel when lifting and kneading; The sound during air pressure massage; The sound of the inflator pump; The sound of airbag exhausting; The sound of the backrest up and down. 	
The massage rollers will stop during the massage.	<ul style="list-style-type: none"> If the force applied to the massage rollers is too large, the massage rollers will stop running. Lift your body slightly when using it, or raise the backrest slightly. (especially those who weigh more than 100kg, please pay attention when using) 	After checking, if there is still an abnormality, please stop using the massage chair immediately.
Press the power button, but the massage chair doesn't work properly or cannot connect to the power.	<ul style="list-style-type: none"> Please check the following: <ol style="list-style-type: none"> Is the power plug fully inserted into the socket? Is the main power switch on the left rear of the unit turned on? 	
The power cord and plug are abnormally hot.	<ul style="list-style-type: none"> Please stop using immediately. 	Please contact with your dealer or customer service. Do not disassemble or repair it yourself or by non-professionals.

Cleaning and Maintenance

Please follow the below steps to clean leather and plastic parts.

1. Please ensure the main switch is turn off and the power plug is unplugged from the electrical outlet.
2. Dip a soft, dry cloth in water or hot water containing 3% to 5% neutral detergent and wring it thoroughly.
3. Clean the leather and plastic parts.
4. Then wipe with a dry soft cloth
5. Let it dry naturally

Warning

- Do not use petrol, caustic cleaning products, bleach or pesticides to clean the chair.
- Do not dry the surface with a blower.
- Do not iron the fabric.
- Do not pull the plug with wet hands
- Please unplug the chair from the main power supply during maintenance.
- Please use the dust cover if you won't use the chair for a long time.



Specifications

Model number	FJ 999
Rated Voltage	100-240V~
Rated Frequency	50-60 Hz
Rated Power	170W
Operating Time	Default 20 minutes, adjustable selection 10/15/20/25/30 minutes
Upright position - Approximately	1400(L)x755(W)x1110(H)mm
Reclined position - Appr	1610(L)x755(W)x920(H)mm

Cảm ơn bạn đã lựa chọn và ủng hộ sản phẩm của chúng tôi. Vui lòng đọc hướng dẫn sử dụng cẩn thận theo thứ tự để hiểu đầy đủ. Sau khi đọc, hãy giữ nó cho lần duyệt tiếp theo. Chúng tôi nắm giữ bản quyền nội dung cuối cùng để thiết kế sản phẩm. Kích thước và thông số kỹ thuật có thể thay đổi mà không cần thông báo trước để giúp cải thiện sản phẩm hơn nữa.

Contents

MỤC LỤC

An toàn.....	18-23
Trượt bang	24-26
Cấu trúc bên ngoài.....	24
Phím tắt.....	24
Bộ điều khiển.....	25
Điều khiển xâm nhập.....	26
Màn hình điều khiển.....	27
Chuẩn bị trước.....	28-31
Di chuyển ghế.....	28
Đặt ghế.....	28
Cài đặt chân ghế.....	29
Cài đặt đệm tựa lưng và gối đầu.....	30
Kết nối điều khiển từ xa.....	31
Kết nối nguồn.....	31
Khắc phục sự cố.....	32
Vệ sinh và bảo trì.....	33
Giấy chứng nhận.....	34

Những chỉ dẫn an toàn

HƯỚNG DẪN AN TOÀN QUAN TRỌNG

Ghế massage này chỉ dành cho hộ gia đình. Khi sử dụng thiết bị điện, các biện pháp phòng ngừa cơ bản phải luôn được tuân thủ, bao gồm như sau
Đọc tất cả các hướng dẫn trước khi sử dụng ghế massage này.

NGUY HIỂM (Giảm nguy cơ bị điện giật)

- 1) Luôn rút phích cắm ghế này khỏi nguồn điện ngay sau khi sử dụng và trước khi vệ sinh.
- 2) Không bao giờ sử dụng ghim hoặc ốc vít kim loại khác với ghế.
- 3) Kiểm tra cẩn thận lớp da ghế trước mỗi lần sử dụng. Không sử dụng ghế nếu lớp phủ cho thấy bất kỳ dấu hiệu xấu đi, chẳng hạn như kiểm tra, phồng rộp, hoặc nứt.
- 4) Giữ ghế khô ráo. Không hoạt động trong điều kiện ẩm ướt.

CẢNH BÁO (Giảm nguy cơ bị bỏng, hỏa hoạn, điện giật hoặc thương tích cho người dùng)

- 1, Không bao giờ được quên rút phích cắm. Rút phích cắm ra khỏi ổ cắm khi không sử dụng và trước khi bật hoặc tháo các bộ phận.
- 2) Không cho ghế hoạt động dưới chăn hoặc gối. Nhiệt độ quá cao có thể xảy ra và gây ra hỏa hoạn, điện giật hoặc thương tích cho người.
- 3) Cần có sự giám sát chặt chẽ khi sử dụng cho trẻ em, thương binh hoặc người khuyết tật. Giữ trẻ em tránh xa phần chân mở rộng.
- 4) Chỉ sử dụng thiết bị này cho mục đích sử dụng của nó như được mô tả trong hướng dẫn này. Không sử dụng các phương pháp đi kèm không được khuyến nghị bởi nhà sản xuất.
- 5) Không bao giờ vận hành ghế nếu có dây hoặc phích cắm bị hỏng, nếu ghế không hoạt động tốt hoặc nếu ghế bị rơi, ngâm nước.
Trả lại ghế cho trung tâm dịch vụ để kiểm tra và sửa chữa.
- 6) Không di chuyển ghế bằng dây hoặc sử dụng dây làm tay cầm.
- 7) Giữ dây điện cách xa bề mặt nóng.
- 8) Không bao giờ vận hành ghế khi các lỗ thoát khí bị chặn. Giữ cho không khí thoáng không có xơ, tóc và những thứ tương tự.
- 9) Không bao giờ thả hoặc chèn bất kỳ vật nào khi ghế đang hoạt động

Những chỉ dẫn an toàn

- 10) Không sử dụng ngoài trời.
- 11) Không vận hành khi sử dụng các sản phẩm dạng aerosol (bình xịt) hoặc nơi oxy đang được quản lý.
- 12) Để ngắt kết nối, chuyển tất cả các nút điều khiển sang vị trí tắt, sau đó rút phích cắm ra khỏi ổ cắm.
- 13) Nhiệt độ đủ cao có thể gây bỏng xảy ra bất kể cài đặt điều khiển như thế nào đi nữa. Không sử dụng cho trẻ sơ sinh hoặc trên người đang ngủ hoặc người bất tỉnh. Không sử dụng trên da không nhạy cảm hoặc trên người có tuần hoàn máu kém. Thường xuyên kiểm tra da tiếp xúc với khu vực nóng của thiết bị để giảm nguy cơ phồng rộp.
- 14) Không nghiền nát - Tránh các nếp gấp sắc nét trên da ghế
- 15) Không sử dụng ghế khi mặc quần áo mỏng hoặc đeo trang sức lỏng lẻo.
- 16) Giữ tóc dài gọn gàng trong khi sử dụng.
- 17) Chỉ kết nối thiết bị này với ổ cắm được nối đất đúng cách. Xem hướng dẫn nối đất trước khi cài đặt
- 18) Ghế không được tiếp xúc với chất lỏng hoặc vật thể nào chứa đầy chất lỏng, như bình hoa chẳng hạn.
- 19) Một thiết bị có cấu trúc LỚP I sẽ được kết nối với Ổ cắm MAIN với kết nối tiếp đất bảo vệ
- 20) Bộ ghép thiết bị được sử dụng làm thiết bị ngắt kết nối, thiết bị ngắt kết nối sẽ vẫn hoạt động dễ dàng.
- 21) Ghế này không dành cho người sử dụng (kể cả trẻ em) bị giảm khả năng thể chất, giác quan hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được người lớn giám sát hoặc hướng dẫn về việc sử dụng an toàn.

An Toàn

LƯU NHỮNG HƯỚNG DẪN

Ghế massage này chỉ dành cho sử dụng trong gia đình.

● Môi trường sử dụng

- Không sử dụng ghế massage trong môi trường quá ẩm hoặc bụi vì điều này có thể dẫn đến trục trặc hoặc điện giật.
- Không sử dụng ghế massage trong phòng có nhiệt độ 104F trở lên.
- Không để ghế massage tiếp xúc với lò sưởi, bếp lò hoặc ánh sáng mặt trời trực tiếp.
- Đặt và sử dụng ghế massage trên một sàn chẵn, chống trượt.
- Ghế massage được thiết kế để sử dụng tại nhà và không dành cho mục đích thương mại.

THẬN TRỌNG

- Ghế massage chỉ được sử dụng trong nhà.
- Nếu bạn sử dụng ghế massage trong phòng lạnh, không được tăng nhiệt độ phòng đột ngột. Chúng tôi khuyên bạn nên tăng nhiệt độ dần dần đến mức bình thường.
- Nếu ghế massage được bảo quản ở nơi lạnh và được đưa vào môi trường ấm áp, nên đợi một giờ trước khi sử dụng. Điều này là do hiệu suất của nó có thể không ở mức tối ưu, vì có thể có những giọt nước trên các bộ phận cơ học do ngưng tụ. Sử dụng ghế massage trong điều kiện như vậy có thể dẫn đến hỏng hóc.

HƯỚNG DẪN AN TOÀN QUAN TRỌNG

● Biện pháp phòng ngừa an toàn

- Để đảm bảo sử dụng ghế massage an toàn và đúng cách, không vận hành nó mà không đọc kỹ hướng dẫn sử dụng này.
- Không sử dụng ghế massage khi bọc ghế hoặc ghế bị tháo ra. Điều này có thể gây thương tích hoặc trục trặc.
- Không sử dụng ghế massage kết hợp với các thiết bị trị liệu hoặc chăn điện khác, v.v., vì điều này có thể dẫn đến không hiệu quả hoặc chấn thương.
- Không sử dụng ghế massage một giờ trước hoặc sau khi ăn vì điều này có thể có tác dụng phụ đối với người dùng.
- Không cho phép trẻ em hoặc thú cưng chơi quanh ghế mát xa, ví dụ: phía sau tựa lưng, dưới ghế hoặc tựa chân của ghế massage. Điều này có thể dẫn đến chấn thương.

An Toàn

- Không tựa người hoặc để các vật nặng lên phần tay vịn của ghế vì điều này có thể gây trục trặc máy hoặc chấn thương.
- Không sử dụng ghế massage khi cơ thể bạn đang bị ướt.
- Không vận hành ghế massage bằng tay ướt. Không nên sử dụng massage trong hơn 15 phút.
- Không thực hiện massage liên tục trên cùng một vị trí của cơ thể trong hơn 5 phút mỗi lần vì điều này có thể dẫn đến kích thích quá mức và có thể có tác dụng phụ.
- Không đặt tay hoặc chân của bạn dọc theo đường đi của con lăn massage trong khi sử dụng vì điều này có thể gây thương tích.
- Dừng hoạt động ngay lập tức nếu bạn gặp bất kỳ khó chịu.
- Sản phẩm này không dành cho việc tự điều trị các tình trạng bệnh nên tham khảo ý kiến của bác sĩ chăm sóc sức khỏe.
- Những người đang dùng thuốc hoặc các thiết bị y tế, xin vui lòng tham khảo ý kiến bác sĩ trước khi sử dụng.
- Vui lòng không sử dụng sản phẩm nếu bạn cảm thấy không khỏe.
- Tháo tất cả khăn quàng cổ, cà vạt, dây chuyền và đồ trang sức trước khi sử dụng máy massage.

● Tham khảo ý kiến bác sĩ nếu bạn đang gặp các vấn đề

- Đang nghỉ ngơi theo chỉ định của bác sĩ.
- Bị rối loạn cột sống, một tình trạng cột sống bất thường hoặc đã bị chấn thương cột sống.
- Có bệnh tiểu đường, loãng xương hoặc suy giảm cảm giác.
- Rối loạn chức năng khớp có sử dụng máy tạo nhịp tim hoặc các thiết bị y tế điện tử khác.
- Có thể đang mang thai
- Bị viêm tĩnh mạch hoặc huyết khối.
- Tăng nguy cơ đông máu.
- Đã phẫu thuật gần đây có dính phẫu thuật, ốc vít, hoặc bất cứ thứ gì được cấy ghép cơ học trong cơ thể bạn.

An toàn

• Không nên sử dụng ghế massage

Trong các trường hợp sau, vui lòng tắt công tắc nguồn chính ngay lập tức và ngắt kết nối dây nguồn khỏi ổ cắm điện:

- Nếu nước vô tình bị đổ chất lỏng lên ghế massage. Điều này có thể dẫn đến điện giật hoặc trượt.
- Nếu vải của tựa lưng bị rách và các thành phần bên trong bị lộ ra
- Nếu cảm thấy đau hoặc khó chịu trong khi xoa bóp, hãy ngừng hoạt động ngay lập tức và tham khảo ý kiến bác sĩ
- Nếu bạn phát hiện bất kỳ trục trặc hoặc bất kỳ tình trạng bất thường nào khác trong khi hoạt động.
- Nếu có sự cố mất điện. Chấn thương có thể xảy ra khi điện có lại bất ngờ
- Nếu có sét.

• Lắp ráp và sửa chữa ghế massage

- Không tháo rời nắp tựa lưng của ghế massage. Chạm vào các bộ phận bên trong có thể dẫn đến trượt hoặc điện giật.
- Ghế massage phải được kỹ thuật viên chuyên nghiệp sửa chữa. Đừng cố gắng tự tháo rời hoặc sửa chữa ghế massage.

• Những điều cần lưu ý về phích cắm và dây nguồn

- Kiểm tra xem điện áp xoay chiều (AC) có tương ứng với các thông số kỹ thuật được chỉ định cho ghế massage không.
- Không kết nối hoặc ngắt kết nối phích cắm điện khỏi ổ cắm điện bằng tay ướt. Điều này có thể dẫn đến trượt hoặc điện giật.
- Khi ngắt kết nối phích cắm, rút nó ra bằng cách giữ phích cắm chứ không phải rút dây.
- Mặc dù hoạt động của ghế sẽ tự động dừng bởi chức năng tự động hẹn giờ nhưng hãy luôn nhớ tắt công tắc nguồn chính sau khi sử dụng.
- Không đặt dây nguồn dưới ghế massage hoặc bất kỳ vật nặng nào khác.
- Không quấn dây nguồn quanh ghế massage vì điều này có thể làm hỏng dây và dẫn đến hỏa hoạn hoặc điện giật.
- Không vận hành ghế massage với dây bị hỏng hoặc dây bị lỏng lẻo
- Không sử dụng ghế massage nếu ổ cắm điện bị lỏng.
- Nếu dây nguồn bị hỏng, cần thay thế bằng dây đủ điều kiện an toàn


An toàn

Hướng dẫn nối đất


Ghế massage này phải được tiếp đất. Nếu nó bị hỏng hoặc vỡ, nối đất cung cấp một đường dẫn ít nhất cho dòng điện để giảm nguy cơ bị điện giật. Sản phẩm này được trang bị một dây có dây dẫn nối đất thiết bị và phích cắm tiếp đất. Phích cắm phải được cắm vào ổ cắm thích hợp được lắp đặt và nối đất phù hợp với tất cả các quy tắc và quy định của địa phương.

NGUY HIỂM - Kết nối Improper của dây dẫn nối đất thiết bị có thể dẫn đến có nguy cơ bị điện giật. Kiểm tra cùng với một kỹ thuật viên có chuyên môn hoặc nhân viên phục vụ nếu bạn nghi ngờ ghế có được nối đất đúng cách hay không. Không sửa đổi phích cắm được cung cấp kèm theo sản phẩm. Nếu không phù hợp với ổ cắm, hãy lắp đặt ổ cắm aproper bởi một kỹ thuật viên có chuyên môn.

Ghế massage này được sử dụng trên một mạch điện tiêu chuẩn 100-240V~ và có một phích cắm nối đất trông giống như phích cắm được minh họa trong bản phác thảo A như minh họa sau đây. Đảm bảo rằng ghế được kết nối với ổ cắm có cùng cấu hình với phích cắm. Không nên sử dụng bộ chuyển đổi với sản phẩm này.

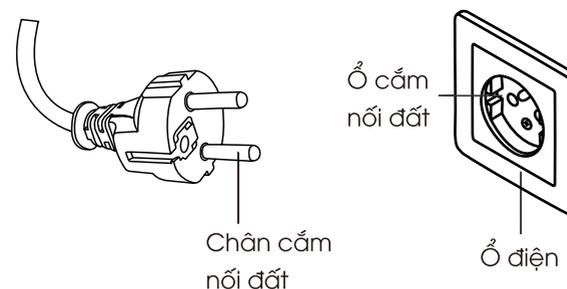

CẤU TRÚC BÊN NGOÀI

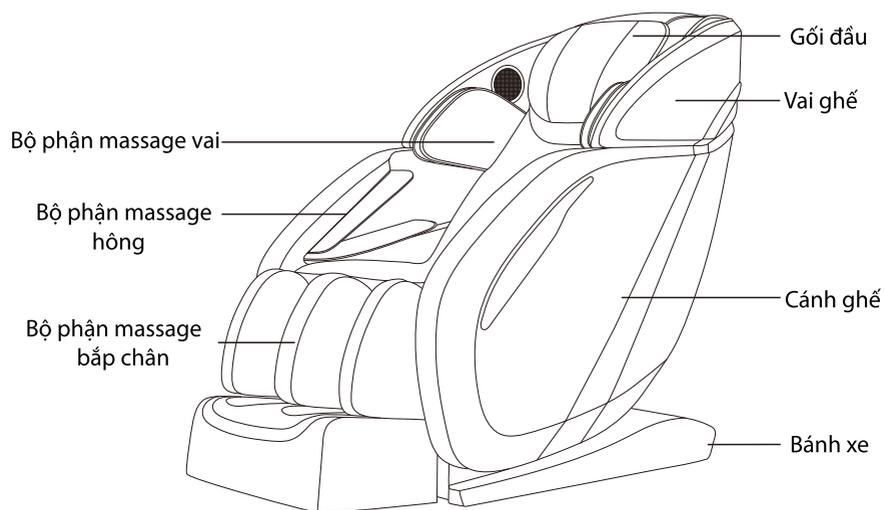


CÁC PHÍM TẮT

	NÚT NGUỒN: để bật / tắt nguồn
	CHẾ ĐỘ TỰ ĐỘNG: Nhấn nút để chuyển Chế Độ Tự động. Có 12 chế độ tự động: Văn phòng, Thư giãn, Kéo giãn, Ngủ ngon, Cột sống, Phục hồi, Người cao tuổi, SPA, Thể thao, Chuyên sâu cổ - vai - gáy, Chuyên sâu lưng eo, Lái xe. Mỗi khi nhấn nút, chế độ tự động có thể được chọn lần lượt.
	TẠM DỪNG: Nhấn nút này để tạm dừng các chế độ massage. Nhấn một lần nữa để tiếp tục chế độ massage ban đầu.
	Nâng lưng: Nhấn nút để nâng lưng ghế. Nhấn lại nút để xác nhận vị trí đạt được góc độ mong muốn.
	Ngả lưng: Nhấn nút để hạ lưng ghế xuống. Nhấn lại nút để xác nhận vị trí khi đạt được góc độ mong muốn.

CÁC PHẦN CẤU TẠO

Bộ điều khiển

(Màn hình điều khiển sẽ hiển thị khác nhau với từng sản phẩm cụ thể)

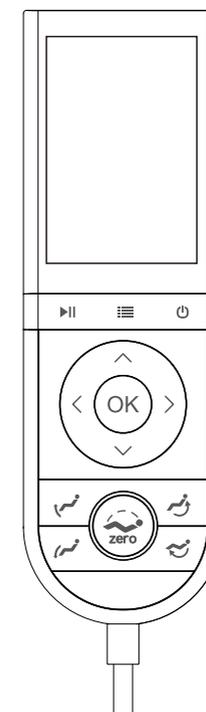


CẢNH BÁO

- Không ngồi, bước hoặc đặt các vật nặng lên bộ điều khiển.
- Không thả, làm rơi bộ điều khiển. Bộ điều khiển được khuyến nghị được đặt trong túi bảo quản khi không sử dụng.
- Không tác động lực quá mức lên bộ điều khiển.
- Không xử lý bộ điều khiển với bàn tay ướt.
- Không vận hành bộ điều khiển bằng cách sử dụng các vật sắc nhọn hoặc cứng. Nó có thể dẫn đến hỏng, rách, vỡ.

HƯỚNG DẪN SỬ DỤNG BỘ ĐIỀU KHIỂN


Hướng dẫn	Nút	Chức năng
Nút nguồn		Kết nối nguồn điện, nhấn nút này để khởi động ghế massage. Nó sẽ quét cơ thể sau đó bắt đầu chương trình tự động mặc định để massage.
Danh bạ		Nhấn nút này để vào giao diện UI.
Tạm dừng		Nhấn nút này để tạm dừng chức năng massage. Nhấn một lần nữa để tiếp tục chức năng massage ban đầu.
Hướng 4 chiều và nút OK		Trong giao diện UI, nhấn mũi tên & phím để chọn chức năng tương ứng, nhấn nút OK để xác nhận chọn chức năng.
Massage không trọng lực		Nhấn nút để ngả ghế về góc Zero-G. Màn hình hiển thị biểu tượng Zero-G. Nếu biểu tượng không xuất hiện trên màn hình, Zero-G chức năng bị tắt.
Lên / Xuống Chân		Nhấn nút chân lên / xuống để điều chỉnh góc chân.
Lên/ Xuống Vai		Nhấn nút tựa lưng lên / xuống để điều chỉnh các góc tựa lưng.

Màn hình điều khiển

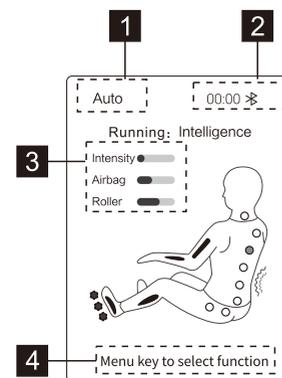

(Màn hình chi tiết tùy vào thực tế sản phẩm)

- 1 Chế độ massage
- 2 Thời gian massage
- 3 Cường độ massage
- 4 Chỉ dẫn

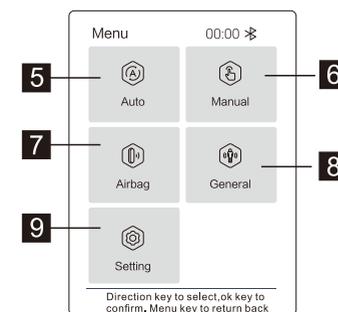


- 5 Có thể chọn nhiều bài tập xoa bóp tự động để thực hiện cùng lúc
- 6 Có thể chọn nhiều bài tập xoa bóp thủ công để thực hiện cùng lúc
- 7 Có thể điều chỉnh hoạt động túi khí và cường độ của túi khí
- 8 Nhấn nút này để điều chỉnh chức năng không trọng lực, bi lăn, nhiệt hồng ngoại
- 9 Có thể điều chỉnh thời gian massage. Có thể lựa chọn ngôn ngữ phù hợp

CHUẨN BỊ TRƯỚC KHI SỬ DỤNG


Di chuyển ghế

- Vui lòng tắt nút nguồn chính và rút nguồn điện khỏi ổ cắm điện.
- Nghiêng ghế về phía sau như trong hình và xoay đến vị trí mong muốn.
- Vui lòng phủ sàn bằng thảm khi di chuyển ghế massage trong mọi trường hợp vì bất kỳ thiệt hại nào của sàn cũng có thể xảy ra.

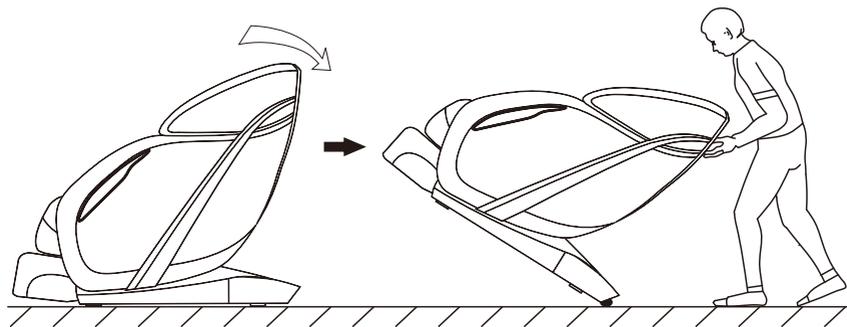

Nơi đặt ghế



Vui lòng đảm bảo rằng có một khoảng không gian hơn 5cm phía sau ghế massage, và hơn 35cm trước ghế massage để cho phép ghế ngã mà không bị cản trở trong quá trình hoạt động.

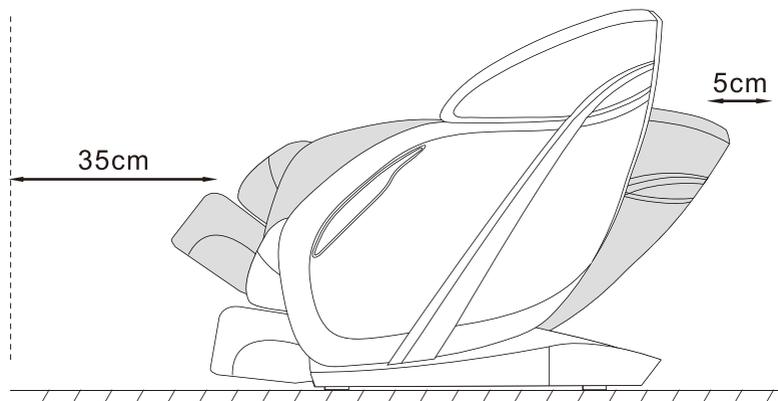



CHUẨN BỊ TRƯỚC KHI SỬ DỤNG

Cài đặt chân ghế



- Như trong hình, chèn ống khí (1) và cáp DC (2) vào các khe.

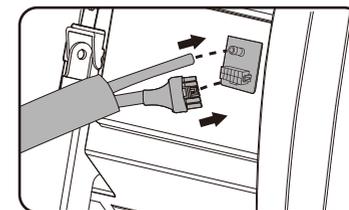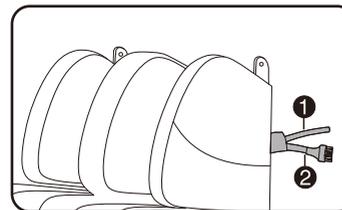

- Như trong hình, cài đặt các khe (3) của chân ghế vào phần (4) cố định.

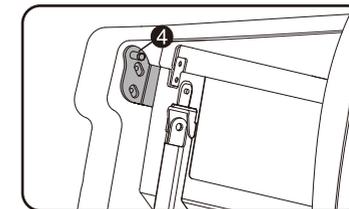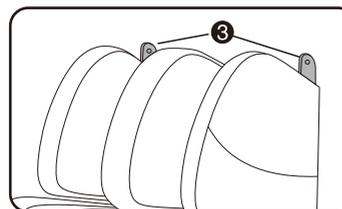

- Như trong hình, chèn khóa khóa (5) vào mỗi bên, kết thúc cài đặt.

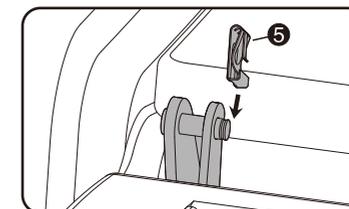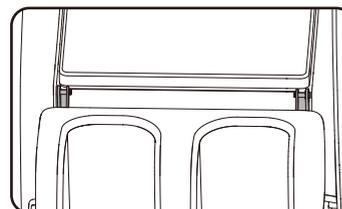


NHỮNG THAO TÁC CẦN CHUẨN BỊ TRƯỚC KHI SỬ DỤNG

Cài đặt đệm tựa lưng và gối đầu:

- Đặt miếng đệm vào tựa lưng có khóa kéo.
- Đặt miếng gối đầu vào tựa lưng bằng khóa dán.




- Gắn mặt trái của miếng đệm tựa lưng vào tựa lưng có khóa kéo, giống như mặt kia.

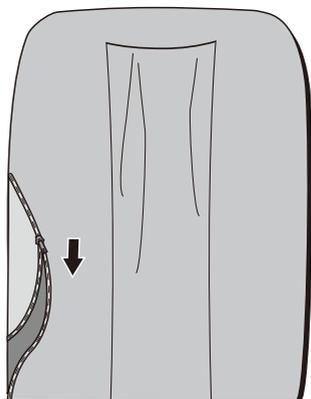

CHUẨN BỊ TRƯỚC KHI SỬ DỤNG


Kết nối điều khiển từ xa

- Kết nối cáp của bộ điều khiển từ xa với cáp dưới ghế.

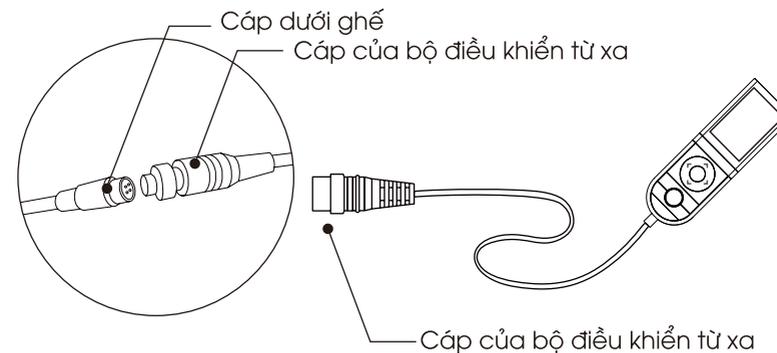

Kết nối nguồn

- Cắm dây nguồn vào đầu nguồn, bật công tắc nguồn.

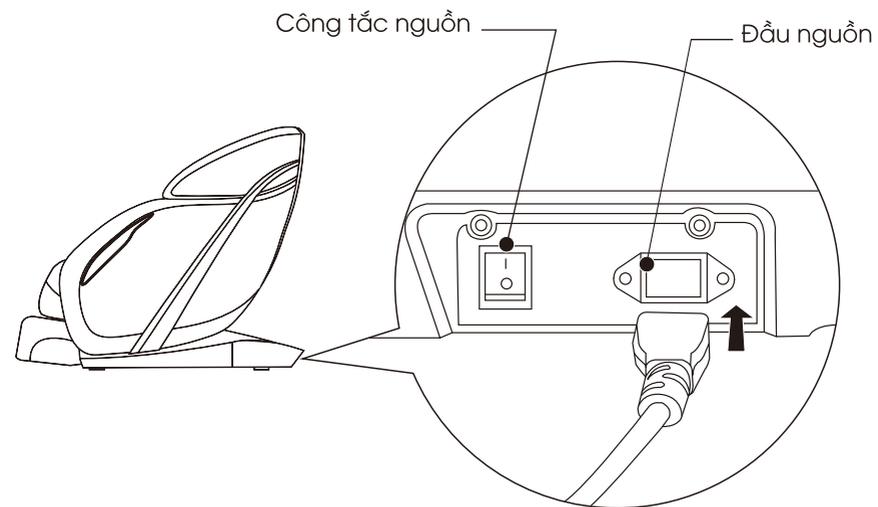

Khắc phục sự cố

Xin vui lòng ngừng sử dụng ghế massage ngay lập tức nếu vẫn có sự bất thường sau các lần kiểm tra để phòng tránh mọi tai nạn. Vui lòng rút phích cắm dây nguồn từ ổ cắm và liên hệ với các đại lý gần đó hoặc trung tâm dịch vụ khách hàng.

Vấn đề	Nguyên nhân/ Hành động nên làm	
Các con lăn massage di chuyển lên và sau đó dừng lại	Để không ảnh hưởng đến cơ thể người dùng, chức năng hẹn giờ tự động sẽ di chuyển con lăn massage lên đầu trên khi quá trình massage kết thúc.	Không thể tránh khỏi trong cấu trúc, không phải hiện tượng bất thường
Tiếng ồn khi massage	<ul style="list-style-type: none"> Tiếng của thủ thuật vỗ Âm thanh ma sát của con lăn massage và vải trong quá trình nhào nặn Tiếng đường dây con lăn khi nâng và nhào nặn Âm thanh áp suất không khí; Âm thanh của bơm hơi; Âm thanh của túi khí khi xả khí; Âm thanh của tựa lưng lên xuống. 	Không thể tránh khỏi trong cấu trúc, không phải hiện tượng bất thường
Các con lăn massage dừng lại trong quá trình massage	<ul style="list-style-type: none"> Nếu lực tác dụng lên các con lăn massage quá lớn, các con lăn massage sẽ ngừng hoạt động. Nâng cơ thể của bạn một chút khi sử dụng nó, hoặc nâng nhẹ phần tựa lưng. <p>(Đặc biệt là những người nặng hơn 100kg, vui lòng chú ý khi sử dụng)</p>	Sau khi kiểm tra, nếu vẫn còn bất thường, hãy ngừng sử dụng ghế massage ngay lập tức.
Nhấn nút nguồn, nhưng ghế massage không hoạt động hoặc không thể kết nối với nguồn điện.	Vui lòng ghi nhớ những điều sau: <ol style="list-style-type: none"> Ổ cắm có được cắm hoàn toàn vào ổ không? Công tắc nguồn phía sau bên trái có bật không? 	Sau khi kiểm tra, nếu vẫn còn bất thường, hãy ngừng sử dụng ghế massage ngay lập tức.
Dây nguồn và phích cắm nóng bất thường	Hãy ngừng sử dụng ngay lập tức.	Sau khi kiểm tra, nếu vẫn còn bất thường, hãy ngừng sử dụng ghế massage ngay lập tức.
	Vui lòng liên hệ với đại lý hoặc trung tâm dịch vụ khách hàng của bạn.	
	Không tự mình sửa chữa hoặc sửa chữa nó bằng những người không có chuyên môn	

Vệ sinh và bảo trì

Vui lòng làm theo các bước dưới đây để làm sạch da và nhựa:

- Hãy đảm bảo rằng công tắc chính đã tắt và phích cắm nguồn rút phích cắm từ ổ cắm điện.
- Nhúng một miếng vải mềm, khô vào nước hoặc nước nóng chứa 3% đến 5% chất tẩy rửa trung tính và vắt nó kỹ lưỡng.
- Làm sạch da và các bộ phận bằng nhựa.
- Sau đó lau lại bằng vải mềm khô
- Để khô tự nhiên

Cảnh báo

- Không sử dụng xăng dầu, làm sạch da sản phẩm, thuốc tẩy hoặc thuốc trừ sâu để làm sạch cái ghế.
- Không làm khô bề mặt bằng quạt gió.
- Không được ủi vải.
- Không rút phích cắm bằng tay ướt.
- Vui lòng rút dây ra khỏi ghế trong quá trình bảo trì.
- Vui lòng sử dụng cẩn bị nếu bạn không sử dụng ghế trong một thời gian dài.



Thông số kỹ thuật

Mã sản phẩm	FJ 999
Điện áp định mức	100-240V~
Tần số định mức	50-60 Hz
Công suất định mức	170W
Thời gian hoạt động	Mặc định 20 phút, có thể điều chỉnh lựa chọn 10/15/20/25/30 phút
Kích thước ở vị trí thẳng đứng	1400 (L) x755 (W) x1110 (H) mm
Kích thước ở vị trí nghiêng	1610 (L) x755 (W) x920 (H) mm