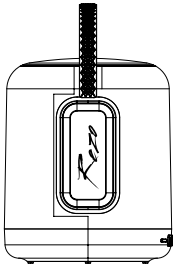
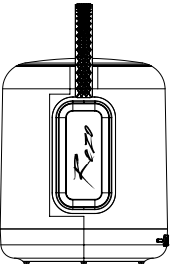

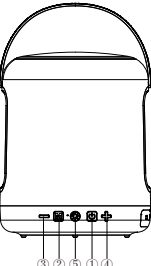
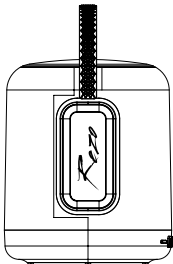
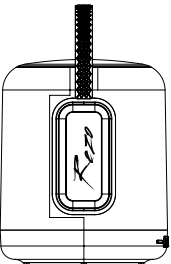

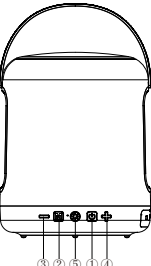


材质: 80g双铜纸
尺寸: 75x75mm

BLUETOOTH SPEAKER Rero Home Series Bag  User Manual Thank you for purchasing Bluetooth Speaker Rezo Home Series Bag. Please carefully read user guide in properly and keep this for further reference.	Packing list  1 pc speaker  1 pc Type-C charging cable  1 pc user manual	Product specifications: Bluetooth version: V5.3 Working distance: 10m SNR: ≥90db Battery: 3.7V about 2400mAh Playing time: about 4-6 hour Speaker Power: 4Q/8W*1 Frequency response:120Hz-20KHz Unit size: 126.8*126.8*155mm Unit weight: 787gr (not includ accessories) Charging:5V/1000mAh Charging time: about 3.5-4.5 tiếng  Key function direction ① Power Button ② Mode button ③ Previous track/Volume down ④ Next track/Volume up ⑤ Light button	① Power Button Power On: Long press the power button for 3 seconds in the shutdown state; when the speaker starts up, the speaker will sound "ting, ting, ting, bluetooth mode" and the blue light flashes. Power off: Long press the power button for 3 seconds in the boot state to shut down the speaker. The speaker will soung "ting, ting, ting" and the blue light turns off. When play music, short press for play/pause. Bluetooth Connection 1.Press and hold the power key for 3s to start the machine, there is a promptone, Bluetooth enters the pairing mode, and the blue indicator flashes quickly. 2.The first connection, turn on the mobilephone/laptop..., turn on Bluetooth, search for the Bluetooth code name "Rezo Home Series Bag " and click; after a few seconds, you will hear the prompt tone "ting ting ting" of successful pairing and connection, the mobile phone displays connected, and the blue light is on. 3. In subsequent use, as long as the device's bluetooth is turned on, it can be automatically connected. Note: 4. If you want to connect to another device, double press"M" and hear the prompt tone.	② Mode button When play music short press to switch model (USB card/TF card/AUX/Bluetooth/FM); TWS: While at the same time open two devices and not connected in the bluetooth mode, press the "M" key for 2-3 seconds either of the speaker until hear the sound, now it is TWS mode, then can paire the mobile. Press " M " key about 3s to cancel TWS function . In FM mode, short press to search station automatically, press again to stop searching. ③ Previous track/Volume down Short press " - " button when playing music, the player will play the last track. Long press " - " to decrease the volume continuously. ④ Next track/Volume up Short press " + " button when playing music, the player will play the last track; Long press " + " to decrease the volume continuously. ⑤ Light button Short press for option of the LED flashing light, press long to close/open the LED light .	Slot function: 1. DC 5V slot: Use the standard type-c charging cable for power charging, Charging with a DC5V~1A USB power adapter 2. TF slot: It can decode and play MP3 format audio when put TF card into the slot. 3. USB slot: It can decode and play MP3 format audio when put the USB card into the slot. 4. AUX line in slot: Use the jack 3.5 head input through outside devices. FM mode Press the M button into FM mode, short press power button to search station automatically, press again to stop searching. Then, short press "+", "-" to choose the FM station. Note: In the FM mode, need in micro charging cable or AUX cable to increase the FM radio signal. Telephone function When calling, short press power button to answer, double-click to refuse, short press to hang up the call after connecting.	Attentions: 1. Do not use abrasive cleaners to clean this product. 2. Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components. 3. Do not attempt to disassemble this product to make any modifications. 4. Do not use this product in the rain. 5. If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust. 6. If you saw smoke coming out of the machine or other improper phenomenon , please contact the retailer to solve the issue immediately. 7. Do not throw the machine. 8. If this speaker crash during use, you can press and hold the power button for 8 seconds to reset and shut down. 9. USB/TF card pls use FAT32 format. 10. Speaker will close automatically after 30 mins if disconnect Bluetooth & torchlight not working Note! In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive. Thank you for your purchase.
--	--	--	--	--	---	--

LOA BLUETOOTH Rero Home Series Bag  Hướng dẫn sử dụng Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo Home Series Bag. Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.	Bộ sản phẩm gồm  1 loa bluetooth  1 dây sạc loa type C  1 hướng dẫn sử dụng	Thông số kỹ thuật sản phẩm: Phiên bản bluetooth: V5.3 Khả năng kết nối: 10m Tỉ lệ tín hiệu trên nhiễu: ≥90db Dung lượng pin: 3.7V khoảng 2400mAh Thời gian phát nhạc: khoảng 4-6 tiếng tùy âm lượng Công suất loa: 4Q/8W*1 Tần số: 120Hz-20KHz Kích thước: 126.8*126.8*155mm Trọng lượng: 787gr (không bao gồm phụ kiện) Sạc pin:5V/1000mAh Thời gian sạc: khoảng 3.5-4.5 tiếng  Chức năng các phím ① Nút nguồn ② Nút chuyển chế độ kết nối ③ Phát bài nhạc trước đó /Giảm âm lượng ④ Phát bài nhạc tiếp theo/Tăng âm lượng ⑤ Nút điều khiển đèn	① Nút nguồn Bật nguồn: Nhấn và giữ nút nguồn trong 3 giây ở trạng thái tắt máy, loa sẽ vang lên "tinh, tinh, tinh, bluetooth mode" và đèn xanh lam nhấp nháy. Tắt nguồn: Nhấn và giữ nút nguồn trong 3 giây ở trạng thái khởi động để tắt loa, loa sẽ vang " tinh tinh tinh" và đèn xanh lam tắt. Khi phát nhạc nhấn nhanh để phát/tạm dừng. Kết nối Bluetooth 1. Nhấn và giữ phím nguồn trong 3s để khởi động máy, có âm báo nhắc, Bluetooth chuyển sang chế độ chờ ghép nối và đèn báo màu xanh lam nhấp nháy nhanh. 2. Lần đầu tiên kết nối, bật điện thoại di động/ máy tính/..., bật Bluetooth, tìm kiếm tên Bluetooth "Rezo Home Series Bag " và nhấp vào; sau vài giây, bạn sẽ nghe thấy âm báo nhắc ghép nối " tinh tinh tinh" và kết nối thành công, điện thoại di động hiển thị được kết nối và đèn xanh lam sẽ sáng. 3. Trong lần sử dụng tiếp theo, Loa có thể tự động kết nối khi Bluetooth của thiết bị mà được kết nối gần nhất đang mở. Lưu ý: 4. Nếu muốn kết nối với thiết bị khác, nhấn hai lần nút "M" và sẽ có âm thanh vang lên.	② Nút chuyển chế độ kết nối Khi phát nhạc, bấm nhanh để chuyển đổi chế độ phát (USB/thẻ TF/AUX/ Bluetooth/FM); TWS: Mở nguồn hai loa cùng một thời gian và ở trạng thái không kết nối bluetooth, nhấn phím "M" trong 2-3 giây cho một trong hai loa cho đến khi nghe thấy gọi ý, bây giờ là chế độ TWS, sau đó có thể ghép nối điện thoại di động. Nhấn phím "M" khoảng 3 giây để hủy chức năng TWS. Ở chế độ FM, nhấn nhanh để tự động tìm đài phát, nhấn lần nữa để dừng tìm kiếm. ③ Phát bài nhạc trước đó /Giảm âm lượng Nhấn nhanh nút " - " khi phát nhạc, loa sẽ phát lại bài hát trước đó. Nhấn và giữ " - " để giảm âm lượng. ④ Phát bài nhạc tiếp theo/Tăng âm lượng Nhấn nhanh nút " + " khi phát nhạc, loa sẽ phát bài hát tiếp theo. Nhấn và giữ " + " để tăng âm lượng liên tục. ⑤ Nút điều khiển đèn Nhấn nhanh phím đèn để tùy chọn đèn nhấp nháy LED, nhấn giữ để đóng/mở đèn LED.	Chức năng khe cắm: 1. Khe cắm DC 5V: Sử dụng cáp sạc type-c tiêu chuẩn để sạc điện, sạc loa bằng bộ chuyển đổi USB DC-5V ~ 1A 2. Khe cắm TF: Nó có thể giải mã và phát âm thanh định dạng MP3 khi đưa thẻ TF vào khe cắm. 3. Khe cắm USB: Nó có thể giải mã và phát âm thanh định dạng MP3 khi đặt thẻ USB vào khe cắm. 4. Khe cắm AUX: Sử dụng đầu jack 3.5 để có thể kết nối thiết bị bên ngoài. Chế độ FM Nhấn nút M để vào chế độ FM, nhấn nhanh nút nguồn để tự động tìm đài phát, nhấn lần nữa để dừng tìm kiếm. Sau đó, ấn nhanh nút "+", "-" để chọn kênh FM. Ghi chú: Ở chế độ FM, cần cắm cáp sạc micro hoặc cáp AUX để tăng tín hiệu đài FM. Chức năng cho cuộc gọi Khi có cuộc gọi đến, bấm nhanh nút nguồn để trả lời, bấm 2 lần để từ chối, bấm nhanh để ngắt cuộc gọi sau khi kết nối.	Chú ý: 1. Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm. 2. Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử. 3. Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa đổi nào. 4. Không sử dụng sản phẩm này dưới trời mưa. 5. Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo và sạc loa ít nhất mỗi tháng một lần để kéo dài tuổi thọ của loa cũng như tránh nhiệt độ quá cao và bụi. 6. Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác vui lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức. 7. Không tác động mạnh hay để vật nặng lên loa. 8. Nếu loa này bị lỗi trong quá trình sử dụng, bạn có thể nhấn và giữ nút nguồn trong 8 giây để đặt lại và tắt. 9. Thẻ USB/TF vui lòng sử dụng định dạng FAT32. 10. Loa sẽ tự động đóng sau 30 phút nếu ngắt kết nối Bluetooth & đèn không hoạt động Ghi chú! Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi. Cảm ơn bạn vì đã mua hàng.
--	---	---	--	--	---	---