


尺寸: 60mm*90mm

BLUETOOTH SPEAKER


Rezo Play Pro

User Manual

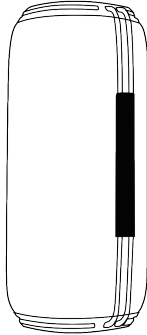


Thank you for purchasing Bluetooth Speaker Rezo Play Pro.
Please carefully read user guide in properly and keep this for further reference

Packing list



- 1 pc speaker
- 1 pc user manual
- 1 pc Type C charging cable

Key function direction

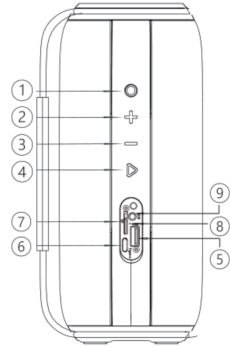

Key function direction

- Power switch: long press to turn on/off, short press to change LED mode double click function switch (Bluetooth/USB/AUX)
- Short press to volume up, long press to change into next song.
- Short press to volume down, long press to change into last song.
- Play switch, short press: play / pause; when calling, press one time for answer the phone, press again for reject the calling , click twice to call the latest incoming / outgoing call.
- USB card port, support MAX 64G flash,Compatible with WAV/MP3 files.
- TYPE C charging Port. There is a warning sound when playing, it is power low, please charge the speaker. (Charging voltage: 5V, charging currency $\geq 1.5A$)
- TF card port, support MAX 64G flash, Compatible with WAV/MP3 in high fidelity music files.
- LED indication:
The speaker is not connected to bluetooth, the light flashes quickly. When bluetooth is connected, the light turns blue. When playing music, the blue light flashes slowly.
When charging the battery, the light will have 2 colors: blue and red; After fully charging, the light turns green.
Built-in MIC entrance
- AUX Port: outside audio input

Bluetooth Connection

- Start the speaker, there is a prompt tone, Bluetooth enters the pairing mode
- Turn on the mobile phone, turn on Bluetooth, search for the Bluetooth code name "Rezo Play Pro " and click; after a few seconds, you will hear the prompt tone of successful pairing and connection, the mobile phone displays connected.

- In subsequent use, as long as the device's bluetooth is turned on, it can be automatically connected.
- Press button "+" and "-" at the same time to disconnect Bluetooth.

TWS function

While at the same time open two devices and donot connect in the bluetooth mode, double click play button of either of the speaker and then, you will hear the prompt tone of successful pairing and connection.You search for the Bluetooth and click to use this function.

Note

Could pair between Rezo Play and Rezo Play Pro Speakers

Attentions

- Do not use abrasive cleaners to clean this product.
- Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components.
- Do not attempt to disassemble this product to make any modifications.
- Do not use this product in the rain.
- If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust.
- If you saw smoke coming out of the machine or other improper phenomenon , please contact the retailer to solve the issue immediately.
- Do not throw the machine.


Note!

In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive.

LOA BLUETOOTH


Rezo Play Pro

Hướng dẫn sử dụng

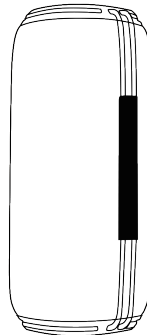


Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo Play Pro.
Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.

Bộ sản phẩm gồm



- 1 loa bluetooth
- 1 hướng dẫn sử dụng
- 1 dây sạc loa Type C

Chức năng các phím

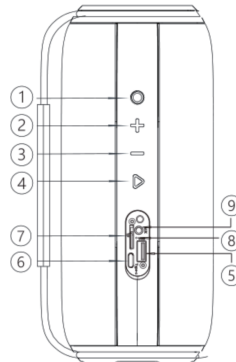

Chức năng các phím

- Công tắc nguồn: nhấn giữ để bật/lật nguồn, nhấn nhanh để thay đổi chế độ đèn LED, nhấn 2 lần để thay đổi chức năng kết nối (Bluetooth/USB/AUX).
- Nhấn nhanh để tăng âm lượng, nhấn giữ để chuyển sang bài hát tiếp theo.
- Nhấn nhanh để giảm âm lượng, nhấn giữ để chuyển sang bài hát trước đó.
- Nút tạm dừng: nhấn nhanh: phát / tạm dừng; khi có cuộc gọi đến, nhấn một lần để trả lời điện thoại, nhấn thêm lần nữa để từ chối cuộc gọi, nhấn hai lần để gọi cuộc gọi đến / đi mới nhất.
- Cổng thẻ USB, hỗ trợ tối đa 64G, Tương thích với các tệp WAV/MP3.
- Cổng sạc Type C. Khi âm thanh cảnh báo khi phát là pin yếu, vui lòng sạc loa. (Điện áp: 5V, dòng điện $\geq 1.5A$)
- Cổng thẻ nhớ TF card, hỗ trợ tối đa MAX 64G, Tương thích với WAV/MP3 ở các tệp nhạc có độ đọc ghi cao.
- Tín hiệu đèn LED:
Loa ở trạng thái chưa kết nối bluetooth, đèn nhấp nháy nhanh. Khi đã kết nối bluetooth, đèn sáng màu xanh.
Khi phát nhạc, đèn xanh lam nhấp nháy chậm.
Khi sạc pin, đèn sẽ có 2 màu xanh và đỏ; sau khi sạc đầy đèn chuyển qua màu xanh.
- Cổng AUX: đầu vào âm thanh jack 3.5

Kết nối Bluetooth

- Khởi động loa, có âm báo nhắc, Bluetooth chuyển sang chế độ chờ ghép nối.
- Bật điện thoại di động, bật Bluetooth, tìm kiếm tên Bluetooth "Rezo Play Pro " và nhấp vào; sau vài giây, bạn sẽ nghe thấy âm báo nhắc ghép nối và kết nối thành công, điện thoại di động hiển thị được kết nối.

- Trong lần sử dụng tiếp theo, Loa có thể tự động kết nối khi Bluetooth của thiết bị mà được kết nối gần nhất đang mở.
- Nhấn đồng thời nút "+" và "-" để ngắt kết nối Bluetooth.

Kết nối hai loa

Mở nguồn hai loa cùng một thời gian và ở trạng thái không kết nối bluetooth nhấn 2 lần nút tạm dừng của 1 trong 2 loa để có thể kết nối hai loa với nhau. Bạn sẽ nghe tiếng báo hiệu cho sự kết nối thành công và sau đó tìm ở thiết bị kết nối bluetooth và nhấn vào để sử dụng chức năng này.

Note

Bạn có thể kết nối giữa loa Rezo Play and Rezo Play Pro.

Chú ý:

- Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm.
- Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử.
- Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa đổi nào.
- Không sử dụng sản phẩm này dưới trời mưa.
- Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo và sạch lo ít nhất mỗi tháng một lần để kéo dài tuổi thọ của loa cũng như tránh nhiệt độ quá cao và bụi.
- Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác vui lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức.
- Không tác động mạnh hay để vật nặng lên loa.

Ghi chú!

Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi.
Cảm ơn bạn vì đã mua hàng.