


尺寸: 95\*60mm

正面

## User Manual

Open Ear True Wireless Earphone

Model NO.: OWS04

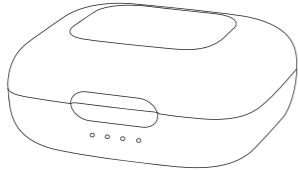

Thank you for purchasing your new OWS04 true wireless earphone.

We recommend that you spend some time reading this instruction manual in order to fully understand all the operational features it offers. Read all the safety instructions carefully before use and keep this instruction manual for future reference.


### Safety Rules

- Charge the earbuds and the charging case at least once every 6 months.
- Do not store the product in extreme temperature (below 0 C or above 45 C )
- Do not use chemicals or detergents to clean the product.
- Do not drop or knock the product on hard surfaces.
- Do not scrape the surface of product with sharp objects.
- Do not try to take the product apart.

### In the Box

Wireless Earbuds  
Type-C Charging Cable  
User manual

### Product view

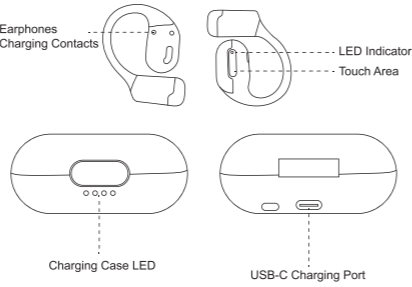

Earphones  
Charging Contacts  
LED Indicator  
Touch Area  
Charging Case LED  
USB-C Charging Port

### Specification

Bluetooth version	V5.4
BT profiles support	A2DP/AVRCP/HFP/HSP
Bluetooth range	≥10m
Frequency response	20 Hz - 20 kHz
Battery capacity	50mAh for each earbud 600mAh for charging case
Charging time	Around 1.5 hours
Playing time	6 hours
Speaker Driver	15*11mm

### Power ON/OFF

**Power ON**

- Open the charging case, take out the earbuds, they will power on automatically.
- Long press left /right earbuds for 3 seconds, the earbuds will power on.

**Power OFF**

- Put the earbuds into the charging case, the earbuds will power off automatically.
- Long press left/ right earbuds for 5 seconds, the earbuds will power off.

Remark: Earbuds power off when they stay out of range after 3 minutes.

### Charging

- Fully charge both the earbuds and the charging case before the first use.
- To prevent damage, use the provided USB-C cable.
- Fully dry off the charging port and the USB port before charging.
- Charging takes around 1.5 hours.

### Headset wearing

- Take out the headset
- Wear along the back of the ear
- Adjust the headset to a comfortable position
- Headphones ready

### LED Indications

Device	Status	LED indicator
Earbuds (red)	Charging	Red Light on
	Fully Charged	Light off
	Pairing mode	Master: white and red lights flash Slave: light off
	Connected	Light is off
Charging Case (White)	Charging	White light flashing
	Fully charged	White lights on

### Pairing


- When using OWS04 open ear true wireless earphone, the first time. Take the earbuds. The master earphone indicator will blink red and white alternately.
- Turn on Bluetooth on your device.
- Search and select "AVA+ OWS04".
- When connected, the indicators light off

### Multi Functions

Function	Left earbud	Right earbud
Play/Pause		Double tap
Answer/End a call	Double tap either side	
Next song		Triple tap
Previous song	Triple tap	
Volume up	long press 2S	
Volume down		long press 2S
Game mode	When connecting with the mobile phone, five tap on the Left/Right touch button to switch the music mode and game mode	
Reject a call	long press 2S either side	
Active Siri/Google Assistant	Double tap	

### Warning

- Listening to earbuds at high volume levels, particularly over extended periods of time, may damage your hearing.
- Supervise children when using equipment. This product is not a toy.
- The small parts included with this product can be a choking hazard. This product is not intended for use by small children and should be kept away from children under 3 years of age.




背面

## Hướng dẫn sử dụng

Tai nghe không dây

Model No. : OWS04

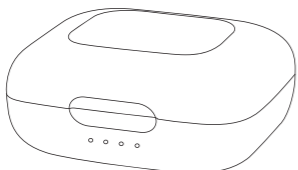

Đọc tất cả hướng dẫn sử dụng an toàn trước khi sử dụng


### Quy tắc an toàn

- Sạc tai nghe và hộp sạc ít nhất 6 tháng một lần.
- Không bảo quản sản phẩm ở nhiệt độ quá cao (dưới 0 C hoặc trên 45 C )
- Không sử dụng hóa chất, chất tẩy rửa để vệ sinh sản phẩm.
- Không làm rơi hoặc va đập sản phẩm trên bề mặt cứng.
- Không cạo bỏ mặt sản phẩm bằng các vật sắc nhọn.
- Không cố tháo rời sản phẩm.

### Bên trong hộp

Tai nghe không dây  
Cáp sạc Type-C  
Hướng dẫn sử dụng

### Tổng quan sản phẩm

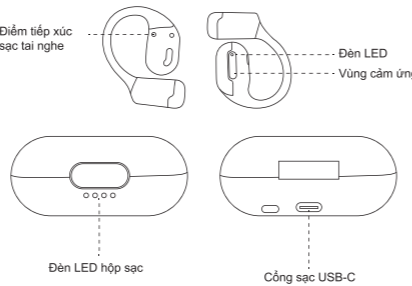

Điểm tiếp xúc sạc tai nghe  
Đèn LED  
Vùng cảm ứng  
Đèn LED hộp sạc  
Cổng sạc USB-C

### Thông số kỹ thuật

Phiên bản Bluetooth	V5.4
Cấu hình Bluetooth	A2DP/AVRCP/HFP/HSP
Phạm vi Bluetooth	≥10m
Tần số	20 Hz - 20 kHz
Dung lượng pin	Tai nghe: 50mAh*2 Hộp sạc: 600mAh
Thời gian sạc	Khoảng 1.5 giờ
Thời gian sử dụng	Khoảng 6 giờ
Màng loa	15*11mm

### Bật/Tắt nguồn

**Bật nguồn**

- Mở hộp sạc, lấy 2 tai nghe ra, tai nghe sẽ tự động bật nguồn.
- Nhấn và giữ tai nghe bên trái và bên phải trong 3 giây, tai nghe sẽ bật nguồn.

**Tắt nguồn**

- Đặt 2 tai nghe vào hộp sạc, tai nghe sẽ tự động tắt nguồn.
- Nhấn và giữ tai nghe bên trái và bên phải trong 5 giây, tai nghe sẽ tắt nguồn.

Lưu ý: Tai nghe sẽ tắt nguồn khi nằm ngoài phạm vi Bluetooth trong hơn 3 phút.

### Sạc pin

- Sạc đầy cả tai nghe và hộp sạc trước lần sử dụng đầu tiên.
- Để tránh hư hỏng, hãy sử dụng cáp USB-C đi kèm
- Lau khô hoàn toàn điểm tiếp xúc sạc của tai nghe và cổng sạc của hộp sạc trước khi sạc.
- Quá trình sạc mất khoảng 1.5 giờ.

### Đeo tai nghe

- Lấy tai nghe ra khỏi hộp sạc
- Đeo dọc phía sau tai
- Điều chỉnh tai nghe ở vị trí thoải mái
- Tai nghe đã sẵn sàng

### Trạng thái đèn LED

Thiết bị	Trạng thái	Đèn báo
Tai nghe (Đèn đỏ)	Đang sạc	Đèn đỏ sáng ổn định
	Sạc đầy	Đèn tắt
	Ghép nối	Tai chính: Đèn trắng và đèn sáng nhấp nháy Tai phụ: Đèn tắt
	Kết nối thành công	Đèn tắt
Hộp sạc (Đèn trắng)	Đang sạc	Đèn trắng sáng nhấp nháy
	Sạc đầy	Đèn trắng sáng ổn định

### Kết nối

- Khi lần đầu sử dụng tai nghe TWS OWS04. Lấy 2 tai nghe ra khỏi hộp sạc, đèn báo của tai nghe chính sẽ nhấp nháy màu trắng và đỏ.
- Bật Bluetooth trên thiết bị của bạn.
- Tìm kiếm và chọn "AVA+ OWS04".
- Khi được kết nối thành công, đèn báo trên tai nghe sẽ tắt.

### Đa chức năng

Chức năng	Tai nghe bên trái	Tai nghe bên phải
Chơi/dừng nhạc		Chạm 2 lần
Trả lời/Kết thúc cuộc gọi	Chạm 2 lần	
Bài hát tiếp theo		Chạm 3 lần
Bài hát trước đó	Chạm 3 lần	
Tăng âm lượng	Chạm và giữ 2 giây	
Giảm âm lượng		Chạm và giữ 2 giây
Chế độ chơi game	Sau khi kết nối với thiết bị, chạm 5 lần trên tai nghe trái hoặc phải để chuyển đổi giữa chế độ nghe nhạc và chơi game.	
Từ chối cuộc gọi	Chạm và giữ 2 giây	
Trợ lý ảo	Chạm 2 lần	

### Cảnh báo

- Không nên nghe tai nghe ở mức âm lượng lớn trong thời gian dài, vì có thể làm hỏng thính giác của bạn.
- Giám sát trẻ em khi sử dụng thiết bị. Các bộ phận nhỏ đi kèm với sản phẩm này có thể gây nguy cơ nghẹt thở. Sản phẩm này không dành cho trẻ nhỏ sử dụng và để xa tầm tay trẻ em dưới 3 tuổi.

