


HƯỚNG DẪN SỬ DỤNG

LÒ VI SÓNG

MW3-MG25PE(BK)

Vui lòng xem lại tài liệu hướng dẫn này trước khi vận hành.

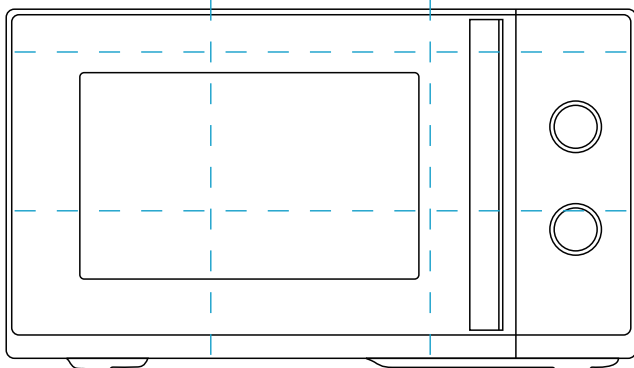

TOSHIBA

MỤC LỤC

AN TOÀN SẢN PHẨM

Các biện pháp phòng ngừa để tránh tiếp xúc với năng lượng vi sóng quá mức	VN-01
Thông số kỹ thuật	VN-02
Các hướng dẫn an toàn quan trọng	VN-03
Để giảm nguy cơ gây thương tích cho người lắp đặt nối đất	VN-08
Vệ sinh	VN-10
Đồ dùng	VN-11
Các vật liệu bạn có thể sử dụng trong lò vi sóng	VN-12
Những vật dụng không thể sử dụng trong lò vi sóng	VN-14

THIẾT LẬP SẢN PHẨM

Thiết lập lò vi sóng của bạn	VN-15
------------------------------------	-------

HƯỚNG DẪN SỬ DỤNG

Trước khi sử dụng lần đầu tiên	VN-18
Vận hành	VN-19

VỆ SINH VÀ BẢO TRÌ

Vệ sinh	VN-20
Xử lý sự cố	VN-22




LƯU Ý

TRƯỚC KHI VẬN HÀNH SẢN PHẨM NÀY, HÃY ĐỌC, HIỂU VÀ LÀM THEO NHỮNG HƯỚNG DẪN NÀY. HÃY CHẮC CHẮN LƯU SÁCH NÀY ĐỂ THAM KHẢO SAU NÀY.

CÁC BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH TIẾP XÚC VỚI NĂNG LƯỢNG VI SÓNG QUÁ MỨC

- (a). Không cố gắng vận hành lò vi sóng khi cửa đang mở vì điều này có thể dẫn đến việc tiếp xúc có hại với năng lượng vi sóng. Điều quan trọng là không được làm gãy hoặc làm xáo trộn các khóa liên động an toàn.
- (b). Không đặt vật gì trong khoảng giữa mặt trước của lò và cửa hoặc để đất hoặc cặn chất tẩy rửa tích tụ trên các bề mặt bịt kín.
- (c). **CẢNH BÁO:** Nếu cửa hoặc gioăng cửa bị hư hỏng, không được phép vận hành lò cho đến khi được sửa chữa bởi người có thẩm quyền.

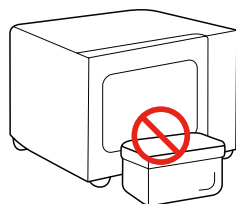

BỔ SUNG

Nếu thiết bị không được giữ trong trạng thái sạch sẽ, bề mặt lò có thể bị xuống cấp, ảnh hưởng đến tuổi thọ của thiết bị và dẫn đến tình trạng nguy hiểm.

THÔNG SỐ KỸ THUẬT

MẪU	MW3-MG25PE(BK)
ĐIỆN ÁP ĐỊNH MỨC	230 V~ 50 Hz
ĐẦU VÀO ĐỊNH MỨC (VI SÓNG)	1250 W
ĐẦU RA ĐỊNH MỨC (VI SÓNG)	800 W
ĐẦU VÀO ĐỊNH MỨC (NƯỚNG)	1000 W

CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG



CẢNH BÁO

Để giảm nguy cơ gây hỏa hoạn, điện giật, thương tích cho người hoặc tiếp xúc với năng lượng lò vi sóng quá mức khi sử dụng thiết bị, cần tuân thủ các biện pháp phòng ngừa cơ bản, bao gồm những điều sau:



Đọc và làm theo nội dung cụ thể: **"CÁC BIỆN PHÁP PHÒNG NGỪA ĐỂ TRÁNH KHI TIẾP XÚC VỚI NĂNG LƯỢNG LÒ VI QUÁ MỨC"**.



Thiết bị này không dành cho những người (kể cả trẻ em) bị suy giảm khả năng thể chất, cảm giác hoặc tinh thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được người chịu trách nhiệm bảo vệ an toàn.



Mặt phía sau của thiết bị phải được đặt dựa vào tường.



Trẻ em cần được giám sát để đảm bảo rằng chúng không chơi cùng với thiết bị.



Nếu dây cấp nguồn bị hỏng, phải được thay thế bởi nhà sản xuất, đại lý dịch vụ hoặc những người có trình độ tương đương để tránh nguy hiểm.



CẢNH BÁO: Đảm bảo rằng thiết bị đã được tắt trước khi thay thế đèn để tránh nguy cơ bị điện giật.

CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG

 **CẢNH BÁO:** Sẽ rất nguy hiểm nếu bất kỳ người nào không phải là người có thẩm quyền thực hiện các hoạt động dịch vụ hoặc sửa chữa liên quan đến việc tháo nắp bảo vệ khỏi tiếp xúc với năng lượng vi sóng.

 **CẢNH BÁO:** Không được đun nóng chất lỏng và các thực phẩm khác trong hộp đóng kín vì chúng có thể phát nổ.

 Khi hâm nóng thức ăn đựng trong hộp nhựa hoặc giấy, phải luôn để ý đến lò vì có nguy cơ bắt lửa.



 Chỉ sử dụng những dụng cụ phù hợp để sử dụng trong lò vi sóng.

 Nếu có khói bốc ra, hãy tắt hoặc rút phích cắm thiết bị và đóng cửa để dập tắt lửa.


 Việc hâm nóng đồ uống bằng vi sóng có thể dẫn đến hiện tượng sôi trào chậm, do đó phải cẩn thận khi cầm hộp đựng

 Thức ăn trong bình bú và lọ đựng thức ăn trẻ em phải được khuấy hoặc lắc và kiểm tra nhiệt độ trước khi sử dụng để tránh bị bỏng.

 Thiết bị này được thiết kế để sử dụng ở trạng thái độc lập.

CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG

 Lò phải được vệ sinh thường xuyên và loại bỏ cặn thức ăn bám trên lò. Hãy luôn giữ cho khu vực dẫn sóng sạch sẽ. Sử dụng khăn vải ẩm mềm để lau sạch khi có cặn thức ăn vương vãi trên khu vực dẫn sóng hoặc khoang. Việc không làm sạch cặn thức ăn có thể gây ra tia lửa vô hại hoặc một ít khói trong khoang vi sóng, cũng có thể xảy ra hiện tượng đổi màu trong khoang.

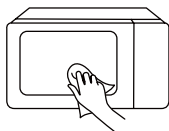

 Chỉ sử dụng đầu dò nhiệt độ được khuyến nghị cho loại lò này. (đối với lò có thiết bị sử dụng đầu dò cảm biến nhiệt độ).

 Lò vi sóng phải được vận hành khi cửa trang trí mở. (đối với lò có cửa trang trí.)

 Thiết bị này được thiết kế để sử dụng trong gia đình và các ứng dụng tương tự như:

- 1.Khu vực bếp của nhân viên trong các cửa hàng, văn phòng và môi trường làm việc khác;
- 2.bởi các khách hàng trong khách sạn, nhà nghỉ và môi trường dân cư khác;
- 3.Khu nhà trang trại;
- 4.Khu lưu trú kiểu giường ngủ và bữa sáng (B&B);

 Lò vi sóng được thiết kế để hâm nóng thức ăn và đồ uống. Việc sấy khô thực phẩm hoặc quần áo và làm nóng miếng giữ

CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG


ấm, dép, miếng bọt biển, vải ẩm và những vật dụng tương tự có thể dẫn đến nguy cơ bị thương, bắt lửa hoặc cháy.

 Việc không giữ lò trong tình trạng sạch sẽ có thể làm hư hỏng bề mặt, ảnh hưởng xấu đến tuổi thọ của thiết bị và có thể dẫn đến tình huống nguy hiểm.

 Nhiệt độ của các bề mặt có thể tiếp cận được có thể khá cao khi thiết bị đang hoạt động.

 **CẢNH BÁO:** Khi thiết bị hoạt động ở chế độ kết hợp, trẻ em chỉ được sử dụng lò dưới sự giám sát của người lớn do nhiệt độ phát sinh.

 Không nên hâm nóng trứng nguyên vỏ và trứng luộc nguyên quả trong lò vi sóng vì chúng có thể nổ ngay cả sau khi quá trình hâm nóng bằng vi sóng đã kết thúc.

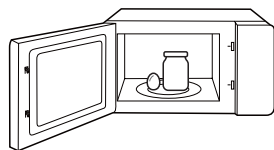

 Thiết bị không được lắp đặt phía sau cửa trang trí để tránh quá nhiệt. (Điều này không áp dụng cho các thiết bị có cửa trang trí.)

 Không được đặt lò vi sóng trong tủ trừ khi sản phẩm đã được thử nghiệm trong tủ.

 Không được phép sử dụng hộp kim loại đựng thực phẩm và đồ uống khi nấu bằng lò vi sóng.

CÁC HƯỚNG DẪN AN TOÀN QUAN TRỌNG



Không được làm sạch thiết bị bằng máy làm sạch hơi nước.



Thiết bị không được thiết kế để vận hành bằng bộ hẹn giờ bên ngoài hoặc hệ thống điều khiển từ xa riêng biệt.

HÃY ĐỌC KỸ LƯỠNG VÀ GIỮ LẠI ĐỂ
THAM KHẢO TRONG TƯƠNG LAI

ĐỂ GIẢM NGUY CƠ GÂY THƯƠNG TÍCH CHO NGƯỜI LẮP ĐẶT NỔ ĐẤT

Thiết bị này phải được nối đất. Trong trường hợp xảy ra tình trạng ngắn mạch, việc nối đất sẽ giúp giảm nguy cơ bị điện giật bằng cách cung cấp dây thoát cho dòng điện.

Thiết bị này được trang bị một dây nguồn có dây nối đất với phích cắm nối đất. Phích cắm phải được cắm vào ổ cắm được lắp đặt và nối đất đúng cách.

CẢNH BÁO - Việc nối đất không đúng cách có thể dẫn đến nguy cơ bị điện giật. Tham khảo ý kiến của thợ điện hoặc nhân viên bảo trì có chuyên môn nếu bạn không hiểu rõ hướng dẫn nối đất hoặc nếu có nghi ngờ về việc liệu thiết bị có được nối đất đúng cách hay không.

Nếu cần sử dụng dây nguồn nối dài thì chỉ được sử dụng dây nối dài 3 dây.



NGUY HIỂM

Nguy cơ điện giật:

Việc chạm vào một số bộ phận bên trong có thể gây ra thương tích cá nhân nghiêm trọng hoặc tử vong. Không tháo rời thiết bị này.

ĐỂ GIẢM NGUY CƠ GÂY THƯƠNG TÍCH CHO NGƯỜI LẮP ĐẶT NỐI ĐẤT



CẢNH BÁO

Nguy cơ điện giật:

Việc nối đất không đúng cách có thể dẫn đến bị điện giật. Không cắm vào ổ cắm cho đến khi thiết bị được lắp đặt và nối đất đúng cách.

1. Một dây cấp nguồn ngắn được cung cấp để giảm rủi ro do bị vướng vào hoặc vấp vào dây dài hơn.
2. Nếu sử dụng dây nguồn dài hoặc dây nối dài:
 - (1). Công suất điện được đánh dấu của bộ dây nguồn hoặc dây nối dài ít nhất phải bằng giá trị điện của thiết bị.
 - (2). Dây nối dài phải là dây nguồn 3 dây nối đất.
 - (3). Dây nguồn dài hơn phải được bố trí để không treo trên mặt bếp hoặc mặt bàn, nơi trẻ em có thể kéo hoặc vô ý vấp phải.

VỆ SINH

Phải đảm bảo rút phích cắm của thiết bị khỏi nguồn điện.

1. Hãy lau sạch khoang lò sau khi sử dụng bằng khăn vải hơi ẩm.
2. Hãy lau sạch các phụ kiện theo cách thông thường bằng nước xà phòng.
3. Khung cửa, gioăng và các bộ phận lân cận phải được làm sạch cẩn thận bằng khăn vải ẩm khi chúng bị bẩn.
4. Không sử dụng các chất tẩy rửa có tính ăn mòn mạnh hoặc dụng cụ cọ rửa kim loại sắc nhọn để lau kính cửa lò vì chúng có thể làm xước bề mặt, dẫn đến vỡ kính.
5. Mẹo làm sạch---Để làm sạch các thành khoang mà thực phẩm nấu chín có thể dính vào dễ hơn: Đặt nửa quả chanh vào một cái bát, thêm 300ml (1/2 pint) nước và đun nóng ở mức công suất vi sóng 100% trong 10 phút. Lau sạch lò bằng vải khô, mềm.

ĐỒ DÙNG




THẬN TRỌNG

Nguy Cơ Gây Ra Thương Tích Cá Nhân:
Sẽ rất nguy hiểm nếu ai đó không phải là người có thẩm quyền thực hiện các hoạt động dịch vụ hoặc sửa chữa liên quan đến việc tháo nắp để bảo vệ khỏi việc tiếp xúc với năng lượng vi sóng. Xem hướng dẫn về "**Vật liệu bạn có thể sử dụng trong lò vi sóng**" hoặc "**Vật liệu không thể sử dụng trong lò vi sóng**".

Có thể có một số dụng cụ phi kim loại không an toàn khi sử dụng trong lò vi sóng. Nếu có nghi ngờ, bạn có thể kiểm tra dụng cụ đó theo quy trình bên dưới.


Kiểm Tra Dụng Cụ:

1. Đổ 1 cốc nước lạnh (250ml) vào hộp đựng an toàn với lò vi sóng cùng với dụng cụ đang nghi ngờ.
2. Nấu ở công suất tối đa trong 1 phút.
3. Cần thận cảm nhận dụng cụ. Nếu dụng cụ rỗng ấm, thì không sử dụng nó để nấu bằng lò vi sóng.
4. Thời gian nấu không quá 1 phút.

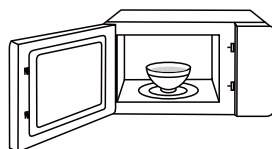


LƯU Ý

GIỮ CHO KHOANG NẤU VÀ
KHU VỰC DẪN SÓNG SẠCH SẼ

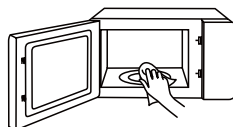

CÁC VẬT LIỆU BẠN CÓ THỂ SỬ DỤNG TRONG LÒ VI SÓNG

ĐỒ DÙNG	GHI CHÚ
 Đĩa nướng	Theo hướng dẫn của nhà sản xuất. Đáy đĩa nướng phải cao hơn bàn xoay ít nhất 3/16 inch (5 mm). Việc sử dụng không đúng có thể làm hỏng bàn xoay. 
 Bộ đồ ăn	Chỉ an toàn với vi sóng. Theo hướng dẫn của nhà sản xuất. Không sử dụng bát đĩa bị nứt hoặc nứt mẻ. 
 Lọ thủy tinh	Luôn mở nắp. Chỉ sử dụng để hâm nóng thức ăn cho đến khi vừa ấm. Hầu hết các lọ thủy tinh đều không chịu được nhiệt và có thể bị vỡ. 
 Đồ thủy tinh	Chỉ dùng đồ thủy tinh chịu nhiệt trong lò. Phải đảm bảo không có viên kim loại. Không sử dụng bát đĩa bị nứt hoặc nứt mẻ. 
 Túi nấu ăn sử dụng cho lò vi sóng	Theo hướng dẫn của nhà sản xuất. Không buộc bằng dây buộc kim loại. Tạo các khe hở để hơi nước thoát ra ngoài. 
 Đĩa và cốc giấy	Chỉ sử dụng để nấu/hâm nóng trong thời gian ngắn. Đừng để lò trong tình trạng không có người giám sát trong khi nấu. 
 Khăn giấy	Dùng để bọc thức ăn để hâm nóng và thấm mỡ. Chỉ sử dụng khi có sự giám sát trong khi nấu ăn trong thời gian ngắn. 
 Giấy nướng	Dùng làm vỏ bọc để tránh thực phẩm bắn tung tóe hoặc dùng làm màng bọc khi hấp. 

CÁC VẬT LIỆU BẠN CÓ THỂ SỬ DỤNG TRONG LÒ VI SÓNG

ĐỒ DÙNG

GHI CHÚ



Nhựa

Chỉ an toàn với vi sóng. Theo hướng dẫn của nhà sản xuất. Nên được dán nhãn "An Toàn để Sử Dụng trong Lò Vi Sóng". Một số hộp nhựa mềm ra khi thức ăn bên trong nóng lên. "Túi lọc" và túi nilon kín phải được rách, xuyên thủng hoặc thông hơi theo hướng dẫn trên bao bì.



Màng bọc thực phẩm

Chỉ an toàn với vi sóng. Dùng để bọc thực phẩm trong quá trình nấu để giữ ẩm. Không để màng bọc thực phẩm chạm vào thực phẩm.



Nhiệt biểu

Chỉ an toàn với vi sóng (nhiệt biểu thịt và kẹo).





Giấy sáp

Dùng làm lớp phủ để tránh thực phẩm bắn tung tóe và giữ ẩm.



NHỮNG VẬT DỤNG KHÔNG THỂ SỬ DỤNG TRONG LÒ VI SÓNG

ĐỒ DÙNG	GHI CHÚ	
 Khay nhôm	Có thể gây ra hồ quang điện. Hãy chuyển thực phẩm vào đĩa an toàn cho lò vi sóng.	
 Hộp đựng thực phẩm có tay cầm bằng kim loại	Có thể gây ra hồ quang điện. Hãy chuyển thực phẩm vào đĩa an toàn cho lò vi sóng.	
 Đồ dùng bằng kim loại hoặc trang trí kim loại	Kim loại ngăn thực phẩm được nấu bởi năng lượng vi sóng. Viên kim loại có thể gây ra hồ quang điện.	
 Dây buộc xoắn bằng kim loại	Có thể gây ra hồ quang điện và có thể gây cháy trong lò.	
 Túi giấy	Có thể gây ra cháy trong lò.	
 Bọt nhựa	Bọt nhựa có thể tan chảy hoặc làm nhiễm bẩn chất lỏng bên trong khi tiếp xúc với nhiệt độ cao.	
 Gỗ	Gỗ sẽ bị khô khi sử dụng trong lò vi sóng và có thể bị nứt hoặc vỡ.	


THIẾT LẬP SẢN PHẨM

THIẾT LẬP LÒ VI SÓNG CỦA BẠN


(Trong trường hợp có bất kỳ sự khác biệt nào giữa thiết bị và hình ảnh trong tài liệu hướng dẫn này, sản phẩm sẽ được ưu tiên áp dụng.)

TÊN CÁC BỘ PHẬN VÀ PHỤ KIỆN LÒ VI SÓNG


Lấy lò và tất cả các bộ phận ra khỏi thùng carton và khoang lò.




Cụm Vòng Bàn Xoay

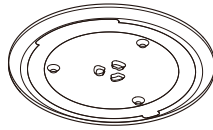


Bàn xoay kính



Hướng Dẫn Sử Dụng

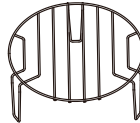

Vi nướng (Không được dùng trong chức năng vi sóng mà phải đặt trên khay thủy tinh)

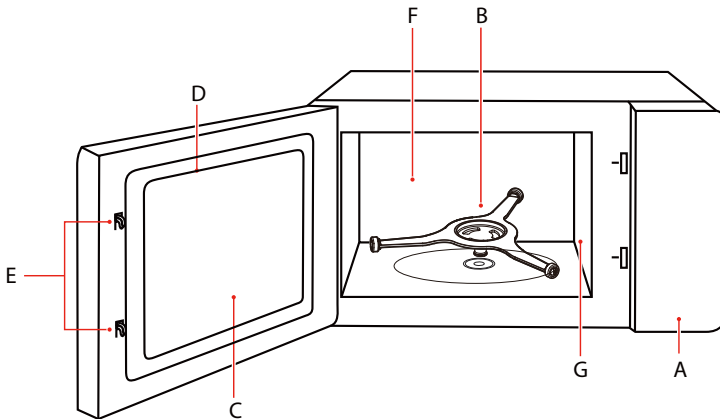

- A. Panel điều khiển
- B. Cụm Vòng Bàn Xoay
- C. Cửa sổ quan sát
- D. Cụm cửa

- E. Hệ thống khóa liên động an toàn
- F. Khoang lò
- G. Vò dẫn sóng

THIẾT LẬP LÒ VI SÓNG CỦA BẠN

LẮP ĐẶT BÀN XOAY


Làm sạch khoang nấu và đặt bàn xoay.

Đối với các lắp đặt mới, đảm bảo tất cả băng dính đóng gói và vận chuyển đã được tháo ra khỏi trục bàn xoay.


Trước khi sử dụng thiết bị để chế biến thức ăn lần đầu tiên, bạn cần đặt bàn xoay vào đúng vị trí. Bạn phải vệ sinh khoang nấu và các phụ kiện. Bạn cũng có thể tham khảo phần vệ sinh.

Cách đặt bàn xoay vào đúng vị trí:

1. Đặt cụm vòng xoay ② vào hốc trong khoang nấu.
2. Đặt khay thủy tinh ① lên cụm vòng xoay ②.

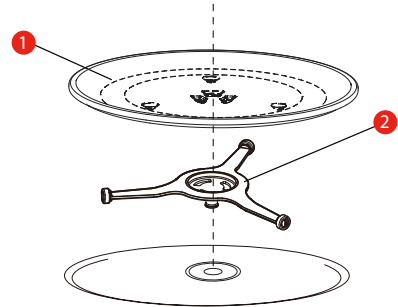

1) Khay thủy tinh
2) Cụm vòng xoay

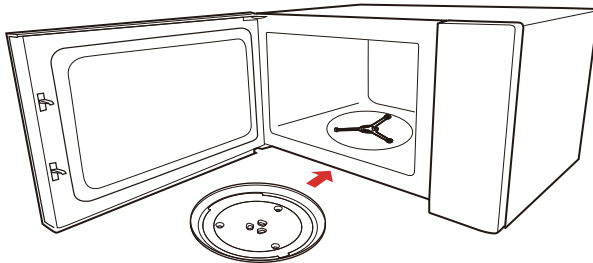

LƯU Ý

- Không bao giờ sử dụng thiết bị mà không có bàn xoay. Đảm bảo rằng nó được lắp đúng cách. Bàn xoay có thể quay theo chiều kim đồng hồ hoặc ngược chiều kim đồng hồ.
- Không bao giờ đặt ngược khay thủy tinh. Không được giới hạn khay thủy tinh.
- Phải luôn sử dụng cả khay thủy tinh và cụm vòng xoay trong khi nấu.
- Toàn bộ thực phẩm và hộp đựng thực phẩm luôn được đặt trên khay thủy tinh để nấu nướng.
- Không bao giờ được hạn chế chuyển động của bàn xoay.
- Nếu khay thủy tinh hoặc cụm vòng xoay bị nứt hoặc vỡ, hãy liên hệ với trung tâm dịch vụ được ủy quyền gần nhất.

LẮP ĐẶT MẶT BẰNG

Loại bỏ tất cả các vật liệu đóng gói và phụ kiện. Kiểm tra lò xem có bất kỳ hư hỏng nào như vết lõm hoặc cửa bị hỏng không. Không lắp đặt nếu lò bị hỏng.

Tủ: Loại bỏ mọi lớp bảo vệ có trên bề mặt tủ lò vi sóng. Không tháo nắp dẫn sóng được gắn vào khoang lò vi sóng để bảo vệ magnetron.

CÀI ĐẶT

1. Chọn một bề mặt bằng phẳng có đủ không gian mở cho các cửa nạp/thoát khí thông hơi.

a. Chiều cao lắp đặt tối thiểu là 85cm.


b. Mặt phía sau của thiết bị phải được đặt dựa vào tường. Để khoảng trống tối thiểu 30cm phía trên lò. Cần có khoảng trống tối thiểu 20cm giữa lò và các tường liền kề.

c. Không được tháo các chân ra khỏi đáy lò.

d. Việc chặn các cửa nạp và/hoặc cửa thoát khí có thể làm hỏng lò.

e. Đặt lò càng xa đài radio và TV càng tốt.

Hoạt động của lò vi sóng có thể gây nhiễu sóng radio hoặc TV của bạn.

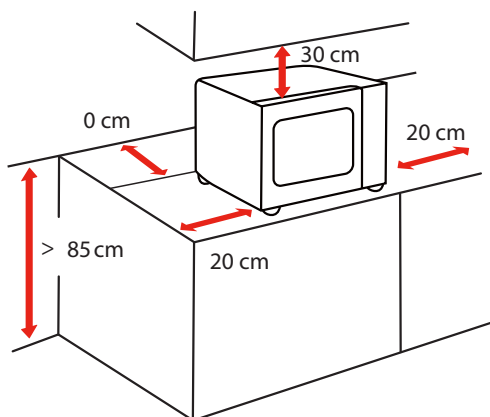


2. Hãy cắm lò vi sóng vào ổ cắm tiêu chuẩn của gia đình. Đảm bảo điện áp và tần số giống với điện áp và tần số trên nhãn thông số định mức.



LƯU Ý

- Không lắp đặt lò trên bếp nấu hoặc các thiết bị tạo nhiệt khác. Nếu lắp đặt gần hoặc bên trên nguồn nhiệt, lò có thể bị hư hỏng và sẽ không được bảo hành.

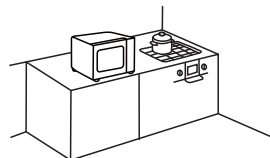

Các bề mặt có thể tiếp cận có thể nóng lên trong quá trình vận hành.

HƯỚNG DẪN SỬ DỤNG

TRƯỚC KHI SỬ DỤNG LẦN ĐẦU TIÊN

Lò nướng có thể tạo ra mùi khó chịu khi sử dụng lần đầu là điều bình thường.

Phần này cho bạn biết những gì bạn cần làm trước khi sử dụng lò vi sóng để chế biến thức ăn lần đầu tiên. Đọc trước phần có tiêu đề "**AN TOÀN SẢN PHẨM**".


Trước khi có thể sử dụng thiết bị mới, bạn cần đặt bàn xoay vào đúng vị trí. Bạn cũng phải vệ sinh khoang nướng và các phụ kiện.



LƯU Ý

- Không bao giờ sử dụng thiết bị mà không có bàn xoay.
- Đảm bảo rằng nó được đặt đúng cách. Bàn xoay có thể quay theo chiều kim đồng hồ hoặc ngược chiều kim đồng hồ.

VẬN HÀNH

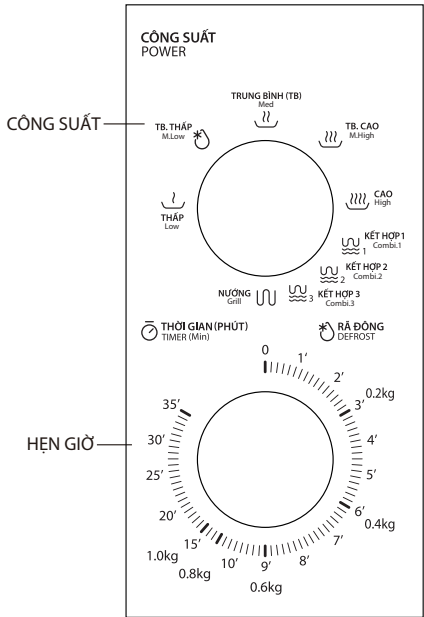

1. Để đặt công suất nấu bằng cách xoay núm công suất đến mức mong muốn.
2. Đặt thời gian nấu bằng cách xoay núm hẹn giờ đến thời gian mong muốn theo hướng dẫn nấu thực phẩm của bạn.
3. Lò vi sóng sẽ tự động bắt đầu nấu sau khi cài đặt mức công suất và thời gian.
4. Khi hết thời gian nấu, thiết bị sẽ kêu "Dong" để dừng.
5. Nếu không sử dụng thiết bị, luôn đặt thời gian ở mức "0".

Chức năng/Nguồn	Đầu ra	Ứng dụng
	17% vi sóng	làm mềm kem
	33% vi sóng	súp hầm, làm mềm bơ hoặc rã đông
	55% vi sóng	Món hầm, cá
	77% vi sóng	cơm, cá, thịt gà, thịt xay
	100% vi sóng	hâm nóng, sữa, đun sôi nước, rau củ, đồ uống

Chức năng/Nguồn	Đầu ra	Ứng dụng
	80% nướng 20% vi sóng	xúc xích, thịt cừu, kabobs, hải sản, bít tết
	70% nướng 30% vi sóng	thịt gà, ức gà, sườn heo
	60% nướng 40% vi sóng	gà nguyên con
	Nướng 100%	bánh mì nướng, thức ăn cắt lát



Khi lấy thức ăn ra khỏi lò, vui lòng đảm bảo rằng lò đã được tắt bằng cách chuyển công tắc hẹn giờ về 0 (không). Nếu không làm như vậy, và việc vận hành lò vi sóng khi không có thức ăn trong đó, có thể dẫn đến quá nhiệt và làm hỏng magnetron.

VỆ SINH VÀ BẢO TRÌ

VỆ SINH

Nếu được chăm sóc và vệ sinh tốt, thiết bị của bạn sẽ giữ được vẻ ngoài và vẫn hoạt động đầy đủ trong một thời gian dài. Chúng tôi sẽ giải thích ở đây cho bạn về cách bảo quản và vệ sinh thiết bị một cách chính xác.



CẢNH BÁO

- Cá vết trầy xước trên kính ở cửa thiết bị có thể phát triển thành vết nứt.
Không sử dụng dụng cụ cạo kính, dụng cụ làm sạch hoặc chất tẩy rửa sắc hoặc có tính mài mòn.
- Bề mặt của thiết bị có thể bị hư hỏng nếu không được vệ sinh đúng cách. Năng lượng vi sóng có thể thoát ra. Hãy vệ sinh thiết bị thường xuyên và loại bỏ mọi thức ăn còn sót lại ngay lập tức.
- Không nhúng thiết bị vào nước hoặc làm sạch dưới vòi nước.

Chất tẩy rửa

Để đảm bảo các bề mặt khác nhau không bị hư hỏng do sử dụng sai chất tẩy rửa, hãy quan sát các thông tin trong bảng. Giặt kỹ miếng vải xốp mới trước khi sử dụng.

Không sử dụng:



Chất tẩy rửa mạnh hoặc có tính ăn mòn



Dụng cụ cạo kim loại hoặc kính để làm sạch các panel cửa



Dụng cụ cạo kim loại hoặc kính để làm sạch các panel cửa



Miếng cọ rửa cứng hoặc bọt biển




Chất tẩy rửa có nồng độ cồn cao

MẶT TRƯỚC THIẾT BỊ

Nước xà phòng nóng:


Lau sạch bằng khăn lau bát đĩa rồi lau khô bằng vải mềm. Không sử dụng các dụng cụ cạo bằng kim loại hoặc thủy tinh để làm sạch.

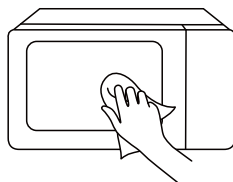

MẶT TRƯỚC THIẾT BỊ BẰNG THÉP KHÔNG GỈ

Nước xà phòng nóng:

Làm sạch bằng khăn lau bát đĩa, rồi lau khô bằng khăn vải mềm. Loại bỏ ngay lập tức các vết cặn vôi, dầu mỡ, tinh bột và albumin. Ăn mòn có thể hình thành dưới các mảng hoặc vết bẩn thực phẩm này. Không sử dụng chất tẩy rửa thủy tinh hoặc dụng cụ cạo kim loại hoặc thủy tinh để làm sạch.

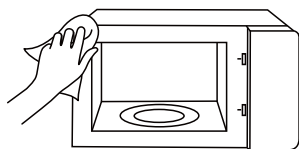


KHOANG NẤU LÀM BẰNG THÉP KHÔNG GỈ

KHOANG NẤU LÀM BẰNG THÉP KHÔNG GỈ

Nước xà phòng nóng hoặc dung dịch giấm:


Làm sạch bằng khăn lau bát đĩa, rồi lau khô bằng khăn vải mềm. Không sử dụng bình xịt lò hoặc bất cứ tẩy rửa lò nướng mạnh hoặc vật liệu mài mòn. Miếng cọ rửa, miếng bọt biển thô ráp và chất tẩy rửa nổi cũng không phù hợp. Những vật dụng này làm xước bề mặt. Để bề mặt bên trong khô hoàn toàn.

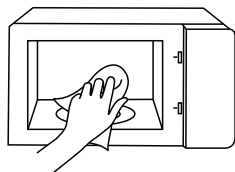

LỖM TRONG KHOANG NẤU

Khăn vải ẩm:


Nước không được phép chảy vào thiết bị thông qua bộ truyền động bàn xoay. Lau khô bộ truyền động xoay bằng khăn vải.

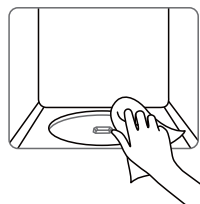

BÀN XOAY VÀ CON LẮN

Nước xà phòng nóng:

Khi đặt bàn xoay trở lại hốc lõm, nó phải khớp đúng cách.

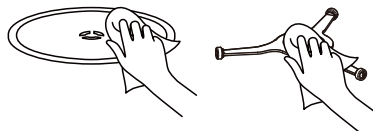

PANEL CỬA

Dụng cụ làm sạch kính:

Làm sạch bằng khăn vải lau bát đĩa. Không sử dụng dụng cụ cạo kính.

XỬ LÝ SỰ CỐ

Hãy kiểm tra sự cố của bạn bằng cách sử dụng biểu đồ bên dưới và thử các giải pháp cho từng vấn đề. Nếu lò vi sóng vẫn không hoạt động một cách bình thường, hãy liên hệ với trung tâm dịch vụ ủy quyền gần nhất.

SỰ CỐ	NGUYÊN NHÂN CÓ THỂ	BIỆN PHÁP KHẮC PHỤC CÓ THỂ
Lò sẽ không khởi động	a. Dây nguồn chưa được cắm. b. Cửa đang mở. c. Thiết lập hoạt động sai.	a. Cắm vào ổ cắm. b. Đóng cửa lại và thử lại. c. Kiểm tra các hướng dẫn
Phát ra hồ quang điện hoặc tia lửa	a. Sử dụng những vật liệu cần tránh trong lò vi sóng. b. Lò hoạt động khi đang trống rỗng. c. Thức ăn đổ tràn vẫn còn trong khoang.	a. Chỉ sử dụng dụng cụ nấu ăn an toàn với lò vi sóng. b. Không vận hành khi lò trống rỗng. c. Làm sạch khoang nấu bằng khăn vải ẩm mềm.
Thực phẩm nấu chín không đều	a. Sử dụng những vật liệu cần tránh trong lò vi sóng. b. Thực phẩm không được rửa đông hoàn thành. c. Thời gian và công suất nấu không phù hợp. d. Thức ăn không được lật hoặc đảo	a. Chỉ sử dụng dụng cụ nấu ăn an toàn với lò vi sóng. b. Rửa đông thực phẩm hoàn toàn. c. Sử dụng đúng thời gian và công suất nấu. d. Lật hoặc đảo thức ăn.
Thực phẩm được nấu quá chín	Thời gian, công suất nấu không phù hợp.	Sử dụng đúng thời gian và công suất nấu.
Thực phẩm nấu chưa chín	a. Sử dụng những vật liệu cần tránh trong lò vi sóng. b. Thực phẩm không được rửa đông hoàn thành. c. Các cổng thông gió của lò bị tắc nghẽn. d. Thời gian và công suất nấu không phù hợp.	a. Chỉ sử dụng dụng cụ nấu ăn an toàn với lò vi sóng. b. Rửa đông thực phẩm hoàn toàn. c. Kiểm tra xem các cổng thông gió của lò có bị tắc nghẽn hay không. d. Sử dụng đúng thời gian và công suất nấu.
Rã đông không đúng cách	a. Sử dụng những vật liệu cần tránh trong lò vi sóng. b. Thời gian và công suất nấu không phù hợp. c. Thức ăn không được lật hoặc đảo.	a. Chỉ sử dụng dụng cụ nấu ăn an toàn với lò vi sóng. b. Sử dụng đúng thời gian và công suất nấu. c. Lật hoặc đảo thức ăn.



Theo chỉ thị về Rác Thải Thiết Bị Điện và Điện Tử (WEEE), WEEE phải được thu gom và xử lý riêng. Nếu vào bất kỳ thời điểm nào trong tương lai bạn cần thải bỏ sản phẩm này, vui lòng KHÔNG thải bỏ sản phẩm này cùng với rác thải sinh hoạt. Vui lòng gửi sản phẩm này đến các điểm thu gom WEEE nếu có.


#DetailsMatter

INSTRUCTION MANUAL

MICROWAVE OVEN

MW3-MG25PE(BK)

Please review this instruction manual before operating.

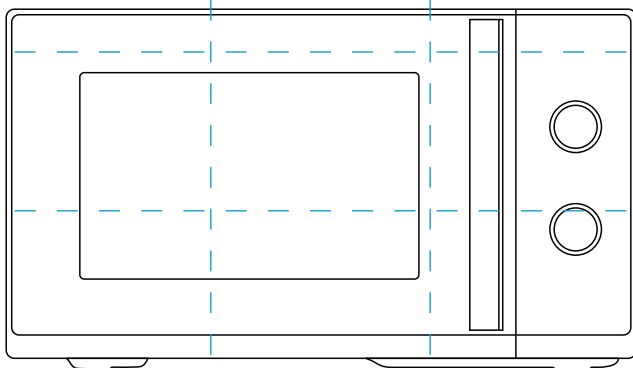

CONTENTS

PRODUCT SAFETY

Precautions to avoid possible exposure to excessive microwave energy	EN-01
Specifications	EN-02
Important safety instructions	EN-03
To reduce the risk of injury to persons grounding installation.....	EN-08
Cleaning.....	EN-10
Utensils.....	EN-11
Materials you can use in microwave oven	EN-12
Materials can not be used in microwave oven	EN-14

PRODUCT SETTING

Setting up your oven	EN-15
----------------------------	-------

INSTRUCTION FOR USE

Before using for the first time	EN-18
Operation	EN-19

CLEANING AND MAINTENANCE

Cleaning	EN-20
Trouble shooting	EN-22




NOTE

BEFORE OPERATING THIS PRODUCT, READ, UNDERSTAND, AND FOLLOW THESE INSTRUCTIONS. BE SURE TO SAVE THIS BOOKLIST FOR FUTURE REFERENCE.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- (a). Do not attempt to operate this oven with the door open since this can result in harmful exposure to microwave energy. It is important not to break or tamper with the safety interlocks.
- (b). Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- (c). **WARNING:** If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

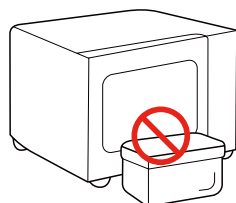

ADDENDUM

If the apparatus is not maintained in a good state of cleanliness, its surface could be degraded and affect the lifespan of the apparatus and lead to a dangerous situation.

SPECIFICATIONS

MODEL	MW3-MG25PE(BK)
RATED VOLTAGE	230 V~ 50 Hz
RATED INPUT (MICROWAVE)	1250 W
RATED OUTPUT (MICROWAVE)	800 W
RATED INPUT (GRILL)	1000 W

IMPORTANT SAFETY INSTRUCTIONS



WARNING

To reduce the risk of fire, electric shock, injury to persons or exposure to excessive microwave oven energy when using your appliance, follow basic precautions, including the following:



Read and follow the specific: "**PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY**".



This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.



The rear surface of appliances shall be placed against a wall.



Children should be supervised to ensure that they do not play with the appliance.



If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



WARNING: Ensure that the appliance is switched off before replacing the lamp to avoid the possibility of electric shock.

IMPORTANT SAFETY INSTRUCTIONS

 **WARNING:** It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy.

 **WARNING:** Liquids and other foods must not be heated in sealed containers since they are liable to explode.

 When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition.



 Only use utensils that are suitable for use in microwave ovens.

 If smoke is emitted, switch off or unplug the appliance and keep the door closed in order to stifle any flames.

 Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container.

 The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns.

 The appliance is intended to be used freestanding.

IMPORTANT SAFETY INSTRUCTIONS

-  The oven should be cleaned regularly and any food deposits removed. Please keep the waveguide area clean. Use soft damp cloth to clean it up when there is food splash residue on the waveguide area or the cavity. Failure to clean food residue may cause innocuous sparking or some smoke in the microwave cavity, discoloration of the cavity may also occur.



-  Only use the temperature probe recommended for this oven. (for ovens provided with a facility to use a temperature-sensing probe.)

-  The microwave oven must be operated with the decorative door open. (for ovens with a decorative door.)

-  This appliance is intended to be used in household and similar applications such as:
1. staff kitchen areas in shops, offices and other working environments;
 2. by clients in hotels, motels and other residential type environments;
 3. farm houses;
 4. bed and breakfast type environments.

-  The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.

IMPORTANT SAFETY INSTRUCTIONS


 Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation.

 The temperature of accessible surfaces may be high when the appliance is operating.

 **WARNING:** When the appliance is operated in the combination mode, children should only use the oven under adult supervision due to the temperatures generated.

 Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating

has ended.

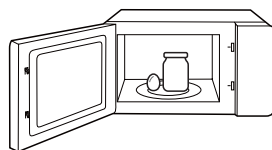

 The appliance must not be installed behind a decorative door in order to avoid overheating. (This is not applicable for appliances with decorative door.)

 The microwave oven shall not be placed in a cabinet unless it has been tested in a cabinet.

 Metallic containers for food and beverages are not allowed during microwave cooking.

 The appliance shall not be cleaned with a steam cleaner.

IMPORTANT SAFETY INSTRUCTIONS



The appliances are not intended to be operated by means of an external timer or separate remote-control system.

READ CAREFULLY AND KEEP FOR
FUTURE REFERENCE

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION

This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current.

This appliance is equipped with a cord having a grounding wire with a grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

WARNING - Improper use of the grounding can result in a risk of electric shock. Consult a qualified electrician or serviceman if the grounding instructions are not completely understood or if doubt exists as to whether the appliance is properly grounded.

If it is necessary to use an extension cord, use only a 3-wire extension cord.



DANGER

Electric Shock Hazard:

Touching some of the internal components can cause serious personal injury or death. Do not disassemble this appliance.

TO REDUCE THE RISK OF INJURY TO PERSONS GROUNDING INSTALLATION



WARNING

Electric Shock Hazard:

Improper use of the grounding can result in electric shock. Do not plug into an outlet until appliance is properly installed and grounded.

1. A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord.
2. If a long cord or extension cord is used:
 - (1). The marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance.
 - (2). The extension cord must be a grounding-type 3-wire cord.
 - (3). The longer cord should be arranged so that it will not drape over the counter top or tabletop where it can be pulled on by children or tripped over unintentionally.

CLEANING

Be sure to unplug the appliance from the power supply.

1. Clean the cavity of the oven after using with a slightly damp cloth.
2. Clean the accessories in the usual way in soapy water.
3. The door frame and seal and neighbouring parts must be cleaned carefully with a damp cloth when they are dirty.
4. Do not use harsh abrasive cleaners or sharp metal scrapers to clean the oven door glass since they can scratch the surface, which may result in shattering of the glass.
5. Cleaning Tip---For easier cleaning of the cavity walls that the food cooked can touch: Place half a lemon in a bowl, add 300ml (1/2 pint) water and heat on 100% microwave power for 10 minutes. Wipe the oven clean using a soft, dry cloth.

UTENSILS



CAUTION


Personal Injury Hazard:

It is hazardous for anyone other than a competent person to carry out any service or repair operation that involves the removal of a cover which gives protection against exposure to microwave energy. See the instructions on "**Materials you can use in microwave oven**" or "**Materials can not be used in microwave oven**".

There may be certain non-metallic utensils that are not safe to use for microwaving. If in doubt, you can test the utensil in question following the procedure below.


Utensil Test:

1. Fill a microwave-safe container with 1 cup of cold water (250ml) along with the utensil in question.
2. Cook on maximum power for 1 min.
3. Carefully feel the utensil. If the empty utensil is warm, do not use it for microwave cooking.
4. Do not exceed 1 min cooking time.

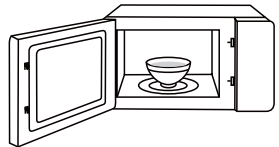

NOTE

KEEP THE CAVITY AND
WAVEGUIDE AREA CLEAN

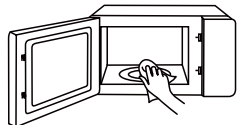



MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Browning dish	Follow manufacturer's instructions. The bottom of browning dish must be at least 3/16 inch (5mm) above the turntable. Incorrect usage may cause the turntable to break.	
 Dinnerware	Microwave-safe only. Follow manufacturer's instructions. Do not use cracked or chipped dishes.	
 Glass jars	Always remove lid. Use only to heat food until just warm. Most glass jars are not heat resistant and may break.	
 Glassware	Heat-resistant oven glassware only. Make sure there is no metallic trim. Do not use cracked or chipped dishes.	
 Oven cooking bags	Follow manufacturer's instructions. Do not close with metal tie. Make slits to allow steam to escape.	
 Paper plates and cups	Use for short-term cooking/warming only. Do not leave oven unattended while cooking.	
 Paper towels	Use to cover food for reheating and absorbing fat. Use with supervision for a short-term cooking only.	
 Parchment paper	Use as a cover to prevent splattering or a wrap for steaming.	

MATERIALS YOU CAN USE IN MICROWAVE OVEN

UTENSILS	REMARKS
 Plastic	Microwave-safe only. Follow the manufacturer's instructions. Should be labeled "Microwave Safe". Some plastic containers soften, as the food inside gets hot. "Boiling bags" and tightly closed plastic bags should be slit, pierced or vented as directed by package. 
 Plastic wrap	Microwave-safe only. Use to cover food during cooking to retain moisture. Do not allow plastic wrap to touch food. 
 Thermometers	Microwave-safe only (meat and candy thermometers). 
 Wax paper	Use as a cover to prevent splattering and retain moisture. 

MATERIALS CAN NOT BE USED IN MICROWAVE OVEN

UTENSILS	REMARKS	
 Aluminum tray	May cause arcing. Transfer food into microwave-safe dish.	
 Food carton with metal handle	May cause arcing. Transfer food into microwave-safe dish.	
 Metal or metal trimmed utensils	Metal shields the food from microwave energy. Metal trim may cause arcing.	
 Metal twist ties	May cause arcing and could cause a fire in the oven.	
 Paper bags	May cause a fire in the oven.	
 Plastic foam	Plastic foam may melt or contaminate the liquid inside when exposed to high temperature.	
 Wood	Wood will dry out when used in the microwave oven and may split or crack.	


PRODUCT SETTING

SETTING UP YOUR OVEN


(In case of any differences between the appliance and the pictures in this manual, the product shall prevail.)

NAMES OF MICROWAVE OVEN PARTS AND ACCESSORIES


Remove the oven and all materials from the carton and oven cavity.




Turntable Ring Assembly

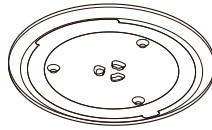


Glass turntable



Instruction Manual

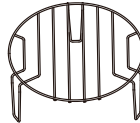

Grill Rack(Can not be used in microwave function and must be placed on the glass tray)

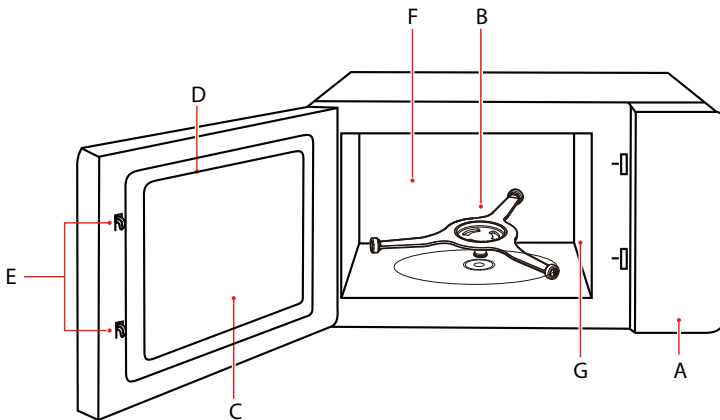

- A. Control panel
- B. Turntable Ring Assembly
- C. Observation window
- D. Door assembly

- E. Safety interlock system
- F. Oven cavity
- G. Waveguide cover

SETTING UP YOUR OVEN

TURNTABLE INSTALLATION


Clean the cooking compartment and place the turntable.

For new installations, make sure all packaging and shipping tape has been removed from the turntable shaft.


Before using the appliance to prepare food for the first time, you will need to put the turntable in place correctly. You must clean the cooking compartment and accessories. You can also refer them to the cleaning section.

How to put the turntable in place:

1. Place the turntable ring assembly ② into the recess in the cooking compartment.
2. Place the glass tray ① on the turntable ring assemblies ②.

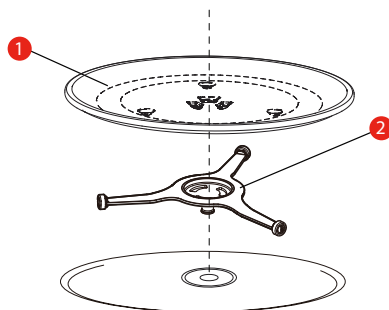

- 1) Glass Tray
2) Turntable Ring Assembly

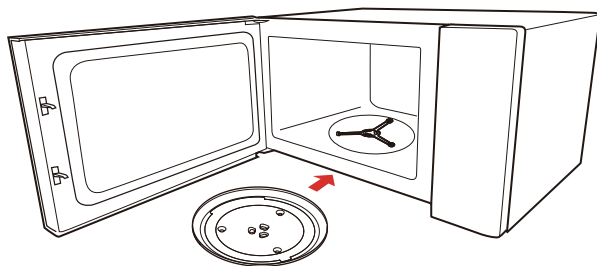

NOTE

- Never use the appliance without the turntable. Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.
- Never place the glass tray upside down. The glass tray should never be restricted.
- Both glass tray and turntable ring assembly must always be used during cooking.
- All food and containers of food are always placed on the glass tray for cooking.
- Never restrict the movement of the turntable.
- If glass tray or turntable ring assembly cracks or breaks, contact your nearest authorized service center.


COUNTERTOP INSTALLATION

Remove all packing material and accessories. Examine the oven for any damage such as dents or broken door. Do not install if oven is damaged.

Cabinet: Remove any protective film found on the microwave oven cabinet surface. Do not remove the waveguide cover that is attached to the oven cavity to protect the magnetron.

INSTALLATION

1. Select a level surface that provide enough open space for the intake and/or outlet vents.
 - a. The minimum installation height is 85cm.
 - b. The rear surface of appliance shall be placed against a wall. Leave a minimum clearance of 30cm above the oven. A minimum clearance of 20cm is required between the oven and any adjacent walls.
 - c. Do not remove the legs from the bottom of the oven.
 - d. Blocking the intake and/or outlet openings can damage the oven.
 - e. Place the oven as far away from radios and TV as possible.Operation of microwave oven may cause interference to your radio or TV reception.

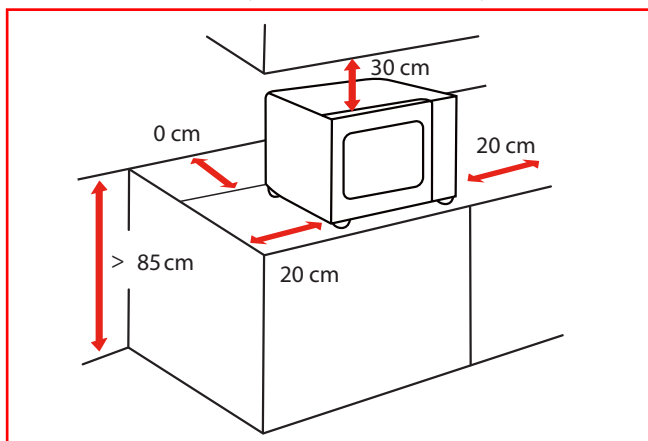


2. Plug microwave oven into a standard household outlet. Be sure the voltage and the frequency is the same as the voltage and the frequency on the rating label.



NOTE

- Do not install oven over a range cooktop or other heat-producing appliance. If installed near or over a heat source, the oven could be damaged and the warranty would be void.

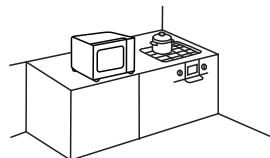

The accessible surface may be hot during operation

INSTRUCTION FOR USE

BEFORE USING FOR THE FIRST TIME

It is normal that the oven may produce unpleasant odors when it is used for the first time.


This section tells you what you need to do before using your microwave to prepare food for the first time. Read the section entitled "**PRODUCT SAFETY** " beforehand.

Before you can use your new appliance, you will need to put the turntable in place correctly. You must also clean the cooking compartment and accessories.



- Never use the appliance without the turntable.
- Make sure that it is properly engaged. The turntable can turn clockwise or anti-clockwise.

OPERATION

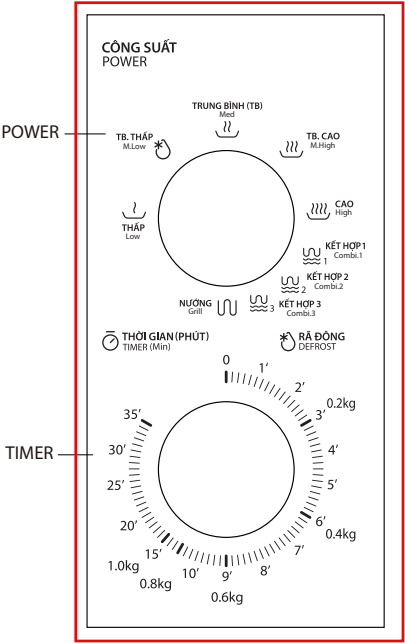

- 1.To set cooking power by turning the power knob to desired level.
- 2.To set the time of cooking by turning the timer knob to desired time per your food cooking guide.
- 3.The microwave oven will automatically start cooking after power level and time are set.
- 4.When the cooking time is up, the unit will "Dong" to stop.
- 5.If the unit is not in use, always set time to "0".

Function/Power	Output	Application
	17% micro.	soften ice cream
	33% micro.	soup stew, soften butter or defrost
	55% micro.	stew, fish
	77% micro.	rice, fish, chicken, ground meat
	100% micro.	reheat, milk, boil water, vegetables, beverage

Function/Power	Output	Application
	80% grill 20% micro.	sausage, lamb, kabobs, seafood, steak
	70% grill 30% micro.	chicken pieces, chicken breasts, pork chops
	60% grill 40% micro.	whole chicken
	100% grill	baken bread, slice food



NOTE

When removing food from the oven, please ensure that the oven power is switched off by turning the timer switch to 0(zero). Failure to do so, and operating the microwave oven without food in it, can result in overheating and damage to the magnetron.

CLEANING AND MAINTENANCE

CLEANING

With good care and cleaning, your appliance will retain its appearance and remain fully functioning for a long time to come. We will explain here how you should correctly care for and clean your appliance.



WARNING

- Scratched glass in the appliance door may develop into a crack. Do not use a glass scraper, sharp or abrasive cleaning aids or detergents.
- The surface of the appliance may become damaged if it is not cleaned properly. Microwave energy may escape. Clean the appliance on a regular basis, and remove any food remnants immediately.
- Do not immerse the appliance in water or clean under a jet of water.

Cleaning agent

To ensure that the different surfaces are not damaged by using the wrong cleaning agent, observe the information in the table. Wash new sponge cloths thoroughly before use.

Do not use:



Harsh or abrasive cleaning agents



Metal or glass scrapers to clean the door panels



Metal or glass scrapers to clean the door seal



Hard scouring pads or sponges




Cleaning agents with a high alcohol content

APPLIANCE FRONT

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Do not use metal or glass scrapers for cleaning.

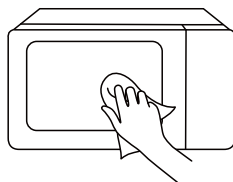

APPLIANCE FRONT WITH STAINLESS STEEL

Hot soapy water:


Clean using a dish cloth and then dry with a soft cloth. Remove splashes and patches of limescale, grease, starch and albumin immediately. Corrosion can form under these patches or splashes. Do not use glass cleaners or metal or glass scrapers for cleaning.

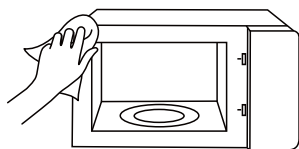

COOKING COMPARTMENT MADE OF STAINLESS STEEL

Hot soapy water or vinegar solution:


Clean using a dish cloth and then dry with a soft cloth. Do not use oven spray or any other aggressive oven cleaners or abrasive materials. Scouring pads, rough sponges and pan cleaners are also unsuitable. These items scratch the surface. Allow the interior surfaces to dry completely.

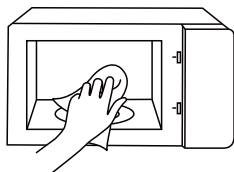

RECESS IN THE COOKING COMPARTMENT

Damp cloth:


Water must not be allowed to run into the appliance through the turntable drive. Dry the turntable drive with a cloth.

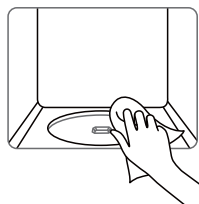

TURNTABLE AND ROLLER RING

Hot soapy water:

When placing the turntable back into its recess, it must engage properly.

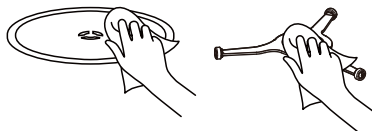

DOOR PANELS

Glass cleaner:

Clean with a dish cloth. Do not use glass scrapers.

TROUBLE SHOOTING

Check your problem by using the chart below and try the solutions for each problem.
If the microwave oven still does not work properly, contact the nearest authorized service center.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Oven will not start	a. Electrical cord for oven is not plugged in. b. Door is open. c. Wrong operation is set.	a. Plug into the outlet. b. Close the door and try again. c. Check instructions
Arcing or sparking	a. Materials to be avoided in microwave oven were used. b. The oven is operated when empty. c. Spilled food remains in the cavity.	a. Use microwave-safe cookware only. b. Do not operate with oven empty. c. Clean cavity with soft damp cloth.
Unevenly cooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Cooking time, power level is not suitable. d. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Use correct cooking time, power level. d. Turn or stir food.
Overcooked foods	Cooking time, power level is not suitable.	Use correct cooking time, power level.
Undercooked foods	a. Materials to be avoided in microwave oven were used. b. Food is not defrosted completely. c. Oven ventilation ports are restricted. d. Cooking time, power level is not suitable.	a. Use microwave-safe cookware only. b. Completely defrost food. c. Check to see that oven ventilation ports are not restricted. d. Use correct cooking time, power level
Improper defrosting	a. Materials to be avoided in microwave oven were used. b. Cooking time, power level is not suitable. c. Food is not turned or stirred.	a. Use microwave-safe cookware only. b. Use correct cooking time, power level. c. Turn or stir food.



According to Waste of Electrical and Electronic Equipment (WEEE) directive, WEEE should be separately collected and treated. If at any time in future you need to dispose of this product please do NOT dispose of this product with household waste. Please send this product to WEEE collecting points where available.

#DetailsMatter