



OPERATION MANUAL HƯỚNG DẪN SỬ DỤNG

DAIKIN ROOM AIR CONDITIONER
MÁY ĐIỀU HÒA KHÔNG KHÍ DÂN DỤNG DAIKIN

MODELS MÁY

- ☒ FTKB25ZVMV
- ☒ FTKB35ZVMV
- ☒ FTKB50ZVMV
- ☒ FTKB60ZVMV

- ☒ ATKB25ZVMV
- ☒ ATKB35ZVMV



DAIKIN VIETNAM APP INTRODUCTION

Daikin Vietnam Application aims to ensure the interests of consumers, improve service quality and customer experience. Through this app, customers can update information about Daikin air conditioning equipment, maintenance / repair history, and send service requests. Keep update information from Daikin Vietnam. Follow below instruction to install Daikin Vietnam Application.



APP installation link



Scan QR code



Download APP



Daikin VN APP

CONTENTS

READ BEFORE OPERATION

Safety Precautions	2
Names of Parts	5
Preparation Before Operation	8

OPERATION

COOL/DRY/FAN Operation	10
HUMIDITY Operation	11
Adjusting the Airflow Rate	12
Adjusting the Airflow Direction	13
POWERFUL Operation	14
COMFORT AIRFLOW Operation	15
ECONO Operation	16
MOLD PROOF Operation	17
OUTDOOR UNIT QUIET Operation	19
TIMER Operation	20

CARE

Care and Cleaning	22
-------------------------	----

TROUBLESHOOTING

Troubleshooting	26
-----------------------	----

The English text is the original instruction. Other languages are translations of the original instructions.

Safety Precautions

	Read the precautions in this manual carefully before operating the unit.		This appliance is filled with R32.
--	--	---	------------------------------------

- After reading, keep this manual in a convenient place so that you can refer to it whenever necessary. If the appliance is transferred to a new user, be sure also to hand over the manual.
- The precautions described herein are classified as WARNING and CAUTION. They both contain important information regarding safety. Be sure to observe all precautions without fail.

 WARNING	Failure to follow these instructions properly may result in personal injury or loss of life.	
 CAUTION	Failure to observe these instructions properly may result in property damage or personal injury, which may be serious depending on the circumstances.	
 Never attempt.	 Be sure to follow the instructions.	 Be sure to establish an earth connection.

WARNING

About R32 refrigerant

-  Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources (for example: open flames, an operating gas appliance or an operating electric heater).
- Do not pierce or burn.
- Be aware that refrigerants gas may not contain an odour.
- The appliance must be installed, operated and stored in a room with floor area larger than – * m².
* Since the maximum refrigerant charge of the model is below 1.22 kg, it does not have any limitation for the minimum floor area.
The appliance should be installed in a well-ventilated room.
- Maintain an installation height of 2.5 m or more from the floor surface to the bottom of the appliance.

When installing, relocating, and repairing

-  Do not use a refrigerant other than the one indicated on the outdoor unit (R32) when installing, relocating, or repairing.
Using other refrigerants may cause trouble or damage to the unit, and personal injury.
- Do not attempt to install, repair, dismantle reinstall or modify the appliance yourself.
Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.
-  Beware of fire in case of refrigerant gas leakage.
If the air conditioner is not operating correctly, i.e. not generating cool air, refrigerant leakage could be the cause. Consult your dealer for assistance. The refrigerant within the air conditioner is safe and normally does not leak. However, in the event of a leakage, contact with a naked burner, heater or cooker may result in generation of noxious gas. Do not longer use the air conditioner until a qualified service person confirms that the leakage has been repaired.
- Arrange the drain hose to ensure smooth drainage. Imperfect drainage may cause wetting of the building, furniture, etc.
- Contact your dealer for repair and maintenance.
Improper repair and maintenance may result in water leakage, electric shock, and fire.
Only use accessories made by manufacture that are specifically designed for use with the equipment and have them installed by a technicians who have been trained to install.
-  Be sure to install an earth leakage circuit breaker. Failure to install an earth leakage circuit breaker may result in electric shock or fire.
- Be sure to earth the appliance. Do not earth the unit to a utility pipe, lightning conductor or telephone earth lead. Imperfect earthing may result in electric shock.

When using the air conditioner



- In order to avoid fire, explosion or injury, do not operate the appliance when harmful, among which flammable or corrosive gases, are detected near the appliance.
- Be aware that prolonged, direct exposure to cool air from the air conditioner, or to air that is too cool can be harmful to your physical condition and health.
- Do not place objects, including rods, your fingers, etc., in the air inlet or outlet.
Product damage or personal injury may result due to contact with the air conditioner's high-speed fan blades.
- Do not use flammable spray near the air conditioner, or otherwise fire may result.
- To avoid electric shock, do not operate with wet hands.
- Do not place flammable items, such as spray cans, within 1 m of the air outlet.
The spray cans may explode as a result of hot air from the appliances.

About the power cord



- Only connect the appliance to the specified power supply circuit.
Power supplies other than the one specified may result in electric shock, overheating and fires.

When cleaning



- Do not attempt to install, repair, dismantle reinstall or modify the appliances yourself.
Improper workmanship may result in water leakage, electric shocks or fire hazards. Please contact your local dealer or technicians who have been trained to install, relocate and dismantle.

Terminate operation if abnormality or malfunction are observed



- When the appliance is malfunctioning (giving off a burning odour, etc.), turn off power to the appliance and contact your local dealer. Continued operation under such circumstances may result in a failure, electric shock or fire hazards.



CAUTION

About the indoor unit



- Do not use the appliance for purposes other than those for which it is intended. Do not use the appliance for cooling precision instruments, food, plants, animals or works of art as this may adversely affect the performance, quality and/or longevity of the object concerned.
- Do not expose plants or animals directly to the airflow from the appliance as this may cause adverse effects.
- Do not place appliances that produce naked flames in places exposed to the airflow from the unit as this may impair combustion carried out by such appliances.
- Do not place objects that are susceptible to moisture directly beneath the indoor or outdoor units. Under certain conditions, condensation on the unit or refrigerant pipes, air filter dirt or drain blockage may cause dripping, resulting in fouling or failure of the object concerned.
- Do not sit or hang on the panel. The panel may fall, and injury or product malfunction may result.
- Do not sway the panel around. The panel may hit people or objects, and injury or property damage may result.
- Do not let children play with or around the panel. Injury or property damage may result.
- Do not pull the wires of the appliance. The wires may be broken, as this may result in electric shocks or property damage may result.
- Do not locate obstacles in the path of the front panel. The front panel may fall, and injury or property damage may result.
- Do not bend or damage the wires. The wires may be broken, and injury or property damage may result.
- Do not put objects on the front panel, or otherwise production malfunctioning may result.



- To avoid oxygen depletion, ensure that the room is adequately ventilated if equipment such as a burner is used together with the appliance.
- Do not place objects around the appliance. Doing so may have an adverse influence on the performance, product quality, and life of the appliance.

Safety Precautions

About the outdoor unit



- Do not block the air inlets nor outlets. Impaired airflow may result in insufficient performance or trouble.
- Do not sit on the outdoor unit, put things on the unit, or pull the unit. Doing so may cause accidents, such as falling or toppling down, thus resulting in injury, product malfunction, or product damage.
- After prolonged use, check the appliance stand and mounts for damage. If they are left in a damaged condition, the appliance may fall and cause injury.
- To avoid injury, do not touch the air inlet or aluminium fins of the indoor or outdoor units.



- Do not place objects in direct proximity of the outdoor unit and do not let leaves and other debris accumulate around the unit.
Leaves are a hotbed for small animals which can enter the unit. Once inside the appliance, such animals can cause malfunctions, smoke or fire if they come into contact with electrical parts.

About the remote controller



- Do not insert the batteries in the wrong polarity (+/-) orientation as this may result in short circuit, fire, or battery leakage.
- Locate the remote controller in places out of reach of children.
The wrong operation of the remote controller and accidents in the case of child accidentally has swallowed batteries may result in injury.

When using the air conditioner



- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Impairment of bodily functions and harm to health may result.



- Children should be supervised to ensure that they do not play with the appliance or remote controller. Accidental operation by a child may result in impairment of bodily functions and harm health.
- Avoid impacts to the appliances, or otherwise product damage may result.
- Be careful not to let pets urinate on the appliance. Urination on the appliance may result in electric shock or fire.

When cleaning



- Do not wash the air conditioner with water, as this may result in electric shock or fire.
- Do not place water containers (vases, etc.) above the unit, as this may result in electric shock or fire hazards if they should topple over.
- Do not stand on an unstable surface when operating or maintaining the appliance, or otherwise you may topple over or injure yourself.



- Before cleaning, be sure to stop unit operation and turn off the circuit breaker. Otherwise, an electric shock and injury may result.

This is an appliance that is not accessible to the general public.


Precautions relating to area surrounding the indoor and outdoor units

- Be sure to follow the instructions below.

- The indoor unit is at least 1 m away from any television or radio set (unit may cause interference with the picture or sound).
- Refrain from using the units in areas prone to high levels of oily smoke, such as a kitchen. Water leakage may result.


Names of Parts

■ Indoor Unit

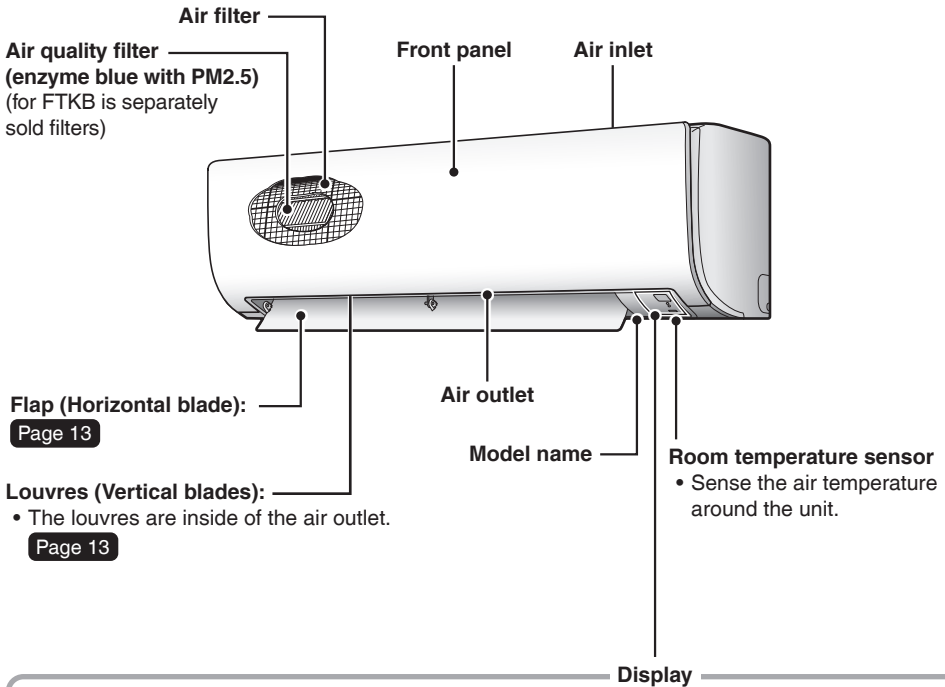

Signal receiver:

- It receives signals from the remote controller.
- When the unit receives a signal, you will hear a beep sound.
 - Operation startbeep-beep
 - Settings changedbeep
 - Operation stopbeeeeeep

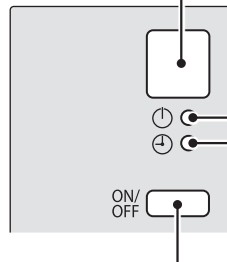

Indoor Unit ON/OFF switch:

- Push this switch once to start operation.
Push once again to stop it.
- For the operation mode setting, refer to the following table.

Mode	Temperature setting	Airflow rate
COOL	22.0°C	AUTO


- This switch can be used when the remote controller is missing or out of batteries.

Names of Parts

■ Outdoor Unit

For RKB25*/35/50/60*, ARKB25*/35

* Appearance of outdoor units may differ from some model

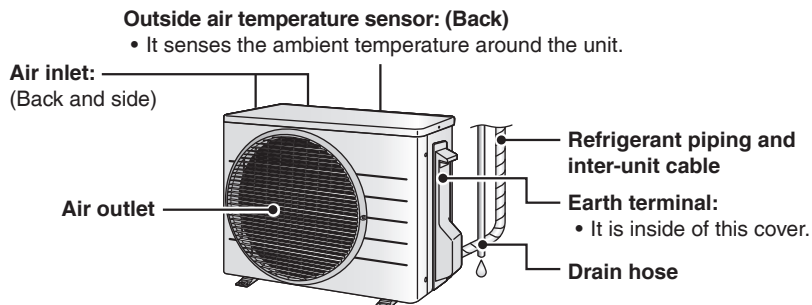

■ Remote Controller

Signal transmitter:

- It sends signals to the indoor unit.

ON/OFF button:

- Press this button once to start operation.
Press once again to stop it.

Page 10

MODE selector button:

- It selects the operation mode (COOL/DRY/FAN).

Page 10

FAN setting button:

- Selects the airflow rate setting.

Page 12

QUIET button:

- OUTDOOR UNIT QUIET operation.

Page 19

COMFORT button:

- COMFORT AIRFLOW operation.

Page 15

MENU button (push 2 seconds):

- Adjusts the display brightness.

Page 9

ON TIMER button:

Page 21

OFF TIMER button:

Page 20

Display (LCD):

- Displays the current settings. (In this illustration, each section is shown with all its displays ON for the purpose of explanation.)

TEMPERATURE adjustment button:

- Changes the temperature setting.

Page 10

SWING buttons:

- Adjusting the Airflow Direction.

Page 13

POWERFUL button:

Page 14

ECONO button:

- ECONO operation.

Page 16

MOLD button:

- MOLD PROOF operation.

Page 17

TIMER CANCEL button:

- Cancels the timer setting.

HUMIDITY button:


- HUMIDITY operation.

Page 11

Model name ARC486A56


Preparation Before Operation

■ To set the batteries

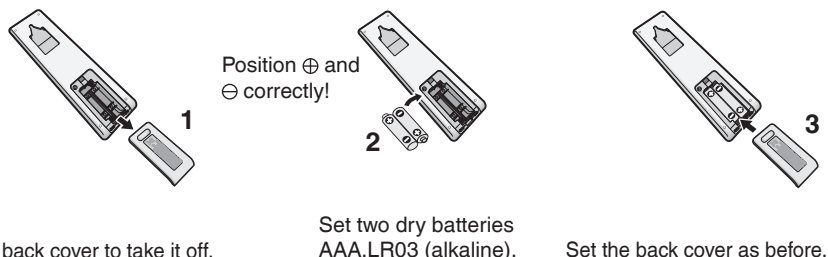


■ To operate the remote controller

- To use the remote controller, aim the transmitter at the indoor unit. If there is anything blocking signals between the unit and the remote controller, such as a curtain, the unit will not operate.
- Do not drop the remote controller. Do not get it wet.
- The maximum distance for communication is about 7 m.

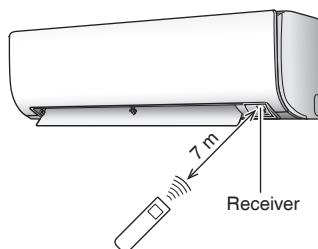

■ To fix the remote controller holder on the wall

1. Choose a place from where the signals reach the unit.
2. Fix the holder to a wall, a pillar, etc. with the screws supplied with the holder.
3. Place the remote controller in the remote controller holder.

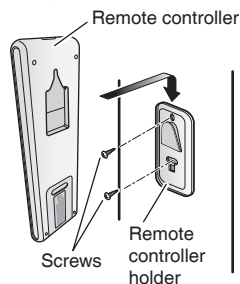

■ Turn the breaker on

- After the power is turned on, the flap of the indoor unit opens and close once to set the reference position.


ATTENTION

■ About batteries

- When replacing the batteries, use batteries of the same type, and replace the 2 old batteries together.
- When the system is not used for a long time, take the batteries out.
- The batteries will last for approximately one year. If the remote controller display begins to fade and the degradation of reception performance occurs within a year, however, replace both two batteries with new size AAA.LR03 (alkaline) batteries.
- The attached batteries are provided for the initial use of the system. The usable period of the batteries may be short depending on the manufactured date of the air conditioner.
- When battery power has run out, “ ” will begin blinking as an alert that the batteries need replacing. In some cases, when battery consumption is accelerated owing usage conditions, signal reception may decline before “ ” begins blinking.

■ About remote controller

- Never expose the remote controller to direct sunlight.
- Dust on the signal transmitter or receiver will reduce the sensitivity. Wipe off dust with soft cloth.
- Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult the shop if that is the case.
- If the remote controller signals happen to operate another appliance, move that appliance to somewhere else, or consult the shop.

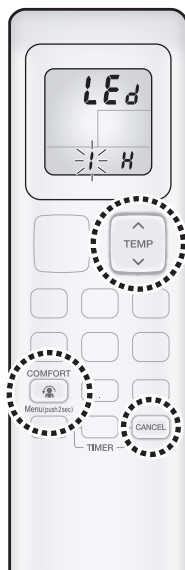

■ To set the brightness of the indoor unit lamps

Adjust the brightness of the indoor unit display as desired, or turn OFF the display.


■ To set

1. Press  and hold the button for 2 seconds.

- “LED” appears on the LCD.
- “1-” (menu number) blinks.

2. Press  to confirm the selected setting for menu number 1.

3. Press  or  and select the desired brightness as follows:

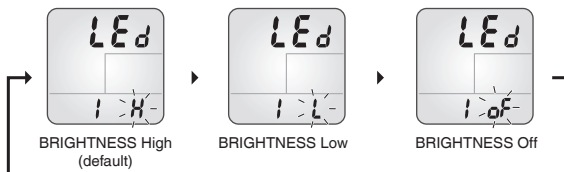

4. Press  again.
 - Brightness will be set to the chosen value.
5. Press  twice to return to the default screen.

NOTE

Note on setting brightness of the indoor unit lamps

- The display automatically returns to the default screen after 60 seconds.

COOL/DRY/FAN Operation




The air conditioner operates with the operation mode of your choice. From the next time on, the air conditioner will operate with the same operation mode.

■ To start operation


■ Press  and select an operation mode.

- Each pressing of the button changes the mode setting in sequence.

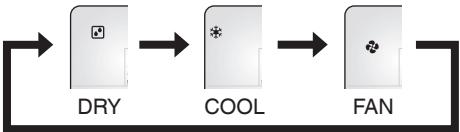

■ Press  .

- “ON” appears on the LCD.

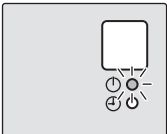

Display

- COOL/DRY/FAN operation
The OPERATION lamp lights green.
- Operation mode can be changed while operating by pressing your desired operation mode button.

■ To stop operation

■ Press  again.

- Then OPERATION lamp goes off.

■ To change the temperature setting

■ Press  .

- The displayed items on the LCD will change whenever either one of the buttons is pressed.

COOL operation	DRY or FAN operation
16.0-32.0°C	The temperature setting is not available.
Press ▲ to raise the temperature and press ▼ to lower the temperature. Each pressing of the button changes the temperature by 0.5°C.	

NOTE

MODE	Notes on each operation mode
COOL	• This air conditioner cools the room by releasing the heat in the room outside. Therefore the cooling performance of the air conditioner may be decrease if the outdoor temperature is high.
DRY	• The computer chip works to rid the room of humidity while maintaining the temperature as much as possible. It automatically controls temperature and airflow rate, so manual adjustment of these functions is unavailable.
FAN	• This mode is valid for fan only.

HUMIDITY Operation



HUMIDITY operation during cool temperature setting operation to prevent dry air and ensure moisture is retained to increase your comfort.

■ To start

▶ While COOL operation “❄️”, press  .

- “💧” appears on the LCD.

■ To cancel

▶ Press  again.

- “💧” disappears from the LCD.
- The operation will be normal COOL operation mode.

NOTE

■ Notes on HUMIDITY operation

- HUMIDITY operation is only available during COOL operation.
- When select humidity by press  , and operation change from COOL operation to HUMIDITY operation that the indoor room temperature rises at that time if the outdoor temperature is high.
- In case of the outdoor temperature is high, the cooling performance and indoor room humidity control may drop.
- In order to regulate temperature and humidity, the airflow rate during COOL operation is adjusted automatically.
- The HUMIDITY operation will be change according to the temperature settings.
- The airflow settings cannot be changed.

Adjusting the Airflow Rate




You can adjust the airflow rate to increase your comfort.

■ To adjust the airflow rate setting

■ Press  .

- Each pressing of the button change the airflow rate setting in sequence shown below.

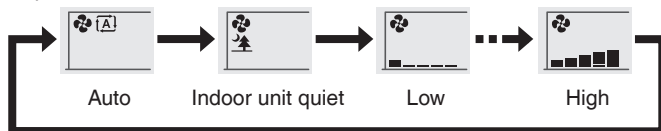

- When the airflow is set to “”, indoor unit quiet operation will start and the noise from the unit will become quieter.
- In indoor unit quiet operation, the airflow rate is set to a weak level.
- If the temperature does not reach the desired point, change the airflow rate setting.
- In DRY mode, the airflow rate setting is not available.
- If COOL/DRY operation is started with airflow settings on “AUTO”, the indoor unit will initially deodorise, which functions to suppress any internal odours. As a result, the indoor unit will not emit air immediately. (Wait for about 1 minute.)
- At smaller airflow rates, the cooling effect is also smaller.

Tips for saving energy

- Be careful not to cool the room too much.
Keeping the temperature setting at a moderate level helps save energy.
- Recommended temperature setting for cooling is 26.0-28.0°C.
- Cover windows with a blind or a curtain.
Blocking sunlight and air from outdoors increases the cooling effect.
- Clogged air filters cause inefficient operation and waste energy.
Clean them once in about every 2 weeks.

Adjusting the Airflow Direction



You can adjust the airflow direction to increase your comfort.

ATTENTION

- Always use a remote controller to adjust the angles of the flap.
 - If you attempt to move it forcibly with hand when it is swinging, the mechanism may be broken.
- Be careful when adjusting the louvres.
 - Inside the air outlet, a fan is rotating at a high speed.

[To operate automatically]

■ To adjust the flap (horizontal blade)

Up and down airflow direction

Press  .

- “” appears on the LCD.
- The flap (horizontal blade) will begin to swing.

When the flap has reached the desired position, press  once more.

- The flap will stop moving.
- “” disappears from the LCD.



[To operate manually]

■ To adjust the louvres (vertical blades)

Right and left airflow direction

Hold the knob and move the louvres. (You will find a knob on the left-side and the right-side blades.)

- When the unit is installed in the corner of a room, the direction of the louvres should be facing away from the wall. If they face the wall, the wall will block off the wind, causing the cooling efficiency to drop.

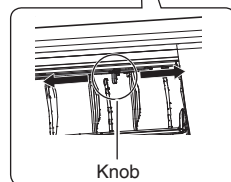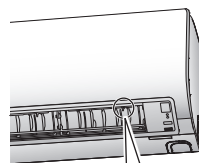


NOTE

■ Note on airflow direction setting

- The movable range of the flap varies according to the operation mode, refer to the right picture.

Movable range of the flap

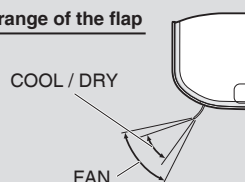

POWERFUL Operation



POWERFUL operation quickly maximizes the cooling effect in any operation mode. You can get the maximum capacity.

■ To start

➤ Press  during operation.

- POWERFUL operation ends in 20 minutes.
Then the system automatically operates again with the previous settings which were used before POWERFUL operation.
- “” appears on the LCD.

■ To cancel

➤ Press  again.

- “” disappears from the LCD.

NOTE

■ Notes on POWERFUL operation

- When  button is pressed after press  button to start operation, the air conditioner will work in quick cooling operation, the compressor and indoor fan will work at high speed to help cooling faster than normal POWERFUL operation under the condition that the indoor temperature level will be 25~37°C DB/outdoor temperature level will be 25~43°C DB.
- POWERFUL operation can only be set when the unit is running. Pressing  causes the settings to be canceled, and “” disappears from the LCD.
- POWERFUL operation will not increase the capacity of the air conditioner if the air conditioner is already in operation with its maximum capacity demonstrated.

In COOL operation

To maximise the cooling effect, the capacity of outdoor unit increases and the airflow rate becomes fixed at the maximum setting. The temperature and airflow settings can not be changed.

In DRY operation

The temperature setting is lowered by 2.5°C and the airflow rate is slightly increased.

In FAN operation

The airflow rate is fixed at the maximum setting.

Regarding the combination of POWERFUL and other operations

POWERFUL + COMFORT AIRFLOW	Not available*
POWERFUL + ECONO	
POWERFUL + OUTDOOR UNIT QUIET	

*Priority is given to the function of whichever button is pressed last.

COMFORT AIRFLOW Operation



The flow of air will be in the upward direction while in COOL/DRY operation, which will provide a comfortable wind that will not come in direct contact with people.

■ To start

Press  .

- “” appears on the LCD.

	COOL operation	DRY operation
Flap direction	Goes up	
Airflow rate	The airflow rate can be set to any level	AUTO

- Not available in FAN Mode.

■ To cancel

Press  again.

- “” disappears from the LCD.

NOTE

■ Notes on COMFORT AIRFLOW operation

- The flap position will change, preventing air from blowing directly on the occupants of the room.
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/ OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.

ECONO Operation



ECONO operation is a function which enables efficient operation by limiting the maximum power consumption value.

This function is useful for cases in which attention should be paid to ensure a circuit breaker will not trip when the product runs alongside other appliances.

■ To start

Press .

- “” appears on the LCD.

■ To cancel

Press  again.

- “” disappears from the LCD.

NOTE

■ Notes on ECONO operation

- ECONO Operation can only be set when the unit is running. Pressing  causes the setting to be canceled, and the “” disappears from the LCD.
- ECONO operation is a function which enables efficient operation by limiting the power consumption of the outdoor unit (operating frequency).
- ECONO operation functions in COOL and DRY operation.
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- If the power consumption level is already low, switching to ECONO operation will not reduce the power consumption.

MOLD PROOF Operation



MOLD PROOF operation is a function which reduces the spread of mold by using FAN operation to lower the humidity inside the indoor unit.

[To operate automatically]

■ To set

- Press  and hold the button for 2 seconds.

- “” appears on the LCD.
- After DRY or COOL operation stops, the air conditioner starts MOLD PROOF operation automatically.
- The OPERATION lamp blinks.

■ To cancel

- Press  and hold the button for 2 seconds one more time.

- “” disappears from the LCD.


[To operate manually]

- Press  for about 2 seconds while the unit is not operating.

- “” blinks on the LCD, and the display returns to normal after a while.
- If the air conditioner is turned off for more than 3 minutes, press  once again and hold the button for 2 seconds to start MOLD PROOF operation.
- The OPERATION lamp blinks.

MOLD PROOF Operation

[Flow of function]

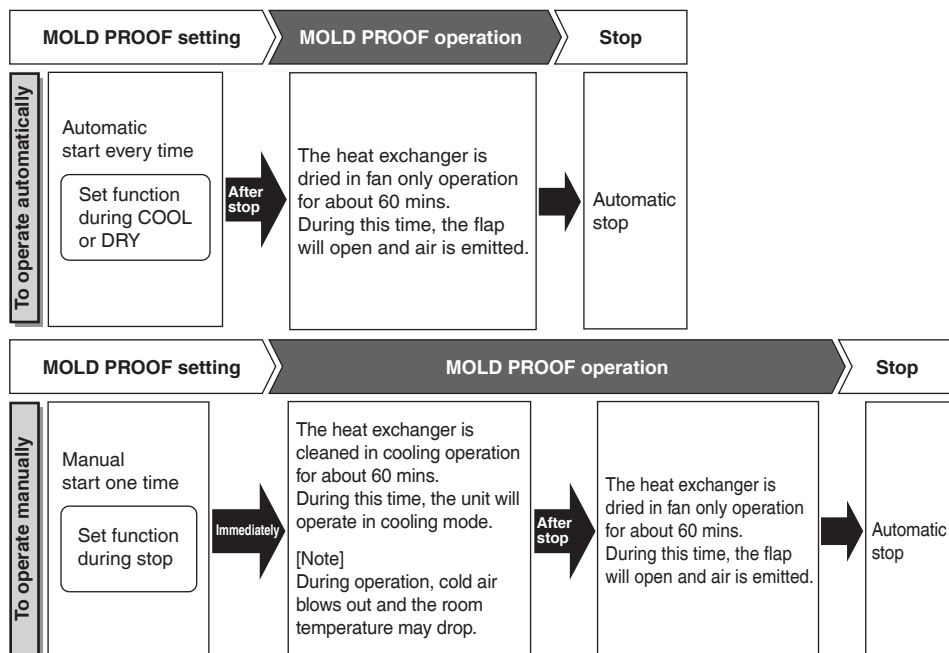

NOTE

■ Notes on MOLD PROOF setting

- When you want to stop MOLD PROOF operation midway, press  twice.
The MOLD PROOF operation will be canceled, and “” disappears from the LCD.
- This function is not designed to remove existing dust or mold.
- MOLD PROOF operation is not available when the unit is turned off using the OFF TIMER.

■ Notes on MOLD PROOF operation

- The flap may sometimes close to increase the drying effect inside the air conditioner.
- MOLD PROOF operation may not be performed if the COOL or DRY operation less than 5 minutes (from turn on remote controller).
In some case you should wait for about 3 minutes more (see **Troubleshooting** [Page 26](#) for details.).
- If MOLD PROOF operation does not suit your preference, please stop operation. [Page 17](#)

OUTDOOR UNIT QUIET Operation



OUTDOOR UNIT QUIET operation lowers the noise level of the outdoor unit by changing the frequency and fan speed on the outdoor unit. This function is convenient during night.

■ To start

Press .

- “” appears on the LCD.
- The air conditioner can operated in ECONO operation combined with OUTDOOR UNIT QUIET operation.

■ To cancel

Press  again.

- “” disappears from the LCD.

NOTE

■ Note on OUTDOOR UNIT QUIET operation

- This function is available in COOL operation. (This is not available in FAN and DRY mode.)
- POWERFUL operation cannot be used together with ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET operation.
Priority is given to the function of whichever button is pressed last.
- OUTDOOR UNIT QUIET Operation will drop neither the frequency nor fan speed if the frequency and fan speed have been already dropped low enough.
- Even the operation is stopped by using the remote controller or the indoor unit ON/OFF switch using OUTDOOR UNIT QUIET operation, “” will remain on the remote controller display.
- This operation is performed with lower power and therefore may not provide a sufficient cooling effect.

TIMER Operation



Timer functions are useful for automatically switching the air conditioner on or off at night or in the morning.

You can also use OFF TIMER and ON TIMER in combination.

[OFF TIMER operation]

■ To set


1. Press .



- “ OFF HR.” appears on the LCD.

2. Press  until the time setting reaches the point you like.

- Each pressing of button increases the time setting by 1 hour.
- Setting time can be increased to 12 hours maximum.
- The TIMER lamp lights orange.

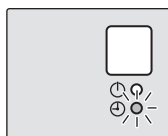

Display

■ To cancel


1. Press .

- “ OFF HR.” disappears from the LCD.
- The TIMER lamp goes off.

NOTE

■ NIGHT SET MODE

- When the OFF TIMER is set, the air conditioner automatically adjusts the temperature setting (0.5°C up in COOL) to prevent excessive cooling for your pleasant sleep.

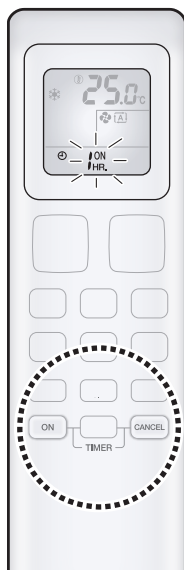

[ON TIMER operation]

■ To set


1. Press **ON**.



- “ ON HR.” appears on the LCD.

2. Press **ON** until the time setting reaches the point you like.

- Each pressing of button increases the time setting by 1 hour.
- Setting time can be increased to 12 hours maximum.
- The TIMER lamp lights orange.

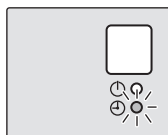

Display

■ To cancel

1. Press **CANCEL**.

- “ ON HR.” disappears from the LCD.
- The TIMER lamp goes off.

[ON/OFF TIMER combination]

■ To combine ON TIMER and OFF TIMER

- A sample setting for combining the 2 timers is shown below.
- When setting while unit is operating.

(Example)

Turn off unit in the next 1 hr.) Combined
Turn on unit in the next 8 hr. (7 hr. after turn off)



- When setting while unit is stopped.

(Example)

Turn on unit in the next 2 hr.) Combined
Turn off unit in the next 5 hr. (3 hr. after turn on)



ATTENTION

■ In the following cases, set the timer again.

- After a breaker has turned OFF.
- After a power failure.
- After replacing batteries in the remote controller.

Care and Cleaning

⚠ CAUTION

- Before cleaning, be sure to stop operation and turn the breaker OFF.
- When opening and closing the front panel, use a robust and stable stool and watch your step carefully.
- After cleaning, make sure that the front panel is securely fixed.

Units


Wipe them with a dry soft cloth.



■ Front panel

1. Open the front panel.


- Hold the front panel by the sides and open it.

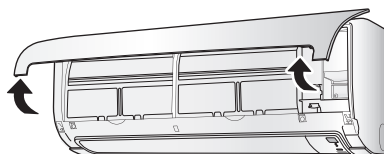

2. Clean the front panel.

If the front panel is dirty


- Wipe it with a soft damp cloth.
- Only neutral detergent may be used.

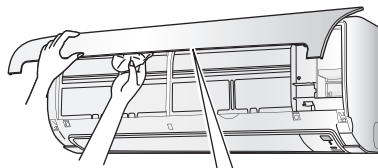

If the backside of the front panel is dirty, wipe it with a soft damp cloth.

3. Close the front panel

- Close the front panel slowly. (Press the panel at both sides and in the central area.)
- Make sure that the front panel is securely fixed.

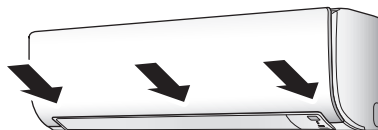

NOTE

■ Notes on cleaning the front panel.

- Do not wash in water.
- Do not tear a heat insulation material.
- Do not press or rub a heat insulation material.


⚠ CAUTION

- Do not touch the aluminum fins by bare hand at the time of dismounting or mounting the filter.

■ Air filter


1. Pull out the air filters.

- Open the front panel. **Page 22**
- Push the filter tab at the centre of each air filter a little upwards, then pull it down.

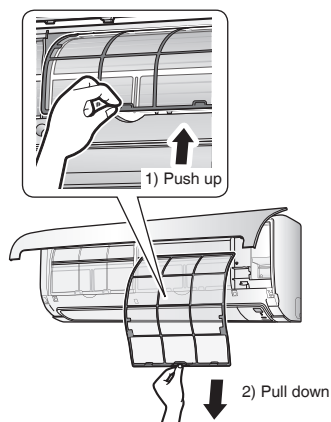

2. Wash the air filters with water or clean them with vacuum cleaner.

- It is recommended to clean the air filters every 2 weeks.

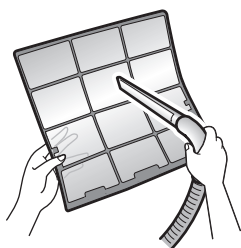

Use a vacuum cleaner to remove dust.



If the dust does not come off easily

Wash the air filters with neutral detergent thinned with lukewarm water, then dry them up in the shade.

Be sure to remove the filter (small).

Refer to filter (small) on the next page.

3. Set the filters as they were and close the front panel.

- Press the front panel at both sides and the centre.

Care and Cleaning

■ Filter (small)


(for FTKB is separately sold filters)

* For the applicable filter type, please refer to **NOTE** on **Page 25** .

1. Open the front panel and pull out the air filters. **Page 22, 23**

2. Take off the filters. (small)

- Hold the recessed parts of the frame and unhook the 4 claws.

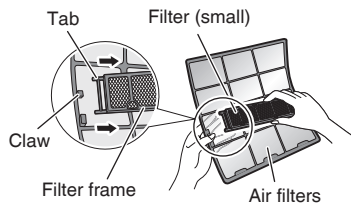

3. Clean or replace the filters.

[Cleaning]

Air quality filter (enzyme blue with PM2.5) [blue-white] or dust collection filter (PM2.5) [white]

- Do not wash the filters as this will reduce their efficiency.
- It is recommended to replace it once **every 6 months**.

Deodorizing filter (enzyme blue) [blue] or titanium apatite deodorizing filter [blue-black]

3-1 Vacuum dust, and soak in lukewarm water or water for about 10 to 15 minutes if very dirty.

3-2 After washing, shake off remaining water and let them dry in the shade.

- This filter can be renewed by washing it with water once **every 6 months** and we recommend replacing it once **every 3 years**.
- Do not wring out the filter when removing water from it.

[Replacement]

Remove each filter from the front grille by detaching them from the tabs and then install the new filters.

- Do not throw away the filter frame to reuse it when replacing the filter.
- When attaching the filter, check that the filter is properly set in the tabs.



4. Set the filters as they were and close the front panel.

- Press the front panel at both sides and the centre.

Notes on cleaning

■ For cleaning, do not use the materials as follows.

- Hot water above 40°C.
- Benzine, gasoline, thinner, other volatile oils.
- Polishing compound.
- Scrubbing brushes, other hard stuff.



NOTE

- Operation with dirty filters:
 - 1) cannot deodorize the air.
 - 2) cannot clean the air.
 - 3) results in poor cooling.
 - 4) may cause odour.
- Dispose of old filters as non-flammable waste.
- To purchase the filters (**Table 1**) or to purchase the another type, contact the dealer where you bought the air conditioner.
- The method of cleaning and replacement of the filters may differ depending on the model. Refer to the label attached to the separately sold filters themselves.

Table 1

Item	Part No.	
	without frame	with frame (for FTKB)
Air quality filter (enzyme blue with PM2.5) – set of 2	BAFP094A43	BAFP094A44
Deodorizing filter (enzyme blue) – set of 2	BAFP094A41	BAFP094A42
Dust collection filter (PM2.5) – set of 2	BAFP046A41	BAFP046A42
Titanium apatite deodorizing filter – set of 2	KAF970A46	KAF970A45

We recommend periodical maintenance.

In certain operating conditions, the inside of the air conditioner may get foul after several seasons of use, resulting in poor performance. It is recommended to have periodical maintenance by a specialist aside from regular cleaning by the user. For specialist maintenance, contact the service shop where you bought the air conditioner.

The maintenance cost must be borne by the user.

Check

- Check that the base, stand and other fittings of the outdoor unit are not decayed or corroded.
- Check that nothing blocks the air inlets and the outlets of the indoor unit and the outdoor unit.
- Check that the drain comes smoothly out of the drain hose during COOL or DRY operation.
 - If no drain water is seen, water may be leaking from the indoor unit. Stop operation and consult the service shop if this is the case.

Before a long idle period

1. Operate the “MOLD PROOF”. **Page 17**
2. After operation stops, turn off the breaker for the room air conditioner.
3. Clean the air filters and set them again.
4. Take out the batteries from the remote controller.

Troubleshooting

These cases are not troubles.

The following cases are not air conditioner troubles but have some reasons. You may just continue using it.

Case	Description / what to check
Operation does not start soon. - When ON/OFF button was pressed soon after operation was stopped. - When the mode was reselected.	This is to protect the air conditioner. You should wait for about 3 minutes.
The outdoor unit emits water.	- In COOL or DRY mode - Moisture in the air condenses into water on the cool surface of outdoor unit piping and drips.
Mist comes out of the indoor unit.	This happens when the air in the room is cooled into mist by the cold airflow during cooling operation.
The indoor unit gives out odour.	This happens when smells of the room, furniture, or cigarettes are absorbed into the unit and discharged with the airflow. We recommend that you have the indoor unit cleaned. Please consult your dealer.
The outdoor fan rotates while the air conditioner is not in operation.	- After operation is stopped: - The outdoor fan continues rotating for about 60 seconds for system protection. - While the air conditioner is not in operation: - When the outdoor temperature is very high, the outdoor fan starts rotating for system protection.
The operation stopped suddenly. (OPERATION lamp is on.)	For system protection, the air conditioner may stop operating on a sudden large voltage fluctuation. It automatically resumes operation in about 3 minutes.
Remote controller does not work properly. - No remote controller signals are displayed. - The remote controller sensitivity is low. - The display is low in contrast or blacked out. “ ” on the LCD is blinking and the remote controller cannot be operated.	- The batteries are dying and the remote controller is malfunctioning. Replace all the batteries with new size AAA.LR03 (alkaline) batteries. For details, refer to “To set the batteries” of this manual. Page 8 - Battery power has run out. Replace both batteries at the same time with new size AAA.LR03 (alkaline) batteries. Leaving exhausted batteries in the remote controller can result in injury due to battery leakage, rupturing or heating, or lead to equipment failure. (Even when the “ ” is blinking, the OFF button remains functional.)

Case	Description / what to check
The room temperature does not reach the set temperature.	• If the air coming out of the air conditioner is blowing against a wall, the set temperature may not be reached correctly. • Since ambient moisture control is prioritized during HUMIDITY operation, room temperature may not reach the set temperature. (If HUMIDITY operation does not suit your preference, please cancel operation.)
■ The unit does not receive signals from remote controller or has a limited operating range. ■ Other electronic devices start operating.	• Signal communication may be disabled if an electronic-starter-type fluorescent lamp (such as inverter-type lamps) is in the room. Consult your dealer if that is in this case. • The remote controller may not function correctly if the transmitter is exposed to direct sunlight. • It is possible for any electronic devices that generate signals or infrared rays such as smartphones and game consoles placed near the unit. The signals coming from electronic devices can interfere with the remote control signal. • If the remote controller activates other electronic devices, move them away or consult your dealer.
The flap does not start swinging immediately.	• The air conditioner is adjusting the flap position. • The flap will start moving soon.
A sound is heard. ■ A sound like a flow of water ■ Ticking sound ■ Clicking sound during operation or idle time ■ Clipping sound ■ Latching sound	• This sound is generated because the refrigerant in the air conditioner is flowing. • This is a pumping sound of the water in the air conditioner and heard when the water is pumped out from the air conditioner in cooling or drying operation. • This sound is generated when the size of the air conditioner slightly expands or shrinks as a result of temperature changes. • This sound is generated when the refrigerant control valves or the electrical parts operate. • This sound is heard from the inside of the air conditioner when the exhaust fan is activated while the room doors are closed. Open the window or turn off the exhaust fan. • This sound is generated when the electronic expansion valve of the outdoor unit operation stops or turns the power off and on again.
Rotating machinery causes sound. ■ Sound is heard when the horizontal swing flap move.	• When the air conditioner is operating in a quiet environment and the airflow rate of the indoor unit is set to Quiet Mode or Low Mode, the motion of the swing flap may cause sound.
Air does not come out.	■ In COOL or DRY mode • If COOL/DRY operation is started with airflow settings on "AUTO", the indoor unit will initially deodorise, which functions to suppress any internal odours. As a result, the indoor unit will not emit air immediately. (Wait for about 1 minute.)
The air conditioner continues operating even after COOL or DRY operation is stopped.	• The air conditioner is operating in MOLD PROOF mode. When you want to stop MOLD PROOF operation midway, press  .

Troubleshooting

Check again.

Please check again before calling a repair person.

Case	Description / what to check
The air conditioner does not operate. OPERATION lamp is off. OPERATION lamp blinks.	• Hasn't a breaker turned OFF or a fuse blown? • Isn't it a power failure? • Are batteries set in the remote controller? • Is the timer setting correct? • Turn off the power with the circuit breaker and restart operation with the remote controller. If the OPERATION lamp is still blinking, check the error code and consult your dealer.
Cooling effect is poor.	• Are the air filters clean? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Is the temperature setting appropriate? • Are the windows and doors closed? • Are the airflow rate and the air direction set appropriately? • Are outdoor ambient temperature not in operation range? • Is the unit set to the ECONO/MOLD PROOF/OUTDOOR UNIT QUIET mode? Page 16-19
Operation stops suddenly. (OPERATION lamp blinks.)	• Are the air filters clean? • Is there anything blocking the air inlet or air outlet of the indoor unit or outdoor unit? • Clean the air filters or take all obstacles away and turn the breaker OFF. Then turn it ON again and try operating the air conditioner with the remote controller. If the lamp still blinks, call the service shop where you bought the air conditioner.
An abnormal functioning happens during operation.	• The air conditioner may malfunction with lightning or radio waves. Turn the breaker OFF, turn it ON again and try operating the air conditioner with the remote controller.

■ Notes on the operating conditions

- The air conditioner always consumes a small amount of electricity even while it is not operating.
- If you are not going to use the air conditioner for a long period, for example in spring or autumn, turn the breaker off.
- Use the air conditioner in the following conditions.

MODE	Operating conditions	If operation is continued out of this range
COOL / DRY	Outdoor temperature : 19.4-46°C Indoor temperature : 16-32°C Indoor humidity : 80% max.	• A safety device may work to stop the operation. • Condensation may occur on the indoor unit and drip.

- Operation outside this humidity or temperature range may cause a safety device to disable the system.

Call the service shop immediately.

WARNING

- When an abnormality (such as a burning smell) occurs, stop operation and turn the breaker OFF.
 - Continued operation in an abnormal condition may result in troubles, electric shocks or fire.
 - Consult the service shop where you bought the air conditioner.
- Do not attempt to repair or modify the air conditioner by yourself.
 - Incorrect work may result in electric shocks or fire.
 - Consult the service shop where you bought the air conditioner.

If one of the following symptoms takes place, call the service shop immediately.

- **The power cord is abnormally hot or damaged.**
- **An abnormal sound is heard during operation.**
- **The safety breaker, a fuse, or the earth leakage breaker cuts off the operation frequently.**
- **A switch or a button often fails to work properly.**
- **There is a burning smell.**
- **Water leaks from the indoor unit.**



Turn the breaker OFF and call the service shop.

- **After a power failure**
The air conditioner automatically resumes operation in about 3 minutes. You should just wait for a while.

- **Lightning**
If lightning may strike the neighboring area, stop operation and turn the breaker OFF for system protection.

Disposal requirements



Your product and the batteries supplied with the controller are marked with this symbol.

This symbol means that electrical and electronic products and batteries shall not be mixed with unsorted household waste.

For batteries, a chemical symbol can be printed beneath the symbol.

This chemical symbol means that the battery contains a heavy metal above a certain concentration.

Possible chemical symbols are:

- **Pb: lead (>0.004%)**

Do not try to dismantle the system yourself: the dismantling of the product, treatment of the refrigerant, of oil and of other parts must be done by a qualified installer in accordance with relevant local and national legislation.

Units and waste batteries must be treated at a specialized treatment facility for re-use, recycling and recovery.

By ensuring correct disposal, you will help to prevent potential negative consequences for the environment and human health.

Please contact the installer or local authority for more information.

Troubleshooting



■ Fault diagnosis by remote controller

- In case the air conditioner is malfunctioning, you can check the error code via the remote controller before consulting with service personnel and informing them of the malfunction code.

- When **CANCEL** is held down for about 5 seconds, **“00”** blinks in the temperature display section.
- Press **CANCEL** repeatedly until a continuous beep is produced.
 - The code indication changes as shown below, and notifies you with a long beep.

	CODE	MEANING
SYSTEM	00	NORMAL
	UA	INDOOR-OUTDOOR UNIT COMBINATION FAULT
	U0	REFRIGERANT SHORTAGE
	U2	DROP VOLTAGE OR MAIN CIRCUIT OVERVOLTAGE
	U4	FAILURE OF TRANSMISSION (BETWEEN INDOOR UNIT AND OUTDOOR UNIT)
INDOOR UNIT	A1	INDOOR PCB DEFECTIVENESS
	A5	HIGH PRESSURE CONTROL OR FREEZE-UP PROTECTOR
	A6	FAN MOTOR FAULT
	C4	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	C9	FAULTY SUCTION AIR TEMPERATURE SENSOR
OUTDOOR UNIT	EA	COOLING-HEATING SWITCHING ERROR
	E1	CIRCUIT BOARD FAULT
	E5	OL STARTED
	E6	FAULTY COMPRESSOR START UP
	E7	DC FAN MOTOR FAULT
	E8	OVERCURRENT INPUT
	F3	HIGH TEMPERATURE DISCHARGE PIPE CONTROL
	F6	HIGH PRESSURE CONTROL (IN COOLING)
	F8	OPERATION HALT DUE TO COMPRESSOR INTERNAL TEMPERATURE ABNORMALITY
	H0	SENSOR FAULT
	H6	OPERATION HALT DUE TO FAULTY POSITION DETECTION SENSOR
	H8	DC CURRENT SENSOR FAULT
	H9	FAULTY SUCTION AIR TEMPERATURE SENSOR
	J3	FAULTY DISCHARGE PIPE TEMPERATURE SENSOR
	J6	FAULTY HEAT EXCHANGER TEMPERATURE SENSOR
	L3	ELECTRICAL PARTS HEAT FAULT
	L4	HIGH TEMPERATURE AT INVERTER CIRCUIT HEATSINK
	L5	OUTPUT OVERCURRENT
	P4	FAULTY INVERTER CIRCUIT HEATSINK TEMPERATURE SENSOR

NOTE

- A short beep and 2 consecutive beeps indicate non-corresponding codes.
- To cancel the code display, hold **CANCEL** down for about 5 seconds. The code display also clears if no button is pressed for 1 minute.

MEMO

GIỚI THIỆU ỨNG DỤNG DAIKIN VIETNAM

Ứng dụng Daikin Vietnam hướng đến mục tiêu nâng cao chất lượng dịch vụ sau bán hàng và trải nghiệm của khách hàng. Thông qua ứng dụng này, khách hàng có thể cập nhật thông tin thiết bị điều hoà không khí, kiểm tra lịch sử bảo dưỡng, lịch sử sửa chữa, nhanh chóng gửi yêu cầu dịch vụ và cập nhật thông tin mới nhất từ Daikin Vietnam. Thực hiện theo hướng dẫn dưới đây để cài đặt ứng dụng.



Link cài đặt ứng dụng



Quét mã QR



Biểu tượng ứng dụng



Giao diện ứng dụng

MỤC LỤC

ĐỌC TRƯỚC KHI VẬN HÀNH

Lưu ý về an toàn	2
Tên bộ phận	5
Chuẩn bị trước khi vận hành	8

VẬN HÀNH

Hoạt động COOL/DRY/FAN (LÀM LẠNH/ KHỬ ẨM/QUẠT)	10
Hoạt động HUMIDITY (ĐỘ ẨM)	11
Điều chỉnh tốc độ gió	12
Điều chỉnh hướng gió	13
Hoạt động POWERFUL (LÀM LẠNH NHANH)	14
Hoạt động COMFORT AIRFLOW (LUỒNG GIÓ DỄ CHỊU)	15
Hoạt động ECONO (TIẾT KIỆM)	16
Hoạt động MOLD PROOF (CHỐNG NẤM MỐC) ...	17
Hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM)	19
Hoạt động TIMER (HẸN GIỜ)	20

BẢO QUẢN

Bảo quản và Vệ sinh	22
---------------------------	----

KHẮC PHỤC SỰ CỐ

Khắc phục sự cố	26
-----------------------	----

Văn bản Tiếng Anh là hướng dẫn gốc. Các ngôn ngữ khác là bản dịch của hướng dẫn gốc.

Lưu ý về an toàn

	Đọc kỹ các lưu ý trong tài liệu hướng dẫn này trước khi vận hành thiết bị.		Thiết bị này sử dụng môi chất lạnh R32
--	--	---	--

- Sau khi đọc, hãy giữ hướng dẫn này ở nơi thuận tiện để bạn có thể tham khảo bất cứ khi nào cần. Nếu thiết bị được chuyển đến người dùng mới, đảm bảo gửi cả hướng dẫn này.
- Những lưu ý được mô tả ở đây được phân loại thành **CẢNH BÁO** và **THẬN TRỌNG**. Cả hai loại đều chứa thông tin quan trọng về an toàn. Đảm bảo xem tất cả những lưu ý này.

	CẢNH BÁO	Không tuân theo những hướng dẫn này một cách hợp lý có thể dẫn đến thương tích cá nhân hoặc tử vong.			
	THẬN TRỌNG	Không tuân thủ các hướng dẫn này một cách hợp lý có thể dẫn đến hư hỏng tài sản hoặc thương tích cá nhân, điều này có thể nguy hiểm tùy theo các tình huống.			
	Không được thử.		Đảm bảo tuân theo các hướng dẫn.		Đảm bảo nối đất.

CẢNH BÁO

Giới thiệu về môi chất lạnh R32

- Không sử dụng các cách đẩy nhanh quá trình xả băng hoặc vệ sinh, ngoài những cách mà nhà sản xuất khuyến nghị.
- Thiết bị phải được bảo quản trong phòng không có các nguồn gây cháy hoạt động liên tục (ví dụ: lửa đang cháy, thiết bị dùng khí gas đang hoạt động hoặc máy sưởi điện đang hoạt động).
- Không được chọc thủng hoặc đốt.
- Lưu ý rằng các môi chất lạnh có thể không có mùi.
- Thiết bị phải được lắp đặt, vận hành và bảo quản trong phòng có diện tích sàn lớn hơn $-* \text{ m}^2$.
* Vì lượng môi chất nạp tối đa của model máy này là dưới 1,22 kg, thiết bị không có giới hạn diện tích sàn tối thiểu.
- Cần lắp đặt thiết bị trong phòng thoáng khí.
- Duy trì chiều cao lắp đặt từ 2,5 m trở lên tính từ bề mặt sàn tới đáy thiết bị.

Khi lắp đặt, di chuyển và sửa chữa

- Không sử dụng môi chất lạnh nào khác ngoài môi chất lạnh đã được quy định cho dàn nóng (R32) khi lắp đặt, di chuyển hoặc sửa chữa. Sử dụng môi chất lạnh khác có thể gây sự cố hoặc hư hỏng dàn lạnh và thương tích cho người.
- Không tự ý lắp đặt, sửa chữa, tháo dỡ, lắp đặt lại hoặc sửa đổi thiết bị.
- Tay nghề không phù hợp có thể dẫn đến rò rỉ nước, điện giật hoặc nguy cơ hỏa hoạn. Vui lòng liên hệ với đại lý tại địa phương hoặc kỹ thuật viên được đào tạo để lắp đặt, di dời và tháo dỡ.
- Đề phòng hỏa hoạn trong trường hợp rò rỉ môi chất lạnh. Nếu máy điều hòa không hoạt động đúng cách, tức là không tạo ra không khí mát, thì nguyên nhân có thể là do rò rỉ môi chất lạnh. Liên hệ đại lý bán hàng để được hỗ trợ. Môi chất lạnh trong máy điều hòa là an toàn và thường không rò rỉ. Tuy nhiên, trong trường hợp rò rỉ, tiếp xúc với thiết bị đốt đang cháy, máy sưởi hoặc bếp nấu có thể dẫn đến tạo ra khí độc hại. Không sử dụng máy điều hòa cho đến khi nhân viên bảo dưỡng có trình độ xác nhận rằng đã sửa chữa được rò rỉ.
- Bỏ trí ống xả nước để đảm bảo thoát nước tốt.
Thoát nước không hết có thể làm ẩm tòa nhà, đồ đạc, v.v.
- Liên hệ với đại lý của bạn về việc sửa chữa và bảo dưỡng. Việc sửa chữa và bảo dưỡng không đúng cách có thể dẫn đến rò rỉ nước, điện giật và hỏa hoạn. Chỉ sử dụng các phụ kiện của nhà sản xuất được thiết kế đặc biệt để sử dụng cùng với thiết bị và nhờ kỹ thuật viên đã được đào tạo lắp đặt.
- Phải đảm bảo lắp đặt cầu dao chống dòng rò. Nếu không lắp đặt cầu dao chống dòng rò, thì điện giật hoặc hỏa hoạn có thể xảy ra.
- Đảm bảo nối đất cho máy.
Không nối đất cho máy về đường dây có sẵn, dây dẫn chống sét hay đường dây dẫn nối đất của điện thoại. Nối đất không đúng có thể dẫn đến điện giật.

Khi sử dụng máy điều hòa không khí



- Để tránh cháy, nổ hoặc thương tích, không vận hành thiết bị khi nguy hiểm, trong đó có trường hợp phát hiện thấy gần thiết bị có khí dễ cháy hoặc khí ăn mòn.
- Lưu ý rằng việc tiếp xúc tiếp trong thời gian dài với không khí lạnh từ máy điều hòa hoặc không khí quá lạnh có thể có hại đối với tình trạng thể chất và sức khỏe của bạn.
- Không đặt các vật như gậy, ngón tay, v.v. trong cửa hút gió hoặc thổi gió. Việc tiếp xúc với cánh quạt tốc độ cao của máy điều hòa có thể dẫn đến hư hỏng sản phẩm hoặc thương tích cá nhân.
- Không sử dụng bình xịt dễ cháy xung quanh máy điều hòa, nếu không có thể gây hỏa hoạn.
- Để tránh điện giật, không hoạt động dàn lạnh khi tay ướt.
- Không đặt những vật dễ cháy như bình xịt trong phạm vi 1 m cửa thổi gió. Bình xịt có thể nổ do không khí nóng từ thiết bị.

Giới thiệu về dây nguồn



- Chỉ nối thiết bị với mạch điện theo đúng như quy định. Sử dụng nguồn điện khác với nguồn được chỉ định có thể dẫn đến điện giật, quá nhiệt và hỏa hoạn.

Khi vệ sinh



- Không tự ý lắp đặt, sửa chữa, tháo dỡ, lắp đặt lại hoặc sửa đổi thiết bị. Tay nghề không phù hợp có thể dẫn đến rò rỉ nước, điện giật hoặc nguy cơ hỏa hoạn. Vui lòng liên hệ với đại lý tại địa phương hoặc kỹ thuật viên được đào tạo để lắp đặt, di dời và tháo dỡ.

Dừng vận hành nếu phát hiện có bất thường hoặc sự cố



- Khi thiết bị hỏng (bốc mùi khét, v.v.) hãy tắt nguồn thiết bị và liên hệ với đại lý tại địa phương. Tiếp tục vận hành trong những điều kiện như vậy có thể dẫn đến các nguy cơ hỏng, điện giật hoặc hỏa hoạn.



THẬN TRỌNG

Giới thiệu về dàn lạnh



- Không sử dụng thiết bị cho các mục đích ngoài phạm vi thiết kế. Không sử dụng thiết bị để làm mát các thiết bị đo chính xác, thực phẩm, cây trồng, động vật hoặc tác phẩm nghệ thuật vì điều này có thể ảnh hưởng xấu đến hiệu suất, chất lượng và/hoặc độ bền của đối tượng nói trên.
- Không để cây hoặc động vật tiếp xúc trực tiếp với luồng khí từ dàn lạnh vì làm như vậy có thể gây những ảnh hưởng không tốt.
- Không đặt thiết bị tạo ra ngọn lửa hở ở nơi tiếp xúc với luồng gió từ thiết bị vì làm như vậy có thể làm giảm khả năng cháy của các thiết bị này.
- Không đặt đồ vật dễ bị ẩm trực tiếp dưới dàn lạnh hoặc dàn nóng. Trong những điều kiện nhất định, hơi ngưng tụ trên thiết bị hoặc đường ống môi chất lạnh, bụi bẩn trên tấm lọc khí hoặc tắc ống xả có thể làm nước chảy nhỏ giọt, gây tắc nghẽn hoặc làm hỏng các đồ vật liên quan.
- Không ngồi hoặc treo lên mặt nạ. Mặt nạ có thể rơi và gây thương tích hoặc làm hư hỏng sản phẩm.
- Không đu đưa tấm đệm. Mặt nạ có thể chạm vào người hoặc đồ vật và có thể gây ra thương tích hoặc hư hại tài sản.
- Không để trẻ nhỏ chơi với tấm đệm hoặc chơi gần tấm đệm. Có thể xảy ra thương tích hoặc hư hỏng tài sản.
- Không kéo các dây dẫn của thiết bị. Dây có thể bị đứt gãy và điều này có thể dẫn đến điện giật hoặc hư hỏng tài sản.
- Không để vật cản trên hướng của mặt nạ. Mặt nạ có thể rơi và gây thương tích hoặc làm hư hỏng tài sản.
- Không uốn cong hoặc làm hỏng dây dẫn. Dây dẫn có thể bị đứt gãy khiến gây thương tích hoặc làm hư hỏng tài sản.
- Không đặt đồ vật lên mặt nạ, nếu không có thể khiến chức năng của sản phẩm gặp trục trặc.

Lưu ý về an toàn



- Để tránh hết ôxy, đảm bảo rằng phòng được thông gió đầy đủ nếu thiết bị như bếp nấu được sử dụng cùng với thiết bị.
- Không đặt đồ vật quanh thiết bị. Làm như vậy có thể gây ảnh hưởng xấu đến hiệu suất, chất lượng sản phẩm và tuổi thọ của thiết bị.

Giới thiệu về dàn nóng



- Không chặn các cửa hút gió và cửa thổi gió. Luồng gió bị cản trở có thể dẫn đến không đủ công suất hoặc gây sự cố.
- Không ngồi lên dàn nóng. Không đặt đồ vật lên máy hoặc kéo máy. Làm như vậy có thể gây tai nạn như rơi hoặc đổ xuống, dẫn đến thương tích, hỏng chức năng hoặc hư hỏng sản phẩm.
- Sau khi sử dụng một thời gian dài, hãy kiểm tra bộ đỡ thiết bị và chỗ gắn xem có hư hỏng gì không. Nếu các bộ phận này trong tình trạng bị hư hỏng, thiết bị có thể rơi và gây thương tích.
- Để tránh thương tích, không chạm vào cửa hút gió hoặc các lá nhôm tản nhiệt của dàn lạnh hoặc dàn nóng.



- Không đặt đồ vật ở ngay xung quanh dàn nóng và không để lá và các mảnh vụn khác tích tụ quanh dàn nóng. Lá là ổ cho các động vật nhỏ và chúng có thể chui vào dàn nóng. Sau khi vào dàn nóng, những động vật này có thể làm hỏng chức năng, bốc khói hoặc hỏa hoạn khi tiếp xúc với các bộ phận điện.

Giới thiệu về bộ điều khiển từ xa



- Không lắp pin sai đầu cực (+/-) vì điều này có thể dẫn đến đoản mạch, hỏa hoạn hoặc rò rỉ pin.
- Để bộ điều khiển từ xa ngoài tầm với của trẻ em. Việc vận hành sai bộ điều khiển từ xa và tai nạn trong trường hợp trẻ vô tình nuốt phải pin có thể dẫn đến thương tích.

Khi sử dụng máy điều hòa không khí



- Thiết bị này không được thiết kế dành cho những người (bao gồm trẻ em) có vấn đề về sức khỏe, hay thần kinh hoặc thiếu kinh nghiệm và kiến thức trừ khi họ được giám sát và hướng dẫn việc sử dụng thiết bị bởi những người có trách nhiệm đảm bảo an toàn. Làm như vậy có thể dẫn đến sự suy giảm chức năng cơ thể và gây hại cho sức khỏe.



- Nên giám sát trẻ để đảm bảo rằng chúng không chơi với thiết bị hoặc điều khiển từ xa. Trẻ vô tình sử dụng có thể dẫn đến suy giảm chức năng cơ thể và gây hại cho sức khỏe.
- Tránh tác động đến thiết bị, nếu không có thể dẫn đến hư hỏng sản phẩm.
- Cần thận trọng để vật nuôi đi tiểu lên thiết bị. Việc đi tiểu lên thiết bị có thể dẫn đến điện giật hoặc hỏa hoạn.

Khi vệ sinh



- Không dùng nước rửa máy điều hòa, vì làm như vậy có thể dẫn đến điện giật hoặc hỏa hoạn.
- Không đặt bình chứa nước (như lọ hoa, v.v.) trên thiết bị vì việc này có thể dẫn đến điện giật hoặc hỏa hoạn nếu bình đổ.
- Không đứng trên bề mặt không ổn định khi vận hành hoặc bảo trì thiết bị, nếu không bạn có thể bị ngã hoặc bị thương.



- Trước khi vệ sinh, đảm bảo dừng vận hành thiết bị và ngắt cầu dao. Nếu không, có thể dẫn đến điện giật và thương tích.

Đây là thiết bị mà công chúng phổ thông không thể tiếp cận.


Chú ý về khu vực quanh dàn nóng và dàn lạnh.

- Phải đảm bảo thực hiện theo chỉ dẫn như dưới đây.

- Dàn lạnh phải cách ti vi hoặc đài radio tối thiểu 1 m (thiết bị có thể gây nhiễu hình ảnh hoặc âm thanh).
- Hạn chế sử dụng thiết bị ở những nơi có nhiều khói có hơi dầu, ví dụ như bếp. Có thể gây ra rò rỉ nước.


Tên bộ phận

■ Dàn lạnh

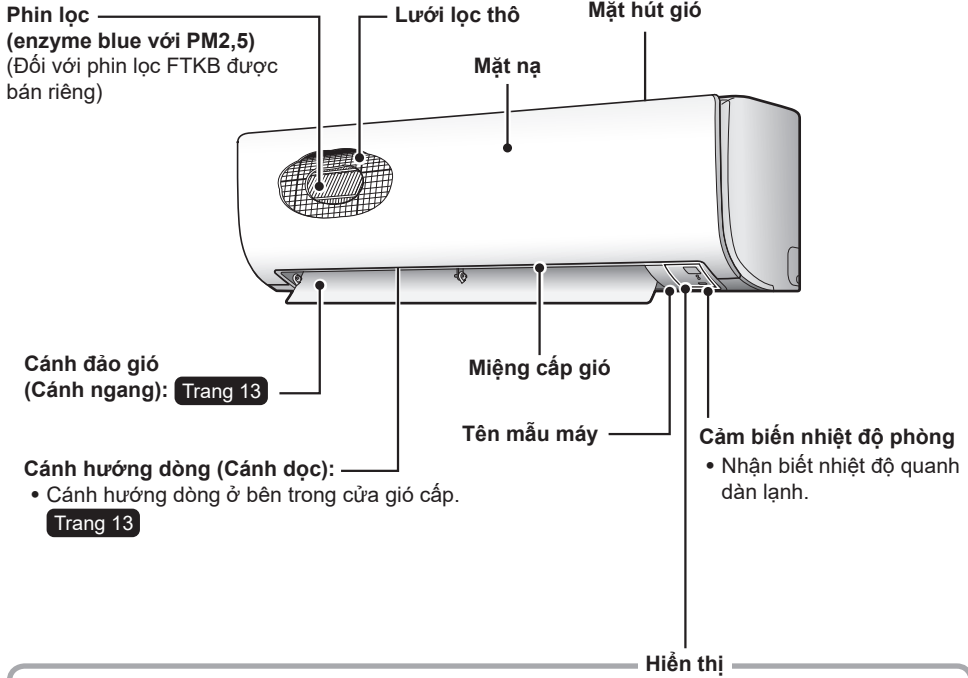

Bộ phận nhận tín hiệu:

- Bộ phận này nhận tín hiệu từ bộ điều khiển từ xa.
- Khi dàn lạnh nhận tín hiệu, bạn sẽ nghe thấy một tiếng bíp.
 - Bật máybíp-bíp
 - Thay đổi cài đặtbíp
 - Dừng vận hành tiếng bíp dài

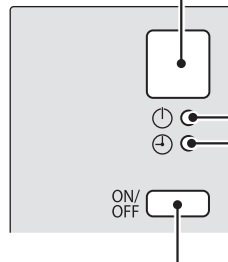

Đèn báo HOẠT ĐỘNG (màu xanh lá)

Đèn HẸN GIỜ (màu cam):

Trang 20, 21

Nút ON/OFF (BẬT/TẮT) dàn lạnh:

- Ấn nút này một lần để khởi động.
Ấn lần nữa để tắt máy điều hòa.
- Để đặt chế độ vận hành, tham khảo bảng sau đây.

Chế độ	Nhiệt độ cài đặt	Tốc độ luồng gió
COOL (LÀM LẠNH)	22,0°C	AUTO (TỰ ĐỘNG)


- Có thể sử dụng công tắc này khi không có bộ điều khiển từ xa hoặc hết pin.

Tên bộ phận


■ Dàn nóng

Đối với RKB25*/35/50/60*, ARKB25*/35

* Hình dạng bên ngoài của dàn nóng ở một số mẫu có thể khác nhau.

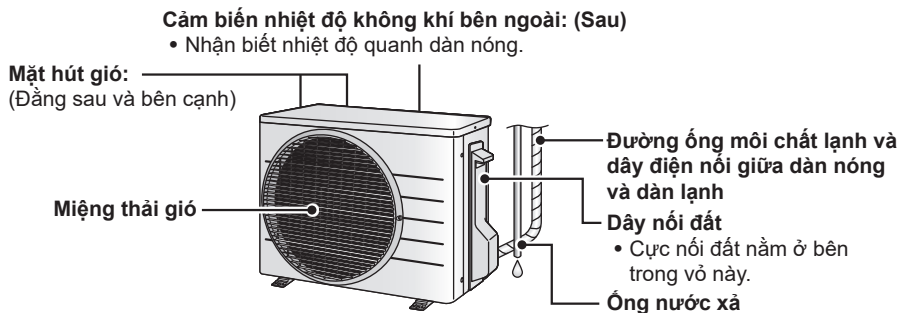


■ Điều khiển từ xa

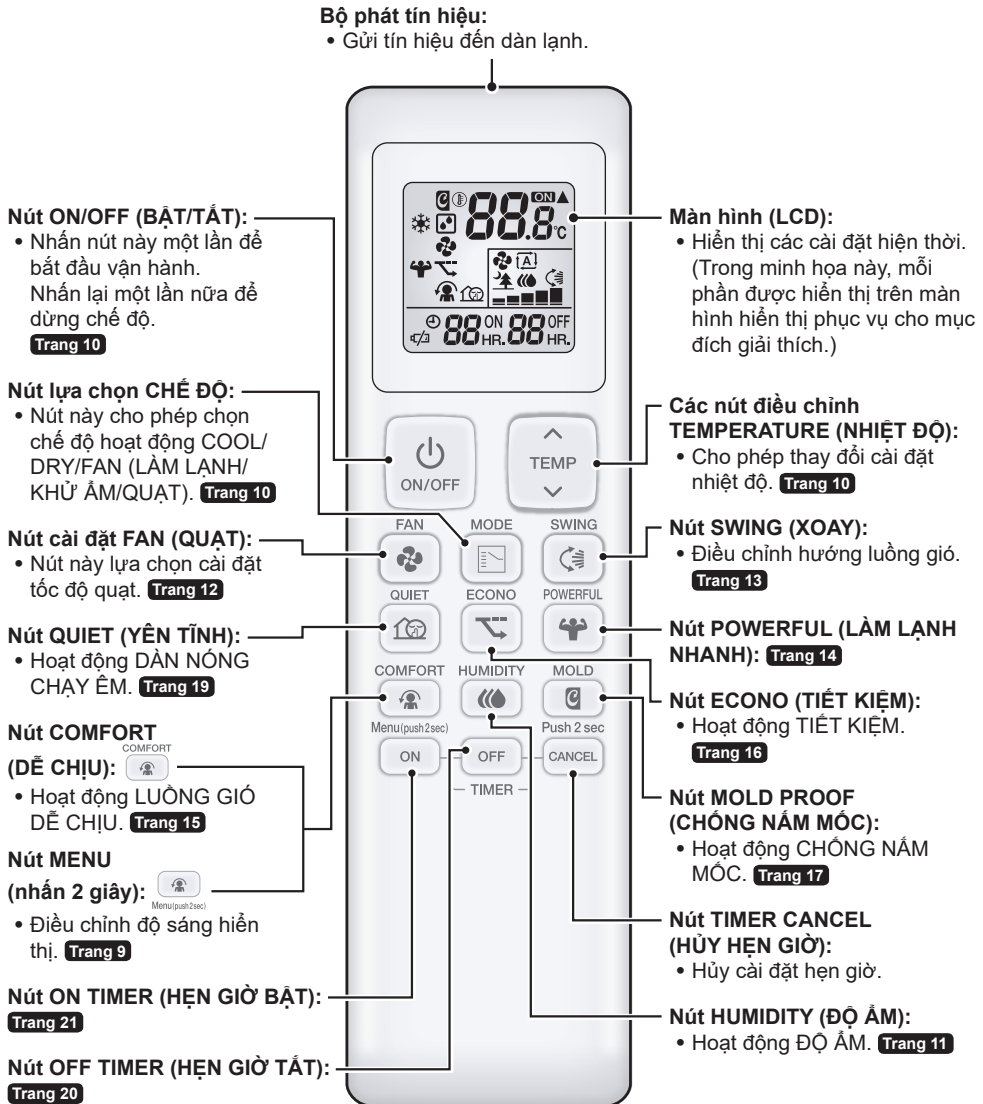


Tên mẫu điều khiển | ARC486A56

Chuẩn bị trước khi vận hành


■ Lắp pin vào

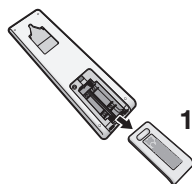

Trượt nắp ra sau để lấy nắp ra.

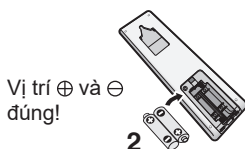


Lắp hai pin khô
AAA.LR03 (kiềm).

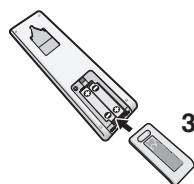

Lắp nắp đậy phía sau lại như cũ.


■ Để sử dụng bộ điều khiển từ xa

- Để sử dụng bộ điều khiển từ xa, hướng bộ phát vào dàn lạnh. Nếu có bất cứ vật gì cản tín hiệu giữa dàn lạnh và bộ điều khiển từ xa, ví dụ như rèm, dàn lạnh sẽ không hoạt động.
- Không làm rơi bộ điều khiển từ xa. Không làm ướt điều khiển từ xa.
- Khoảng cách truyền tối đa là khoảng 7 m.

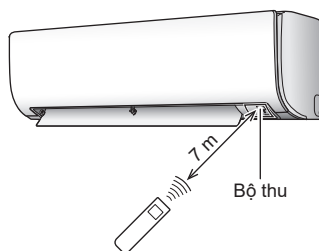

■ Để cố định giá đỡ điều khiển từ xa trên tường

1. Chọn một vị trí nơi tín hiệu có thể tiếp cận dàn lạnh.
2. Lắp giá đỡ vào tường, cột, v.v. bằng đinh vít kèm theo giá đỡ.
3. Đặt điều khiển từ xa vào giá đỡ điều khiển từ xa.

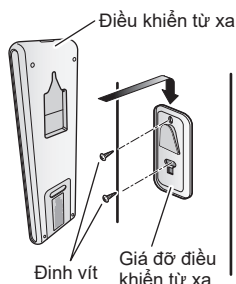

■ Bật aptomat

- Sau khi bật nguồn, các cánh đảo gió của dàn lạnh sẽ mở và đóng một lần để đặt vị trí chuẩn.

CHÚ Ý

■ Về pin

- Khi thay pin, sử dụng pin cùng loại và thay đồng thời cả hai pin cũ.
- Khi không sử dụng hệ thống trong thời gian dài, hãy lấy pin ra.
- Pin có tuổi thọ khoảng một năm. Tuy nhiên, nếu màn hình của điều khiển từ xa bắt đầu mờ và hoạt động nhận tín hiệu bị kém đi trong vòng một năm, hãy thay cả hai pin mới, loại AAA.LR03 (kiềm).
- Các pin đi kèm được cung cấp để sử dụng hệ thống lúc ban đầu. Thời hạn sử dụng pin có thể ngắn tùy thuộc vào ngày sản xuất máy điều hòa.
- Khi pin gần hết, "  " sẽ bắt đầu nhấp nháy để cảnh báo bạn cần thay pin. Trong một số trường hợp, khi lượng tiêu thụ pin tăng nhanh do điều kiện sử dụng, khả năng nhận tín hiệu có thể giảm trước khi "  " bắt đầu nhấp nháy.

■ Về điều khiển từ xa

- Không bao giờ để điều khiển từ xa tiếp xúc với ánh nắng trực tiếp.
- Bụi trên bộ phát hoặc bộ nhận tín hiệu sẽ làm giảm độ nhạy. Lau sạch bụi bằng vải mềm.
- Truyền nhận tín hiệu có thể bị vô hiệu nếu có đèn huỳnh quang dùng tắc-te điện tử (như đèn loại biến tần) trong phòng. Tham vấn cửa hàng nếu bạn gặp trường hợp này.
- Nếu tín hiệu điều khiển từ xa hoạt động một dàn lạnh khác, hãy di chuyển dàn lạnh tới nơi khác hoặc tham vấn cửa hàng dịch vụ.



■ Cách cài đặt độ sáng cho đèn trên dàn lạnh

Điều chỉnh độ sáng cho màn hình trên dàn lạnh theo mong muốn hoặc TẮT màn hình.

■ Để cài đặt

1. Nhấn  rồi giữ nút này trong 2 giây.
Menu(push2sec)
 - “LED” sẽ hiển thị trên màn hình LCD.
 - “” (số trên menu) nhấp nháy.
2. Nhấn  để xác nhận cài đặt đã chọn cho menu số 1.
Menu(push2sec)
3. Nhấn  hoặc  rồi chọn độ sáng theo ý muốn như sau:



ĐỘ SÁNG Cao
(mặc định)



ĐỘ SÁNG Thấp



ĐỘ SÁNG Tắt
4. Nhấn lại .
Menu(push2sec)
 - Độ sáng sẽ được đặt theo giá trị đã chọn.
5. Nhấn  hai lần để quay về màn hình mặc định.

GHỊ CHÚ

Lưu ý cho việc cài đặt độ sáng đèn trên dàn lạnh

- Màn hình tự động quay về màn hình mặc định sau 60 giây.

Hoạt động COOL/DRY/FAN (LÀM LẠNH/KHỬ ẨM/QUẠT)




Máy điều hòa vận hành ở chế độ hoạt động bạn chọn.
Từ lần sau trở đi, máy điều hòa sẽ vận hành với cùng chế độ hoạt động đó.

■ Để tắt máy


➤ Nhấn , rồi chọn chế độ hoạt động.

- Mỗi lần nhấn nút sẽ thay đổi cài đặt chế độ theo trình tự.

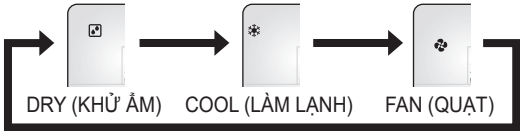

➤ Nhấn .

- “ **ON** ” sẽ hiển thị trên màn hình LCD.

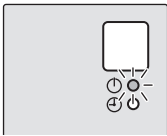

Hiển thị

- Hoạt động COOL/DRY/FAN (LÀM LẠNH/KHỬ ẨM/QUẠT)
Đèn báo HOẠT ĐỘNG sẽ sáng màu xanh lá.
- Có thể thay đổi chế độ hoạt động khi đang hoạt động bằng cách nhấn giữ chế độ mong muốn.

■ Để tắt máy

➤ Nhấn lại .

- Đèn báo HOẠT ĐỘNG tắt.

■ Để thay đổi nhiệt độ cài đặt

➤ Nhấn .

- Các mục hiển thị trên màn hình LCD sẽ thay đổi bất cứ khi nào bạn nhấn một trong số các nút.

Hoạt động COOL (LÀM LẠNH)	Hoạt động DRY (KHỬ ẨM) hoặc FAN (QUẠT)
16,0-32,0°C	Không thực hiện được cài đặt nhiệt độ.
Nhấn ▲ để tăng nhiệt độ và nhấn ▼ để giảm nhiệt độ.	
Mỗi lần nhấn nút sẽ thay đổi nhiệt độ 0,5°C.	

LƯU Ý

CHẾ ĐỘ	Lưu ý đối với mỗi chế độ hoạt động
COOL (LÀM LẠNH)	• Máy điều hòa làm lạnh phòng bằng cách thải nhiệt trong phòng ra bên ngoài. Do đó, hiệu suất lạnh của máy điều hòa có thể giảm nếu nhiệt độ ngoài trời cao.
DRY (KHỬ ẨM)	• Chip máy tính hoạt động để giải phóng độ ẩm khỏi phòng trong khi duy trì nhiệt độ của phòng càng nhiều càng tốt. Thiết bị tự động kiểm soát nhiệt độ và tốc độ luồng gió, do đó không thể điều chỉnh các chức năng này một cách thủ công.
FAN (QUẠT)	• Chế độ này chỉ có giá trị đối với quạt.

Hoạt động HUMIDITY (ĐỘ ẨM)



Hoạt động HUMIDITY (ĐỘ ẨM) trong cài đặt nhiệt độ làm mát hoạt động để ngăn ngừa tình trạng không khí khô và đảm bảo duy trì độ ẩm để tăng cường sự thoải mái.

■ Để khởi động

- ▶ Trong khi vận hành chế độ LÀM LẠNH “❄️”, hãy nhấn  .
- “💧” sẽ hiển thị trên màn hình LCD.

■ Để hủy

- ▶ Nhấn lại  .
- “💧” biến mất khỏi màn hình LCD.
- Thiết bị sẽ ở chế độ hoạt động LÀM LẠNH bình thường.

LƯU Ý

■ Lưu ý về hoạt động HUMIDITY (ĐỘ ẨM)

- Hoạt động HUMIDITY (ĐỘ ẨM) chỉ có trong hoạt động COOL (LÀM LẠNH).
- Khi chọn độ ẩm bằng cách nhấn  , và thay đổi chế độ vận hành từ COOL (LÀM LẠNH) sang hoạt động HUMIDITY (ĐỘ ẨM), nhiệt độ phòng trong nhà sẽ tăng lên vào thời điểm đó nếu nhiệt độ ngoài trời cao.
- Trong trường hợp nhiệt độ ngoài trời cao, hiệu suất làm mát và kiểm soát độ ẩm trong phòng có thể giảm.
- Để điều chỉnh nhiệt độ và độ ẩm, tốc độ luồng gió trong hoạt động COOL (LÀM LẠNH) sẽ được tự động điều chỉnh.
- Hoạt động HUMIDITY (ĐỘ ẨM) sẽ thay đổi theo nhiệt độ cài đặt.
- Không thể thay đổi cài đặt luồng gió.

Điều chỉnh tốc độ gió




Bạn có thể điều chỉnh tốc độ gió để tăng cảm giác dễ chịu.

■ Để điều chỉnh cài đặt tốc độ gió

D Nhấn  .

- Mỗi lần nhấn nút sẽ thay đổi cài đặt tốc độ luồng gió theo trình tự dưới đây.

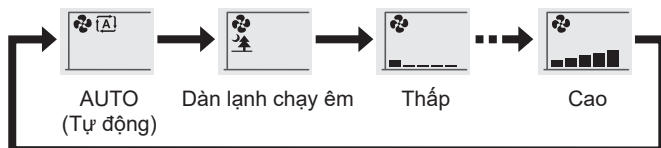

- Khi gió được đặt thành “”, hoạt động dàn lạnh chạy êm sẽ khởi động và tiếng ồn từ dàn lạnh sẽ nhỏ hơn.
- Ở hoạt động dàn lạnh chạy êm, tốc độ gió được đặt ở mức thấp.
- Nếu nhiệt độ không đạt đến điểm mong muốn, hãy thay đổi cài đặt tốc độ gió.
- Trong chế độ DRY (KHỬ ẨM), không thể thay đổi cài đặt tốc độ gió.
- Nếu hoạt động COOL/DRY (LÀM LẠNH/KHỬ ẨM) được khởi động với cài đặt gió là “AUTO (TỰ ĐỘNG)”, dàn lạnh ban đầu sẽ khử mùi, có chức năng ngăn chặn mọi mùi bên trong. Kết quả là, dàn lạnh sẽ không cấp gió ngay lập tức. (Đợi khoảng 1 phút.)
- Với tốc độ gió nhỏ hơn, hiệu quả làm lạnh cũng nhỏ hơn.

Mẹo tiết kiệm năng lượng

- Lưu ý không làm lạnh phòng quá sâu.
Đặt nhiệt độ cài đặt ở mức vừa phải sẽ giúp tiết kiệm năng lượng.
- Nhiệt độ cài đặt làm lạnh được khuyến nghị là 26,0-28,0°C.
- Che cửa sổ lại bằng màn hình hoặc rèm.
Ngăn ánh nắng mặt trời và không khí từ bên ngoài vào sẽ làm tăng tác dụng làm lạnh.
- Lưới lọc thô bị tắc sẽ gây nên hoạt động thiếu hiệu quả và lãng phí năng lượng.
Làm vệ sinh lưới lọc thô 2 tuần một lần.

Điều chỉnh hướng gió

Bạn có thể điều chỉnh luồng gió để tăng cảm giác dễ chịu.

CHÚ Ý

- Luôn sử dụng bộ điều khiển từ xa để điều chỉnh các góc của cánh đảo gió.
 - Không cố dùng tay di chuyển bằng lực khi cánh đảo gió hoặc cánh hướng dòng đang xoay vì sẽ có thể làm hỏng cơ cấu.
- Hãy cẩn thận khi điều chỉnh cánh hướng dòng.
 - Bên trong miệng cấp gió có một quạt quay với tốc độ cao.

[Cách vận hành tự động]

■ Để điều chỉnh cánh đảo gió (cánh ngang)

Hướng luồng gió lên và xuống

➤ Nhấn .

- “” sẽ hiển thị trên màn hình LCD.
- Cánh đảo gió (cánh ngang) sẽ bắt đầu xoay.

➤ Khi các cánh đảo gió xoay đến vị trí mong muốn, nhấn một lần nữa.

- Các cánh đảo gió sẽ dừng lại.
- “” biến mất khỏi màn hình LCD.



[Cách vận hành thủ công]

■ Để điều chỉnh cửa gió (cánh dọc)

Hướng luồng gió phải và trái

Giữ núm và di chuyển cánh hướng dòng.
(Bạn sẽ thấy một núm ở các cánh bên trái và bên phải.)

- Khi dàn lạnh được lắp đặt ở góc phòng, hướng của cánh hướng dòng nên quay mặt ra xa bức tường.
Nếu cánh hướng dòng quay mặt vào tường, tường sẽ chặn gió, khiến hiệu quả làm lạnh giảm.

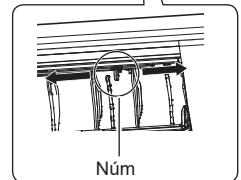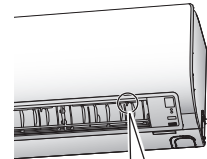

LƯU Ý

■ Lưu ý về cài đặt hướng gió

- Phạm vi di chuyển của các cánh đảo gió thay đổi tùy theo chế độ hoạt động, tham khảo hình bên phải.

Phạm vi dịch chuyển của cánh đảo gió

COOL / DRY
(LÀM LẠNH / KHỬ ẨM)

FAN (QUẠT)



Hoạt động POWERFUL (LÀM LẠNH NHANH)



Hoạt động POWERFUL (LÀM LẠNH NHANH) nhanh chóng tối ưu hóa hiệu quả làm lạnh trong bất kỳ chế độ hoạt động nào. Bạn có thể nhận được công suất tối đa.

■ Để khởi động

➤ **Nhấn**  **trong khi vận hành.**

- Hoạt động POWERFUL (LÀM LẠNH NHANH) sẽ kết thúc trong 20 phút. Sau đó hệ thống sẽ tự quay lại vận hành theo cài đặt đã được sử dụng trước hoạt động POWERFUL (LÀM LẠNH NHANH).
- “” sẽ hiển thị trên màn hình LCD.

■ Để hủy

➤ **Nhấn lại** .

- “” biến mất khỏi màn hình LCD.

LƯU Ý

■ Lưu ý về hoạt động POWERFUL (LÀM LẠNH NHANH)

- Khi bạn nhấn giữ nút  sau khi nhấn nút  để bắt đầu vận hành, máy điều hòa sẽ hoạt động ở chế độ làm lạnh nhanh, máy nén và quạt dàn lạnh sẽ hoạt động ở tốc độ cao để giúp làm lạnh nhanh hơn hoạt động POWERFUL (LÀM LẠNH NHANH) thông thường trong điều kiện mức nhiệt độ trong nhà sẽ là 25~37°C DB/mức nhiệt độ ngoài trời sẽ là 25~43°C DB.
- Chỉ có thể cài đặt hoạt động POWERFUL (LÀM LẠNH NHANH) khi dàn lạnh đang chạy.

Nhấn giữ  sẽ hủy các cài đặt và “” biến mất khỏi màn hình LCD.

- Hoạt động POWERFUL (LÀM LẠNH NHANH) sẽ không làm tăng công suất của máy điều hòa nếu máy điều hòa đang vận hành với công suất tối đa.

Khi dùng hoạt động COOL (LÀM LẠNH)

Để tối đa hiệu quả làm mát, công suất của dàn nóng sẽ tăng và tốc độ gió sẽ được cố định ở cài đặt tối đa. Không thể thay đổi cài đặt nhiệt độ và luồng gió.

Khi dùng hoạt động DRY (KHỬ ẨM)

Cài đặt nhiệt độ giảm thêm 2,5°C và tốc độ gió tăng nhẹ.

Khi dùng hoạt động FAN (QUẠT)

Tốc độ gió được cố định ở cài đặt tối đa.

Cách kết hợp hoạt động POWERFUL (LÀM LẠNH NHANH) và các chế độ khác

POWERFUL + COMFORT AIRFLOW (LÀM LẠNH NHANH + LUỒNG GIÓ DỄ CHỊU)	Không có*
POWERFUL + ECONO (LÀM LẠNH NHANH + TIẾT KIỆM)	
POWERFUL + OUTDOOR UNIT QUIET (LÀM LẠNH NHANH + DÀN NÓNG CHẠY ẸM)	

*Chức năng nào được chọn sau cùng sẽ được ưu tiên.

Hoạt động COMFORT AIRFLOW (LUỒNG GIÓ DỄ CHỊU)



Luồng gió sẽ hướng lên trên khi ở hoạt động COOL/DRY (LÀM LẠNH/KHỬ ẨM), đem đến luồng gió dễ chịu mà không thổi trực tiếp vào người.

■ Để khởi động

▶ Nhấn  .

- “” sẽ hiển thị trên màn hình LCD.

	Hoạt động COOL (LÀM LẠNH)	Hoạt động DRY (KHỬ ẨM)
Hướng cánh đảo gió	Hướng lên	
Tốc độ gió	Tốc độ luồng gió sẽ được đặt ở mức độ bất kỳ	AUTO (TỰ ĐỘNG)

- Không khả dụng ở chế độ FAN (QUẠT).

■ Để hủy

▶ Nhấn lại  .

- “” biến mất khỏi màn hình LCD.

LƯU Ý

■ Lưu ý đối với hoạt động COMFORT AIRFLOW (LUỒNG GIÓ DỄ CHỊU)

- Vị trí cánh đảo gió sẽ thay đổi, ngăn gió thổi trực tiếp vào những người có mặt trong phòng.
- Không thể sử dụng hoạt động POWERFUL (LÀM LẠNH NHANH) cùng với hoạt động ECONO/COMFORT AIRFLOW/OUTDOOR UNIT QUIET (TIẾT KIỆM/LUỒNG GIÓ DỄ CHỊU/ DÀN NÓNG CHẠY ÊM). Chức năng nào được chọn sau cùng sẽ được ưu tiên.

Hoạt động ECONO (TIẾT KIỆM)



Hoạt động ECONO (TIẾT KIỆM) là một chức năng cho phép vận hành hiệu quả bằng cách giới hạn giá trị tiêu thụ điện tối đa.

Chức năng này hữu ích trong các trường hợp cần chú ý để đảm bảo rằng cầu dao sẽ không ngắt khi sản phẩm chạy cùng với các thiết bị khác.

■ Để khởi động

➤ Nhấn .

- “” sẽ hiển thị trên màn hình LCD.

■ Để hủy

➤ Nhấn lại .

- “” biến mất khỏi màn hình LCD.

LƯU Ý

■ Lưu ý đối với hoạt động ECONO (TIẾT KIỆM)

- Chỉ có thể cài đặt chế độ ECONO (TIẾT KIỆM) khi thiết bị đang chạy. Việc nhấn  sẽ hủy cài đặt và “” sẽ biến mất khỏi màn hình LCD.
- Hoạt động ECONO (TIẾT KIỆM) là một chức năng cho phép hoạt động hiệu quả bằng cách giới hạn giá trị tiêu thụ điện tối đa của dàn nóng (tần số hoạt động).
- Hoạt động ECONO (TIẾT KIỆM) hoạt động ở hoạt động COOL (LÀM LẠNH) và DRY (KHỬ ẨM).
- Không thể sử dụng hoạt động POWERFUL (LÀM LẠNH NHANH) cùng với hoạt động ECONO/ COMFORT AIRFLOW/OUTDOOR UNIT QUIET (TIẾT KIỆM/LUỒNG GIÓ DỄ CHỊU/DÀN NÓNG CHẠY ỀM).
- Chức năng nào được chọn sau cùng sẽ được ưu tiên.
- Nếu mức tiêu thụ điện của máy đang thấp, việc bật qua hoạt động ECONO (TIẾT KIỆM) sẽ không làm giảm thêm nữa.

Hoạt động MOLD PROOF (CHỐNG NẤM MỐC)

Hoạt động CHỐNG NẤM MỐC là chức năng làm giảm sự lây lan của nấm mốc bằng cách sử dụng chế độ quạt để giảm độ ẩm bên trong dàn lạnh.

[Cách vận hành tự động]

■ Để cài đặt

- Nhấn  rồi giữ nút này trong 2 giây.

- “” sẽ hiển thị trên màn hình LCD.
- Sau khi hoạt động DRY (KHỬ ẨM) hoặc COOL (LÀM LẠNH) dừng lại, máy điều hòa sẽ tự động bật hoạt động MOLD PROOF (CHỐNG NẤM MỐC).
- Đèn báo HOẠT ĐỘNG sẽ nhấp nháy.

■ Để hủy

- Nhấn  và giữ nút trong 2 giây thêm một lần nữa.

- “” biến mất khỏi màn hình LCD.

[Cách vận hành thủ công]


- Nhấn  trong khoảng 2 giây khi thiết bị không vận hành.

- “” nhấp nháy trên màn hình LCD, rồi màn hình trở lại bình thường sau một lúc.
- Nếu máy điều hòa đã tắt hơn 3 phút, nhấn  một lần nữa rồi giữ nút này trong 2 giây để bắt đầu hoạt động MOLD PROOF (CHỐNG NẤM MỐC).
- Đèn báo HOẠT ĐỘNG sẽ nhấp nháy.



Hoạt động MOLD PROOF (CHỐNG NẤM MỐC)

[Dòng chức năng]

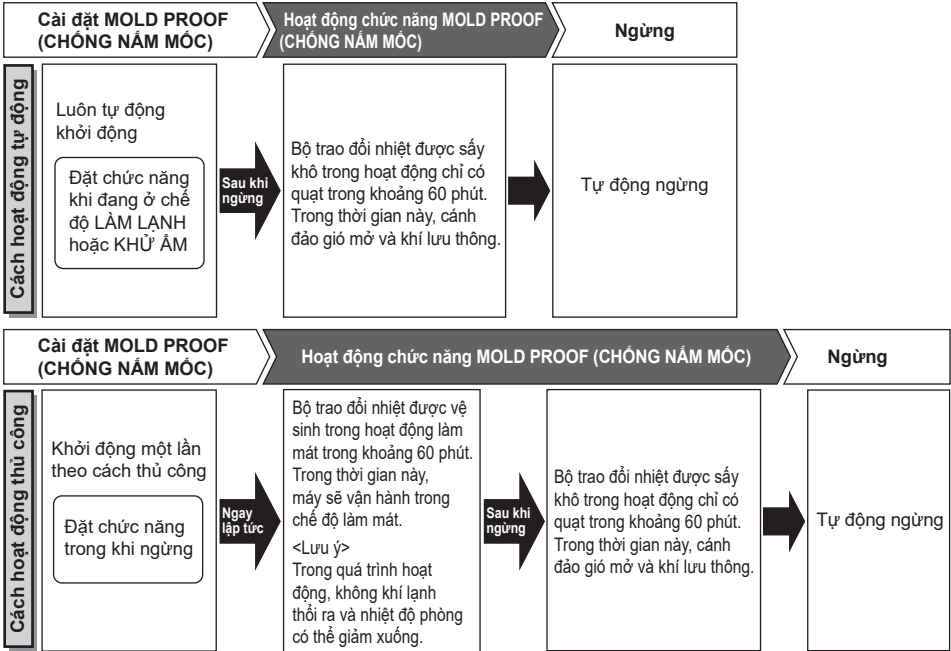

LƯU Ý

■ Lưu ý về cài đặt MOLD PROOF (CHỐNG NẤM MỐC)

- Khi bạn muốn dừng hoạt động MOLD PROOF (CHỐNG NẤM MỐC), hãy nhấn  hai lần. Hoạt động MOLD PROOF (CHỐNG NẤM MỐC) sẽ bị hủy và “” biến mất khỏi màn hình LCD.
- Chức năng này không được thiết kế để loại bỏ bụi hoặc mốc có sẵn.
- Hoạt động MOLD PROOF (CHỐNG NẤM MỐC) không dùng được khi thiết bị tắt bằng tính năng OFF TIMER (HẸN GIỜ TẮT).

■ Lưu ý về hoạt động MOLD PROOF (CHỐNG NẤM MỐC)

- Các cánh đảo gió đôi khi có thể đóng lại để tăng hiệu quả làm khô bên trong máy điều hòa.
- Hoạt động MOLD PROOF (CHỐNG NẤM MỐC) có thể không hoạt động nếu thời gian chạy hoạt động COOL (LẠM LẠNH) hoặc DRY (KHỬ ẨM) ngắn hơn 5 phút (từ lúc bật bằng bộ điều khiển từ xa).
Tùy trường hợp, có thể bạn nên đợi thêm khoảng 3 phút, (xem phần **Khắc phục sự cố** [Trang 26](#) để biết thông tin chi tiết.).
- Nếu không muốn dùng hoạt động MOLD PROOF (CHỐNG NẤM MỐC), hãy ngừng vận hành.
[Trang 17](#)

Hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM)



Hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM) giảm mức độ ồn của dàn nóng bằng cách thay đổi tần số và tốc độ quạt trên dàn nóng. Chức năng này thuận tiện vào ban đêm.

■ Để khởi động

➤ Nhấn  .

- “” sẽ hiển thị trên màn hình LCD.
- Máy điều hòa có thể vận hành ở hoạt động ECONO (TIẾT KIỆM) kết hợp với hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM).

■ Để hủy

➤ Nhấn lại  .

- “” biến mất khỏi màn hình LCD.

LƯU Ý

■ Lưu ý đối với hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM)

- Chức năng này có sẵn ở hoạt động COOL (LÀM LẠNH).
(Chức năng này không có trong chế độ FAN (QUẠT) và DRY (KHỬ ẨM)).
- Không thể sử dụng hoạt động POWERFUL (LÀM LẠNH NHANH) cùng với hoạt động ECONO/ COMFORT AIRFLOW/OUTDOOR UNIT QUIET (TIẾT KIỆM/LUỒNG GIÓ DỄ CHỊU/DÀN NÓNG CHẠY ÊM).
Chức năng nào được chọn sau cùng sẽ được ưu tiên.
- Hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM) sẽ không làm giảm tần số hoặc tốc độ quạt nếu tần số và tốc độ quạt đã giảm xuống mức đủ thấp.
- Thậm chí nếu dừng hoạt động này bằng cách sử dụng điều khiển từ xa hoặc nút ON/OFF (BẬT/TẮT) dàn lạnh khi sử dụng hoạt động OUTDOOR UNIT QUIET (DÀN NÓNG CHẠY ÊM), “” vẫn sẽ ở trên màn hình điều khiển từ xa.
- Hoạt động này vận hành với điện áp thấp và do đó có thể không cấp đủ hiệu quả làm lạnh.

Hoạt động TIMER (HẸN GIỜ)



Các chức năng hẹn giờ hữu ích để tự động bật hoặc tắt điều hòa không khí vào ban đêm hoặc vào buổi sáng.

Bạn cũng có thể sử dụng kết hợp OFF TIMER (HẸN GIỜ TẮT) và ON TIMER (HẸN GIỜ BẬT).

[Hoạt động OFF TIMER (HẸN GIỜ TẮT)]


■ Để cài đặt

1. Nhấn **OFF** .



2. Nhấn **OFF** cho đến khi thời gian cài đặt đạt đến điểm bạn muốn.

- Mỗi lần nhấn nút sẽ tăng thời gian cài đặt thêm 1 giờ.
- Thời gian cài đặt có thể tăng tối đa 12 giờ.
- Đèn TIMER (HẸN GIỜ) sẽ sáng màu cam.

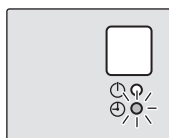

Hiển thị

■ Để hủy

1. Nhấn **CANCEL** .

- “ OFF HR.” biến mất khỏi màn hình LCD.
- Đèn TIMER (HẸN GIỜ) sẽ tắt.

LƯU Ý

■ Chế độ CÀI ĐẶT BAN ĐÊM

- Khi cài đặt OFF TIMER (HẸN GIỜ TẮT), máy điều hòa sẽ tự động điều chỉnh nhiệt độ cài đặt (tăng 0,5°C ở chế độ COOL (LÀM LẠNH)) để tránh bị quá lạnh cho giấc ngủ của bạn được thoải mái.



[Hoạt động ON TIMER (HẸN GIỜ BẬT)]

■ Để cài đặt


1. Nhấn **ON**.



• “**ON** **HR.**” sẽ hiển thị trên màn hình LCD.

2. Nhấn **ON** cho đến khi thời gian cài đặt đạt đến điểm bạn muốn.

- Mỗi lần nhấn nút sẽ tăng thời gian cài đặt thêm 1 giờ.
- Thời gian cài đặt có thể tăng tối đa 12 giờ.
- Đèn TIMER (HẸN GIỜ) sẽ sáng màu cam.

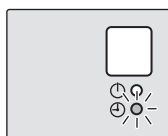

Hiển thị

■ Để hủy

▶ Nhấn **CANCEL**.

- “**ON** **HR.**” biến mất khỏi màn hình LCD.
- Đèn TIMER (HẸN GIỜ) sẽ tắt.

[Hoạt động ON/OFF TIMER (HẸN GIỜ BẬT/HẸN GIỜ TẮT)]

■ Để kết hợp ON TIMER (HẸN GIỜ BẬT) và OFF TIMER (HẸN GIỜ TẮT)

- Dưới đây là cài đặt mẫu về kết hợp 2 chế độ hẹn giờ.
- Cài đặt trong khi dàn lạnh đang hoạt động.

(Ví dụ)

Tắt dàn lạnh trong 1 giờ tới
Bật dàn lạnh trong 8 giờ tới) Kết hợp
(7 giờ sau khi tắt)



- Cài đặt khi dàn lạnh đã tắt.

(Ví dụ)

Bật dàn lạnh trong 2 giờ tới
Tắt dàn lạnh trong 5 giờ tới) Kết hợp
(3 giờ sau khi bật)



CHÚ Ý

■ Trong những trường hợp sau, hãy đặt lại chức năng hẹn giờ.

- Sau khi đã OFF (TẮT) aptomat.
- Sau khi mất điện.
- Sau khi thay pin trong điều khiển từ xa.

Bảo quản và Vệ sinh

⚠ THẬN TRỌNG

- Trước khi vệ sinh, đảm bảo dừng hoạt động và OFF (TẮT) aptomat.
- Khi mở và đóng mặt nạ, dùng một chiếc ghế khõe và chắc chắn và để ý cẩn thận bước chân.
- Sau khi vệ sinh, đảm bảo rằng đã lắp mặt nạ chắc chắn.


Dàn lạnh

Dùng vải mềm khô để lau các thiết bị.		
---------------------------------------	---	---

■ Mặt nạ

1. Mở mặt nạ trước


- Giữ các cạnh của mặt nạ rồi mở ra.

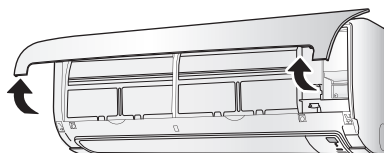

2. Vệ sinh nắp mặt nạ.

Nếu mặt nạ bẩn


- Lau sạch bằng khăn ẩm và mềm.
- Chỉ sử dụng chất tẩy rửa trung tính.

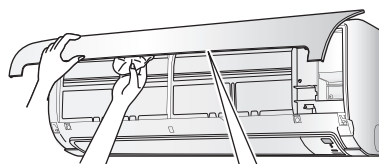

Nếu mặt sau của mặt nạ bị bẩn, lau sạch bằng khăn ẩm và mềm.

3. Đóng mặt nạ trước

- Đóng mặt nạ từ từ. (Áp vào hai bên và giữa mặt nạ)
- Đảm bảo mặt nạ đã được cố định chắc chắn.

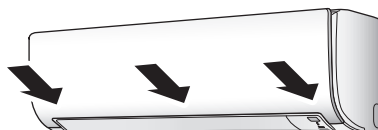

LƯU Ý

■ Lưu ý khi vệ sinh mặt nạ.

- Không rửa trong nước.
- Không làm rách vật liệu cách nhiệt.
- Không ép hoặc chà xát vật liệu cách nhiệt.


⚠ THẬN TRỌNG

- Không chạm tay không vào các lá nhôm tản nhiệt khi tháo hoặc lắp lưới lọc.

■ Phin lọc


1. Kéo lưới lọc thô ra.

- Mở mặt nạ trước. **Trang 22**
- Đẩy chốt lưới lọc ở giữa mỗi lưới lọc thô lên trên một chút, sau đó kéo xuống.

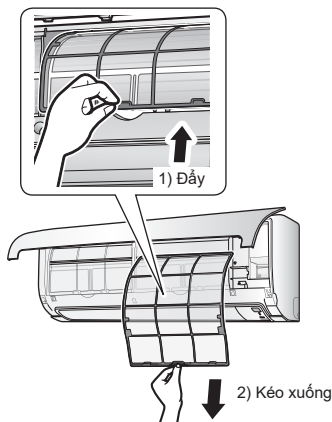

2. Dùng nước để rửa các lưới lọc thô hoặc vệ sinh bằng máy hút bụi.

- Nên vệ sinh các lưới lọc thô 2 tuần một lần.

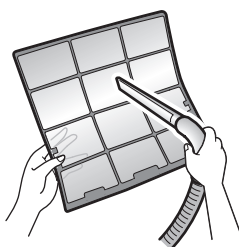

Sử dụng máy hút bụi để loại bỏ bụi



Nếu khó lau sạch bụi

Hãy rửa các lưới lọc thô bằng chất tẩy rửa trung tính được pha loãng với nước ấm, sau đó để khô trong bóng râm. Đảm bảo đã tháo phin lọc (nhỏ). Tham khảo phần phin lọc (nhỏ) ở trang tiếp theo.

3. Đặt các lưới lọc vào vị trí cũ và đóng mặt nạ lại.

- Ấn vào hai bên và giữa nắp mặt nạ.

Bảo quản và Vệ sinh

■ Phin lọc (nhỏ)


(Đối với phin lọc FTKB được bán riêng)

* Để có thể sử dụng các loại lọc, hãy tham khảo phần **LƯU Ý** trên **Trang 25**.

1. Mở mặt nạ trước và kéo lưới lọc thô ra. **Trang 22, 23**

2. Tháo các phin lọc ra. (nhỏ)

- Giữ các phần gắn chìm của khung và tháo 4 móc.

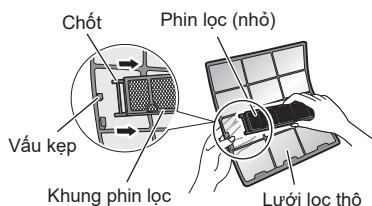

3. Vệ sinh hoặc thay các phin lọc.

[Vệ sinh]

Phin lọc (enzyme blue với PM2,5) [màu xanh lam - trắng] hoặc phin lọc hút bụi (PM2,5) [màu trắng]

- Không rửa phin lọc vì việc này sẽ làm giảm hiệu quả của phin lọc.
- Chúng tôi khuyến nghị thay phin lọc **6 tháng một lần**.

Phin lọc khử mùi (enzyme blue) [màu xanh lam] hoặc phin lọc khử mùi apatit titan [màu xanh đen]

3-1 Hút bụi và ngâm trong nước ấm hoặc nước khoảng 10 đến 15 phút nếu bụi quá nhiều.


3-2 Sau khi rửa, vẩy sạch nước còn lại và để tự khô trong bóng râm.

- Bạn có thể làm sạch lại phin lọc bằng cách rửa với nước **6 tháng một lần** và nên thay phin lọc **3 năm một lần**.
- Không vắt phin lọc để làm khô.

[Thay thế]

Tháo mỗi phin lọc khỏi khung lưới lọc bằng cách tháo chốt, sau đó lắp phin lọc mới.

- Không vứt khung phin lọc để có thể tái sử dụng khi thay phin lọc.
- Khi gắn lại phin lọc, hãy kiểm tra phin lọc đã được đặt trong các chốt.



4. Đặt các lưới lọc thô vào vị trí cũ và đóng mặt nạ lại.

- Ấn vào hai bên và giữa mặt nạ trước.

Lưu ý đối với việc vệ sinh

■ **Để vệ sinh, không sử dụng các vật liệu sau.**

- Nước nóng trên 40°C.
- Ét xăng, xăng, dung môi, các loại dầu bay hơi khác.
- Hợp chất đánh bóng.
- Bàn chải cứng, các chất liệu cứng khác.



LƯU Ý

- Hoạt động với các phin lọc bẩn:
 - 1) không thể khử mùi không khí.
 - 2) không thể làm sạch không khí.
 - 3) làm lạnh kém.
 - 4) có thể gây mùi.
- Thải bỏ các phin lọc cũ dưới dạng rác thải không cháy.
- Để mua các phin lọc này (**Bảng 1**) hoặc phin lọc loại khác, hãy liên hệ với đại lý nơi bạn mua máy điều hòa.
- Phương pháp làm sạch và thay phin lọc có thể khác nhau tùy theo mẫu máy. Tham khảo nhãn được đính kèm với chính các phin lọc được bán riêng.

Bảng 1

Mục	Số linh kiện	
	không có khung	có khung (đối với FTKB)
Phin lọc (enzyme blue với PM2,5) - bộ 2 phin lọc	BAFP094A43	BAFP094A44
Phin lọc khử mùi (enzyme blue) - bộ 2 phin lọc	BAFP094A41	BAFP094A42
Phin lọc hút bụi (PM2,5) - bộ 2 phin lọc	BAFP046A41	BAFP046A42
Phin lọc khử mùi apatit titan - bộ 2 phin lọc	KAF970A46	KAF970A45

Chúng tôi khuyến nghị bảo dưỡng thường xuyên.

Trong những điều kiện hoạt động nhất định, các bộ phận bên trong của máy điều hòa có thể bị hôi sau nhiều mùa sử dụng, dẫn đến hiệu suất kém. Ngoài việc người dùng phải vệ sinh thường xuyên, nên để một chuyên viên bảo dưỡng định kỳ. Để có chuyên viên bảo dưỡng, liên hệ với cửa hàng dịch vụ nơi bạn mua máy điều hòa.

Người dùng phải thanh toán chi phí bảo dưỡng.

Kiểm tra

- Kiểm tra xem nền, đế và các ống nối khác của dàn nóng có bị hỏng hay bị ăn mòn không.
- Kiểm tra và bảo đảm không có gì chặn trước đường hút và đường cấp gió của dàn lạnh và dàn nóng.
- Kiểm tra xem nước xả có chảy tốt qua ống nước xả trong quá trình hoạt động COOL (LÀM LẠNH) hoặc DRY (KHỬ ẨM) không.
 - Nếu không nhìn thấy nước xả ra, nước có thể đang bị rò rỉ từ dàn lạnh. Hãy tắt dàn lạnh và tham khảo ý kiến cửa hàng dịch vụ nếu xảy ra tình huống này.

Trước khi để tạm nghỉ thời gian dài

1. Hoạt động chức năng MOLD PROOF (CHỐNG NẤM MỐC). **Trang 17**
2. Sau khi dừng hoạt động, tắt aptomat của máy điều hòa.
3. Làm sạch phin lọc và lắp lại.
4. Lấy pin ra khỏi điều khiển từ xa.

Khắc phục sự cố

Những trường hợp sau không phải là sự cố.

Những trường hợp sau không phải là sự cố của máy điều hòa nhưng có một số nguyên nhân. Bạn có thể tiếp tục sử dụng điều hòa.

Trường hợp	Mô tả / nội dung kiểm tra
Hoạt động không bắt đầu ngay. • Khi nhấn nút “ON/OFF (BẬT/TẮT)” ngay sau khi ngừng hoạt động. • Khi chọn lại chế độ.	• Việc này là để bảo vệ máy điều hòa. Bạn nên chờ trong khoảng 3 phút.
Dàn nóng thải ra nước.	■ Trong hoạt động COOL (LÀM LẠNH) hoặc DRY (KHỬ ẨM) • Hơi ẩm trong không khí ngưng tụ thành nước trên bề mặt lạnh của đường ống dàn nóng và nhỏ giọt.
Sương mù tỏa ra từ dàn lạnh.	• Việc này xảy ra khi không khí trong phòng được làm lạnh tạo thành hơi sương do luồng gió lạnh trong hoạt động làm lạnh.
Dàn lạnh bốc mùi.	• Việc này xảy ra khi mùi của phòng, nội thất hoặc khói thuốc đã được hấp thụ vào dàn lạnh và xả ra cùng với luồng gió. Chúng tôi khuyên bạn nên vệ sinh dàn lạnh. Vui lòng hỏi đại lý của bạn.
Quạt ngoài trời quay khi máy điều hòa không hoạt động.	■ Sau khi tắt máy: • Quạt ngoài trời tiếp tục quay thêm 60 giây để bảo vệ hệ thống. ■ Khi máy điều hòa không hoạt động: • Khi nhiệt độ ngoài trời quá cao, quạt ngoài trời bắt đầu quay để bảo vệ hệ thống.
Hoạt động dừng đột ngột. (Đèn OPERATION (HOẠT ĐỘNG) bật.)	• Để bảo vệ hệ thống, máy điều hòa có thể dừng hoạt động khi điện áp tăng đột ngột. Điều hòa sẽ tự động tiếp tục hoạt động trong khoảng 3 phút.
Điều khiển từ xa không hoạt động bình thường. ■ Không có tín hiệu điều khiển từ xa hiển thị. ■ Độ nhạy điều khiển từ xa thấp. ■ Màn hình độ tương phản thấp hoặc bị tối. ■ “” trên màn hình LCD nhấp nháy và bộ điều khiển từ xa không thể hoạt động.	• Pin đã hết và điều khiển từ xa bị lỗi. Thay tất cả pin bằng pin mới, loại AAA.LR03 (kiềm). Để biết chi tiết, tham khảo “Lắp pin” trong hướng dẫn này. Trang 8 • Năng lượng của pin đã hết. Thay hai pin cùng lúc bằng pin cỡ AAA.LR03 (kiềm) mới. Việc để pin đã cạn kiệt trong bộ điều khiển từ xa có thể dẫn đến thương tích do rò rỉ pin, nổ hoặc pin bị nóng lên, hoặc dẫn đến lỗi thiết bị. (Ngay cả khi “” nhấp nháy, nút OFF (TẮT) vẫn hoạt động.)

Trường hợp	Mô tả / nội dung kiểm tra
Nhiệt độ phòng không đạt nhiệt độ cài đặt.	- Nếu không khí thoát ra từ máy điều hòa thổi vào tường, nhiệt độ cài đặt có thể không đạt được chính xác. - Vì việc kiểm soát độ ẩm môi trường được ưu tiên trong Hoạt động HUMIDITY (ĐỘ ẨM) nên nhiệt độ phòng có thể không đạt đến nhiệt độ cài đặt. (Nếu không muốn dùng hoạt động HUMIDITY (ĐỘ ẨM), hãy hủy bỏ hoạt động.)
- Dàn lạnh không nhận tín hiệu từ điều khiển từ xa hoặc có phạm vi hoạt động hạn chế. - Các thiết bị điện khác hoạt động.	- Truyền nhận tín hiệu có thể bị vô hiệu nếu có đèn huỳnh quang dùng tăng phô điện tử (như đèn loại biến tần) trong phòng. Tham vấn người bán hàng nếu xảy ra trường hợp này. - Điều khiển từ xa có thể hoạt động không bình thường nếu bộ truyền tiếp xúc với ánh nắng mặt trời trực tiếp. - Bất kỳ thiết bị điện tử nào được đặt gần thiết bị như điện thoại thông minh và máy chơi game đều có thể phát ra tín hiệu hoặc tia hồng ngoại. Các tín hiệu đến từ các thiết bị điện tử có thể gây nhiễu tín hiệu điều khiển từ xa. - Nếu điều khiển từ xa kích hoạt các thiết bị điện khác, chuyển các thiết bị này đi nơi khác hoặc tham vấn người bán hàng.
Cánh đảo gió không bắt đầu đảo gió ngay.	- Máy điều hòa đang điều chỉnh vị trí cánh. - Cánh đảo gió sẽ chuyển động ngay.
Bạn sẽ nghe thấy một âm thanh. - Âm thanh giống như dòng chảy của nước - Âm thanh tích tắc - Âm thanh lách cách trong quá trình hoạt động hoặc tạm nghỉ - Tiếng lọc cọc - Tiếng khóa chốt	- Âm thanh này tạo ra do môi chất lạnh trong điều hòa không khí đang chảy. - Đây là âm thanh bơm nước trong điều hòa không khí và bạn nghe thấy âm thanh này khi nước được bơm ra khỏi máy điều hòa trong quá trình làm lạnh hoặc làm khô ẩm. - Âm thanh này tạo ra khi kích thước của máy điều hòa nở ra hoặc co lại nhẹ do nhiệt độ thay đổi. - Âm thanh này tạo ra khi van điều khiển môi chất lạnh hoặc các linh kiện điện hoạt động. - Bạn nghe thấy âm thanh này từ bên trong điều hòa không khí khi bật quạt hút trong khi các cửa phòng đang đóng. Mở cửa sổ hoặc tắt quạt hút. - Âm thanh này được tạo ra do van tiết lưu điện tử vận hành dàn nóng ngừng hoặc tắt nguồn điện và bật lại.
Cơ cấu quay phát ra âm thanh. Âm thanh phát ra khi cánh đảo gió ngang chuyển động.	Khi máy điều hòa không khí hoạt động trong môi trường yên tĩnh và tốc độ lưu lượng gió của dàn lạnh được đặt ở Chế độ yên lặng hoặc Chế độ thấp, chuyển động của cánh đảo gió có thể phát ra âm thanh.
Không có gió thổi ra	- Trong chế độ COOL (LÀM LẠNH) hoặc DRY (KHỬ ẨM) - Nếu hoạt động COOL/DRY (LÀM LẠNH/KHỬ ẨM) được khởi động với cài đặt gió là "AUTO (TỰ ĐỘNG)", dàn lạnh ban đầu sẽ khử mùi, có chức năng ngăn chặn mọi mùi bên trong. Kết quả là, dàn lạnh sẽ không cấp gió ngay lập tức. (Đợi khoảng 1 phút.)
Máy điều hòa tiếp tục hoạt động ngay cả khi bạn đã dừng hoạt động COOL (LÀM LẠNH) hoặc DRY (KHỬ ẨM).	Máy điều hòa đang hoạt động ở chế độ MOLD PROOF (CHỐNG NẤM MỐC). Khi bạn muốn dừng hoạt động MOLD PROOF (CHỐNG NẤM MỐC), hãy nhấn  .

Khắc phục sự cố

Kiểm tra lại.

Hãy kiểm tra lại trước khi gọi thợ sửa chữa.

Trường hợp	Mô tả / nội dung kiểm tra
Điều hòa không khí không hoạt động. Đèn báo OPERATION (HOẠT ĐỘNG) tắt. Đèn báo OPERATION (HOẠT ĐỘNG) đang nhấp nháy.	• Aptomat có bị OFF (TẮT) hay cầu chì có bị nổ không? • Có bị mất điện không? • Đã lắp pin trong bộ điều khiển từ xa chưa? • Cài đặt hẹn giờ đã đúng chưa? • Ngắt điện bằng cầu dao và khởi động lại hoạt động bằng bộ điều khiển từ xa. Nếu đèn báo OPERATION (HOẠT ĐỘNG) hoạt động nhấp, kiểm tra lại mã lỗi và hỏi người bán hàng.
Hiệu quả làm lạnh kém.	• Lưới lọc thô có sạch không? • Có vật gì cản trở đường hồi hay đường cấp của dàn lạnh hoặc dàn nóng không? • Nhiệt độ cài đặt có phù hợp không? • Cửa sổ và cửa ra vào đã đóng chưa? • Tốc độ luồng gió và hướng luồng gió có được đặt đúng không? • Nhiệt độ ngoài trời có ở trong phạm vi hoạt động không? • Thiết bị có được đặt ở chế độ ECONO/MOLD PROOF/OUTDOOR UNIT QUIET (TIẾT KIỂM/CHÔNG NẤM MỐC/DÀN NÓNG CHẠY ÊM) không? Trang 16-19
Hoạt động dừng đột ngột. (Đèn báo OPERATION (HOẠT ĐỘNG) đang nhấp nháy.)	• Lưới lọc thô có sạch không? • Có vật gì cản trở đường hồi hay đường cấp của dàn lạnh hoặc dàn nóng không? • Vệ sinh lưới lọc hoặc dọn các vật cản và OFF (TẮT) aptomat. Sau đó, ON (BẬT) lại và thử hoạt động máy điều hòa bằng điều khiển từ xa. Nếu đèn vẫn nhấp nháy, hãy gọi cửa hàng dịch vụ nơi bạn mua máy điều hòa.
Chức năng bất thường xảy ra trong quá trình hoạt động.	• Máy điều hòa có thể bị lỗi do sét đánh hoặc sóng radio. OFF (TẮT) aptomat, sau đó ON (BẬT) lại và thử hoạt động máy điều hòa bằng điều khiển từ xa.

■ Lưu ý đối với điều kiện vận hành

- Điều hòa không khí luôn tiêu thụ một lượng điện nhỏ ngay cả khi không hoạt động.
- Nếu bạn không định sử dụng điều hòa không khí trong một thời gian dài, ví dụ vào mùa xuân hoặc mùa thu, hãy ngắt cầu dao.
- Sử dụng điều hòa không khí trong những điều kiện sau.

CHẾ ĐỘ	Các điều kiện hoạt động	Nếu tiếp tục hoạt động ngoài phạm vi này
COOL(LÀM LẠNH) / DRY (KHỬ ẨM)	Nhiệt độ ngoài trời: 19,4-46°C Nhiệt độ trong nhà: 16-32°C Độ ẩm trong nhà: tối đa 80%	• Thiết bị bảo vệ có thể hoạt động để tắt hệ thống. • Nước có thể ngưng tụ và nhỏ giọt trên dàn lạnh.

- Hoạt động ngoài phạm vi độ ẩm và nhiệt độ này có thể khiến thiết bị bảo vệ tắt hệ thống.

Hãy gọi ngay cửa hàng dịch vụ.

CẢNH BÁO

- Khi có bất thường (như mùi khét), hãy tắt hoạt động và OFF (TẮT) aptomat.
 - Tiếp tục hoạt động trong điều kiện bất thường có thể dẫn đến sự cố, bị điện giật hoặc hỏa hoạn.
 - Tham vấn cửa hàng dịch vụ nơi bạn mua máy điều hòa.
- Không tự sửa chữa hoặc thay đổi máy điều hòa.
 - Việc làm không đúng có thể dẫn đến bị điện giật hoặc hỏa hoạn.
 - Tham vấn cửa hàng dịch vụ nơi bạn mua máy điều hòa.

Nếu xảy ra một trong những dấu hiệu sau đây, hãy gọi ngay cửa hàng dịch vụ.

- Dây nguồn bị nóng bất thường hoặc bị hỏng.
- Nghe thấy tiếng động bất thường khi máy đang hoạt động.
- Aptomat, cầu chì hoặc cầu dao chống dòng rò thường xuyên ngắt điện.
- Các công tắc và nút nhấn liên tục hoạt động không bình thường.
- Có mùi khét.
- Nước rò rỉ từ dàn lạnh.

OFF (TẮT)
aptomat và gọi
cửa hàng dịch
vụ.

- Sau khi mất điện
Máy điều hòa sẽ tự khởi động lại trong khoảng 3 phút. Bạn chỉ cần đợi trong giây lát.

- Sét đánh
Nếu sét đánh ở khu vực lân cận, hãy tắt hoạt động và OFF (TẮT) aptomat để bảo vệ hệ thống.

Yêu cầu về vứt bỏ



Sản phẩm và pin đi kèm với bộ điều khiển được đánh dấu bằng biểu tượng này. Biểu tượng này có nghĩa là các sản phẩm điện và điện tử cũng như pin không được để lẫn với rác thải sinh hoạt chưa phân loại. Đối với pin, ký hiệu hóa học có thể được in phía dưới biểu tượng. Ký hiệu hóa học này có nghĩa là pin có chứa kim loại nặng cao hơn hàm lượng nhất định. Các ký hiệu hóa học có thể là:

- Pb: Chì (>0,004%)

Không tự tháo rời hệ thống: Tháo rời sản phẩm, xử lý môi chất lạnh, dầu và các bộ phận khác phải do người lắp đặt có tay nghề thực hiện và tuân theo các quy định của địa phương và quốc gia.

Các bộ phận và pin vứt bỏ phải được xử lý tại cơ sở xử lý chuyên dụng để tái sử dụng, tái chế và phục hồi.

Thông qua việc vứt bỏ đúng cách, bạn góp phần phòng chống các tác động xấu đối với môi trường và sức khỏe con người.

Vui lòng liên hệ với người lắp đặt hoặc cơ quan tại địa phương để biết thêm thông tin.

Khắc phục sự cố



■ Chẩn đoán lỗi bằng bộ điều khiển từ xa

- Trong trường hợp máy điều hòa bị sự cố, bạn có thể kiểm tra mã lỗi trên điều khiển từ xa trước khi tham vấn với kỹ thuật viên bảo dưỡng và báo cho họ biết mã sự cố này.

1. Khi nhấn giữ  trong khoảng 5 giây, “00” sẽ nhấp nháy trên phần hiển thị nhiệt độ.

2. Nhấn lặp lại  cho đến khi có tiếng bíp dài.

- Báo hiệu mã thay đổi như minh họa bên dưới, và thông báo bằng một tiếng bíp dài.

	MÃ	Ý NGHĨA
HỆ THỐNG	00	BÌNH THƯỜNG
	UA	LỖI KẾT HỢP GIỮA DÀN NÓNG VÀ DÀN LẠNH
	U0	THIẾU MÔI CHẤT LẠNH
	U2	DIỆN ÁP GIẢM HOẶC DIỆN ÁP MẠCH CHÍNH BỊ QUÁ TẢI
	U4	LỖI TRUYỀN TÍN HIỆU (GIỮA DÀN NÓNG VÀ DÀN LẠNH)
DÀN LẠNH	A1	CÓ BẤT THƯỜNG Ở PCB CỦA DÀN LẠNH
	A5	KIỂM SOÁT ÁP SUẤT CAO HOẶC CHÔNG ĐỒNG BẰNG
	A6	LỖI ĐỘNG CƠ QUẠT
	C4	LỖI BỘ CẢM BIẾN NHIỆT ĐỘ DÀN TRAO ĐỔI NHIỆT
	C9	LỖI CẢM BIẾN NHIỆT ĐỘ GIÓ HỒI
DÀN NÓNG	EA	LỖI CHUYỂN MẠCH LẠM LẠNH - SỬỚI ẨM
	E1	LỖI BẰNG MẠCH
	E5	QUÁ DÒNG CUỘN DÂY STATOR
	E6	LỖI KHỞI ĐỘNG MÁY NÉN
	E7	LỖI ĐỘNG CƠ QUẠT DC
	E8	ĐẦU VÀO QUÁ DÒNG
	F3	KIỂM SOÁT NHIỆT ĐỘ CAO ĐƯỜNG DÂY MÁY NÉN
	F6	KIỂM SOÁT ÁP SUẤT CAO (Ở CHẾ ĐỘ LẠM LẠNH)
	F8	HOẠT ĐỘNG NGỪNG LẠI DO CÓ BẤT THƯỜNG VỀ NHIỆT ĐỘ BÊN TRONG MÁY NÉN
	H0	LỖI CẢM BIẾN
	H6	HOẠT ĐỘNG NGỪNG LẠI DO LỖI CẢM BIẾN ĐỘ TÌM VỊ TRÍ
	H8	LỖI CẢM BIẾN DÒNG ĐIỆN DC
	H9	LỖI CẢM BIẾN NHIỆT ĐỘ GIÓ HÚT
	J3	LỖI CẢM BIẾN NHIỆT ĐỘ ĐƯỜNG DÂY MÁY NÉN
	J6	LỖI BỘ CẢM BIẾN NHIỆT ĐỘ DÀN TRAO ĐỔI NHIỆT
	L3	LỖI DO CÁC THIẾT BỊ ĐIỆN BỊ NÓNG
	L4	NHIỆT ĐỘ CAO Ở BỘ TẢN NHIỆT CHO MẠCH INVERTER
	L5	QUÁ DÒNG ĐẦU RA
	P4	LỖI CẢM BIẾN NHIỆT ĐỘ CỦA BỘ TẢN NHIỆT CHO MẠCH INVERTER

LƯU Ý

- Một tiếng bíp ngắn và 2 tiếng bíp liên tiếp báo hiệu mã không phản hồi.
- Để hủy hiển thị mã, giữ  trong khoảng 5 giây. Hiển thị mã cũng tự xóa nếu không nhấn nút nào trong 1 phút.

BẢN GHI NHỚ

BẢN GHI NHỚ

DAIKIN INDUSTRIES, LTD.

Osaka Umeda Twin Towers South,
1-13-1, Umeda, Kita-ku, Osaka, 530-0001, Japan
<https://www.daikin.com>



The two-dimensional bar code is
a manufacturing code.