

项目名称

W2445D

版本号

A00

设计时间

2024/12/26

物料名称

说明书

设计师

梅梭宁

审核

批准

料号

04170500003986

材质工艺要求：

材质要求：封面 157g 哑粉，内页 70G 双胶纸，胶装

颜色及专色：单色印刷

尺寸要求：140mm*210mm


变更履历：

X4 Pro

Wet and Dry Vacuum

User Manual

The illustrations in this manual are for reference only. Please refer to the actual product.

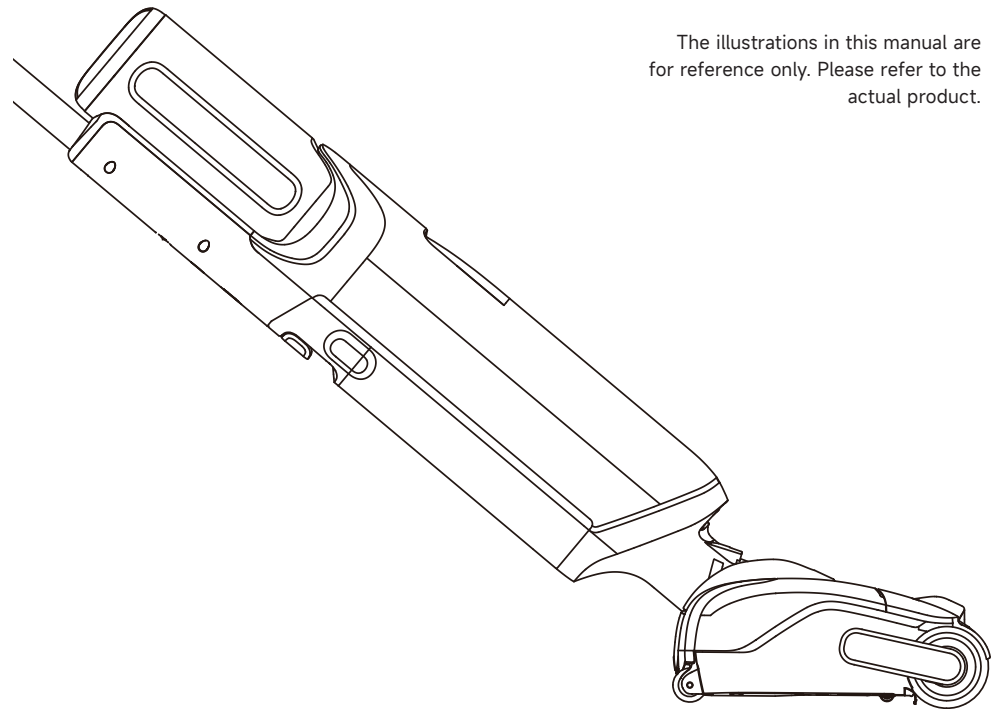

Website:
www.mova-tech.com
Manufactured by:
Moonstone Technology (Shaoxing) Co., Ltd.

Made in China

HMH17A-NA-A00




MOVA


THANK YOU

For purchasing this
Wet and dry vacuum.

For more product information,
please visit www.mova-tech.com

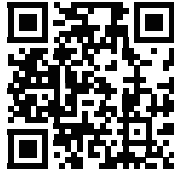

The high-quality product is engineered
for optimal performance.
If you have any questions on the product,
please contact us:
<https://global.mova-tech.com/pages/contact-us>

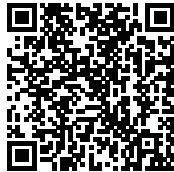

CONTENTS

EN	User Manual	01
VI	Hướng dẫn sử dụng	22
TH	คู่มือการใช้งาน	43
ID	Panduan Pengguna	63
CN	用户手册	84
AR	دليل المستخدم	103

Important Safety Instructions

Please read this manual carefully before use and retain it for future reference.

When using an electrical appliance, basic precautions should always be followed, including the following:

READ ALL INSTRUCTIONS BEFORE USING (THIS APPLIANCE). Failure to follow the warnings and instructions may result in electric shock, fire and/or serious injury.

WARNING — To reduce the risk of fire, electric shock, or injury:

Usage Restrictions

- This appliance should not be used by children younger than 8 years old nor persons with physical, sensory, intellectual deficiencies, or limited experience or knowledge without the supervision of a parent or guardian to ensure safe operation and to avoid any risks. Cleaning and maintenance shall not be performed by children without supervision.
- Plastic film can be dangerous. To avoid the danger of suffocation, keep it away from children. Children shall not play with the appliance.
- Use indoors only, on non-carpeted floor surfaces such as vinyl, tile, sealed wood, etc. Be careful not to run over loose objects or the edges of area rugs. Stalling the brush may result in premature belt failure.
- Use only as described in this user guide. Use only manufacturer's recommended attachments.
- Do not expose the appliance to fire or excessive temperature. Exposure to fire or excessive temperature may cause an explosion.
- Do not use in extremely hot or cold environments (below 5° C/41° F or above 40° C/104° F). Please charge the appliance in temperature above 5° C/41° F and below 40° C/104° F.
- Do not immerse the appliance in liquid.
- Do not use to pick up flammable or combustible liquids, such as gasoline. Do not use in areas where flammable or combustible liquids may be present.
- Do not put any object into openings. Do not use the appliance when any opening is blocked. Keep free of dust, lint, hair, and anything that may inhibit air flow.
- Do not pick up toxic material (chlorine bleach, ammonia, drain cleaner, etc.). Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use the appliance in an enclosed space filled with vapor given off by oil-based paint, paint thinner, some moth-proofing substances, flammable dust, or other explosive or toxic vapour. Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.
- Do not use the appliance without filters in place.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts of the appliance and its accessories.

Important Safety Instructions

- Keep ground cables away from the appliance when using it. A hazard may occur if the appliance runs over a supply cord.
- Use extra care when cleaning on stairs.

Maintenance and Storage

- Prevent unintentional starting. Ensure the switch is in the OFF-position before picking up or carrying the appliance. Carrying the appliance with your finger on the switch or turning on the appliance may result in an accident.
- Ensure that the appliance is placed on a horizontal surface. Do not use the appliance at the same position if the appliance is equipped with a roller brush and the handle is not completely upright. Do not store the appliance in a place where it may freeze.
- Switch off and unplug the appliance when not in use, before cleaning, maintaining or servicing it, and before connecting or disconnecting it with a moving brush.
- Do not use an appliance that is damaged or modified. A damaged or modified appliance may exhibit unpredictable behavior resulting in fire, explosion, or risk of injury.
- Do not modify or attempt to repair the appliance except as indicated in the instructions for use and care.
- Do not use the appliance with a damaged attachment (eg: charging base, supply cord etc.). If the appliance or attachment has been dropped, damaged, left outdoors, dropped into water, or is not working as it should, never attempt to operate it. Please have it repaired at an authorized service center.
- Have servicing performed by a qualified repair person using only identical replacement parts. This will ensure that the safety of the appliance is maintained.
- Liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

Battery and Charging

- For the purpose of recharging the appliance, only use the charging base provided with this appliance. Use only with HCBZ charging base.
- Follow all charging instructions and do not charge the appliance outside of the temperature range specified in the battery as doing so increases the risk of fire.
- Charging base is equipped with drying function and only suitable for drying this appliance's brush.
- Keep the charging base cable away from heated surfaces. Do not handle the charging base plug or appliance with wet hands. To unplug, grasp the charging base plug, rather than the cable.

Important Safety Instructions

- Do not pull or carry charging base by cable, use cable as a handle, close door on cable, or pull cable around sharp edges or corners.
- Do not use any non-rechargeable battery pack. Failing to do so may cause the lithium-ion battery to catch fire. This appliance contains batteries that can only be replaced by qualified technicians or after-sales service.
- The lithium-ion battery pack contains substances that are hazardous to the environment. Before disposing of the appliance, please first remove the battery pack, then discard, or recycle it in accordance with local laws and regulations of the country or region it is used in.
- The appliance must be disconnected from the power supply when removing the battery. Keep batteries out of the reach of children. Never put batteries in mouth. If swallowed, contact your physician or local poison control.
- Under abusive conditions, never contact the battery from which the liquid may be ejected. If contact accidentally occurs, rinse with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.
- The charging base is capable of charging the 6-cell 5000 mAh battery pack. This charging base should not be used to charge non-rechargeable batteries. Failing to do so may cause the lithium-ion battery to catch fire.
- The charging base is marked with a  icon indicating "Caution: Hot Surface". Do not touch the roller brush, hot water, or heating module of the charging base while self-cleaning with hot water.

Important Safety Instructions

Symbols



Class II equipment



Time-lag miniature fuse-link where T 3.15A is the symbol for the time/current characteristic



For indoor use only



Read operator's manual



Caution: Hot Surface




WEEE Information

All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.


We, Moonstone Technology (Shaoxing) Co., Ltd., hereby declares that this equipment is in compliance with the applicable Directives, European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: www.mova-tech.com

For detailed e-manual, please go to <https://www.mova-tech.com/pages/user-manuals-and-faqs>


Packing List



Handle

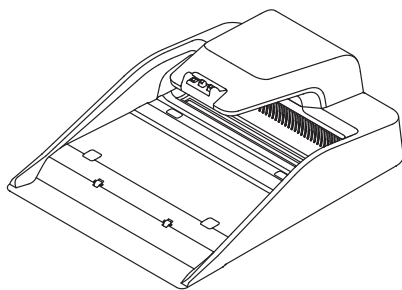


Charging Base

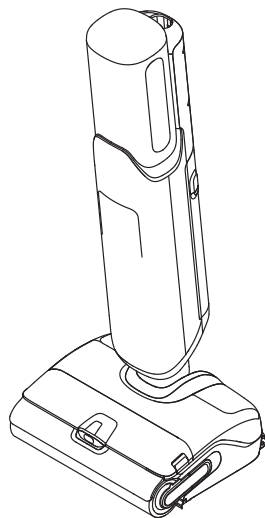

Main Body



Replacement Filter

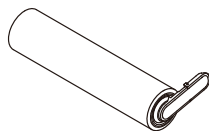


Spare Roller Brush



Cleaning Brush

Product Overview

Vacuum

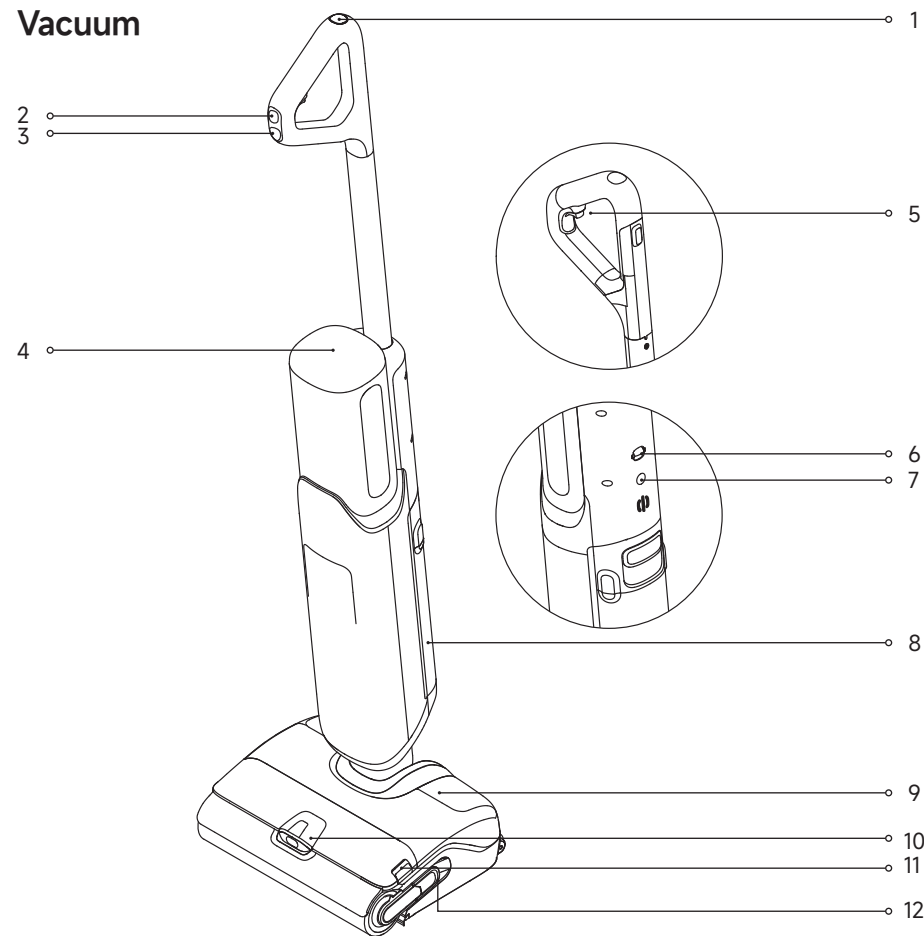

1 Self-Cleaning Button

2 Mode Switch

- Press to switch modes.
- Press and hold for 3 seconds to enter/exit water-saving mode.

3 Power Switch

4 Display Screen

5 Spot Spray Button

6 Omnidirectional Wheel

7 Voice Prompt Button

- Press briefly to activate the voice prompt or adjust the volume.
- Press and hold for 3 seconds to access the language settings. Press to switch between languages. Press and hold to confirm the selection.

8 Used Water Tank


9 Clean Water Tank

10 Spot Spray Nozzle

11 Roller Brush Cover Release Buttons


12 Roller Brush Handle

Charging Base

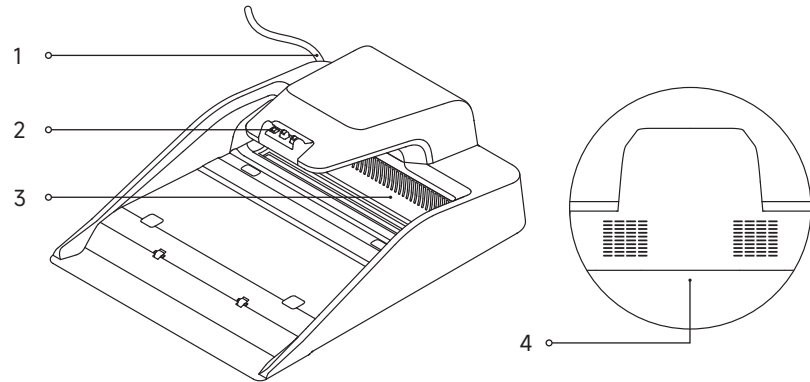


- 1 Power Cord 2 Charging Contacts 3 Air-Drying Outlet 4 Air-Drying Inlet

Clean Water Tank

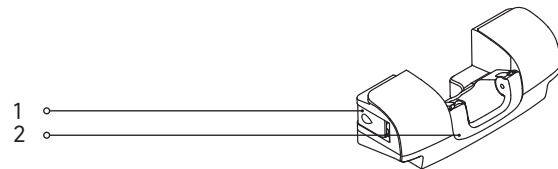

- 1 Clean Water Tank Cover 2 Clean Water Tank Handle

Display Screen

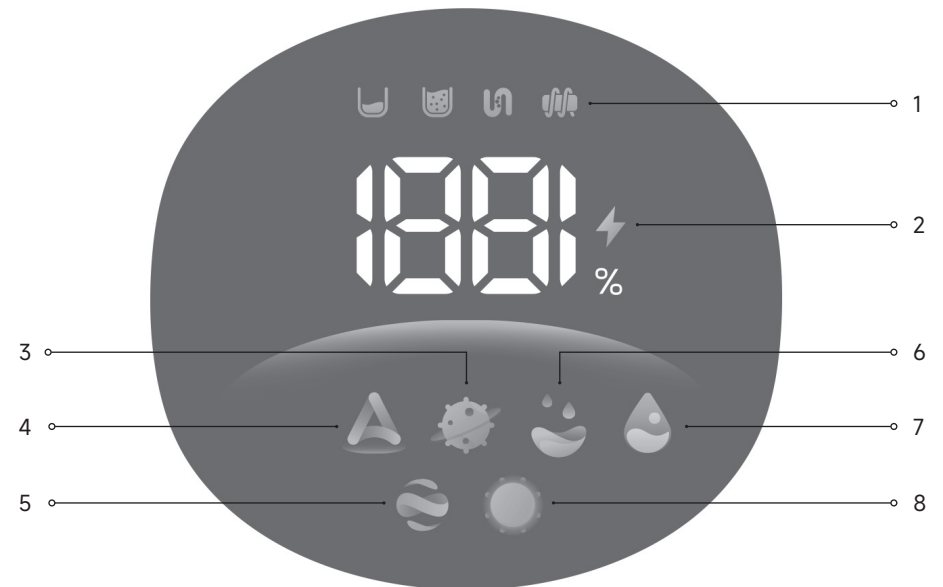


- | | | |
|--------------------------------------|----------------------|------------------|
| 1 Error Messages | 3 Ultra Mode | 6 Suction Mode |
| 2 Charging/
Low Battery Indicator | 4 Smart Mode | 7 Hot-Water Mode |
| | 5 Self-Cleaning Mode | 8 Drying Mode |

Note: If the appliance is not working properly, the display screen will show an error message. Please refer to the Error Prompts and Solutions table to find your solution.

Installation

Insert the end of the handle vertically into the port on the top of the appliance as indicated until you hear a click.

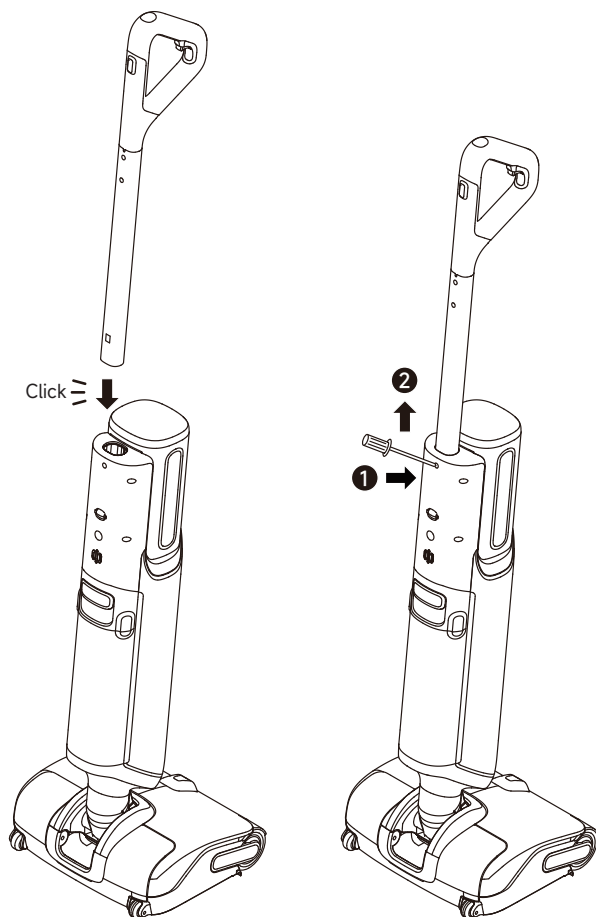

Note: To disassemble, extend a hard object into the hole of the appliance as indicated to press in the contacts and pull the handle upwards at the same time.

Charging


1. Place the charging base against a wall on level ground and connect it to a power source. Fully charge the appliance before first use.
2. Place the appliance on the charging base. When the number on the display screen reaches 100, the battery is fully charged.

⚡ Charging/Low Battery Indicator

- Orange Breathing: Battery level $\leq 20\%$ (charging)
- Green Breathing: Battery level $> 20\%$ (charging)
- Solid Green: Full charged
- Solid Orange: Battery Level $\leq 20\%$

Note:

- If there is no operation within 10 minutes of being fully charged, the vacuum will enter sleep mode.
- Please restart the appliance if you need to use it. To extend the battery life time, the battery keeps cooling down automatically after you have used the appliance for a long time.

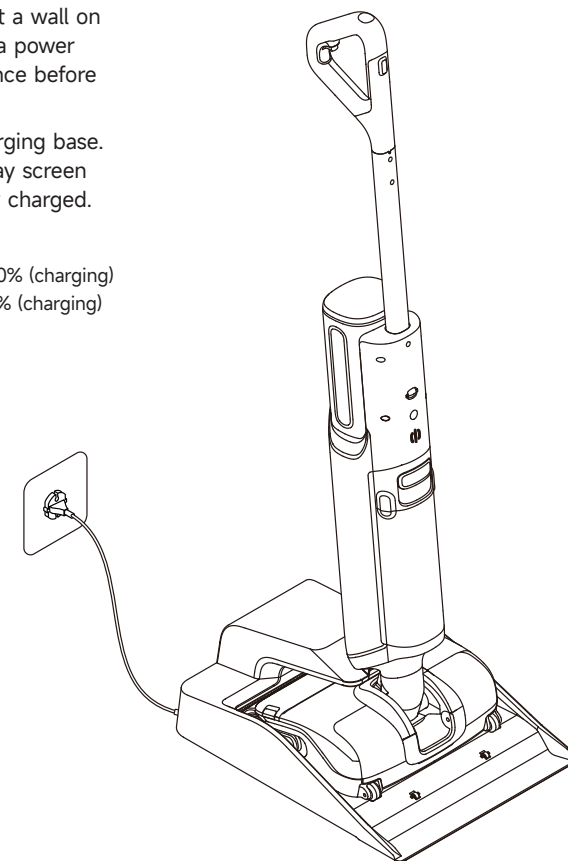

How to Use

Adding Cleaning Fluid

WARNING: To reduce the risk of fire and electric shock due to internal component damage, use only Moonstone Technology (Shaoxing) Co., Ltd. AWH10 cleaning fluid intended for use with the appliance.


1. Remove the seal before use.
2. Measure the floor cleaner with the bottle cap (*approximately 10 ml/0.34 fl oz per cap).
3. Pour it into the Clean Water Tank and gently shake to mix evenly before use.

Note: Do not add any liquids other than the officially-approved cleaner. The cleaner can be available on the official online store.

How to Use


Filling the Clean Water Tank

Pull the clean water tank handle to remove the tank. Open the tank cover and fill the tank with clean water. Install the clean water tank and ensure it clicks into place.

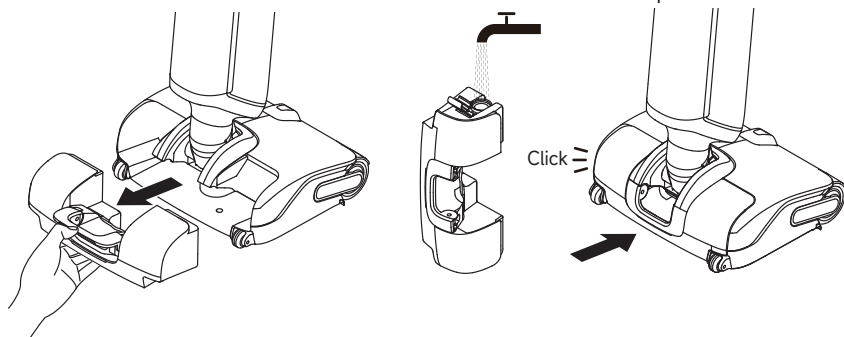

Starting Cleaning

Gently step on the brush cover and recline the appliance backwards. Press the power switch (⏻) to start/stop operating. If the appliance is in the upright position while working, the current task will be suspended. The appliance is designed for lying flat at a 180-degree angle, enabling it to reach and clean under the low-profile furniture.

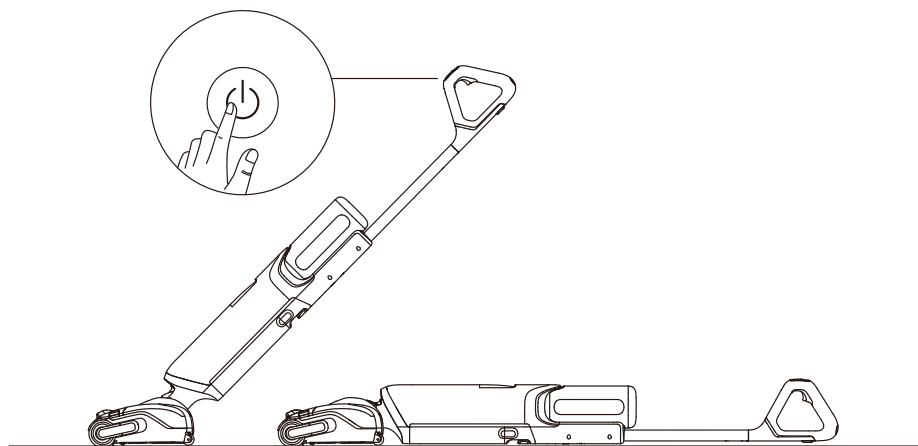

Note:

- Do not vacuum any foamy liquids.
- Make sure the appliance is in upright position before turning off the power while the appliance is lying flat.
- The appliance is suitable for cleaning floors, marble, tiles and other hard surfaces.
- When the appliance is in operation, do not lift it off the ground, move it or tilt it. Otherwise, the used water may flow into the motor.
- When the appliance is placed on the charging base, it will automatically turn off; manual shutdown is not required.

How to Use

Switching Modes

Press the mode switch (⦿) to switch modes according to your needs. Press and hold (⦿) for 3 seconds to enter/exit water-saving mode.

Note: Enter water-saving mode, voice prompt "Ding"; Exit water-saving mode, voice prompt "Ding Ding".



Smart Mode

The appliance will intelligently adjust the suction power according to the stains on the ground.



Suction Mode

If suction mode is selected, the appliance will vacuum water only; the roller brush will not be dampened, and no water will be dispensed from the clean water tank.



Ultra Mode

Preparing ultra mode, please wait for 30 seconds. This mode is suitable for deep cleaning.




Hot-Water Mode

Suitable for cleaning moderate stains. After starting, the water temperature gradually rises to hot.

Starting Spot Spray

In Hot-Water Mode, press the spot spray button briefly, and the nozzle will spray out clean water.

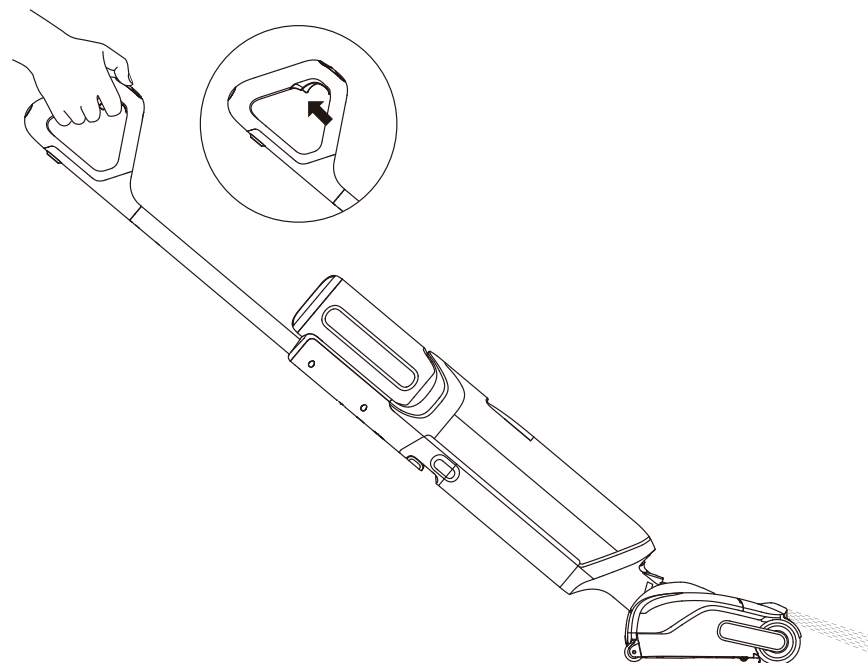


Note: Do not remove the brush cover while spraying hot water.


How to Use

Emptying the Used Water Tank

1. Pull and remove the used water tank.
2. Pull up the used water tank cover handle, lift off the cover.

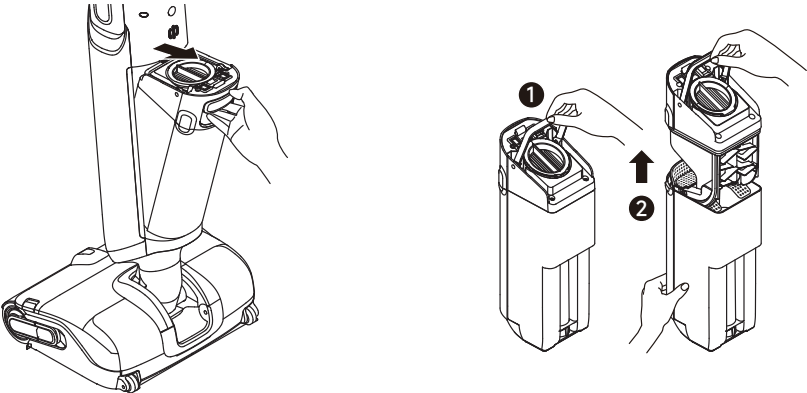

3. Pour out the used water, and clean the solid waste from the solid waste filter basket.
4. Re-install until you hear a click.

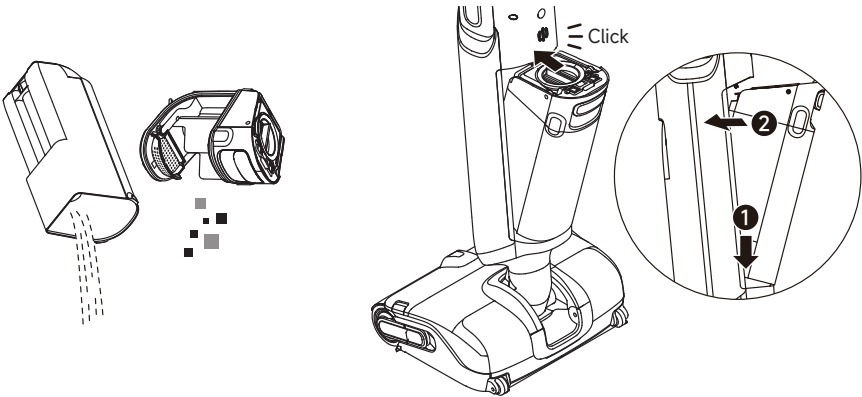


How to Use

Self-Cleaning With Hot Water & Drying Mode

	Press briefly	Intelligent Self-Cleaning
	Within 3 seconds of the Intelligent Self-Cleaning voice prompt, press briefly	Deep Self-Cleaning
	Press and hold	Enter Drying Mode
	In Drying Mode, press briefly	Exit Drying Mode

- Note:
- Place the appliance back onto the base. Ensure that the water in the clean water tank is sufficient for self-cleaning.
 - Please empty the used water tank after self-cleaning is completed and drying mode has been engaged.
 - Please switch to the hot water self-cleaning mode according to the voice prompt.
 - Do not touch the roller brush, hot water, or heating module of the charging base while self-cleaning with hot water.
 - The self-cleaning function can be enabled only when the appliance is being charged and the battery level is more than 20%. If the battery level is lower, please charge to 20% before starting self-cleaning.

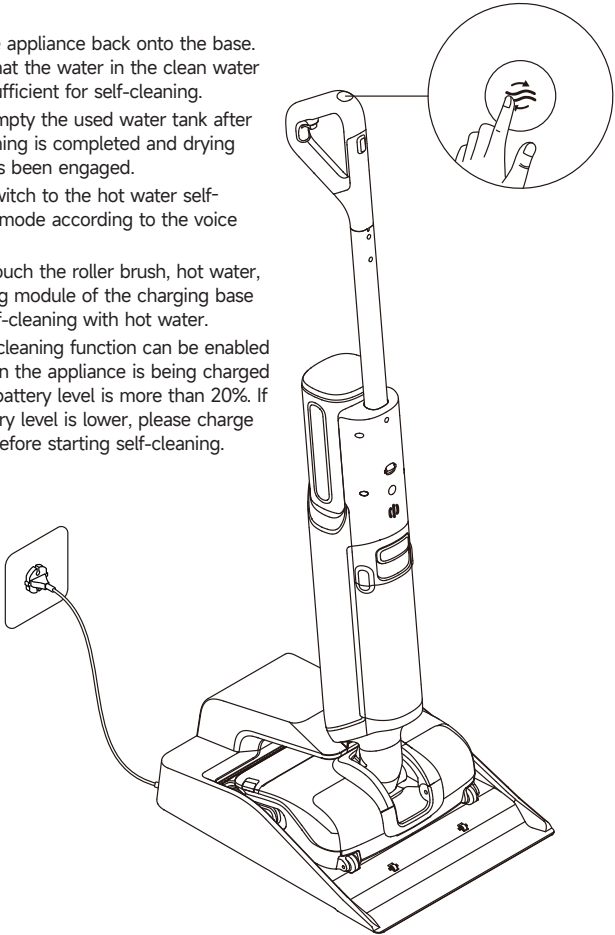


Tips:


- Turn off the appliance before maintenance. Do not touch the power switch.
- Replace parts if needed. The parts must be replaced by those available from the manufacturer or its service agent.
- If the appliance is not used for an extended period, fully charge it, unplug the power plug, and store the appliance in a cool, low-humidity environment away from direct sunlight. To avoid over-discharge of the battery, charge the appliance at least once every 3 months.

Cleaning the Used Water Tank


1. Pull and remove the used water tank.

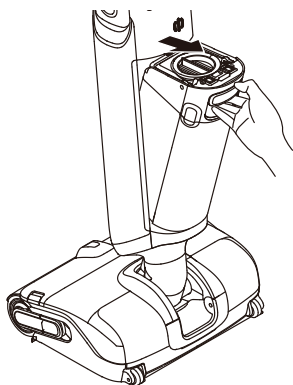


2. Pull up the used water tank cover handle, lift off the cover. Remove the filter.

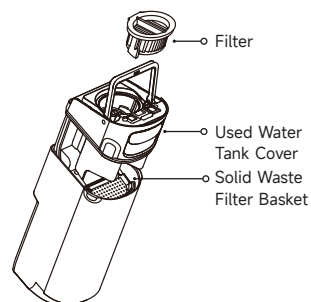

3. Pour out the used water, and clean the solid waste from the solid waste filter basket. Rinse with clean water. Use the provided cleaning brush to clean the inner walls of the tank.

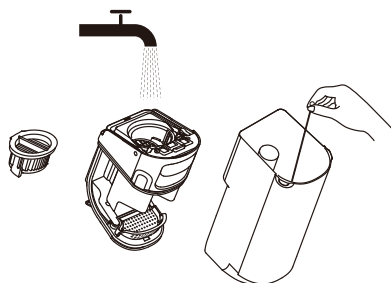

4. Re-install the filter and the used water tank cover. Then re-install the used water tank until you hear a click.

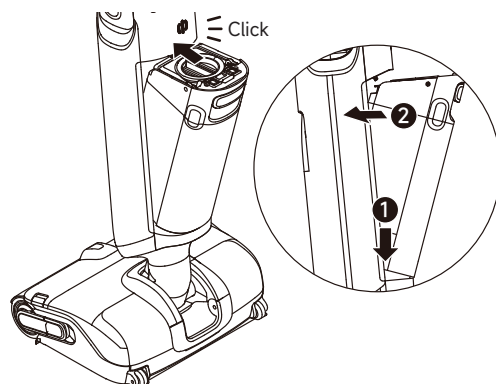


Care & Maintenance

Cleaning the filter

1. Remove the filter and gently knock off the floating dust on the surface.




2. When the filter is dirty and needs washing, rinse it with water. It must be completely dry before use.

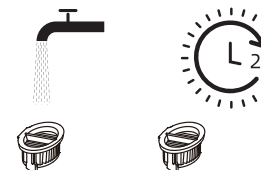

Note: Replacing the filter every 3 to 6 months is recommended.

Cleaning the Tube and the Dirt Sensor


Remove the used water tank. Wipe the tube and the dirt sensor with a wet cloth before use.

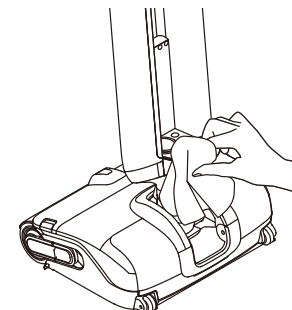


Note: Do not rinse the tube or the dirt sensor.

Cleaning the Brush Assembly


1. Press the roller brush cover release buttons to remove the roller brush.
2. Pull the brush handle to remove the brush.

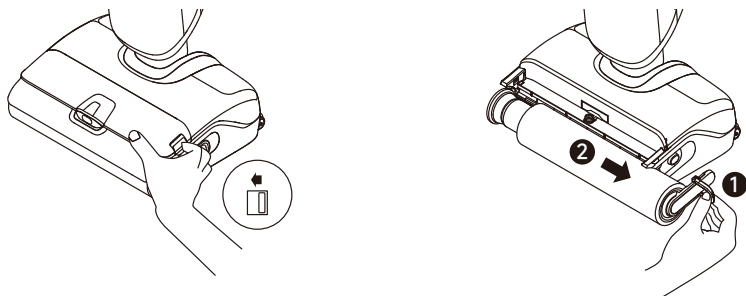

3. Clear any hair and debris caught on the roller brush with the provided cleaning brush. Rinse the roller brush and the cover with clean water and dry it completely.

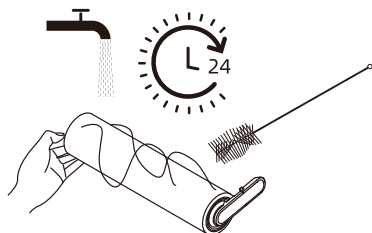

4. Wipe the suction inlet with a dry cloth or wet tissue.
5. Re-install until you hear a click.

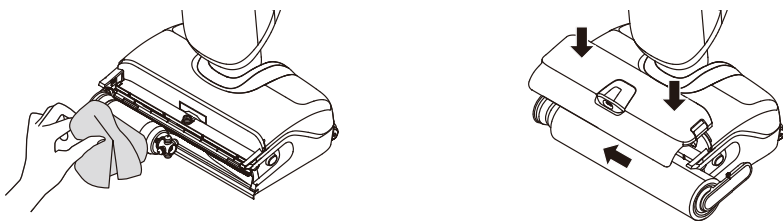

Note:

- Do not rinse the brush assembly with water.
- Clean as needed. Replacing the roller brush every 3 to 6 months is recommended.
- Ensure the Used Water Tank is removed or empty before laying the appliance on its side to clean the roller brush.

Troubleshooting

If an error occurs, the appliance will stop working. Please refer to the following table for troubleshooting. If the problem persists, please contact the customer service.

Error	Possible Cause	Solution
The appliance does not work.	The appliance is out of battery or its battery level is low.	Fully charge its battery before use.
	The appliance is in the upright position.	Recline the appliance backwards.
	Blockage activated overheat protection mode.	Clear the blockage and wait until the temperature returns normal.
	The Used Water Tank is full.	Empty the Used Water Tank.
	The parts are not installed in place.	Ensure all parts are all properly in place.
The appliance charges slowly.	The temperature of the battery is too low or too high.	Wait until the battery's temperature returns normal.
The suction power of the appliance is weak.	The filter is clogged.	Clean the filter.
	The suction inlet or tube is blocked by a foreign object.	Clean the tube and the suction inlet.
The motor is making a strange noise.	There is too much dirty water in the Used Water Tank.	Empty the Used Water Tank.
	The suction inlet is blocked.	Clear any blockage in the suction inlet.
The battery level indicator on the display screen does not light up while charging.	The charging base plug is not inserted into the electrical outlet properly.	Make sure the charging base plug is inserted in place.
	The appliance is not placed onto the charging base properly.	Make sure the appliance is placed onto the charging base properly.

No water is coming out of the appliance.	The Clean Water Tank is not properly installed in place, or the water in the Clean Water Tank is insufficient.	Re-install or fill the Clean Water Tank.
	It takes 30 seconds to dampen the roller brush.	Turn on the appliance and check again after a while.
The vent leaks water.	A collision or a sharp pull causes water to enter the motor.	Move the appliance gently back and forth while it is turned on.
	The filter is not completely dry after being cleaned.	Dry the filter completely before use.
Self-cleaning fails.	The roller brush may be jammed by large debris.	Remove the roller brush cover to check and clean the roller brush.
	The appliance is not placed onto the charging base properly.	Make sure the appliance is being charged before enabling the self-cleaning function.
	Self-cleaning cannot be enabled if the battery level is lower than 20%.	Self-cleaning can only be enabled while the appliance is being charged and the battery level is more than 20%.
	The Used Water Tank is full.	Empty the Used Water Tank.
	The Clean Water Tank is not installed in place, or the water in the Clean Water Tank is insufficient.	Re-install or fill the Clean Water Tank.
Poor drying performance.	The air outlet and air inlet of the charging base may be blocked.	Check and clear the blockage of air outlet and air inlet.

If the appliance is not working properly, the screen display will show an error message. Please refer to the below table to find your solution.

Error Code	Possible Cause	Solution
E1-E7	Error	Restart the appliance for troubleshooting. If the problem persists, please contact customer service.
F1-F3		
H2/H3/H5/H6		

Specifications

Vacuum			
Model	HMH17A	Rated Power	450 W
Rated Voltage	21.6 V ---	Charging Voltage	27 V ---
Clean Water Tank Capacity	760 mL	Used Water Tank Capacity	730 mL
Charging Time	Approx. 4 hours		
Charging Base			
Model	HCBZ	Rated Power Input*	660 W
Rated Input	220-240 V ~ 50-60 Hz	Rated Output	27 V --- 1.6 A

*The rated input power refers to the power measured during a representative cycle for entering the drying mode.

Battery Disposal and Removal

- The built-in lithium-ion battery contains substances that are hazardous to the environment. Before disposing of the battery, make sure the battery is removed by qualified technicians and discarded at an appropriate recycling facility.
- the battery must be removed from the appliance before it is scrapped;
 - the appliance must be disconnected from the supply mains when removing the battery;
 - the battery is to be disposed of safely.

Removal Guide

1. Remove the handle by referring to the Installation section.
2. Use a proper tool to remove the top and body decorative covers of the appliance.
3. Use a screwdriver to remove all the fixing screws from the body.
4. Use a screwdriver to remove the fixing screws of the appliance front cover. Remove the cover.
5. Disconnect the battery pack's connector cables and remove the battery from the battery pack assembly.

CAUTION:

- Before removing the battery, disconnect the power and run out the battery as much as possible.
- Unneeded batteries should be discarded at an appropriate recycling facility.
- Do not expose to high temperature environment to avoid risks of explosion.
- Under abusive conditions, liquid may be ejected from the battery. If contact occurs, flush with water and seek medical help.

Chỉ Dẫn An Toàn Quan Trọng

Vui lòng đọc kỹ hướng dẫn này trước khi sử dụng và bảo quản nó để tham khảo trong tương lai. Khi sử dụng thiết bị điện, phải luôn tuân thủ các biện pháp phòng ngừa cơ bản, bao gồm các điều sau: **ĐỌC KỸ TẤT CẢ HƯỚNG DẪN TRƯỚC KHI SỬ DỤNG (THIẾT BỊ NÀY).** Việc không tuân theo các cảnh báo và hướng dẫn có thể dẫn đến điện giật, cháy nổ và/hoặc thương tích nghiêm trọng.

CẢNH BÁO — Để giảm thiểu nguy cơ cháy nổ, điện giật hoặc thương tích:

Hạn Chế Sử Dụng

- Không để trẻ em dưới 8 tuổi cũng như những người có khiếm khuyết về thể chất, giác quan, trí tuệ hoặc hạn chế về kinh nghiệm hoặc kiến thức sử dụng thiết bị này mà không có sự giám sát của cha mẹ hoặc người giám hộ để đảm bảo vận hành an toàn và tránh mọi rủi ro. Không để trẻ em thực hiện công việc vệ sinh và bảo trì mà không có sự giám sát.
- Màn hình nhựa có thể gây nguy hiểm. Để tránh nguy cơ ngạt thở, hãy để nó xa tầm tay trẻ em. Không để trẻ em nghịch thiết bị.
- Chỉ sử dụng trên các bề mặt sàn không trải thảm trong nhà như nhựa vinyl, nền gạch, gỗ kín, v.v. Không di chuyển qua các vật lỏng lẻo hoặc mép biên của khu vực trải thảm. Kệ chổi có thể làm dây curoa bị hỏng sớm.
- Chỉ sử dụng như được mô tả trong hướng dẫn sử dụng này. Chỉ sử dụng các phụ kiện được nhà sản xuất khuyến cáo.
- Không để thiết bị tiếp xúc với lửa hoặc nhiệt độ quá cao. Tiếp xúc với lửa hoặc nhiệt độ quá cao có thể gây nổ.
- Không sử dụng trong môi trường quá nóng hoặc quá lạnh (dưới 5°C/41°F hoặc trên 40°C/104°F). Vui lòng sạc thiết bị ở nhiệt độ trên 5°C/41°F và dưới 40°C/104°F.
- Không nhúng thiết bị vào dung dịch lỏng.
- Không sử dụng để hút chất lỏng dễ cháy hoặc dễ bắt lửa như xăng. Không sử dụng ở những nơi có thể có chất lỏng dễ cháy hoặc dễ bắt lửa.
- Không nhét bất kỳ vật gì vào lỗ hút. Không sử dụng thiết bị khi có bất kỳ lỗ hút nào bị tắc. Giữ sạch bụi, lông, tóc và mọi thứ có thể làm giảm lưu lượng không khí.
- Không hút các vật liệu độc hại (thuốc tẩy clo, amoniac, chất tẩy rửa cống, v.v.). Không hút các vật cứng hoặc sắc như thủy tinh, đinh, ốc vít, tiền xu, v.v.
- Không sử dụng thiết bị trong không gian kín chứa đầy hơi do sơn gốc dầu, dung môi pha sơn, một số chất chống mốc, bụi dễ cháy, hơi độc hoặc chất nổ khác bốc ra. Không dùng máy để hút bất cứ thứ gì đang cháy hoặc đang bốc khói như thuốc lá, diêm hoặc tro nóng.
- Không sử dụng thiết bị khi chưa lắp bộ lọc.
- Giữ tóc, quần áo, ngón tay và tất cả bộ phận của cơ thể tránh xa lỗ hút các bộ phận chuyển động của thiết bị và các phụ kiện của nó.
- Giữ cáp nối đất cách xa thiết bị khi sử dụng. Nguy hiểm có thể xảy ra nếu thiết bị chạy qua dây nguồn.
- Phải đặc biệt lưu ý khi lau chùi cầu thang.

Chỉ Dẫn An Toàn Quan Trọng

Bảo Dưỡng và Bảo Quản

- Ngăn chặn việc khởi động ngoài ý muốn. Đảm bảo công tắc ở vị trí TẮT trước khi nhấc hoặc mang thiết bị. Mang thiết bị với ngón tay đặt trên công tắc hoặc bật thiết bị có thể dẫn đến tai nạn.
- Đảm bảo rằng thiết bị được đặt trên bề mặt nằm ngang. Không sử dụng thiết bị ở cùng một vị trí nếu thiết bị được trang bị chốt lắn và tay cầm không hoàn toàn thẳng đứng. Không bảo quản thiết bị ở nơi có thể đóng băng.
- Tắt nguồn và rút phích cắm khi không sử dụng, trước khi vệ sinh, bảo trì hoặc bảo dưỡng thiết bị, và trước khi kết nối hoặc ngắt kết nối thiết bị với chốt di động.
- Không sử dụng thiết bị đã hỏng hoặc đã sửa đổi. Thiết bị đã hỏng hoặc đã sửa đổi có thể dẫn đến các nguy cơ cháy nổ hoặc gây thương tích không thể lường trước.
- Không thay đổi hoặc cố gắng sửa chữa thiết bị trừ các trường hợp đã nêu trong hướng dẫn sử dụng và bảo trì.
- Không sử dụng thiết bị với phụ kiện đã hỏng (ví dụ: đế sạc, dây nguồn, vv.). Nếu thiết bị hoặc phụ kiện bị rơi, hư hỏng, để ngoài trời, rơi vào nước hoặc không hoạt động bình thường, không được cố gắng vận hành. Hãy mang thiết bị đến trung tâm bảo hành được ủy quyền để sửa chữa.
- Việc bảo dưỡng nên được thực hiện bởi người sửa chữa có trình độ và sử dụng các bộ phận thay thế giống hệt nhau. Điều này sẽ đảm bảo an toàn cho thiết bị.
- Chất lỏng hoặc hơi nước không được hướng vào thiết bị chứa các thành phần điện, chẳng hạn như bên trong lò nướng.
- Nếu dây nguồn bị hư hỏng, phải được thay thế bởi nhà sản xuất, đại lý dịch vụ của nhà sản xuất hoặc những người có trình độ tương đương để tránh nguy hiểm.

Pin và Sạc

- Khi muốn sạc lại thiết bị, chỉ sử dụng đế sạc có thể tháo rời đi kèm với thiết bị này. Chỉ sử dụng với đế sạc HCBZ.
- Tuân theo tất cả các hướng dẫn sạc và không sạc thiết bị bên ngoài phạm vi nhiệt độ được chỉ định vì sẽ làm tăng nguy cơ cháy nổ.
- Đế sạc được trang bị chức năng sấy khô và chỉ thích hợp để sấy khô chốt của thiết bị này.
- Giữ dây cáp của đế sạc cách xa các bề mặt nóng. Không cầm phích cắm đế sạc hoặc thiết bị khi tay ướt. Để rút phích cắm, hãy nắm vào phích cắm đế sạc, thay vì nắm vào dây cáp.
- Không kéo hoặc xách đế sạc bằng cáp, sử dụng cáp làm tay cầm, đóng cửa cần lên cáp hoặc kéo cáp xung quanh các cạnh hoặc góc sắc nhọn.
- Không sử dụng bộ pin không thể sạc lại. Nếu không tuân theo có thể khiến pin lithium-ion bắt lửa. Chỉ các kỹ thuật viên có trình độ hoặc dịch vụ hậu mãi mới có thể thay thế pin trong thiết bị này.

Chỉ Dẫn An Toàn Quan Trọng

- Bộ pin lithium-ion chứa các chất nguy hại cho môi trường. Trước khi thải bỏ thiết bị, vui lòng tháo bộ pin trước, sau đó thải bỏ hoặc tái chế pin theo luật pháp và quy định địa phương tại quốc gia hoặc khu vực sử dụng thiết bị.
- Phải ngắt nguồn điện của thiết bị khi tháo pin. Để pin tránh xa tầm tay của trẻ. Không được cho pin vào trong miệng. Nếu nuốt phải pin, hãy liên hệ với bác sĩ hoặc cơ quan kiểm soát chất độc tại địa phương.
- Trong các điều kiện bị hỏng hóc, không bao giờ được tiếp xúc với pin khi pin đang bị chảy. Nếu vô tình tiếp xúc, hãy rửa sạch bằng nước. Nếu chất lỏng dính vào mắt, hãy tìm kiếm sự trợ giúp y tế ngay lập tức. Chất lỏng rò rỉ từ pin có thể gây kích ứng hoặc bỏng.
- Đế sạc có khả năng sạc bộ pin 5000 mAh 6 cell. Không nên sử dụng đế sạc này để sạc loại pin không sạc lại. Nếu không tuân theo có thể khiến pin lithium-ion bắt lửa.
- Đế sạc được đánh dấu bằng biểu tượng  cho biết "Thận trọng: Bề mặt nóng". Không chạm vào chốt lắn, nước nóng hoặc mô-đun làm nóng của đế sạc trong khi máy tự làm sạch bằng nước nóng.

Ký hiệu



Thiết bị Cấp II



Cầu chì thu nhỏ có độ trễ thời gian trong đó T 3,15A là ký hiệu cho đặc tính thời gian/dòng điện



Chỉ sử dụng trong nhà



Đọc hướng dẫn sử dụng




Thận trọng: Bề mặt nóng




Thông Tin Rác Thải Thiết Bị Điện Và Điện Tử (WEEE)

Tất cả các sản phẩm mang biểu tượng này đều là chất thải thiết bị điện và điện tử (WEEE theo chỉ thị 2012/19/EU) không nên trộn lẫn với rác thải sinh hoạt chưa được phân loại. Thay vào đó, bạn nên bảo vệ sức khỏe con người và môi trường bằng cách giao thiết bị thải bỏ của mình cho điểm thu gom được chỉ định để tái chế chất thải thiết bị điện và điện tử, được chỉ định bởi chính phủ hoặc chính quyền địa phương. Việc thải bỏ và tái chế đúng cách sẽ giúp ngăn ngừa các hậu quả tiêu cực tiềm ẩn đối với môi trường và sức khỏe con người. Vui lòng liên hệ với đơn vị lắp đặt hoặc chính quyền địa phương để biết thêm thông tin về địa điểm cũng như các điều khoản và điều kiện của các điểm thu gom này.


Danh mục phụ kiện



Tay Cầm

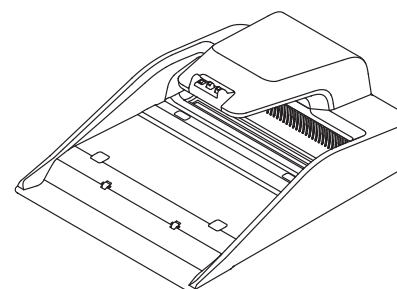


Đế sạc

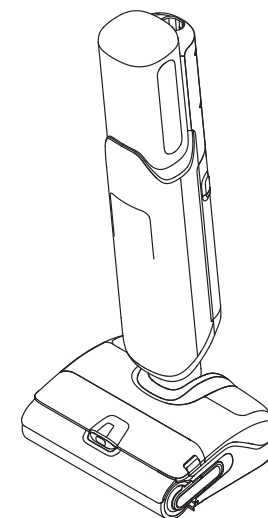


Thân chính



Bộ Lọc Thay Thế

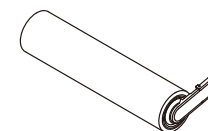

Chổi lăn dự phòng




Chổi Vệ Sinh

Chúng tôi, Moonstone Technology (Shaoxing) Co., Ltd. xin cam kết rằng thiết bị này tuân thủ các Chỉ thị, Tiêu chuẩn Châu Âu và các sửa đổi hiện hành. Xem toàn văn tuyên bố tuân thủ EU theo địa chỉ: www.mova-tech.com

Để xem hướng dẫn sử dụng chi tiết, vui lòng truy cập <https://www.mova-tech.com/pages/user-manuals-and-faqs>


VI Tổng Quan Về Sản Phẩm

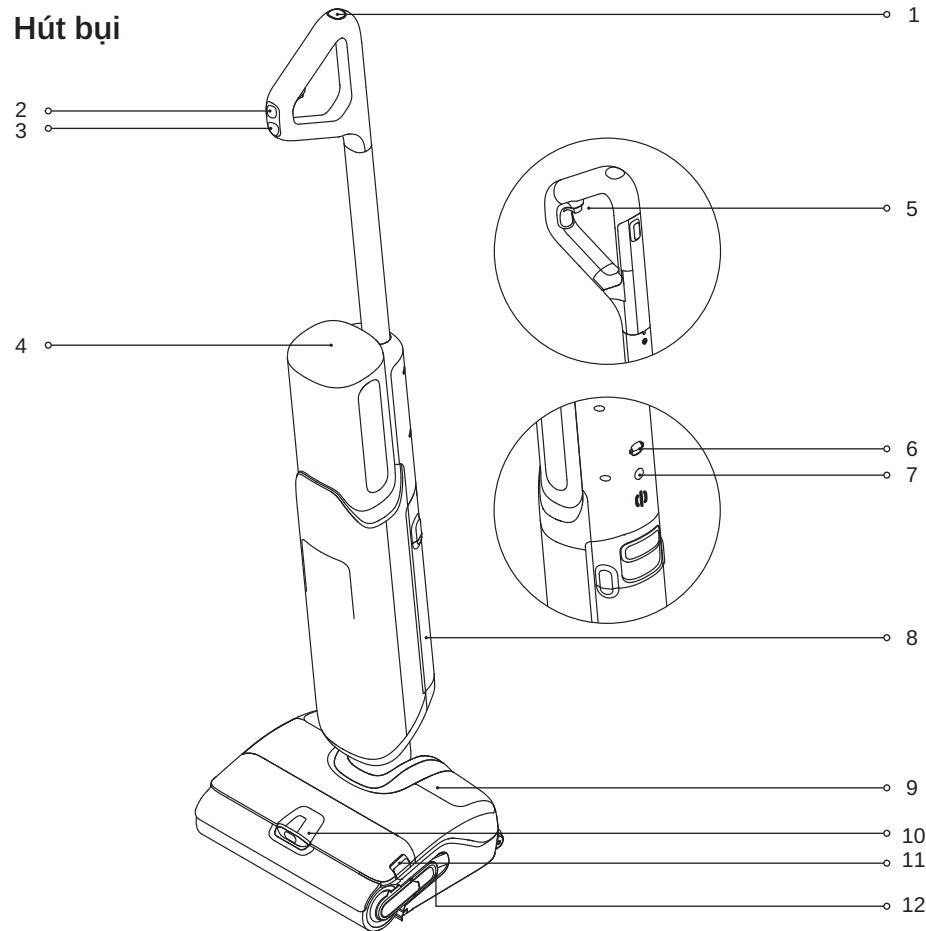

- | | | |
|--|---|---------------------------|
| 1 Nút Tự Làm Sạch | 5 Nút phun xịt tập trung | 8 Khay Nước Bẩn |
| 2 Công Tắc Chế Độ | 6 Bánh xe đa hướng | 9 Khay Nước Sạch |
| <ul style="list-style-type: none"> Nhấn để chuyển chế độ. Nhấn và giữ trong 3 giây để vào/thoát chế độ tiết kiệm nước. | 7 Nút Nhắc Nhở Bằng Giọng Nói | 10 Vòi phun xịt tập trung |
| 3 Công tắc nguồn | <ul style="list-style-type: none"> Ấn nhanh để kích hoạt lời nhắc thoại hoặc điều chỉnh âm lượng. Nhấn giữ trong 3 giây để truy cập cài đặt ngôn ngữ. Nhấn để chuyển đổi giữa các ngôn ngữ. Nhấn và giữ để xác nhận lựa chọn. | 11 Nút Mở Nắp Chối lẩn |
| 4 Màn Hình Hiển Thị | 12 Tay cầm Chối lẩn | |


Tổng Quan Về Sản Phẩm

Đế sạc

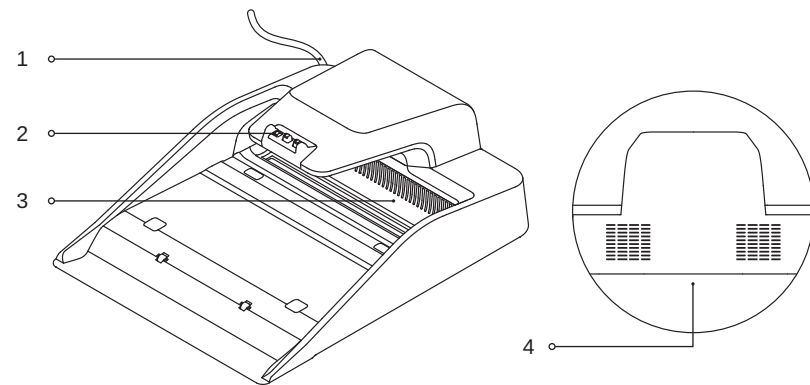

- 1 Dây Nguồn 2 Điểm Tiếp Xúc Sạc 3 Đầu Ra Sấy Nhiệt 4 Đầu Vào Sấy Nhiệt

Khay Nước Sạch

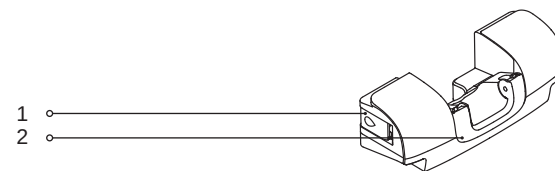

- 1 Nắp Hộc Nước Sạch 2 Tay Cầm Khay Nước Sạch

Màn Hình Hiển Thị




- | | | |
|------------------------------------|----------------------|--------------------|
| 1 Thông Báo Sự Cố | 3 Chế Độ Khử Trùng | 6 Chế Độ Hút |
| 2 Đang sạc/
Đèn Báo Mức Pin Yếu | 4 Chế độ thông minh | 7 Chế độ Nước Nóng |
| | 5 Chế Độ Tự Làm Sạch | 8 Chế Độ Sấy Khô |

Lưu ý: Nếu thiết bị không hoạt động đúng cách, màn hình sẽ hiển thị thông báo lỗi. Vui lòng tham khảo bảng Lỗi nhắc và giải pháp xử lý sự cố để tìm giải pháp khắc phục.

Lắp Ráp

Chèn đầu tay cầm theo chiều dọc vào cổng trên đỉnh thiết bị như chỉ định cho đến khi bạn nghe thấy tiếng tách.

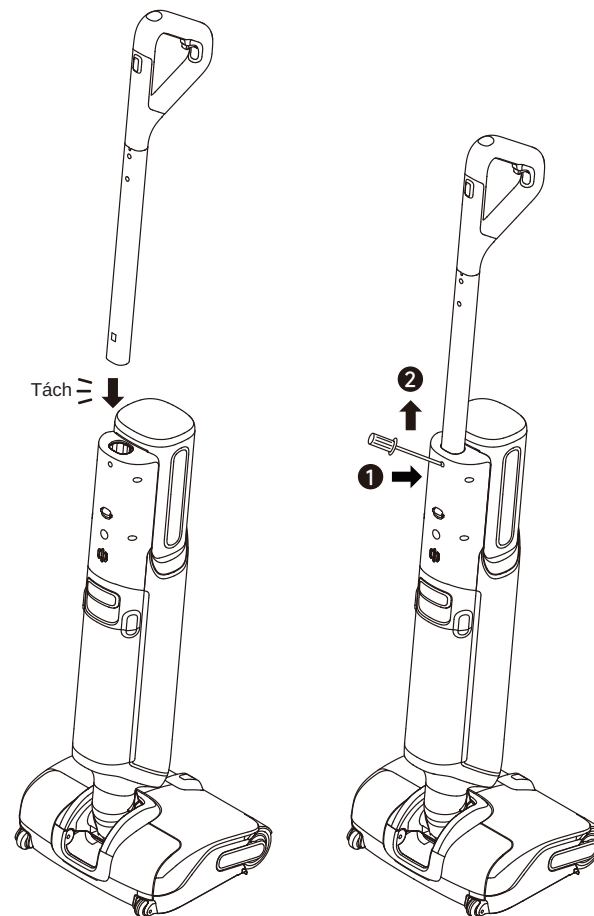

Lưu ý: Để tháo rời, hãy đưa một vật cứng vào lỗ của thiết bị như được chỉ định để ấn vào các điểm tiếp xúc và đồng thời kéo tay cầm lên trên.

Sạc Điện


1. Đặt đế sạc trên mặt phẳng sát tường và kết nối nó với ổ cắm điện. Sạc đầy thiết bị trước lần sử dụng đầu tiên.
2. Đặt thiết bị lên đế sạc. Khi màn hình hiển thị mức 100 tức là pin đã được sạc đầy.

Đèn báo Đang sạc/Pin Yếu

- Đèn cam nhấp nháy chậm: Mức pin $\leq 20\%$ (đang sạc)
- Đèn xanh lục nhấp nháy chậm: Mức pin $> 20\%$ (đang sạc)
- Màu lục đơn sắc: Pin đã được sạc đầy
- Màu cam sáng đều: Mức Pin $\leq 20\%$

Lưu ý:

- Nếu không dùng máy hút bụi trong vòng 10 phút kể từ khi sạc đầy, máy sẽ chuyển sang chế độ ngủ.
- Vui lòng khởi động lại thiết bị nếu cần sử dụng. Để kéo dài thời gian sử dụng pin, pin sẽ tự động giảm nhiệt sau khi sử dụng thiết bị trong một khoảng thời gian dài.

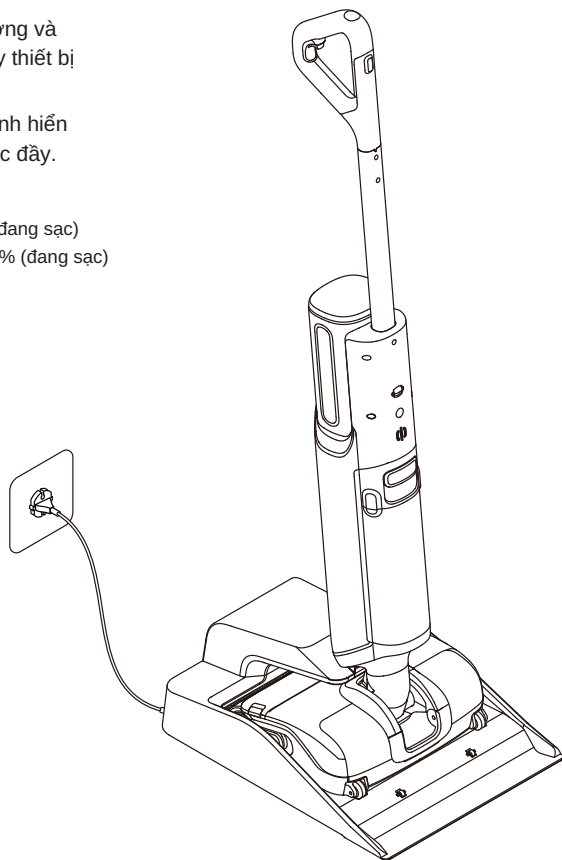

Cách Sử Dụng

Thêm chất lỏng làm sạch

CẢNH BÁO: Để giảm nguy cơ hỏa hoạn và điện giật do hư hỏng bộ phận bên trong, chỉ sử dụng dung dịch tẩy rửa Moonstone Technology (Shaoxing) Co., Ltd. AWH10 dành riêng cho thiết bị.


1. Tháo nắp bịt trước khi sử dụng.
2. Đong dung dịch lau sàn bằng nắp (*khoảng 10 ml/0,34 fl oz một nắp).
3. Đổ vào Hộc Nước Sạch và lắc nhẹ để trộn đều trước khi sử dụng.

Lưu ý: Không thêm bất kỳ dung dịch nào khác ngoài nước lau được nhà sản xuất cho phép. Có thể tìm thấy nước lau nhà trên cửa hàng trực tuyến chính thức.

Cách Sử Dụng


Đổ đầy Khay Nước Sạch

Kéo tay cầm ngăn chứa nước sạch để tháo ngăn chứa. Mở nắp ngăn chứa và đổ đầy nước sạch vào ngăn. Lắp ngăn chứa nước sạch và đảm bảo ngăn kêu tách vào đúng vị trí.

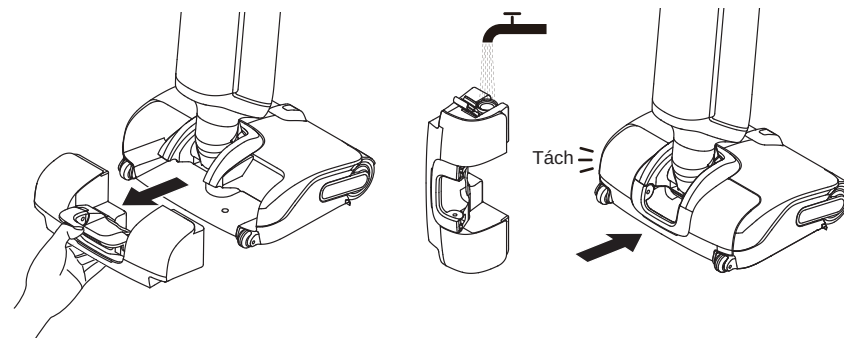

Bắt đầu làm sạch

Nhẹ nhàng nhấn chân lên nắp bảo vệ chổi và ngả thiết bị về phía sau. Nhấn công tắc nguồn  để bắt đầu/dừng hoạt động. Nếu thiết bị ở vị trí thẳng đứng trong khi làm việc, tác vụ hiện tại sẽ bị dừng. Thiết bị được thiết kế để đặt nằm phẳng ở góc 180 độ, cho phép tiếp cận và lau dọn vùng bên dưới đồ nội thất có gầm thấp.

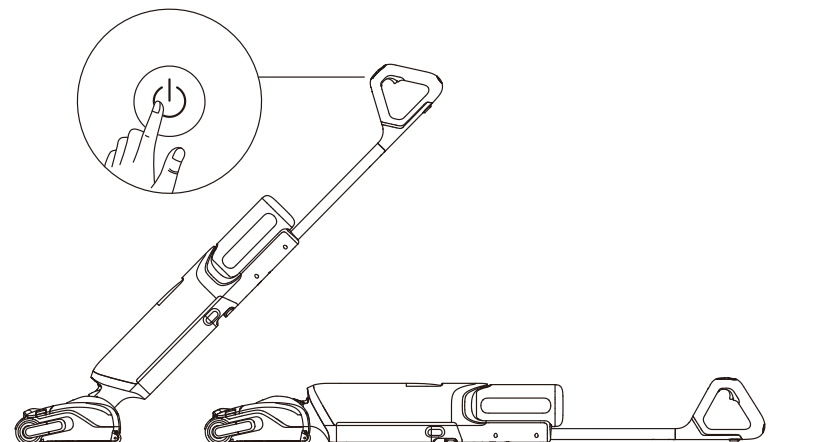

Lưu ý:

- Không dùng máy hút bụi để hút chất lỏng có bọt.
- Đảm bảo thiết bị ở vị trí thẳng đứng trước khi tắt nguồn khi thiết bị nằm phẳng.
- Thiết bị phù hợp để làm sạch sàn nhà, đá hoa cương, gạch lát và các bề mặt cứng khác.
- Khi thiết bị đang hoạt động, không nhấn thiết bị lên khỏi mặt đất, di chuyển, hoặc nghiêng. Nếu không, nước bẩn có thể tràn vào động cơ.
- Khi đặt thiết bị lên để sạc, thiết bị sẽ tự động tắt; không cần phải tắt thủ công.

Cách Sử Dụng

Chuyển Đổi Chế Độ

Nhấn công tắc chuyển chế độ  để chuyển chế độ theo nhu cầu của bạn. Nhấn và giữ  trong 3 giây để vào/thoát chế độ tiết kiệm nước.

Lưu ý: Vào chế độ lau tiết kiệm nước, nhắc nhở bằng giọng nói "Ding"; Thoát chế độ lau tiết kiệm nước, nhắc nhở bằng giọng nói "Ding Ding".



Chế độ thông minh

Thiết bị sẽ điều chỉnh lực hút một cách thông minh theo các vết bẩn trên mặt đất.



Chế Độ Hút

Nếu chọn chế độ hút, thiết bị sẽ chỉ hút nước; chổi lăn sẽ không được làm ẩm và ngăn chứa nước sạch sẽ không phun nước.



Chế Độ Khử Trùng

Đang chuẩn bị chế độ siêu mạnh, vui lòng chờ 30 giây. Chế độ này phù hợp để làm sạch sâu.




Chế độ Nước Nóng

Thích hợp để làm sạch các vết bẩn vừa phải. Sau khi bắt đầu, nhiệt độ nước tăng dần đến mức nóng.

Bắt đầu Phun xịt Theo điểm

Ở chế độ Nước nóng, nhấn nhanh nút phun nước, vòi phun sẽ phun ra nước sạch.

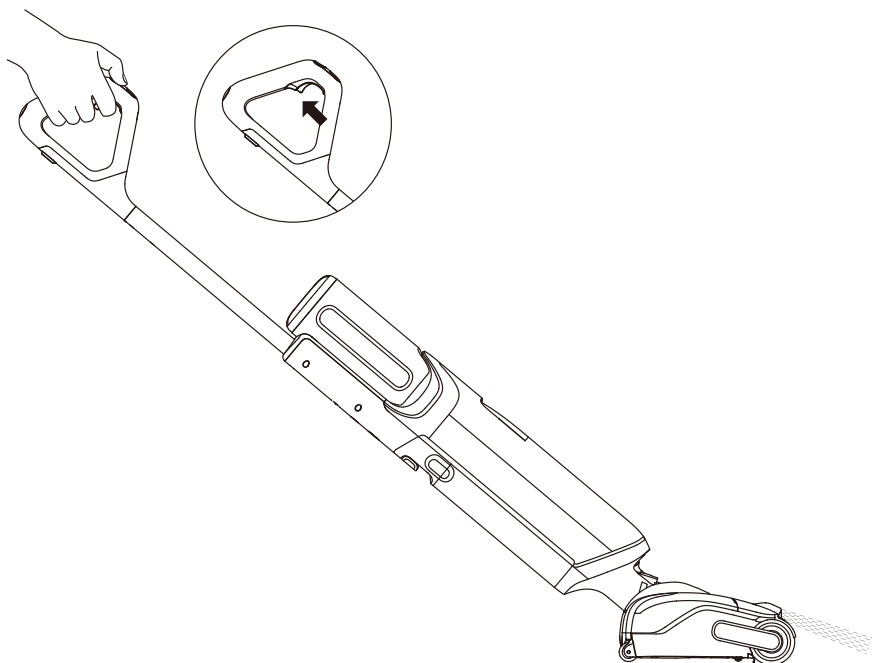



Lưu ý: Không tháo nắp chổi khi đang phun nước nóng.

Cách Sử Dụng

Đổ sạch Khay Nước Bẩn



1. Kéo và tháo ngăn chứa nước bẩn.

2. Kéo tay cầm của nắp ngăn chứa nước bẩn lên, nhắc nắp lên.

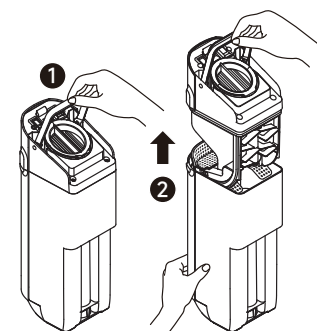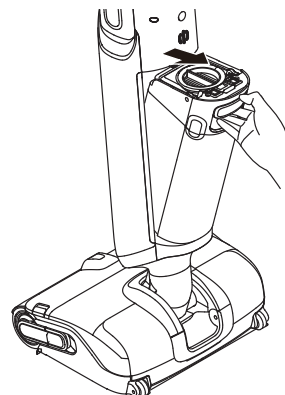

3. Đổ bỏ nước đã bẩn và làm sạch chất thải rắn trong giỏ lọc chất thải rắn.


4. Lắp lại cho đến khi nghe thấy tiếng tách.

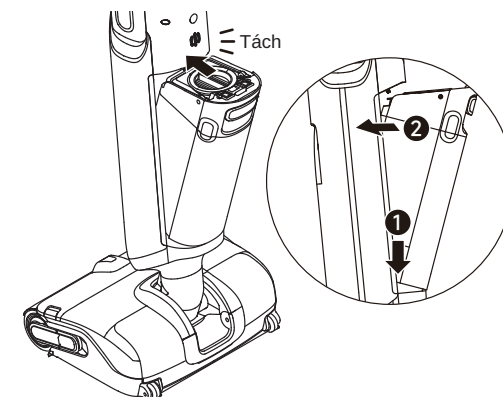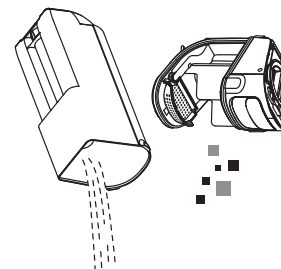

Tự làm sạch bằng nước nóng & Chế độ sấy

	Nhấn nhanh	Tự Làm sạch thông Minh
	Trong vòng 3 giây sau khi có lời nhắc bằng giọng nói Tự làm sạch thông minh, hãy nhấn nhanh	Tự làm sạch ở Sâu
	Nhấn giữ	Đặt Chế độ Sấy khô
	Ở chế độ Sấy khô, hãy nhấn nhanh	Thoát Chế độ Sấy khô

- Lưu ý:
- Đặt thiết bị trở lại đế. Đảm bảo đủ nước trong ngăn chứa nước sạch để tự làm sạch.
 - Vui lòng đổ hết nước trong khay nước bẩn sau khi quá trình tự làm sạch hoàn tất và chế độ sấy khô được kích hoạt.
 - Vui lòng chuyển đổi giữa các chế độ tự làm sạch theo mệnh lệnh bằng giọng nói.
 - Không chạm vào chốt lặn, nước nóng hoặc mô-đun làm nóng của đế sạc trong khi máy tự làm sạch bằng nước nóng.
 - Chỉ có thể bật chức năng tự làm sạch khi đang sạc thiết bị và mức pin trên 20%. Nếu mức pin thấp hơn, vui lòng sạc tới 20% rồi thực hiện chức năng tự làm sạch.


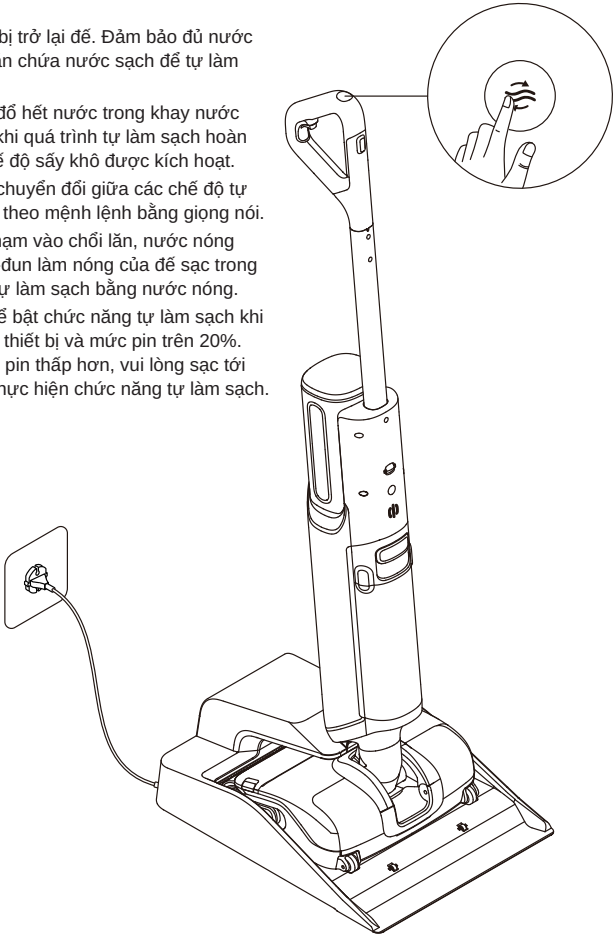


Những Điều Cần Lưu Ý:



- Tắt thiết bị trước khi bảo trì. Không chạm vào công nút nguồn.
- Thay thế các bộ phận nếu cần thiết. Các bộ phận thay thế phải là hàng chính hãng do nhà sản xuất hoặc đại lý dịch vụ ủy quyền cung cấp.
- Nếu không sử dụng thiết bị trong một thời gian dài, hãy sạc đầy, rút phích cắm điện, và bảo quản thiết bị ở nơi thoáng mát, độ ẩm thấp, tránh ánh nắng trực tiếp. Để tránh trường hợp thiết bị cạn pin quá mức, hãy sạc thiết bị ít nhất 3 tháng một lần.

Vệ Sinh Khay Nước Bẩn

- Kéo và tháo ngăn chứa nước bẩn.
- Kéo tay cầm của nắp ngăn chứa nước bẩn lên, nhấn nắp lên. Tháo bộ lọc.

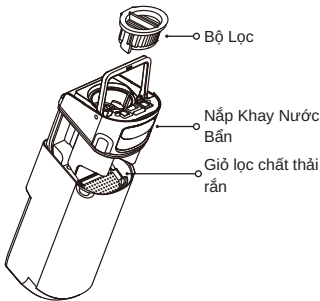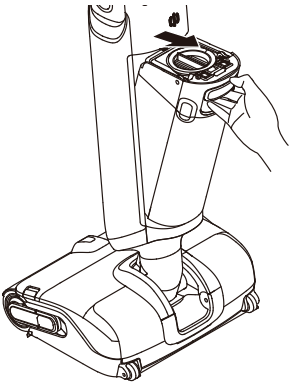

- Đổ bỏ nước đã bẩn và làm sạch chất thải rắn trong giỏ lọc chất thải rắn. Rửa sạch bằng nước sạch. Sử dụng bàn chải làm sạch đi kèm để vệ sinh thành trong của ngăn chứa.
- Lắp lại bộ lọc và nắp ngăn chứa nước bẩn. Sau đó lắp lại ngăn chứa nước bẩn cho đến khi nghe thấy tiếng tách.

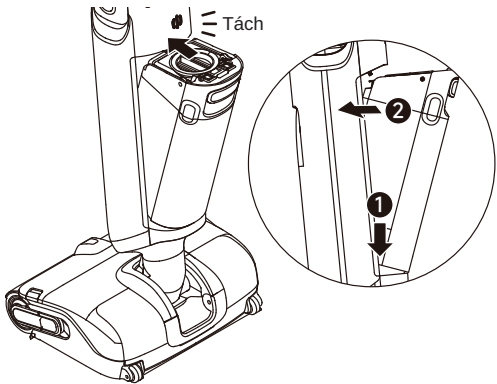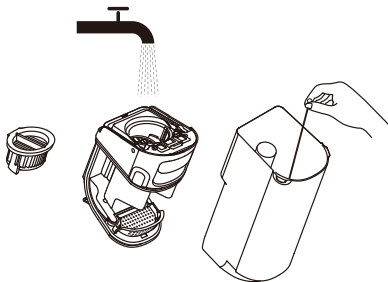


Vệ sinh bộ lọc

1. Tháo bộ lọc và nhẹ nhàng loại bỏ bụi nổi trên bề mặt.




2. Khi bộ lọc bị bẩn và cần rửa, hãy rửa sạch bằng nước. Bộ lọc phải khô hoàn toàn trước khi sử dụng.

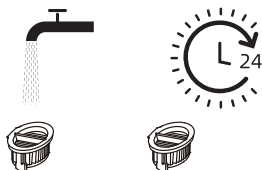

Lưu ý: Nên thay bộ lọc mỗi 3 đến 6 tháng sử dụng.

Làm Sạch Đường Ống và Cảm Biến Bụi Bắn


Tháo ngăn chứa nước bẩn. Lau sạch ống và cảm biến bụi bằng vải ướt trước khi sử dụng.

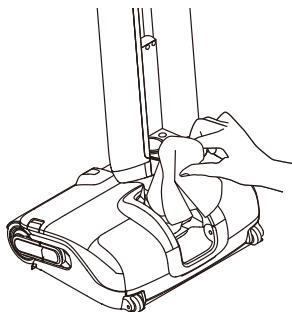


Lưu ý: Không rửa ống hoặc cảm biến bụi.

Vệ Sinh Chi Tiết Chổi Lăn


1. Nhấn nút nhà nắp chổi lăn để tháo nắp con lăn bàn chải.

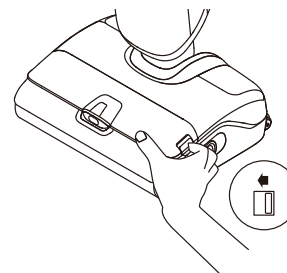


2. Kéo tay cầm chổi để tháo chổi ra.

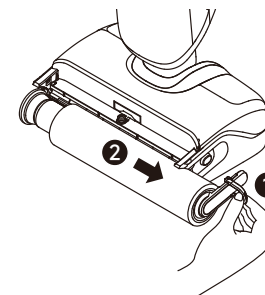


3. Dùng chổi vệ sinh đi kèm để làm sạch tóc và các mảnh vụn mắc trên chổi lăn. Rửa chổi lăn và nắp bằng nước sạch và lau khô chúng hoàn toàn.

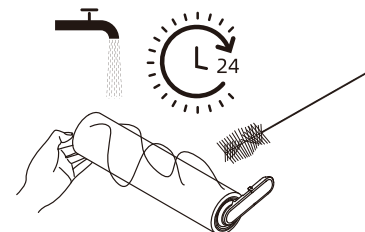

4. Lau đầu hút bằng vải khô hoặc khăn ướt.

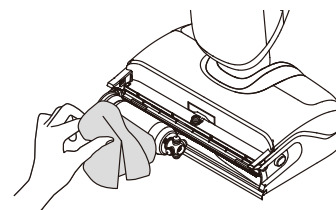

5. Lắp lại cho đến khi nghe thấy tiếng tách.

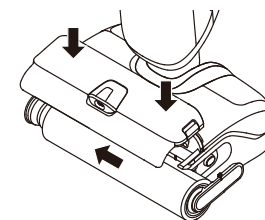

Lưu ý:

- Không rửa cụm bàn chải bằng nước.
- Vệ sinh khi cần thiết. Nên thay chổi lăn mỗi 3 đến 6 tháng sử dụng.
- Đảm bảo đã tháo hoặc đổ sạch Ngăn chứa nước bẩn trước khi đặt thiết bị nằm nghiêng để làm sạch chổi lăn.

Nếu xảy ra lỗi, thiết bị sẽ ngừng hoạt động. Vui lòng tham khảo bảng dưới đây để khắc phục sự cố. Nếu sự cố vẫn còn, vui lòng liên hệ với dịch vụ khách hàng.

Lỗi	Nguyên Nhân Có Thể Xảy Ra	Biện Pháp Xử Lý
Thiết bị không hoạt động.	Thiết bị hết pin hoặc mức pin thấp.	Sạc đầy pin trước khi sử dụng.
	Thiết bị đặt thẳng đứng.	Nghiêng thiết bị về phía sau.
	Chặn kích hoạt chế độ chống quá tải nhiệt.	Vệ sinh tất cả vật gây tắc nghẽn và đợi cho đến khi nhiệt độ trở lại bình thường.
	Khay Nước Bắn đã đầy.	Đổ sạch Khay Nước Bắn.
	Bộ phận không được lắp đặt đúng chỗ.	Đảm bảo tất cả các bộ phận đều được đặt đúng vị trí.
Thiết bị sạc chậm.	Nhiệt độ pin quá thấp hoặc quá cao.	Chờ cho đến khi nhiệt độ pin trở lại bình thường.
Công suất hút của thiết bị yếu.	Bộ lọc bị nghẹt.	Vệ sinh bộ lọc.
	Cửa hút hoặc ống hút bị chặn bởi vật lạ.	Vệ sinh đường ống và miệng hút.
Động cơ điện phát ra tiếng ồn lạ.	Ngăn chứa nước bắn có quá nhiều nước bắn.	Đổ sạch Khay Nước Bắn.
	Miệng hút bị tắc.	Làm sạch tất cả dị vật bên trong miệng hút.
Đèn báo mức pin trên màn hình hiển thị không sáng trong khi sạc.	Phích cắm của đế sạc không được cắm vào ổ cắm điện đúng cách.	Đảm bảo phích cắm của đế sạc được cắm đúng cách.
	Thiết bị chưa được đặt lên đế sạc đúng cách.	Đảm bảo thiết bị được đặt lên đế sạc đúng cách.

Không có nước chảy ra khỏi thiết bị.	Ngăn chứa nước sạch không lắp đúng vị trí thích hợp hoặc lượng nước trong Ngăn chứa nước sạch không đủ.	Lắp lại hoặc đổ đầy Ngăn chứa nước sạch.
	Mất khoảng 30 giây để làm ấm chổi lăn.	Bật thiết bị và kiểm tra lại sau một lúc.
Lỗ thông hơi bị rò rỉ nước.	Một va chạm hoặc lực kéo mạnh làm cho nước vào động cơ.	Kéo nhẹ thiết bị qua lại trong khi bật thiết bị.
	Bộ lọc chưa khô hoàn toàn sau khi vệ sinh.	Phơi khô bộ lọc hoàn toàn trước khi sử dụng.
Tự làm sạch thất bại.	Chổi lăn có thể bị kẹt bởi các mảnh vụn lớn.	Tháo nắp chổi lăn để kiểm tra và làm sạch chổi lăn.
	Thiết bị chưa được đặt lên đế sạc đúng cách.	Đảm bảo thiết bị được sạc trước khi kích hoạt chức năng tự làm sạch.
	Không thể kích hoạt chế độ tự làm sạch nếu mức pin thấp hơn 20%.	Chỉ có thể bật tính năng tự làm sạch khi đang sạc thiết bị và mức pin trên 20%.
	Khay Nước Bắn đã đầy.	Đổ sạch Khay Nước Bắn.
	Ngăn chứa nước sạch không lắp đúng vị trí hoặc lượng nước trong Ngăn chứa nước sạch không đủ.	Lắp lại hoặc đổ đầy Ngăn chứa nước sạch.
Hiệu suất sấy kém.	Lỗ thoát khí và lỗ lấy khí của đế sạc có thể bị tắc.	Kiểm tra và vệ sinh vật gây tắc nghẽn lỗ thoát khí và lỗ lấy khí.

Cảnh Báo Lỗi và Biện Pháp Xử Lý

Nếu thiết bị không hoạt động đúng cách, màn hình sẽ hiển thị thông báo lỗi. Vui lòng tham khảo bảng dưới đây tìm giải pháp khắc phục.

Mã Lỗi	Nguyên Nhân Có Thể Xảy Ra	Biện Pháp Xử Lý
E1-E7	Lỗi	Khởi động lại thiết bị để khắc phục sự cố. Nếu sự cố vẫn còn, vui lòng liên hệ với dịch vụ khách hàng.
F1-F3		
H2/H3/H5/H6		

Thông Số Kỹ Thuật

Hút bụi			
Kiểu máy	HMH17A	Công Suất Định Mức	450 W
Điện Áp Định Mức	21,6 V ---	Công Suất Sạc	27 V ---
Dung Tích Khay Nước Sạch	760 mL	Dung Tích Khay Nước Bẩn	730 mL
Thời Gian Sạc	Xấp xỉ 4 giờ đồng hồ		
Đế sạc			
Kiểu máy	HCBZ	Công suất đầu vào định mức*	660 W
Đầu Vào Định Mức	220-240 V ~ 50-60 Hz	Công suất đầu ra định mức	27 V --- 1,6 A

*Công suất đầu vào định mức đề cập đến công suất đo được trong chu kỳ đại diện để chuyển sang chế độ sấy khô.

Tháo Bỏ và Xử Lý Pin

Pin lithium-ion tích hợp có chứa các chất nguy hiểm cho môi trường. Trước khi thải bỏ pin, hãy đảm bảo việc tháo pin do các kỹ thuật viên có trình độ thực hiện và thải bỏ tại một cơ sở tái chế thích hợp.

- phải tháo pin ra khỏi thiết bị trước khi loại bỏ;
- phải tắt thiết bị trong quá trình tháo pin;
- pin phải được xử lý một cách an toàn.

Hướng Dẫn Tháo Bỏ

1. Tháo tay cầm theo hướng dẫn trong phần Lắp ráp.
2. Sử dụng công cụ phù hợp để tháo nắp trang trí trên cùng và thân của thiết bị.
3. Sử dụng tuốc nơ vít để tháo tất cả các vít cố định ra khỏi thân máy.
4. Sử dụng tua vít để tháo các ốc vít cố định trên nắp trước của thiết bị. Tháo nắp.
5. Rút cáp đầu nối của bộ pin ra và tháo pin ra khỏi cụm pin.

THẬN TRỌNG:

- Trước khi tháo pin, hãy ngắt nguồn điện và sử dụng càng nhiều pin càng tốt.
- Pin không dùng phải được loại bỏ tại một cơ sở tái chế thích hợp.
- Không để pin tiếp xúc với môi trường nhiệt độ cao để tránh nguy cơ cháy nổ.
- Nếu quá lạm dụng, chất lỏng có thể bị rò ra khỏi pin. Nếu không may tiếp xúc, xả dưới nước và điều trị y tế.