


AQUA

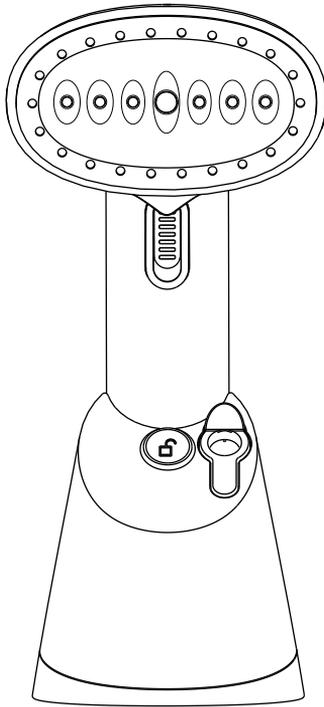

BÀN ỦI HƠI NƯỚC CẦM TAY

Hướng dẫn sử dụng

AQS-SH2502R(W)-VN

- Vui lòng đọc kỹ hướng dẫn trước khi sử dụng



MỤC LỤC

GIỚI THIỆU SẢN PHẨM -----	01
PHỤ KIỆN SẢN PHẨM -----	02
HƯỚNG DẪN SỬ DỤNG -----	03
VỆ SINH VÀ BẢO TRÌ -----	05
NHỮNG ĐIỀU CẦN LƯU Ý -----	06
CÁCH XỬ LÝ SỰ CỐ -----	10
HƯỚNG DẪN XỬ LÝ RÁC THẢI ĐIỆN TỬ -----	11
THÔNG SỐ KỸ THUẬT -----	12

GIỚI THIỆU SẢN PHẨM

- Thiết kế nhỏ gọn mang theo dễ dàng, tiện lợi khi sử dụng.
- Đầu ra hơi nước mạnh mẽ, nhanh chóng ủi phẳng đồ.
- Có thể ủi treo và ủi phẳng, bảo vệ áo quần.
- Thao tác chỉ với 1 nút nhấn, nhanh chóng và tiện lợi.
- Bình nước thiết kế trong suốt, châm nước tiện lợi, dễ dàng quan sát khi ủi đồ.
- Thiết kế chống cháy khô, bảo vệ an toàn.
- Kết cấu ngăn chặn rò rỉ ở nhiệt độ thấp, tránh rò rỉ nước khi ủi đồ, giúp an tâm sử dụng.

PHỤ KIỆN SẢN PHẨM

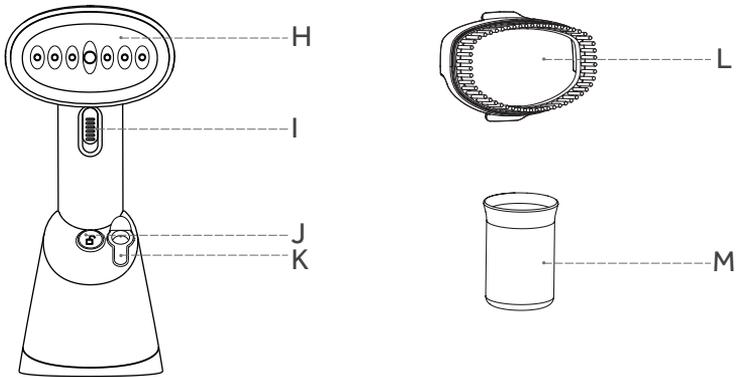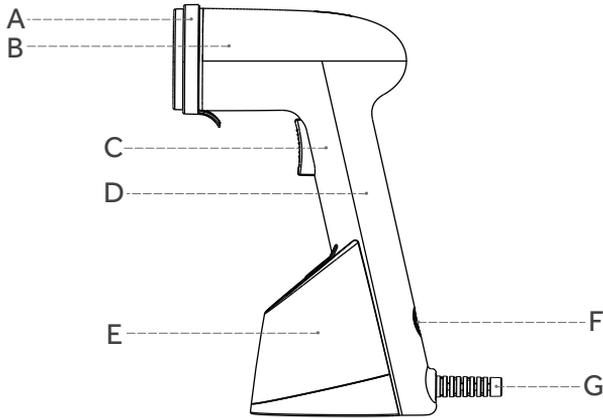

A: Nắp bàn chải trước

B: Nắp bàn chải trên

C: Nắp trước tay cầm

D: Nắp sau tay cầm

E: Bình chứa nước

F: Nút nguồn

G: Bọc dây nguồn

H: Mặt ủ thép không gỉ

I: Nút nhấn hơi nước

J: Chốt khóa bình nước

K: Nắp bình nước


L: Lông chải

M: Cốc đong

HƯỚNG DẪN SỬ DỤNG

1. Lấy bình nước ra (Hình I)


- ① Nhấn khóa bình nước và trượt ra ngoài.
- ② Lấy bình nước ra.
- ③ Mở nắp bình nước.

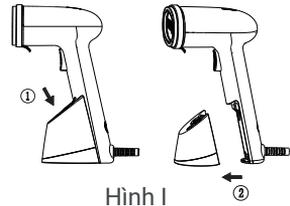

Hình I

2. Châm nước vào bình (Hình II)

Sau khi châm nước xong, đậy nắp bình nước.
Lắp lại vào vị trí.

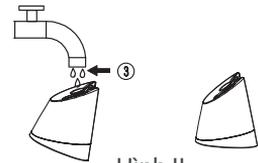

Hình II


- Khi châm nước vào bình, giữ cho miệng bình ở vị trí nằm ngang, châm vào lượng nước thích hợp, không châm quá nhiều tránh tràn.

3. Trước khi ủi đồ (Hình III)


- ① Đảm bảo phích cắm được cắm ổn định, nhấn nút nguồn, lúc này đèn của máy sáng màu xanh, đèn đỏ báo hiệu gia nhiệt.
- ② Sau khi gia nhiệt xong, đèn đỏ sẽ tắt, sau đó nhấn nút hơi nước, hơi nước bắt đầu ra. Tắt nút nhấn hơi nước, sẽ có ít hơi nước vẫn tiếp tục ra.
- ③ Lúc tắt phải nhấn nút nguồn, đèn xanh sẽ tắt, sau đó rút phích cắm.



Nút nguồn

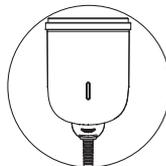

Đèn hiển thị

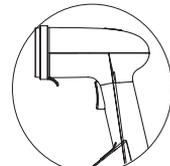

Nút nhấn hơi nước


Hình III

HƯỚNG DẪN SỬ DỤNG


- Trong quá trình sử dụng, đèn xanh sáng bình thường, nếu không sử dụng hãy nhấn nút nguồn, đèn xanh sẽ tắt, không sử dụng trong thời gian lâu hãy rút phích cắm nguồn điện ra, để tránh xảy ra hỏa hoạn.
- Trong quá trình sử dụng, đèn xanh và đèn đỏ sẽ sáng cùng lúc, đây là hiện tượng bình thường, vì đèn hiển thị màu đỏ sáng cho biết máy đang gia nhiệt, đang duy trì nhiệt độ cho máy, bảo đảm sản phẩm hoạt động bình thường.

Chú ý: nguy cơ bị bỏng!


Không để bàn ủi tiếp xúc trực tiếp với các sản phẩm dệt may có chất liệu đặc biệt như tơ, lụa ...

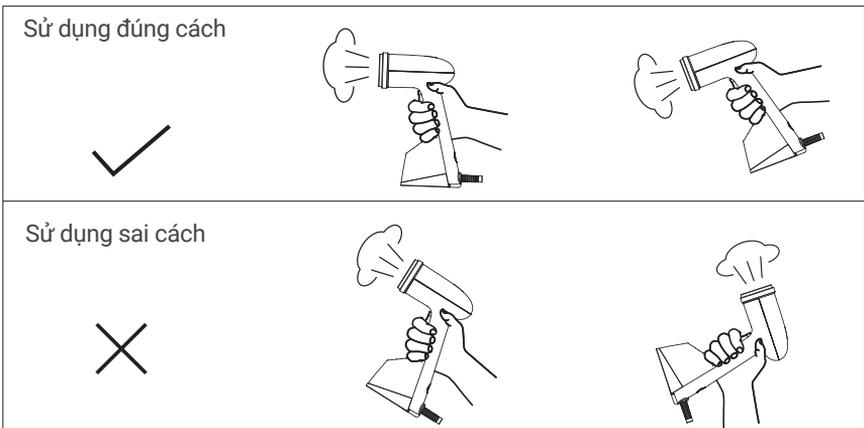

4. Sau khi sử dụng xong, đầu phun vẫn còn nhiệt độ cao, trước tiên đặt máy ở trên tấm đệm cách nhiệt, chờ máy nguội hẳn.

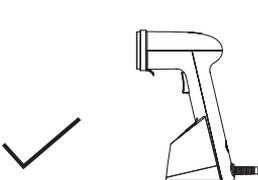


Cách đặt chính xác

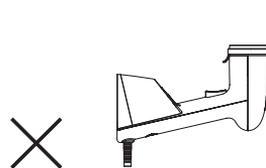

Cách đặt sai

Vệ sinh bảo trì sản phẩm


- ① Sau khi tắt nút nguồn, rút phích cắm nguồn điện ra, nếu trong bình nước vẫn còn nước, hãy đổ sạch nước còn sót lại, chờ máy nguội hoàn toàn là có thể vệ sinh thân máy.

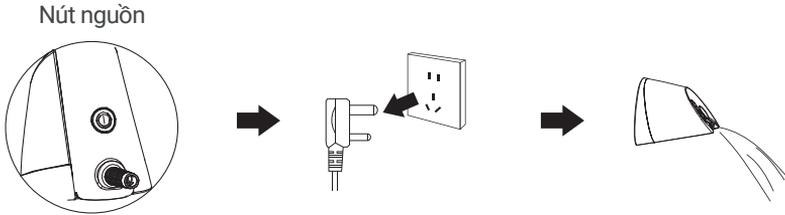

- ② Dùng vải mềm để lau mặt ủi của sản phẩm, nếu có vết bẩn, hãy dùng vải mềm có chất tẩy rửa trung tính để lau sạch.



- ③ Quấn dây nguồn như hình.

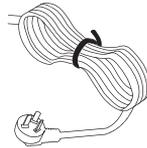

- Không được dùng nước để rửa thân máy, hoặc ngâm vào trong chất lỏng, tránh điện giật, đoản mạch, hỏa hoạn, sự cố...
- Khi rút phích cắm, phải giữ cho tay khô ráo.
- Không được sử dụng chất pha loãng, hóa chất, bàn chải thép hoặc các vật dụng khác có thể gây hư hỏng hoặc sự cố cho máy khi vệ sinh bảo trì. Không thao tác khi tay ướt.
- Khi không sử dụng sản phẩm, phải rút phích cắm điện ra, đảm bảo máy không sót lại nước, giữ cho máy luôn sạch sẽ, và bảo quản ở nơi thông gió .

NHỮNG ĐIỀU CẦN LƯU Ý

Nhắc nhở an toàn quan trọng

Để giảm các nguy cơ như xảy ra sự cố như điện giật, bị thương, hỏa hoạn, sự cố an toàn đến tính mạng, hư hỏng thiết bị hoặc tài sản ... hãy tuân thủ những điều cần chú ý được ghi trong Sách hướng dẫn sử dụng.

Biểu tượng dưới đây dùng để giải thích và mô tả về những rủi ro, tổn thương và hư hỏng tài sản do không đọc kỹ hướng dẫn của các biểu tượng và sử dụng không đúng cách gây nên:


⊖ Biểu tượng này nhắc nhở người dùng chú ý: Cấm các bước thao tác.

⚠ Biểu tượng này nhắc nhở người dùng chú ý: Các bước thao tác cần tuân thủ để sử dụng sản phẩm an toàn.


1. Trước khi sử dụng sản phẩm, hãy đọc kỹ sách hướng dẫn, nghiêm cấm trẻ em và người không thể tự ý thức sử dụng sản phẩm.
2. Sản phẩm này chỉ được sử dụng trong gia đình.
3. Điện áp đầu vào phải phù hợp với điện áp định mức được ghi rõ trên sản phẩm, hãy cắm chặt phích cắm vào ổ cắm, để tránh gây ra hỏa hoạn.
4. Hãy xử lý thùng và túi nhựa của sản phẩm một cách an toàn, để cách xa trẻ em, tránh gây ra tai nạn như làm trẻ ngạt thở...
5. Hãy sử dụng nước lọc hoặc nước tinh khiết.
6. Không sử dụng ủi trên các chất liệu: Da nhân tạo, vải dệt, lụa, nhựa, và các sản phẩm không chịu nhiệt.
7. Không được sử dụng các phụ kiện khác chưa được nhà sản xuất đồng ý, nếu tự ý sửa chữa thay thế sẽ gây ra sự cố cho máy, sẽ không được bảo hành.
8. Vui lòng kiểm tra xem sản phẩm có bị hư hỏng sau khi tháo bao bì, kiểm tra phụ kiện xem có đầy đủ không.
9. Nếu phát sinh sự cố, phải rút ngay phích cắm điện, không được để sản phẩm hoạt động khi không có nước.
10. Nếu dây nguồn bị hỏng, để tránh nguy hiểm, phải liên hệ nhân viên chuyên môn của nhà sản xuất, bộ phận sửa chữa của nhà sản xuất hoặc các bộ phận tương tự để thay mới.
11. Khi sử dụng sản phẩm, hãy chú ý đề phòng nguy hiểm do hơi nước phun ra.

NHỮNG ĐIỀU CẦN LƯU Ý


- ⊘ Không được chạm vào hơi nước khi sử dụng hoặc hướng đầu phun vào cơ thể, để tránh bị bỏng.

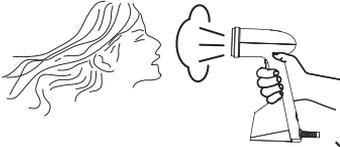


- ⊘ Không được quấn, kéo, đè vào dây nguồn, tránh làm cho dây nguồn bị hỏng, gây ra bỏng, điện giật hoặc hỏa hoạn.

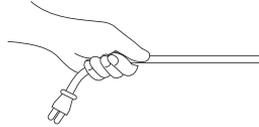

- ⊘ Không được để ngược, tránh tràn nước, làm ướt sàn nhà, bàn hoặc thảm.

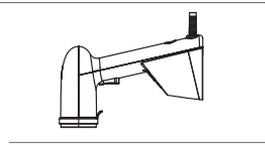

- ⊘ Không được chọc kim hoặc các vật lạ khác vào đầu phun hơi nước, tránh bị điện giật hoặc bị bỏng.

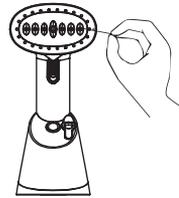

- ⊘ Không được đổ nước hoa, giấm, hồ bột, chất tẩy rửa hoặc các hóa chất khác vào bình nước, để tránh làm bẩn quần áo.



- ⊘ Không được tự ý thay đổi, tháo rời hoặc sửa chữa sản phẩm này, nếu không sẽ dẫn đến tổn thương hoặc ảnh hưởng đến tuổi thọ của máy, do thao tác bất thường.




NHỮNG ĐIỀU CẦN LƯU Ý

- ⊘ Khi rút phích cắm nguồn điện ra, hãy nắm chặt phích cắm rồi mới rút, không kéo, vặn dây nguồn, giữ cho tay khô ráo, để tránh bị điện giật hoặc bị thương.




- ⊘ Không dùng ổ cắm nối để sử dụng sản phẩm, không dùng chung ổ cắm với các sản phẩm khác, để tránh gây nguy hiểm.

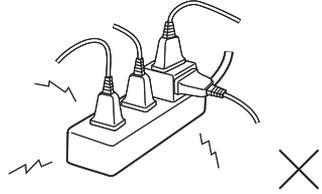


- ⊘ Khi sử dụng không được để gần nguồn nước, nguồn lửa và các vật dễ cháy, để tránh bị điện giật hoặc hỏa hoạn.




- ⊘ Không được ngâm sản phẩm vào trong nước hoặc các chất lỏng khác, không rửa trực tiếp bằng vòi nước hoặc đổ nước lên trên máy, để tránh bị điện giật hoặc tổn thương.

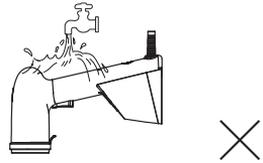

- ❗ Sản phẩm này chỉ dùng để ủi quần áo, không được dùng cho cơ thể người, để tránh bị thương.

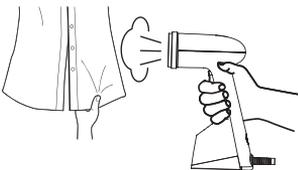


- ❗ Khi sử dụng sản phẩm này cho quần áo cao cấp hoặc chất liệu đặc biệt, trước tiên hãy dùng thử ở chỗ khuất của quần áo, để tránh làm hỏng quần áo của bạn.

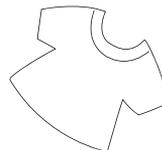

NHỮNG ĐIỀU CẦN LƯU Ý


- ! Trong quá trình ủi, bảng điều khiển không được để gần các vật cứng như khóa kéo, nút bấm... Để tránh cào xước thân máy.

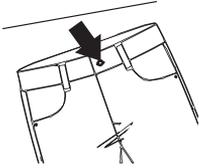


- ! Khi châm nước vào bình, hãy lưu ý vạch nước tránh quá nhiều gây tràn.



- ! Khi đổ nước, châm nước hoặc vệ sinh bảo trì sản phẩm, phải rút phích cắm điện ra, để tránh bị điện giật hoặc gây hỏa hoạn

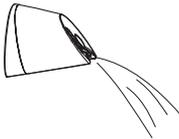


- ! Nếu không sử dụng trong thời gian dài hoặc đi ra ngoài, hãy rút phích cắm nguồn điện ra, nếu máy có xảy ra bất thường (như có mùi khét).



- ! Hãy đặt sản phẩm chắc chắn trên đế, phải sử dụng trên mặt phẳng ổn định. Nếu không có thể sẽ làm rơi sản phẩm hoặc bị bỏng.



- ! Trong quá trình sử dụng, mặt bàn ủi của sản phẩm hướng xuống dưới hoặc nghiêng lên trên, sẽ làm cho bình nước không thể cung cấp nước, không ra hơi nước, thậm chí làm tràn nước hoặc điện giật.



CÁCH XỬ LÝ SỰ CỐ

Vui lòng kiểm tra các lỗi dưới đây trước khi liên hệ bộ phận kỹ thuật.

Sự cố	Nguyên nhân	Phương pháp xử lý
Không hoạt động, Đèn hiển thị không sáng	<ul style="list-style-type: none"> ◆ Phích cắm dây nguồn chưa cắm ổn định ◆ Nút nguồn bị hỏng ◆ Cầu chì nhiệt bị hỏng 	<ul style="list-style-type: none"> ▲ Cắm phích cắm nguồn điện vào ổ cắm có điện ▲ Hãy liên hệ nhân viên chuyên môn đến kiểm tra sửa chữa
Không ra hơi nước nhưng đèn hiển thị sáng	<ul style="list-style-type: none"> ◆ Chưa đổ nước vào bình ◆ Chưa nhấn nút phun hơi nước ◆ Sản phẩm chưa vào trạng thái gia nhiệt 	<ul style="list-style-type: none"> ▲ Đổ lượng nước thích hợp vào bình nước ▲ Nhấn nút phun hơi nước ▲ Hãy gia nhiệt rồi mới sử dụng
Hơi nước quá ít	<ul style="list-style-type: none"> ◆ Điện áp quá thấp 	<ul style="list-style-type: none"> ▲ Tránh sử dụng sản phẩm này vào giờ cao điểm Sử dụng điện
Bình nước rò rỉ	<ul style="list-style-type: none"> ◆ Bịt silicon của bình nước mất tác dụng ◆ Bình nước bị nứt 	<ul style="list-style-type: none"> ▲ Liên hệ nhân viên chuyên môn đến sửa

Do hơi nước sinh ra dòng khí khá mạnh va vào bảng điều khiển, bảng điều khiển thỉnh thoảng sẽ có tiếng “phù phù”, đây là hiện tượng bình thường, hãy yên tâm sử dụng.

Khi bộ điều nhiệt độ trong thân máy hoạt động, có lúc sẽ có tình trạng lượng hơi nước ít đi. Sau khi nhiệt độ ổn định, sẽ khôi phục lượng hơi nước. Do nhiệt độ phòng khá cao hoặc ánh sáng trong phòng, sẽ có tình trạng nhìn không rõ hơi nước.

HƯỚNG DẪN XỬ LÝ RÁC THẢI ĐIỆN TỬ

Các nguy hiểm khi không xử lý đúng cách và/hoặc tái chế không phù hợp với rác thải điện tử

Biểu tượng thùng rác có bánh xe gạch chéo trên sản phẩm và sách hướng dẫn sử dụng kèm theo máy đại diện cho sản phẩm và các thiết bị điện tử được quy định trong luật xử lý và quản lý rác thải điện tử năm 2011 và không nên xử lý sản phẩm chung với rác thải sinh hoạt gia đình. Xử lý không đúng cách hoặc tái chế không phù hợp với yêu cầu xử lý rác thải điện tử sẽ gây ra hậu quả nghiêm trọng, khi các chất thải kim loại bị thải ra môi trường sẽ gây hại cho sức khỏe con người.



Những việc nên làm :

- Đưa các thiết bị điện tử hư hỏng cho các trung tâm thu gom rác thải điện tử được ủy quyền gần nơi bạn ở để đảm bảo rằng rác thải điện tử được tiêu hủy hoặc tái chế một cách phù hợp.
- Bỏ các thiết bị điện tử hư hỏng vào thùng rác có biểu tượng thùng rác thải điện tử.
- Liên hệ nhà bán quy trình thu hồi sản phẩm.
- Tham khảo tư vấn trung tâm hỗ trợ khách hàng để biết thêm thiết bị điện tử này có thể sửa chữa được hay không trước khi vứt bỏ.
- Tuyên truyền về sự nguy hiểm của việc xử lý không đúng cách hoặc tái chế không phù hợp các rác thải điện tử.
- Nếu các thiết bị điện tử bạn không dùng đến nữa nhưng vẫn còn hoạt động bình thường hoặc có thể thay thế được thì nên cân nhắc sử dụng lại.

Những việc không nên làm :

- Không vứt bỏ các thiết bị điện tử ở môi trường mở hoặc ở nơi công cộng gây ra ô nhiễm đất và nguồn nước.
- Không vứt bỏ các thiết bị điện tử hư vào rác thải sinh hoạt gia đình.
- Không bán hoặc tặng các thiết bị điện tử hư cho bất kỳ vựa thu mua phế liệu nào. Bất kỳ sự vứt bỏ nào khi chưa được cho phép sẽ bị xử lý theo luật bảo vệ môi trường 1986.

Sản phẩm này tuân thủ tiêu chuẩn ROHS về việc hạn chế sử dụng các chất độc hại gây nguy hiểm trong các thiết bị điện và điện tử. Chúng tôi tự hào đáp ứng mọi tiêu chí nghiêm ngặt trong việc bảo vệ môi trường thế giới bởi ROHS.

ROHS
TIÊU CHUẨN

THÔNG SỐ KỸ THUẬT

Thông số kỹ thuật


Tên sản phẩm		Mã sản phẩm	
Bàn ủi hơi nước cầm tay		AQS-SH2502R(W)-VN	
Điện áp định mức	Công suất định mức	Công suất định mức	Công suất phun tối đa
220V~	1200W	50Hz	250mL

Danh sách đóng gói

Tên	Số lượng	Tên	Số lượng
Bàn ủi hơi nước cầm tay	1	Đầu bàn chải	1
Tên	Số lượng	Tên	Số lượng
Cốc đo	1	Hướng dẫn sử dụng	1

AQUA

AQUA

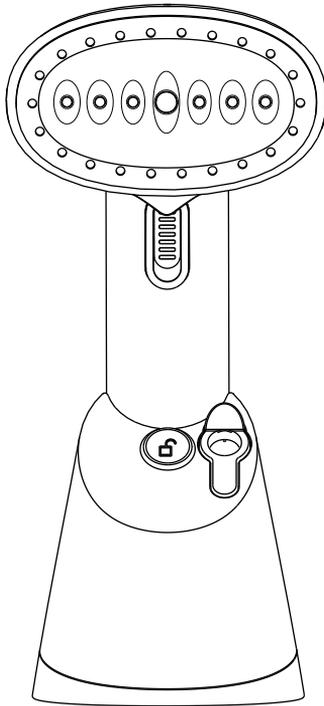

Handheld Garment Steamer

Operation Manual

AQS-SH2502R(W)-VN

Thank you for purchasing this product.
Please read the instructions carefully before use to ensure safety.





Contents

Product Introduction	01
Product Components	02
Operation Instruction	03
Cleaning and Maintenance	05
Cautions	06
Common Problems	10
E-waste guiding manual	11
Technical Specifications	12

PRODUCT INTRODUCTION

- The compact body is easy to store and carry, which is more convenient to use.
- The explosive steam, with super strong steam jet capability, can remove wrinkles instantly, as long as the clothing is ironed, it will be smooth immediately.
- There are two ways to use it, flat or hanging, which make the product easy to care for all-season clothing.
- Operation and control in one click is convenient and fast, and the work status can be clear at a glance.
- The transparent separate water tank is easy to inject the water, which can be observed the water volume at any time.
- There are multiple anti-dry burning designs, which provide comprehensive protection for greater safety and reliability.
- The low-temperature leak-stopping structure ensures that ironing is watertight, making the use of the product more comfortable.

PRODUCT COMPONENTS

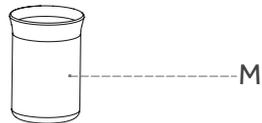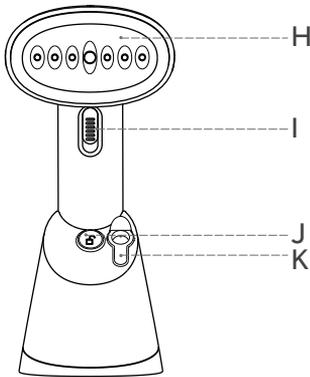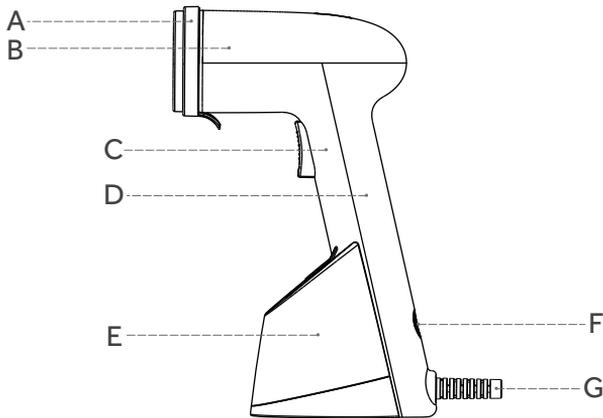

A. Brush front cover
B. Brush upper cover
C. Handle front cover
D. Handle back cover
E. Water tank


F. Power switch
G. Bushing
H. Stainless steel panel
I. Steam switch
J. Water tank latch

K. Water tank lid
L. Hairbrush
M. Measuring glass

OPERATION INSTRUCTION


1. Take out the water tank (Figure 1)

- ① Press and hold the water tank latch and slide outwards.
- ② Remove the water tank.
- ③ Open the water tank lid.

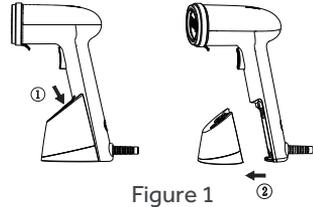

2. Add water to the water tank (Figure 2)

After adding water, cover the water tank.
Put the lid back into the water tank.

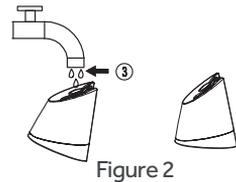


- When adding water to the water tank, keep the water injection port of the water tank in a horizontal position, and then inject the appropriate amount of water to avoid excessive overflow.

3. Start to use (Figure 3)


- ① Ensure that the power plug is inserted into the socket with rated voltage. Press the power switch and the machine will display the blue light, and the red light indicates preheating.
- ② After the preheating is completed, that is, after the red indicator light is off, you can press and hold the steam switch button, then the steam starts to exhaust. Lock down the steam switch button to continue to exhaust the steam.
- ③ When you want to close it, you need to press the power switch, the blue light is not bright, and then unplug the power plug.



Power switch button

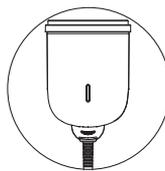

Indicator

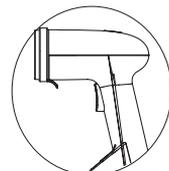

Steam switch button


Figure 3

OPERATION INSTRUCTION


- In the process of use, the power indicator blue light is steady on, if not in use, please press the power switch, the blue light is not bright, if not use in a long term, please unplug the power plug to avoid fire.
- In the process of use, the blue light and the red light will be bright at the same time, which is a normal phenomenon, because the red indicator is bright, indicating that the machine is heating and maintaining the machine temperature to ensure the normal work of the product.

Note: There is a risk of scalds!

Direct contact ironing of silk fabrics and other special fabrics is strictly prohibited.

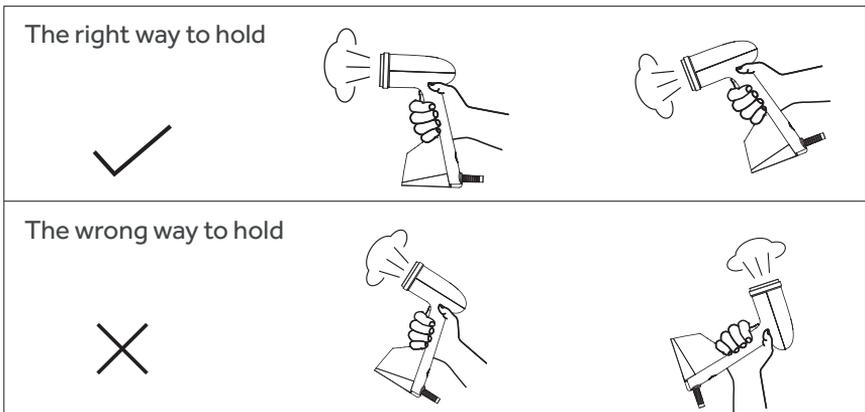

4. After using, there is still high temperature at the ironing head, please first place the machine on the heat insulation mat, waiting for cooling.

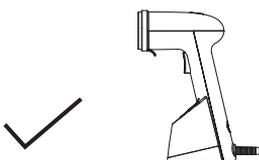

The right way to place




The wrong way to place

CLEANING AND MAINTENANCE

Cleaning, Maintenance and Storage

- ① After turning off the switch and unplugging the power plug, if there is any residual water in the water tank, please pour the residual water first until the machine is completely cooled before cleaning the body.

Power switch button

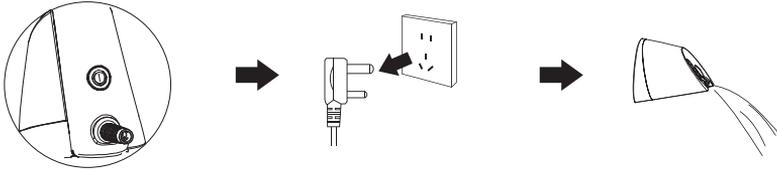

- ② Wipe the surface panel of the product with a soft cloth., when stains appear on the panel, you can use a soft cloth dipped in neutral detergent to wipe.



- ③ Put the power cord properly according to the picture below.



- This machine can not be washed with water, or immersed in water, or it is easy to cause electric shock, short circuit, fire, failure and so on.
- Keep your hands dry when unplugging the power plug.
- Do not use thinners, chemicals, steel brushes or other items that may cause damage or malfunction of the machine. Do not operate the machine with wet hands.
- When the product is not in use, the power plug should be unplugged to ensure that there is no residual water in the whole machine, keep the whole machine clean, and arrange it, and then store it in a ventilated place.

CAUTIONS

Important Safety Tips

In order to reduce the risk of malfunction, electric shock, injury, fire, life safety accidents, and damage to equipment or property, please be sure to follow the relevant precautions described in this manual.

The following signs are used to explain and describe the dangers, injuries and property damage caused by ignoring signs description and improper use:

- ⊘ This sign is used to alert users to notice: The operating steps that is prohibited to take.
- ⚠ This sign is used to alert users to notice: The operating steps that must be followed in order to operate this product safely.


1. Please read this manual carefully before using the product. Infants, children and incapacitated persons are prohibited from using the product.
2. This product is for home use only.
3. The input voltage of the product must conform to the rated voltage marked on the product. Please insert the power plug into the socket completely to avoid fire.
4. Please properly handle the packaging and plug sheath of this product, and keep them away from infants and children to avoid accidents such as suffocation.
5. Please use purified or distilled water.
6. Items that not allowed to use steam: artificial leather, silk braids, cryogenic plastics and cryogenic products.
7. Do not use other parts without the manufacturer's permission. If the machine breaks down due to this reason, the warranty will automatically terminate.
8. After removing the package, check whether the product is damaged and whether the accessories are complete.
9. In case of failure, unplug the power immediately and do not leave the defective product in working condition.
10. If the power soft cord is damaged, it must be replaced by the manufacturer, its maintenance department or professionals in the similar department to avoid danger.
11. When using the product, it should be taken care to prevent the danger due to steam splashing.

CAUTIONS


- Do not touch the steam or face the steam nozzle towards the human body during use to avoid scalds.




- Do not tangle, pull, or roll the power cord to avoid exposing the power cord, causing scalds, electric shock, or fire.

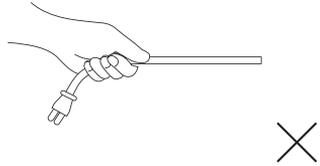

- Do not lay the product sideways to avoid water overflow and damage to the floor, table, or carpet.

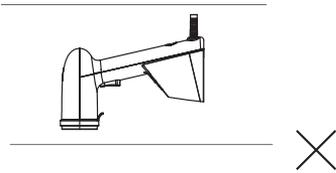


- Do not insert needles or other foreign matters into the steam outlet of the ironing panel to avoid electric shock or scalding.

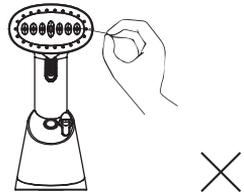

- Do not add perfume, vinegar, starch, detergent or other chemicals to the tank to avoid staining clothing.




- Do not modify, disassemble or repair this product by yourself, otherwise it may cause injury due to abnormal operation, or affect the life span of the machine.

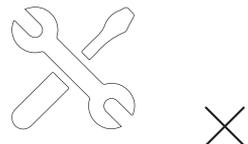


CAUTIONS


- ⊘ When pulling out the power plug, please hold down the plug and pull it out. Do not pull or twist the power supply. Keep your hands dry to avoid electric shock or injury.

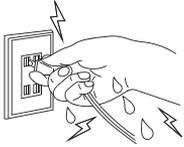


- ⊘ Do not use the external plug of the extension cord, do not share the socket with other products, so as to avoid danger.

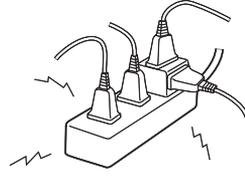


- ⊘ Do not approach water sources, fire sources and flammable materials during use, so as to avoid the possibility of electric shock or fire.

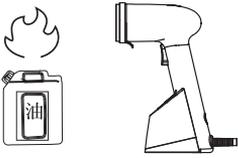

- ⊘ Do not immerse the product in water or other liquids, and do not flush or inject water directly facing the faucet to avoid electric shock or injury.

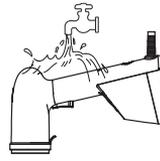

- ❗ This product is only used for ironing clothes. Do not use it on human body to avoid scalds.

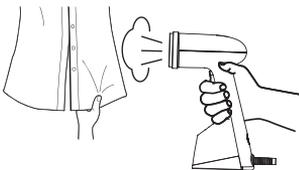


- ❗ When using this product on high-grade or special clothing, please try it in the clothing hiding place first to avoid damage to your clothing.



CAUTIONS

- ! During the ironing process, the panel should not be close to hard objects such as zippers and buttons, otherwise it will cause the bottom plate to scratch.

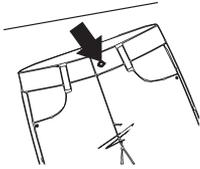


- ! When adding water to the water tank, please watch out the main engine to avoid it flooded or the water in the tank overflows.



- ! When adding water, pouring water, or cleaning and maintaining products, please remove the power plug to avoid electric shock or fire caused by aging insulation of the power cord.




- ! If you do not use it for a long time or not at home, please unplug the power plug. If the machine is in abnormal states (such as burning smell), you should also unplug the power plug immediately.



- ! Please place the product firmly on the base, and use it on a stable level surface. Otherwise, the product may fall down or scald yourself.



- ! In the process of use, the bottom plate of the product is tilted downward or upward, which will cause the water tank to not supply water, exhaust steam, and even cause water overflow or electric shock.



COMMON PROBLEMS

Please check the following points before you entrust the maintenance department to repair.


Fault Phenomenons	Possible Reasons	Handling Methods
Completely not work and the switch indicator is not bright	<ul style="list-style-type: none"> ◆ The power plug is not inserted into the power supply ◆ The power switch is damaged ◆ The thermal fusible cutout is damaged 	<ul style="list-style-type: none"> ▲ Insert the power plug into the live power socket ▲ Please look for the professional to check and repair ▲ Please look for the professional to check and repair
The steam is not exhausted, but the switch indicator is bright	<ul style="list-style-type: none"> ◆ The water tank is not filled with water ◆ The steam switch button is not pressed ◆ The product is still in the preheating state 	<ul style="list-style-type: none"> ▲ Inject appropriate amount of water into the water tank ▲ Press the steam switch button ▲ Please use after the preheating
The steam is too less	<ul style="list-style-type: none"> ◆ The voltage is too low 	<ul style="list-style-type: none"> ▲ Please avoid using the product at the electricity consumption peak
The water tank is leaking	<ul style="list-style-type: none"> ◆ The silicone sealing is out of work ◆ The water tank is broken 	<ul style="list-style-type: none"> ▲ Please look for the professional to repair

Due to the larger airflow generated by steam impact the panel, there is occasionally a "puff" sound at the panel, which is a normal phenomenon, please feel free to use.

When the temperature regulator in the machine body is working, sometimes there is a case of less steam. When the temperature stabilizes, the amount of steam will return to normal. Due to the high room temperature or indoor light, there will be cases that no steam you can see.

HAZARDS OF IMPROPER HANDLING AND/OR IMPROPER RECYCLING OF ELECTRONIC WASTE

This crossed out wheeled bin symbol on the product and its user guide represents the product and its electronic accessories are covered by the E-waste management and handling rules 2011 and the product should not be disposed off with other household waste at the end of their working life. Improper handling or improper recycling of the electronic waste results in hazardous metals/ substances getting released into environment and it is harmful to human health.

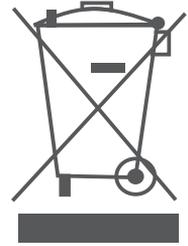

Do's :

- Give discarded electronic equipments only at authorized electronics waste collection centers near you so that e-waste can be disposed or recycled in a proper way.
- Drop the discarded electronic equipments only in the bins meant for the electronic waste
- Ask the retailer about the take back schemes.
- Consult the authorized service center as to whether the electronic equipment can be repaired or not, before discarding the same.
- Tell your neighbors and other persons about the hazards of improper disposal or handling or improper recycling of electronic waste.
- If the unwanted electronic equipments still does work or can be repaired then consider donating them.

Don'ts :

- Don't dump the discarded electronic equipments in open or in any land fill site as the same will result in contaminating the Soil and the ground water
- Don't dispose of the discarded electronic equipments in household bins or municipal bins
- Don't sell or give your discarded electronic equipments to any trash dealer or kabadiwala. any disposal through unauthorized agencies or person will attract action under Environment Protection Act 1986

RoHS
COMPLIANT

This appliance is RoHS compliant, which restricts the use of certain hazardous substances in electrical and electronic equipment. We take pride on meeting the toughest environmental standards in the world as represented by RoHS criteria.

TECHNICAL SPECIFICATIONS

Technical Parameters

Product Name		Product Model	
Handheld Garment Steamer		AQS-SH2502R(W)-VN	
Rated Voltage	Rated Power	Rated Frequency	Water Tank Capacity
220V~	1200W	50Hz	250mL

Packing List

Name	Quantity	Name	Quantity
Handheld Garment Steamer	1	Measuring glass	1
Name	Quantity	Name	Quantity
Hairbrush	1	Manual	1

AQUA

■ 颜色规范



C: 003 M: 000 Y: 000 K: 088



C: 082 M: 047 Y: 000 K: 034