
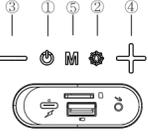

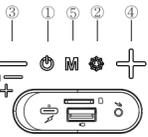


材质: 80g双铜纸
尺寸: 75x75mm

<p>BLUETOOTH SPEAKER Rezo Play pro 2</p>  <p>User Manual</p> <p>Thank you for purchasing Bluetooth Speaker Rezo Play pro 2. Please carefully read user guide in properly and keep this for further reference.</p>	<p>Packing list</p>  <p>1 pc speaker</p>  <p>1 pc Type-C charging cable</p>  <p>1 pc user manual</p>	<p>Product specifications: Bluetooth version: V5.4 Working distance: 10m SNR: >90db Battery: 7.4V 3000mAh Playing time: about 4-5 hour Speaker Power: 4Ω/15W*2 Frequency response: 120Hz-20KHz Unit size: 296*122.4*162mm Unit weight: about 1500g (not includ accessories) Charging: 5V/2A Charging time: about 4 tiếng</p> <p>Key function direction</p>  <ol style="list-style-type: none"> Power/Pause Button LED Switch Previous track/Volume down Next track/Volume up Pause button 	<p>① Power Button</p> <p>Power On: Long press the power button for 3 seconds in the shutdown state; when the speaker starts up, the speaker will sound "ting, ting, ting, bluetooth mode" and the blue light flashes. Power off: Long press the power button for 3 seconds in the boot state to shut down the speaker. The speaker will sound "ting, ting, ting" and the blue light turns off. When play music, short press for play/pause.</p> <p>Bluetooth Connection</p> <ol style="list-style-type: none"> Press and hold the power key for 3s to start the machine, there is a prompt tone, Bluetooth enters the pairing mode, and the blue indicator flashes quickly. The first connection, turn on the mobilephone/laptop..., turn on Bluetooth, search for the Bluetooth code name " Rezo Play pro 2 " and click; after a few seconds, you will hear the prompt tone "ting ting ting" of successful pairing and connection, the mobile phone displays connected, and the blue light is on. In subsequent use, as long as the device's bluetooth is turned on, it can be automatically connected. If you want to connect to another device, double press and hear the prompt tone. 	<p>② LED Switch</p> <p>Press short for option of the LED flashing light TWS: While at the same time open two devices and not connected in the bluetooth mode, press the " " key for 2-3 seconds either of the speaker until hear the sound, you will hear the prompt tone of successful pairing and connection. You search for the Bluetooth and click to use this function. Press " " key about 3s to cancel TWS function. In FM mode, press short to search station automatically, press again to stop searching.</p> <p>③ Previous track/Volume down</p> <p>Short press " - " button when playing music, the player will play the last track. Long press " - " to decrease the volume continuously.</p> <p>④ Next track/Volume up+</p> <p>Short press " + " button when playing music, the player will play the Next track; Long press " + " to decrease the volume continuously.</p>	<p>⑤ Pause button</p> <p>When play music (USB card/TF Card/Bluetooth) Short press for "Play/Pause".</p> <p>FM mode</p> <p>In FM mode, press short button to search station automatically, press again to stop searching. Then, press short "+", "-" to choose the FM station. Note: In the FM mode, put in micro charging cable or AUX cable to increase the FM radio signal.</p> <p>Telephone function</p> <p>When calling, short press pause button to answer, double-click to refuse, short press pause button to answer, double-click to refuse, short press pause button to answer, double-click to refuse, short press pause button to answer, double-click to refuse.</p> <p>Attentions:</p> <ol style="list-style-type: none"> Do not use abrasive cleaners to clean this product. Do not allow this product to be heated, close to fire source or direct sunlight for a long time. It will easy to burn and damage the electronic components. Do not attempt to disassemble this product to make any modifications. 	<ol style="list-style-type: none"> Do not use this product in the rain. If you do not plan to use this product for a long time, please store it in a dry environment and charge the speaker at least once a month to prolong its life and avoid extreme temperatures and dust. If you saw smoke coming out of the machine or other improper phenomenon , please contact the retailer to solve the issue immediately. Do not throw the machine. If this speaker crash during use, you can press and hold the power button for 8 seconds to reset and shut down. USB card pls use FAT32 format. Speaker will close automatically after 30 mins if disconnect Bluetooth & torchlight not working <p>Note! In order to improve product performance, our products are constantly updated. It is no additional notice about technical issues and this manual is for reference only, please forgive. Thank you for your purchase.</p>
---	---	---	---	--	---	---

<p>LOA BLUETOOTH Rezo Play pro 2</p>  <p>Hướng dẫn sử dụng</p> <p>Cảm ơn bạn đã lựa chọn Loa Bluetooth Rezo Play pro 2. Vui lòng đọc kỹ hướng dẫn để sử dụng đúng cách và giữ lại để tham khảo thêm.</p>	<p>Bộ sản phẩm gồm</p>  <p>1 loa bluetooth</p>  <p>1 dây sạc loa type C</p>  <p>1 hướng dẫn sử dụng</p>	<p>Thông số kỹ thuật sản phẩm: Phiên bản bluetooth: V5.4 Khoảng cách làm việc: 10m SNR: >90db Pin: 7.4V 3000mAh Thời gian phát nhạc: khoảng 4-5 tiếng (tùy âm lượng) Công suất loa: 4Ω/15W*2 Tần số: 120Hz-20KHz Kích thước: 296*122.4*162mm Trọng lượng: khoảng 1500 g (không bao gồm phụ kiện) Sạc: 5V/2A Thời gian sạc: khoảng 2-3 tiếng</p> <p>Chức năng các phím</p>  <ol style="list-style-type: none"> Nút nguồn/tạm dừng Nút điều khiển đèn Phát bài nhạc trước đó /Giảm âm lượng Phát bài nhạc tiếp theo/Tăng âm lượng Nút tạm dừng 	<p>① Nút nguồn</p> <p>Bật nguồn: Nhấn và giữ nút nguồn trong 3 giây ở trạng thái tắt máy, loa sẽ vang lên "tinh, tinh, bluetooth mode" và đèn xanh lam nhấp nháy. Tắt nguồn: Nhấn và giữ nút nguồn trong 3 giây ở trạng thái khởi động để tắt loa, loa sẽ vang "tinh tinh tinh" và đèn xanh lam tắt. Khi phát nhạc nhấn nhanh để phát/tạm dừng.</p> <p>Kết nối Bluetooth</p> <ol style="list-style-type: none"> Nhấn và giữ phím nguồn trong 3s để khởi động máy, có âm báo nhắc, Bluetooth chuyển sang chế độ chờ ghép nối và đèn báo màu xanh lam nhấp nháy nhanh. Lần đầu tiên kết nối, bật điện thoại di động/ máy tính..., bật Bluetooth, tìm kiếm tên Bluetooth " Rezo Play pro 2 " và nhấp vào; sau vài giây, bạn sẽ nghe thấy âm báo nhắc ghép nối "tinh tinh tinh" và kết nối thành công, điện thoại di động hiển thị được kết nối và đèn xanh lam sẽ sáng. Trong lần sử dụng tiếp theo, Loa có thể tự động kết nối khi Bluetooth của thiết bị mà được kết nối gần nhất đang mở. Nếu muốn kết nối với thiết bị khác, nhấn hai lần nút và sẽ có âm thanh vang lên. 	<p>② Nút điều khiển đèn</p> <p>Nhấn nhanh phím đèn để tùy chọn chế độ đèn LED TWS: Trong khi cùng lúc mở hai thiết bị và không kết nối ở chế độ bluetooth, hãy nhấn phím " " trong 2-3 giây cho đến khi nghe thấy âm thanh, bạn sẽ nghe tiếng báo hiệu cho sự kết nối thành công. Bạn tìm ở thiết bị kết nối Bluetooth và nhấn vào để sử dụng chức năng này. Nhấn phím " " khoảng 3 giây để hủy chức năng TWS. Ở chế độ FM, nhấn nhanh để tự động tìm đài phát, nhấn lần nữa để dừng tìm kiếm.</p> <p>③ Phát bài nhạc trước đó /Giảm âm lượng</p> <p>Nhấn nhanh nút " - " khi phát nhạc, loa sẽ phát bài hát trước đó. Nhấn và giữ " - " để giảm âm lượng.</p> <p>④ Phát bài nhạc tiếp theo/Tăng âm lượng</p> <p>Nhấn nhanh nút " + " khi phát nhạc, loa sẽ phát bài hát tiếp theo. Nhấn và giữ " + " để tăng âm lượng liên tục.</p>	<p>⑤ Nút tạm dừng</p> <p>Khi phát nhạc (thẻ USB/Thẻ TF/Bluetooth) Nhấn nhanh để "Phát/Tạm dừng".</p> <p>Chế độ FM</p> <p>Ở chế độ FM, nhấn nhanh nút để tự động tìm đài phát, nhấn lần nữa để dừng tìm kiếm. Sau đó, ấn nhanh nút "+", "-" để chọn kênh FM. Chú ý: Ở chế độ FM, cắm cáp sạc micro hoặc cáp AUX để tăng tín hiệu đài FM.</p> <p>Chức năng cho cuộc gọi</p> <p>Khi có cuộc gọi đến, bấm nhanh tạm dừng để trả lời, bấm 2 lần để từ chối, bấm nhanh để ngắt cuộc gọi sau khi kết nối.</p> <p>Chú ý:</p> <ol style="list-style-type: none"> Không sử dụng chất tẩy rửa mài mòn để làm sạch sản phẩm. Không để Loa bị làm nóng, gần nguồn lửa hoặc tiếp xúc trực tiếp với ánh nắng mặt trời trong thời gian dài, nó sẽ dễ làm cháy và hỏng các linh kiện điện tử. Không cố gắng tháo rời sản phẩm này để thực hiện bất kỳ sửa đổi nào. 	<ol style="list-style-type: none"> Không sử dụng sản phẩm này dưới trời mưa. Nếu bạn không định sử dụng sản phẩm này trong một thời gian dài, vui lòng bảo quản nó ở nơi khô ráo và sạc loa ít nhất một tháng một lần để kéo dài tuổi thọ của loa cũng như tránh nhiệt độ quá cao và bụi. Nếu nhìn thấy khói bốc ra từ máy hoặc hiện tượng bất thường khác vui lòng liên hệ với nhà bán lẻ để giải quyết vấn đề ngay lập tức. Không tác động mạnh hay để vật nặng lên loa. Nếu loa này bị lỗi trong quá trình sử dụng, bạn có thể nhấn và giữ nút nguồn trong 8 giây để đặt lại và tắt. Loa sẽ tự động đóng sau 30 phút nếu ngắt kết nối Bluetooth & đèn không hoạt động <p>Chú ý! Để nâng cao hiệu suất của sản phẩm, sản phẩm của chúng tôi được cập nhật liên tục. Nội dung có thể thay đổi mà không báo trước và sách hướng dẫn này chỉ mang tính chất tham khảo, mong bạn thứ lỗi. Cảm ơn bạn vì đã mua hàng.</p>
--	---	---	--	--	--	--