

SHARP



NỒI CƠM ĐIỆN TỬ

KS-IH10IX-WH

Vui lòng đọc kỹ hướng dẫn này trước
khi sử dụng thiết bị.

HƯỚNG DẪN SỬ DỤNG



CÁC BIỆN PHÁP AN TOÀN QUAN TRỌNG

Các biện pháp an toàn này được đặt ra nhằm ngăn ngừa thương tích.
Bảng sau đây cho biết mức độ nguy hiểm do thao tác sai:

△CẢNH BÁO: Chỉ ra nguy hiểm có thể gây tử vong.

△THẬN TRỌNG: Chỉ ra nguy hiểm có thể gây thương tích cho con người hoặc thiệt hại tài sản.

 CẢNH BÁO	
1. Cấm sửa đổi. Không tự ý sửa đổi hoặc sửa chữa bởi người không được ủy quyền, vì có thể gây cháy nổ, điện giật hoặc thương tích. Vui lòng liên hệ đại lý dịch vụ hoặc trung tâm bảo hành của công ty để được hỗ trợ.	2. Không nhúng thiết bị vào nước hoặc đổ chất lỏng khác lên thiết bị. Nếu không, có thể gây đoản mạch hoặc điện giật.
3. Không sử dụng nguồn điện khác ngoài điện áp định mức (220V).	4. Cấm thiết bị vào một ổ điện riêng biệt, nếu không có thể gây ra điện giật, cháy hoặc quá nhiệt.
5. Không làm hỏng dây nguồn. Không cắt, uốn cong mạnh, kéo căng, xoắn hoặc buộc dây nguồn. Không đặt gần nguồn nhiệt hoặc để vật nặng đè lên dây nguồn. Nếu không, có thể gây cháy hoặc điện giật.	6. Vệ sinh phích cắm điện thường xuyên. Nếu phích cắm bị bẩn, hãy lau sạch để tránh nguy cơ cháy nổ.
7. Không sử dụng dây nguồn bị hỏng. Khi có dòng điện trong dây nguồn, phích cắm sẽ trở nên nóng. Nếu ốc vít của phích cắm lỏng hoặc có thể di chuyển, không được sử dụng vì có thể gây ra sự cố chập mạch hoặc cháy.	8. Thiết bị này không dành cho trẻ em hoặc những người khác mà không có sự trợ giúp hoặc giám sát nếu khả năng thể chất, giác quan hoặc tinh thần của họ ngăn cản việc sử dụng thiết bị một cách an toàn. Trẻ em cần được giám sát để đảm bảo rằng chúng không chơi đùa với thiết bị.
9. Không chèn các vật dụng kim loại hoặc bất kỳ vật thể lạ nào. Không chèn các vật kim loại như ghim, kim, hoặc bất kỳ vật thể lạ nào vào các cửa thoát khí hoặc bất kỳ phần nào của thiết bị, vì điều này có thể gây điện giật hoặc sự cố thiết bị.	

 CẢNH BÁO	
1. Rút phích cắm khi không sử dụng. Thiết bị bị nứt hoặc hư hỏng có thể gây rò rỉ điện, chập điện hoặc cháy nổ.	2. Không nhúng thiết bị vào nước hoặc nguồn nhiệt vì có thể gây rò rỉ điện hoặc sốc điện.
3. Không chạm vào nắp hơi khi thiết bị đang được mang hoặc di chuyển. Điều này có thể gây bỏng. Cần giám sát chặt chẽ nếu có trẻ em xung quanh trong khi nấu.	4. Không thay thế nồi bên trong bằng container khác. Điều này có thể dẫn đến nhiệt độ cao hơn và gây bỏng.
5. Sử dụng trên bề mặt phẳng và ổn định. Sử dụng trên bề mặt không bằng phẳng có thể làm rơi thiết bị và gây ra hỏa hoạn.	6. Cắm chặt phích cắm khi rút ra. Việc rút phích cắm không đúng cách có thể gây ra sự cố chập điện hoặc hỏa hoạn.

Trong quá trình sử dụng

1. Không sử dụng trong điều kiện như ánh nắng trực tiếp hoặc bị bắn dầu ăn.	2. Hãy cẩn thận với dây nguồn. Không để dây nguồn gần bất kỳ bề mặt nóng nào.
3. Vệ sinh nồi trong. Lau sạch cơm hoặc giọt nước trên thân nồi trong, đáy nồi, mâm nhiệt và cảm biến.	4. Không che nắp ngoài bằng vải. Trong quá trình nấu, không che nắp bằng vải, nếu không, có thể gây hỏng, biến dạng các vật gần đó và thay đổi màu sắc của nắp bên trong lớp đệm nắp.

Nắp trong bằng Nhôm

* Vui lòng tháo ra vệ sinh sau mỗi lần sử dụng

Nắp trong bằng Nhôm

* Vui lòng tháo ra vệ sinh sau mỗi lần sử dụng

Lồng nồi, Nồi con

Cảm biến Nhiệt độ

Van thoát hơi

Không chạm vào hay che phủ khi đang

Phím cảm ứng

Màn hình hiển thị

Nút mở nắp.

Nhấn để mở nắp

Gioăng nắp

Tay cầm

Mâm Từ

Nắp nồi

Ổ cắm điện

Dây nguồn

Phích cắm điện

Phụ Kiện



Cốc đong (1 cái ,khảo 180ml)



Muỗng xới cơm



Muỗng canh



Xứng hấp bằng nhựa (1 cái)

Lưu ý đặc biệt:
Đối với các thay đổi như nâng cấp công nghệ sản phẩm, thay đổi về hình thức sản phẩm và tối ưu hóa chức năng, vui lòng tham khảo sản phẩm thực tế.

THÔNG SỐ KỸ THUẬT

Điện áp: AC220V 50Hz

MẪU MÁY	CÔNG SUẤT	DUNG TÍCH NẤU	KÍCH THƯỚC BÊN NGOÀI			TRỌNG LƯỢNG	CHIỀU DÀI DÂY NGUỒN
			CHIỀU CAO	CHIỀU SẴU	CHIỀU RỘNG		
KS-IH10IX-WH	1100W	Cơm 0,36-1,0L (2-5 cốc)	326mm	255mm	220mm	4.6kg	1.0m
		Cháo 0,09-0,18L (0,5-1 cốc)					

Chuẩn bị Các bước cơ bản	
1. Đo gạo bằng cốc đo đi kèm Sử dụng cốc đo đi kèm để đo một cốc gạo, tương đương khoảng 180ml.	Đúng Sai
2. Vo gạo nhanh chóng và kỹ lưỡng cho đến khi nước trong. Vui lòng sử dụng máy rửa gạo hoặc dụng cụ chứa khác để rửa gạo. ① Vo gạo bằng cách đổ nước vào, khuấy nhẹ, rồi ngay lập tức đổ nước đi. ② Sau đó, lặp lại quá trình vo gạo và xả nước cho đến khi nước trong.	
3. Điều chỉnh mức nước theo thang đo được chỉ định trong menu. Vui lòng làm cho bề mặt gạo bằng phẳng và điều chỉnh mức nước trên một bề mặt phẳng. Xác định lượng nước cần thêm dựa trên menu và số lượng cốc gạo. Lúc này, bạn cũng nên điều chỉnh theo loại gạo và sở thích cá nhân. Khi nấu cháo/súp/cháo đặc, không nên thêm nước vượt quá mức nước cháo tối đa trên nồi trong.	Ví dụ, nếu bạn muốn nấu 2 cốc gạo, hãy cho 2 cốc gạo đã rửa vào nồi trong, sau đó thêm nước đến mức nước "2" trên thang đo mức nước.
4. Đặt nồi trong vào thân máy và đóng nắp lại. Vui lòng lau sạch các giọt nước và vật lạ ở bên ngoài nồi trong, đáy nồi, đĩa nhiệt và cảm biến. Vui lòng đặt nồi trong nhẹ nhàng vào thân máy, đảm bảo kiểm tra xem nồi đã được đặt đúng và ổn định. Vui lòng chắc chắn rằng bộ phận phá bọt và nắp trong đã được lắp đặt đúng. Nếu nắp trong không được lắp đúng, nắp ngoài sẽ không thể đóng lại.	
5. Kết nối dây nguồn Cắm dây nguồn theo thứ tự: ① Cắm vào phía thân máy ② Cắm vào ổ cắm điện Vui lòng đảm bảo rằng phích cắm đã được cắm hoàn toàn.	① Dây nguồn phích cắm đuôi Thân máy ② Phích cắm dây nguồn Ổ cắm

Bảng điều khiển

(trong trường hợp có sự khác biệt, đơn vị vật lý sẽ được ưu tiên)

Cài đặt trước: Chọn cài đặt trước

Chế độ: Chọn chế độ nấu

Hẹn giờ

Giữ ấm Hủy

Nấu cơm Súp

Nấu nhanh Hấp

Cháo Bánh

< 88:88 >

Sữa chua Cơm cháy Ngủ cốc

Hẹn giờ Giữ ấm

Thực đơn

Bắt đầu

Giữ ấm / Hủy: Nhấn ngắn để vào chế độ giữ ấm khi ở trạng thái chờ, nhấn và giữ lâu để quay lại chế độ chờ khi ở trạng thái làm việc/trạng thái cài đặt trước/trạng thái giữ ấm/trạng thái điều chỉnh thời gian.

Bắt đầu: Bắt đầu vào trạng thái làm việc, cài đặt thời gian hẹn giờ và thời gian nấu.

Chế độ chờ:

Sau khi bật nguồn, tất cả các chức năng trong khu vực hiển thị sẽ sáng lên, kèm theo một âm thanh bíp.

Chế độ tiết kiệm điện:

Trong chế độ chờ, nếu không có thao tác trong 15 giây, chương trình sẽ tự động vào chế độ ngủ, màn hình số và các đèn khác sẽ tắt. Nhấn bất kỳ phím nào để đánh thức màn hình.

Hẹn giờ

Giữ ấm Hủy

Nấu cơm Súp

Nấu nhanh Hấp

Cháo Bánh

< 88:88 >

Sữa chua Cơm cháy Ngủ cốc

Hẹn giờ Giữ ấm

Thực đơn

Bắt đầu

Chế độ chờ

Hẹn giờ

Giữ ấm Hủy

:

Thực đơn

Bắt đầu

Chế độ tiết kiệm điện

Loại nấu và Cài đặt:

Chế độ	Dòng thang đo tương ứng	Giờ hoạt động mặc định	Giờ hoạt động tối thiểu	Giờ hoạt động tối đa	Bước điều chỉnh thời gian	Cho phép thời gian cài đặt trước
Nấu cơm	Nấu cơm	1:00	/	/	/	1:10-23:50
Nhanh	Nấu cơm	0:30	/	/	/	0:40-23:50
Cháo	Cháo	1:30	1:00	3:00	00:10	1:10-23:50
Súp	/	2:00	2:00	3:00	00:10	2:10-23:50
Hấp	/	0:10	0:01	1:00	00:01	0:11-23:50
Bánh	/	0:30	0:20	0:45	00:05	/
Sữa chua	/	8:00	8:00	12:00	00:30	/
Cơm cháy	Nấu cơm	1:20	1:00	1:30	00:05	1:10-23:50
Ngũ cốc	Hỗn hợp	1:30	/	/	/	1:40-23:50


Hướng dẫn sử dụng chức năng hấp:

Khi sử dụng chức năng hấp, thời gian hấp mặc định là 15 phút. Bạn có thể điều chỉnh thời gian hấp bằng cách nhấn nút < > theo sở thích cá nhân và độ mềm của nguyên liệu, để đảm bảo kết quả hấp thực phẩm tốt nhất.

Chế độ	Giới hạn nấu
Nấu cơm	1-5 cốc
Nhanh	1-5 cốc
Cháo	0,5-1 cốc
Cơm cháy	1-5 cốc
Ngũ cốc	1-3 cốc


Phương pháp nấu:

1. Nhấn nút Chế độ để chọn chế độ nấu.

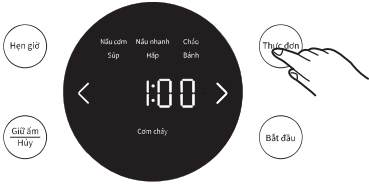

- Mỗi lần nhấn nút "Thực Đơn", các biểu tượng chức năng "Nấu cơm chậm , Nhanh, Cháo, Súp, Hấp, Bánh, Sữa chua, Nồi đất, Ngũ cốc" sẽ lần lượt xuất hiện.
- Khi chọn các chức năng "cơm niêu, cháo, hấp, làm bánh, sữa chua", phím điều chỉnh thời gian "<>" luôn sáng để cài đặt thời gian nấu.
- Chương trình mặc định là chức năng " Nấu cơm chậm ".

2. Nhấn nút Bắt đầu để bắt đầu nấu.

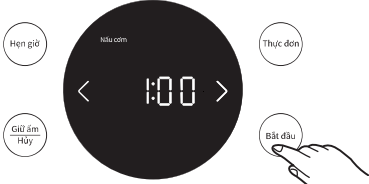

- Sau khi bắt đầu nấu, đèn chức năng đã chọn sẽ vẫn sáng, màn hình kỹ thuật số hiển thị thời gian còn lại và bắt đầu đếm ngược.
- Nếu bạn cần kết thúc trạng thái làm việc giữa chừng, hãy nhấn và giữ nút "Giữ ấm/Hủy" để trở về chế độ chờ.

3. Tự động vào chế độ "Giữ ấm".



- Sau khi đếm ngược kết thúc, còi sẽ kêu dài, báo hiệu rằng quá trình nấu đã hoàn tất, và trạng thái hoạt động sẽ tự động chuyển sang chế độ giữ ấm, với chức năng giữ ấm được bật sáng.
- Để kết thúc chức năng "Giữ ấm" trong vòng 12 giờ, nhấn và giữ nút "Keep Warm/Cancel" để quay lại chế độ chờ, sau đó rút phích cắm.
- Khuyến cáo không nên giữ thức ăn ấm quá 7 giờ (một số loại thực phẩm có thể gây mùi hôi và chuyển màu nâu).

Phương pháp hẹn giờ nấu: Nấu món ăn vào thời gian đã đặt

1. Nhấn nút Chế độ, và chọn chế độ nấu mong muốn.



- Mỗi lần nhấn nút "Thực đơn", các biểu tượng chức năng "Nấu cơm chậm", "Nấu nhanh", "Cháo", "Súp", "Hấp", "Bánh", "Sữa chua", "Nồi đất", "Ngũ cốc" sẽ lần lượt xuất hiện.
- Khi chọn các chức năng "cơm niêu, cháo, hấp, sữa chua", phím điều chỉnh thời gian "<>" luôn sáng để cài đặt thời gian nấu.
- Chương trình mặc định là chức năng "Nấu cơm chậm".

2. Nhấn nút Cài đặt trước để bắt đầu nấu.



- Các chức năng "Nấu cơm chậm", "Nấu nhanh", "Cháo", "Súp", "Hấp", "Niêu đất", "Ngũ cốc" có thể được lên lịch.
- Sau khi nhấn nút "Cài đặt trước", đèn chức năng hẹn giờ vẫn sáng, màn hình kỹ thuật số hiển thị thời gian cài đặt trước mặc định và nhấp nháy.
- Chức năng cài đặt trước sẽ cộng thêm 10 phút vào thời gian nấu thực tế của mỗi món ăn, với thời gian đặt trước tối đa là 24 giờ.

3. Nhấn nút < > để cài đặt thời gian hẹn giờ.



- Nhấn phím "<" để cài đặt thời gian hẹn, phím ">" tăng dần theo từng giờ, phím ">" tăng dần theo từng phút, thời gian hẹn tối đa là 24 giờ.
- Ví dụ, để cài đặt thời gian nấu cơm là 4 giờ, hãy nhấn nút ">" điều chỉnh thời gian và cài đặt thời gian là 4:00.
- Không nên đặt thời gian quá 15 tiếng. (Một số nguyên liệu có thể bị hỏng khi giữ ấm quá lâu, ảnh hưởng chất lượng và hương vị món ăn,...)

4. Nhấn nút Bắt đầu.



- Nhấn nút "Bắt đầu" để vào trạng thái hẹn giờ và thông báo "Bắt đầu nấu".
- Chọn chức năng và đèn sẽ sáng, màn hình hiển thị đếm ngược thời gian hẹn giờ.
- Sau khi đếm ngược 4 giờ, chương trình nấu sẽ hoàn thành.
- Tùy theo nhu cầu hẹn giờ khác nhau, chương trình sẽ điều chỉnh thời gian hẹn giờ theo cài đặt, và màn hình đếm ngược sẽ kết thúc khi công việc hoàn tất.

5. Chế độ giữ ấm tự động




- Sau khi đếm ngược kết thúc, chuông báo sẽ reo liên tục, cho biết quá trình nấu đã hoàn thành, và trạng thái hoạt động sẽ tự động chuyển sang chế độ giữ ấm, với đèn báo giữ ấm vẫn sáng.
- Để giữ ấm trong 12 giờ, nếu bạn muốn kết thúc chức năng "Giữ ấm" giữa chừng, vui lòng nhấn và giữ nút "GIỮ ẤM/HỦY" để quay lại chế độ chờ, sau đó rút phích cắm.
- Khuyến nghị không giữ ấm thực phẩm quá 7 giờ. (Một số loại thực phẩm có thể gây mùi hôi và đổi màu.)

Rút phích cắm sau khi nồi cơm điện đã nguội trước khi làm sạch.

Thân nồi cơm điện, nắp nồi.


Vui lòng không sử dụng chất tẩy rửa, bàn chải, chất tẩy rửa hóa học hoặc acetone. Lau bằng khăn vắt kiệt nước.

Sau khi vệ sinh, vui lòng lắp lại nắp trong đúng cách.

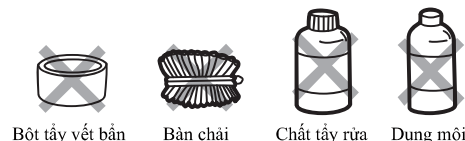

Nồi trong, nắp trong, thìa múc cơm, v.v.

Vui lòng sử dụng miếng bọt biển hoặc các vật dụng mềm khác để làm sạch các vật sau.

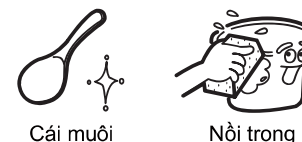

Cảm biến nhiệt độ


Khi có hạt gạo hoặc vết bẩn bám vào, hãy sử dụng giấy nhám mịn (khoảng 3) nhẹ nhàng chà xát, sau đó lau sạch bằng khăn vắt nước.

Lưu ý

- Khi làm sạch nồi trong và nắp trong, hãy cẩn thận để không làm biến dạng chúng.
- Đợi nắp nguội trước khi tháo bộ ngắt bột ra khỏi nắp để vệ sinh.
- Khi làm sạch bộ ngắt bột, hãy mở ra và vệ sinh bên trong.
- Khi vệ sinh, hãy cẩn thận không làm mất con dấu trong bộ ngắt bột.


Tháo lắp nắp trong

■ Tháo nắp trong

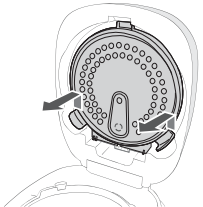

① Nắm tay cầm bên trong và nhấn lên đồng thời kéo ra.

■ Lắp đặt nắp trong

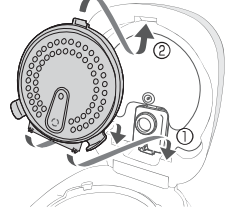


① Nắm tay cầm của nắp trong và đưa phần nhô ra của nắp trong vào vị trí lắp đặt trên nắp ngoài.
② Nắm tay cầm của nắp trong, đẩy nắp vào bên trong, sau đó thả tay cầm nắp trong.

Nếu nắp trong không được lắp đặt hoặc lắp không đúng cách, nắp ngoài sẽ không thể đóng lại và đây không phải là lỗi. Vui lòng lắp đúng nắp trong trước khi sử dụng.


Tháo lắp bộ chặn bọt

■ Tháo bộ chặn bọt

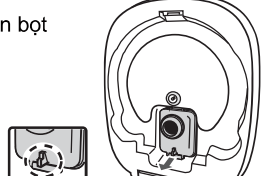

Sau khi tháo nắp trong, bộ chặn bọt sẽ lộ ra, dùng một tay nắm hai bên tay cầm của bộ chặn bọt và kéo ra theo chiều ngang.

■ Lắp bộ chặn bọt

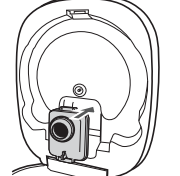

Căn chỉnh miệng bộ chặn bọt với vị trí lắp đặt lỗ thoát hơi và từ từ ấn vào đúng vị trí.



Nắp dưới của bộ chặn bọt
Chốt khóa
Dài gioăng vuông
Gioăng O

① Tháo rời: Sau khi mở khóa nắp dưới của bộ chặn bọt, mở bộ chặn bọt để lấy dài gioăng vuông ra; kéo gioăng tròn ra trực tiếp.
② Lắp đặt: Đưa dây nắp trên của bộ chặn bọt vào các kẹp của nắp dưới bộ chặn bọt, đóng bộ chặn bọt lại, sau đó khóa chốt cố định.

Điểm kiểm tra		Các tình huống xảy ra											
Sau khi nấu	Quá cứng	x		x	x	x	x						
	Nấu chưa chín	x		x	x	x	x	x	x				
	Quá mềm	x		x	x					x			
Giữ ấm	Trở nên cứng			x	x	x	x	x	x	x	x		
	Có mùi khó chịu		x	x	x	x	x	x	x		x	x	x
	Thay đổi màu sắc		x	x	x	x	x				x		
Nước bắn và tràn ra ngoài		x	x	x	x			x					x
Hơi nước thoát ra từ nắp					x	x	x						x
Cài đặt trước chế độ nấu	Bắt đầu ngay lập tức							Có thực hiện cơ sở cài đặt sẵn chế độ cài đặt trên thời gian cài đặt ngắn hơn thời gian cần thiết không?					
	Độ trễ thời gian sau khi hoàn tất nấu ăn							Có thể bị trì hoãn khoảng 10 phút khi lượng gạo nhiều hơn hoặc nhiệt độ nước thấp hơn.					
Chức năng bật và tắt không hoạt động								Tất cả đã được cài đặt ở vị trí chính xác chưa? Cổng cảm đã được cắm vào ổ điện hoặc nội dung chưa?					
Phát ra âm thanh trong quá trình nấu								Đây là âm thanh do điều chỉnh nguồn điện hoặc giãn nở và đồng thời gây ra.					
Lỗ thoát hơi phát ra âm thanh khi nấu								Âm thanh phát ra khi hơi nước thoát ra từ cổng thoát hơi, không phải là lỗi kỹ thuật.					
Khó đẩy nắp nồi								Có hạt gạo nào kẹt bên trong nút bấm không? Hãy bảo vệ sinh vết thương hoặc hạt động trong khe bằng một que bông nhỏ.					

Nếu gặp bất kỳ vấn đề nào như dưới đây, vui lòng liên hệ với trung tâm chăm sóc khách hàng của công ty chúng tôi:

- Gặp phải sự cố như sau:

F1

F2

F3

F4
- Nếu có sự cố xảy ra trong quá trình vận hành, chẳng hạn như nước hoặc gạo rơi vào thân máy mà không có nồi trong.
 - Mặc dù quá trình nấu chưa hoàn thành nhưng bề mặt của nồi trong không nóng và đèn sáng đột ngột tắt.
 - Đáy, bên hông, hoặc viền trên của nồi trong bị không đều (cần thay nồi trong).
 - Nồi không vận hành như bình thường.

KIỂM TRA

Để sử dụng sản phẩm một cách an toàn và lâu dài

Nếu xảy ra các tình huống sau	Cách xử lý
• Dây nguồn và phích cắm bị nổ ra, biến dạng, đổi màu hoặc hư hỏng. • Một phần của dây nguồn hoặc phích cắm nóng hơn bình thường. • Có hiện tượng mất điện hoặc mất nguồn khi di chuyển dây nguồn. • Nồi cơm điện thường xuyên nóng bất thường và có mùi khó chịu. • Xuất hiện tiếng ồn hoặc rung động bất thường trong quá trình vận hành.	Ngừng sử dụng thiết bị. Liên hệ với trung tâm dịch vụ địa phương hoặc trung tâm dịch vụ của công ty.
• Có bụi hoặc rác trên phích cắm hoặc ổ cắm.	Loại bỏ bụi và rác.

SHARP



NỒI CƠM ĐIỆN TỬ ELECTRONIC RICE COOKER

KS-IH10IX-WH

**Vui lòng đọc kỹ hướng dẫn này trước
khi sử dụng thiết bị.**

Please read these instruction carefully before
operating the appliance.



HƯỚNG DẪN SỬ DỤNG
Instruction Manual

IMPORTANT SAFEGUARDS

These safety precautions are set in order to prevent injuries. The following chart indicates the degree of damage caused by wrong operation:

⚠ WARNING: Indicates hazard that may cause death.


⚠ CAUTION: Indicates hazard that may cause human injuries or property damage.

 WARNING	
1. Prohibit to modify. Do not modify or repair by unauthorized personnel which may caused fire, electrical shock and injury. Please contact service agent or company service center for any assistance.	2. Do not immerse the appliance into water or pour other liquid on the appliance. Otherwise it will cause short-circuit or electric shock.
3. Do not use other than the rated voltage (220V).	4. Plug the appliance into a single electrical outlet only. Otherwise, electric shock, fire or heat may be caused.
5. Do not damage the power cord. Do not process, forcibly bend, pull by force, twist or bind the power cord. Do not place it near heat sources, or place heavy objects on the power cord. Otherwise fire or electric shock may be caused.	6. Clean the power plug regularly Clean the plug if dirty or it may cause fire.
7. Do not use damaged power cord When there is current in power cord, plug will be hot. If plug screw is loose or movable then it cannot be used as it may cause short-circuit or fire.	8. This appliance is not intended for use by children or other persons without assistance or supervision if their physical, sensory or mental capabilities prevent them from using it safely. Children should be supervised to ensure that they do not play with the appliance.
9. Do not insert metal objects or any other foreign objects. Do not insert metal objects such as pins, needles or any other foreign objects in the exhaust outlets or any other portion of the unit which may result in electrocution or malfunction.	

CAUTION	
1.Unplug when not in use. Cracked or damaged appliance may cause short-circuit, leakage or fire.	2.Do not immerse the appliance into water or heated sources as it may cause leakage or electrical shock.
3.Do not touch the steam cap when the appliance is being carried or moved. It may result in burning injuries. Close supervision is needed if a child is present during cooking.	4.Do not substitute the inner pot with other container. It may result in higher temperature and burning injuries.
5.Use on a flat and stable surface. Use on uneven surface may dropped the unit and caused fire.	6.Hold the plug to unplug. Improper plugging may cause short-circuit or fire.

During usage

1.Do not use in such conditions as direct sunlight or spread by cooking oil.	2.Be extra careful with the power cord. Do not bring the power cord near any hot surface.
3.Cleaning the inner pot. Wipe off rice or water droplet from inner pot body, bottom, heating plate and sensor.	4.Do not cover the outer lid with cloth. During cooking, please do not cover with any cloth, otherwise, it may cause defect, deformation of nearby objects and color change on the lid inside the cover seal.

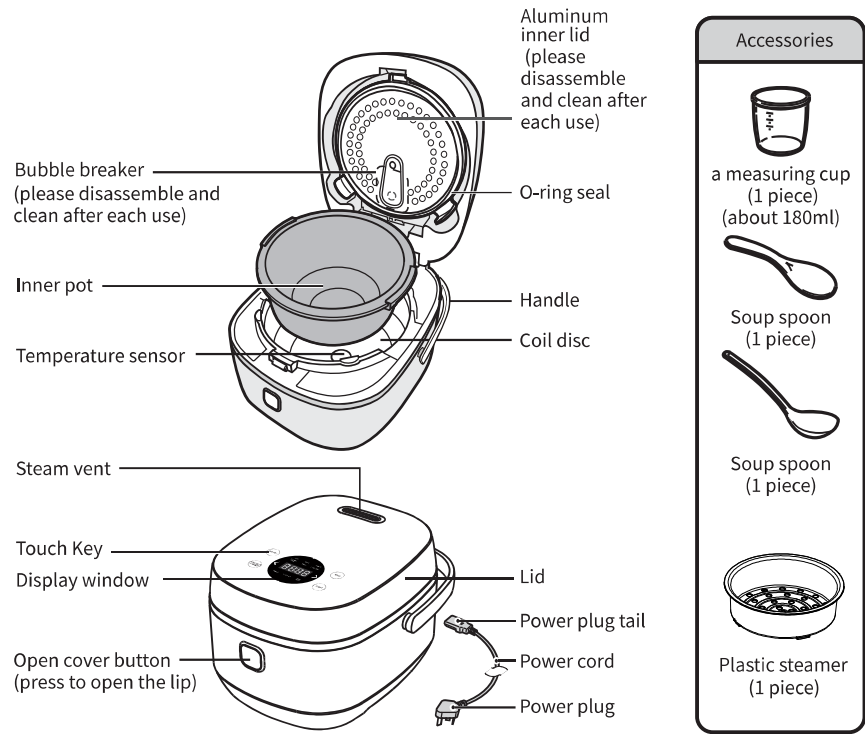

Special Note:
For changes such as product technology upgrades, appearance modifications, and function optimizations, please refer to the actual product.

SPECIFICATIONS

AC220V 50Hz

MODEL	POWER	COOKING CAPACITY	EXTERNAL DIMENSIONS			WEIGHT	CORD LENGTH
			HEIGHT	DEPTH	WIDTH		
KS-IH10IX-WH	1100W	Rice 0.36~1.0L (2~5 cups)	326mm	255mm	220mm	4.6kg	1.0m
		Porridge 0.09~0.18L (0.5~1 cup)					

Preparations Basic steps

1

Measure the rice with the attached measuring cup

Use the attached measuring cup to level one cup of rice, which is approximately 180ml.

Good

Error




2

inse the rice quickly and thoroughly until the water is clear.

※Please use a rice washer or other container to wash the rice.

①Rinse the rice by filling it with water, stirring slightly, and immediately draining the water.

②Then repeat the process of washing the rice and rinsing with water until the water is clear.

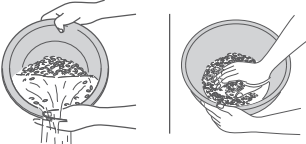


3

Adjust the water level according to the scale specified in the menu.

- Please make the surface of the rice flat, and adjust the water level on a level surface.
- Determine the amount of water to add based on the menu and the number of rice cups. At this time, adjustments should also be made according to the type of rice and personal preferences.
- When cooking porridge/soup/congee, do not add more water than the maximum porridge level on the inner pot.


For example, if you want to cook 2 cups of rice, put the washed 2 cups of rice into the inner pot first, and then add water to the water level scale "2"

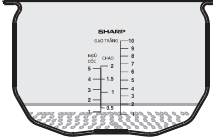

4

Place the inner pot into the main body, close the lid.

- Please wipe clean the water droplets and foreign objects on the outer side of the inner pot, the bottom, the heating plate, and the sensor.
- Please place the inner pot gently inside the main body, make sure to check if it is placed level and stable.
- Please make sure that the bubble breaker and inner lid are installed. If the inner lid is not installed properly, the outer lid will not close.

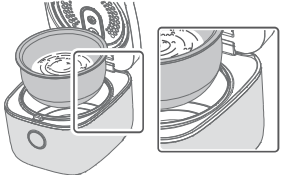

5

Connect the power cord

- Insert the power cord in the order of
- ① the main unit side
- ② the power outlet side
- Please ensure the power plug is fully inserted.

①


②

Power cord plug tail

Ontology

power cord plug

Socket



Operation panel (in case of discrepancy, the physical unit prevails)

Preset: Select the preset for cooking rice

Menu: Choose the cooking method

PRESET

MENU

START

KEEP WARM CANCEL

Fine Soup

Quick Steam

Porridge Cake

Yogurt Claypot Multigrain

Preset Warm

88:88

<

>

Keep warm / Cancel: Press briefly to enter warm mode while in standby state, Long press to return to standby mode when in work state/top appointment state/heat preservation state/time adjustment state.

Start: Begin entering work state Preset time and cooking time

Standby mode:
After power is turned on, all functions in the display area light up, accompanied by a beeping sound.

Power-saving mode:
In standby mode, if there is no operation for 15 seconds, the program will automatically enter sleep mode, the digital display and other lights will turn off, press any key to wake up the display.

PRESET

MENU

START

KEEP WARM CANCEL

Fine Soup

Quick Steam

Porridge Cake

Yogurt Claypot Multigrain

Preset Warm

88:88

<

>

Standby mode

PRESET

MENU

START

KEEP WARM CANCEL

Fine Soup

Quick Steam

Porridge Cake

Yogurt Claypot Multigrain

Preset Warm

:

Power-saving mode

Cooking Type & Setting

Menu	Corresponding scale line	Default working hours	Minimum working hours	Maximum working hours	Time adjustment step	Allow preset time
Fine	Cook rice	1:00	/	/	/	1:10~23:50
Quick	Cook rice	0:30	/	/	/	0:40~23:50
Porridge	Porridge	1:30	1:00	3:00	00:10	1:10~23:50
Soup	/	2:00	2:00	3:00	00:10	2:10~23:50
Steam	/	0:10	0:01	1:00	00:01	0:11~23:50
Cake	/	0:30	0:20	0:45	00:05	/
Yogurt	/	8:00	8:00	12:00	00:30	/
Claypot	Cook rice	1:20	1:00	1:30	00:05	1:10~23:50
Multigrain	Mixed	1:30	/	/	/	1:40~23:50

Steam Function usage instructions:

When using the steaming function, the default steaming time is 15 minutes. You can adjust the steaming time by pressing the < > buttons according to your personal taste and the tenderness of the ingredients, ensuring the best results for steaming food.

Menu	Cooking limited
Fine	1-5 cups
Quick	1-5 cups
Porridge	0.5-1 cups
Claypot	1-5 cups
Multigrain	1-3 cups

Cooking method:

1

Press the (Menu) button, and select the cooking menu.

PRESET

Fine Quick Porridge Soup Steam Cake

Claypot

KEEP WARM CANCEL

START

<

1:00

>

- Each time the "Menu" button is pressed, the function icons for " Fine, Quick, Porridge, Soup, Steam, Cake, Yogurt, Claypot, Multigrain " cycle through in sequence.
- When the functions "clay pot rice, porridge, steam, cake, yogurt " are selected, the time adjustment key "<>" is always lit for cooking time setting.
- The default program is the " Fine " function.

2

Press the (Start) button to begin cooking.

PRESET

Fine

Claypot

KEEP WARM CANCEL

START

<

1:00

>

- After cooking starts, the selected function light remains on, and the digital display shows the remaining time and begins countdown.
- If you need to end the working state midway, long press the "Keep Warm/Cancel" button to return to standby mode.

3

Automatically enter "Keep warm mode".

PRESET

Warm

KEEP WARM CANCEL

START

<

0:00

>

- After the countdown ends, the buzzer sounds for a long time, indicating that the cooking is finished, and the operating status automatically switches to the warming mode, with the warming function staying lit.
- To end the "Keep Warm" function during the 12-hour period, press and hold the "Keep Warm/Cancel" button to return to standby mode, then unplug the power cord.
- It is recommended not to keep food warm for more than 7 hours, (some foods may cause off odors and browning).

Preset method Cook the meal at the agreed time

1 Press the (Menu) button, and select the Cooking menu.




- Each time the "Menu" button is pressed, the function icons for " Fine, Quick, Porridge, Soup, Steam, Cake, Yogurt, Claypot, Multigrain " cycle through in sequence.
- When the functions "clay pot rice, porridge, steam, yogurt " are selected, the time adjustment key "<>" is always lit for cooking time setting.
- The default program is the " Fine " function.

2 Press the (preset) button to start cooking.




- The " Fine, Quick, Porridge, Soup, Steam, Claypot, Multigrain " functions can be scheduled.
- After pressing the "Preset" button, the appointment function light stays on, the digital display shows the default preset time and blinks.
- The preset function adds 10 minutes to the actual cooking time for each menu item, with a maximum reservation time of 24 hours.

3 Press the "<>" key to set the appointment time.

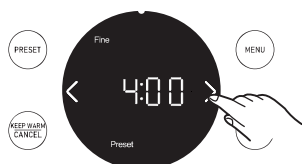

- Press the "<>" key to set the appointment time, the "<" key advances in one-hour increments, the ">" key advances in ten-minute increments, the maximum appointment duration is 24 hours.
- For example, to set the rice to be cooked in 4 hours, press the ">" time adjustment button and set the time to 4:00.
- It is recommended not to set a reservation time exceeding 15 hours. (Some ingredients may spoil during long reservations, affecting consumption)

4 Press the (Start) button.

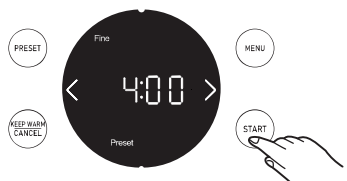

- Press the "Start" button to enter the reservation status and announce "Cooking starts."
- Select the function and set the light to stay on, the digital display shows the countdown of the reservation time.
- After a 4-hour countdown, the cooking program is completed.
- According to different reservation needs, the program controls the reservation time as set, and the digital countdown ends when the work is completed.

5 Enter insulation mode automatically.



- After the countdown ends, the buzzer sounds continuously, indicating that cooking is finished, and the operating status automatically switches to the warming mode, with the warming function indicator light remaining on.
- To keep warm for 12 hours, if you want to end the "Keep Warm" function midway, please long press the "Keep Warm/Cancel" button to return to standby mode, then unplug the power cord.
- It is recommended not to keep food warm for more than 7 hours. (Some foods may cause odors and discoloration.)

※Unplug the power cord after the rice cooker has cooled down before cleaning.


Rice cooker body, lid

Please do not use detergent, brushes, cleaning agents, or acetone. Wipe with a wrung-out cloth. After cleaning, please install the inner lid correctly.



inner pot, inner lid, rice spoon, etc.

Please use a sponge or other soft items to clean the following items.

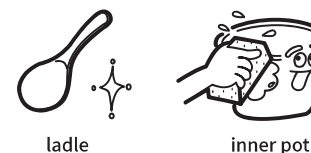

Temperature sensor


When there are rice grains or stains attached, use fine sandpaper (around 3) to gently rub, then wipe clean with a wrung-out cloth.

△ Notice

- When cleaning the inner pot and inner lid, be careful not to deform them.
- Wait for the lid to cool before removing the bubble breaker from the lid for cleaning.
- When cleaning the foam breaker, please open it and clean the inside.
- When cleaning, be careful not to lose the seal in the bubble breaker.


The inner cover is removed and installed

■ Remove the inner cover

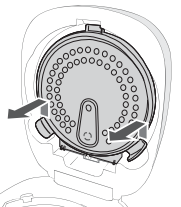

① Grab the inner handle and lift up while pulling out.

■ Install the inner cover

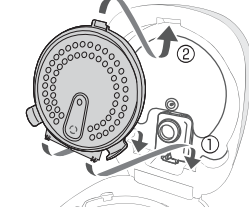


① Grab the inner lid handle and insert the protruding part of the inner lid into the mounting section of the outer lid.
② Grab the inner lid handle and push the lid inward, then release the inner lid handle.

※If the inner lid is not installed or not installed correctly, it cannot be closed and this is not a malfunction. Please install the inner lid correctly before use.


Bubble breaker remover disassembly, installation

■ Bubble breaker disassembly

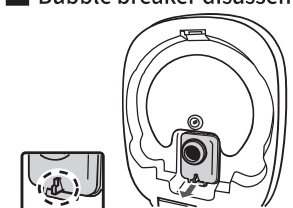


After removing the inner cover, the bubble breaker is visible, grasp the handles on both sides of the bubble breaker with one hand and pull it out horizontally.

■ Bubble breaker installation

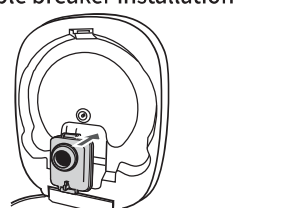

Align the foam breaker's mouth with the steam outlet installation position and slowly press it into place.



① Disassemble: After unlocking the lock on the bubble breaker's bottom cover, open the bubble breaker to pull out the square seal strip; pull out the round seal directly.
② Install: Insert the bottom of the foam breaker top cover into the foam breaker bottom cover clips, close the foam breaker, and then lock the latches.

Checking Point		Whether the steam vent, inner lid, sealing ring or heating plate is not clean enough	Warm rice with rice scoop inside	Kedgeriee or different material are put together with WARM mode	Warm rice over 12 hours or too little rice to be kept warm	Did not stir the rice after cooking	Extended hours during power shut down	Push OFF button in the operation	Did any rice attach on the edge of inner pot or sealing ring	Was the top lid closed during setting	Has any rice or water that attached on thermostat, heater or the pot outer side been wiped off	Is bottom of inner pot placed evenly or not	Is the rice rinsed thoroughly or not	Is the amount of rice and water level measured correctly or not
After cooking	too hard	●	●	●	●	●	●	●	●	●	●	●	●	●
	half-cooked	●	●	●	●	●	●	●	●	●	●	●	●	●
	too soft	●	●	●	●	●	●	●	●	●	●	●	●	●
Keeping warm	Become hard	●	●	●	●	●	●	●	●	●	●	●	●	●
	smelly	●	●	●	●	●	●	●	●	●	●	●	●	●
	change color	●	●	●	●	●	●	●	●	●	●	●	●	●
Splash and spread out		●	●	●	●	●	●	●	●	●	●	●	●	●
Steam escape from rim		●	●	●	●	●	●	●	●	●	●	●	●	●
Preset	Begin immediately	Is the preset time less than the necessary time												
	Cooking complete time delay	It is possible to be delay around 10 minutes when the rice is more or the temperature of water is lower												
The START and OFF operation are not working		Whether the inner pot is in the unit? whether the plug is inserted into the plug socket or main body?												
A sound produces during cooking		This is the sound caused by power adjustment or by expansion and contraction, There may be water on the heating plate or inner pot bottom.												
The steam outlet produces sound while cooking		Sound happened when the steam came out from the steam vent. It is normal.												
Difficult to cover the lid		Is there any rice in the gap around the button? Kindly clean the dirty things or rice in the gap with a small cotton stick.												

- Should there be any problem occurred as listed below, kindly contact customers center of our company:
- Captured the following either **F1** **F2** **F3** **F4**
 - If any accident when operation, such as water spill or rice into the main body without the inner pot.
 - Although the cooking was not finished yet, but the surface of the inner pot was not hot and suddenly light off.
 - The bottom, side, top edge of the inner pot become uneven (need to replace the inner pot).
 - It does not operate as usual.

CHECKING

In order to use it safe for longer time;

If happen as below	TREATMENT
● Power cord and plug is expanded, deformed, discolored and damaged. ● Part of power cord or the plug is hotter than usual. ● There is a power or power failure if power cord is moved. ● Rice cooker often becomes hot abnormally and smelly. ● There is an abnormal noise or vibration occurred during operation.	Stop using the unit. Contact the local service center or the company service center.
● There is dust or waste on the plug or plug socket.	Remove the dust and waste