




HƯỚNG DẪN SỬ DỤNG

MÁY XAY THỊT

Model: FC2310

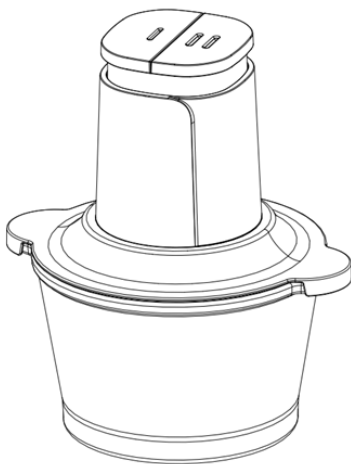

Điện áp/Tần số: AC220-240V ~ 50/60Hz

Công suất: 350W

Dung tích tối đa: 2000ml

- Vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng và giữ lại để tham khảo lần sau
- Chỉ sử dụng thiết bị cho mục đích gia đình


CÁC BIỆN PHÁP AN TOÀN QUAN TRỌNG

VUI LÒNG ĐỌC KỸ CÁC HƯỚNG DẪN SỬ DỤNG TRƯỚC KHI DÙNG

Hướng dẫn an toàn:

- Vui lòng đọc kỹ hướng dẫn trước khi sử dụng máy lần đầu tiên
- Khi không có người giám sát, hãy để máy xa tầm tay trẻ em. Trẻ nhỏ và người khuyết tật chỉ được sử dụng máy khi có người lớn giám sát.
- Kiểm tra điện áp định mức của máy để đảm bảo phù hợp với điện áp trong gia đình.
- Các lỗi liên quan đến việc sử dụng sai điện áp định mức sẽ bị từ chối bảo hành
- Thiết bị này chỉ thích hợp sử dụng trong nhà
- Sau khi sử dụng, hãy rút phích cắm trước khi vệ sinh máy.
- Nếu máy bị hỏng hoặc không hoạt động, vui lòng liên hệ trung tâm bảo hành
- Không được nhúng thiết bị điện, dây điện hoặc phích cắm vào nước hay bất kỳ chất lỏng nào.
- Để dây điện xa tầm tay trẻ em.
- Dây nguồn phải được giữ cách xa nguồn nhiệt và các cạnh sắc
- Vì sự an toàn của bạn, chỉ sử dụng các linh kiện do nhà sản xuất cung cấp kèm theo máy.
- Không cho ngón tay hoặc bất kỳ dụng cụ nào như nĩa, thìa, dao vào... trong khi máy đang hoạt động.
- Chỉ được tháo phụ kiện khi thiết bị đã dừng hoàn toàn.
- Không cho dụng cụ nhà bếp (như thìa, xéng, v.v.) vào cối thủy tinh.
- Các phụ kiện nên được sử dụng lần lượt, không cùng lúc.
- Cẩn thận khi cầm lưỡi dao hoặc đĩa kim loại, vì chúng rất sắc bén.
- Phải tháo lưỡi dao ra trước khi đổ phần nguyên liệu còn lại trong cối.
- Không chạm vào các bộ phận đang chuyển động.
- Không vận hành máy khi không có nguyên liệu (máy chạy không).
- Nếu dây nguồn bị hư hại, phải được thay thế bởi nhà sản xuất, đại lý dịch vụ được ủy quyền hoặc người có trình độ tương đương để tránh nguy hiểm.
- Thiết bị này không được thiết kế cho người (kể cả trẻ em) có khả năng thể chất, cảm giác hoặc trí tuệ bị hạn chế, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được giám sát hoặc hướng dẫn an toàn khi sử dụng thiết bị.
- Trẻ em phải được giám sát và không để chúng chơi với thiết bị
- Ngắt nguồn điện khi không sử dụng, khi lắp ráp, tháo rời hoặc vệ sinh máy.
- Trẻ em không được phép sử dụng thiết bị nếu không có sự giám sát.
- Cẩn thận khi vệ sinh lưỡi dao và cối thủy tinh.

TỔNG QUAN VỀ THIẾT BỊ

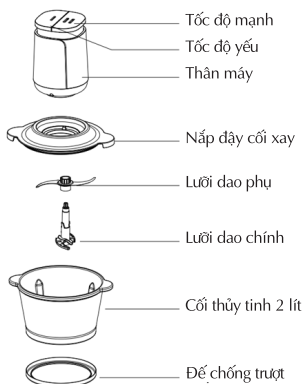

DUNG TÍCH VÀ THỜI GIAN HOẠT ĐỘNG TỐI ĐA

1. Thịt heo và các loại thịt khác: Tối đa 500 g
2. Lượng thực phẩm tối đa như thịt heo, thịt bò, bí tết... là 500 g, với thời gian hoạt động liên tục 15 giây. Sau mỗi lần sử dụng, nghỉ khoảng 2 phút trước khi vận hành lại. Sau đó, để máy nguội ở nhiệt độ phòng trước khi tiếp tục sử dụng.

CÁCH SỬ DỤNG

1. Đặt đế chống trượt vào đáy của cối.
2. Đặt cối lên bề mặt phẳng
3. Tháo miếng bảo vệ lưỡi dao, sau đó lắp cụm lưỡi dao vào bên trong cối
4. Cho thực phẩm vào cối, lựa chọn loại thực phẩm phù hợp theo hướng dẫn.
5. Cắt nhỏ thực phẩm thành miếng khoảng 1–2 cm.
Không xay thực phẩm cứng như hạt cà phê, đá viên, gia vị khô hoặc socola, vì có thể làm hỏng lưỡi dao.
6. Đặt nắp lên trên cối.
7. Lắp thân máy (bộ phận chứa motor) vào đúng vị trí bên trên nắp
8. Thân máy sẽ khớp chính xác với 4 điểm cố định.
9. Cắm điện, sau đó nhấn nút 1 hoặc nút 2 tùy theo loại thực phẩm, chọn nút số 1 cho thực phẩm mềm, nút số 2 cho thực phẩm cứng
10. Nếu máy chạy chậm hoặc quá tải, hãy lấy bột hỗn hợp ra ngoài, sau đó tiếp tục xay phần còn lại.

11. Khi cần thiết, hãy dùng máy và tháo thân máy xuống.
12. Rút phích cắm điện, sau đó tháo cụm lưỡi dao và các bộ phận ra.

HƯỚNG DẪN CHẾ BIẾN NGUYÊN LIỆU

Loại nguyên liệu	Trọng lượng tối đa	Thời gian xay	Sơ chế
Thịt	500 gram	45 giây	Bỏ xương, cắt thịt thành miếng nhỏ kích thước 1-2cm
Cần tây	80 gram	20 giây	Bỏ vỏ
Hạt (Hạnh nhân)	500 gram	20 giây	Bỏ vỏ
Phô mai	150 gram	20 giây	Cắt thành miếng 1- 2cm
Bánh mì	120 gram	20 giây	Cắt thành miếng 1- 2cm
Cà rốt (Hành tây)	400 gram	30 giây	Cắt lát dài 1-2cm
Bánh quy	250 gram	20 giây	Bẻ thành miếng hình vuông
Các loại quả mọng	500 gram	20 giây	

VỆ SINH

1. Rút phích cắm ra khỏi ổ điện.
2. Lau sạch thân máy bằng khăn ẩm và lau khô lại .
3. Có thể vệ sinh tất cả các bộ phận.
4. Rửa bằng nước ấm và chất tẩy rửa nhẹ. Khi vệ sinh lưỡi dao bằng thép không gỉ, hãy cẩn thận để tránh bị thương.

BẢO QUẢN

Lắp đặt máy xay thịt lại, quấn dây điện quanh thân máy và để ở nơi khô ráo, thoáng mát.

CHÚ Ý: Không tháo rời cụm lưỡi dao và đặt vào trong cối thủy tinh sai vị trí, việc sử dụng không đúng cách sẽ làm hỏng thiết bị.

Bạn nên làm gì khi thiết bị không hoạt động?

1. Kiểm tra lại nguồn điện
2. Thân máy đã được lắp vào đúng 4 khớp chưa
3. Nếu thiết bị vẫn không hoạt động thì sao ? Hãy liên hệ trung tâm bảo hành để được hỗ trợ.

Sử dụng sản phẩm đúng cách



Ký hiệu này cho biết rằng sản phẩm này không được xử lý cùng với các loại rác thải sinh hoạt khác.

Để tránh gây nguy hại cho môi trường và sức khỏe con người do việc xử lý rác thải không kiểm soát, sản phẩm nên được tái chế nhằm thúc đẩy việc sử dụng tiết kiệm các nguồn tài nguyên.

Khi muốn tái chế thiết bị đã qua sử dụng, vui lòng sử dụng hệ thống thu gom và tái chế hoặc liên hệ với nhà bán lẻ - họ có thể giúp bạn tái chế sản phẩm một cách an toàn.




Biểu tượng của thiết bị thuộc nhóm II



INSTRUCTION MANUAL

Food Chopper

Model: FC2310

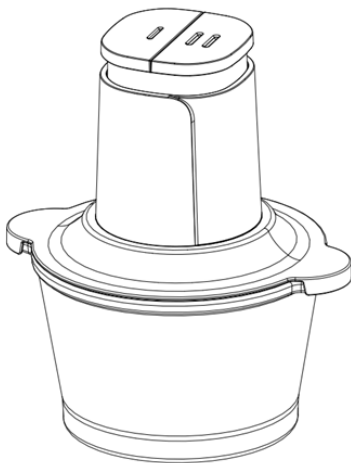

Power: 350W

Voltage: 220-240V


Frequency: 50-60Hz

Capacity: 2000ml

- Please read through this manual before using your food chopper and keep in a safe place for future reference.
- For household use only.

Safety Instruction

- Please read the instruction carefully before using the machine at the first time.
- In the absence of supervision, put the machine far away from the children. Young children and the disability must use it under supervision.
- Please check the rated voltage of the machine is in accordance with the household supply voltage.
- Any connection error will make warranty null and void.
- Your appliance is only suitable for using indoors.
- Please pull the plug and then washing the machine after use.
- If the machine is damaged or does not work, please contact the service center.
- Do not immerse electrical appliances, wires and plugs into water or other liquids.
- Do not hang wires in a place where children can reach them.
- The power cord must be kept away from the heat source and sharp edges.
- For your safety, ONLY USE the parts we have equipped with the machine.
- Do not use your fingers, and there is no fork, spoon, knife or any other tableware.
- The attachment can be removed when the appliance has a complete stop.
- Do not put any kitchen ware (spoon, shovel,...) into the glass bowl.
- Accessories should be used in turn.
- Handle the metal blade and disk carefully: they are very sharp.
- The blade must be removed before emptying the residue of the glass.
- Do not touch parts when moving.
- Do not operate your electric machine at no load.
- If the power cord is damaged, it must be replaced by the manufacturer, its service agent or similar person to avoid danger.
- This appliance is not intended to be used by the persons (including children) who is reduce physical, sensory or mental abilities, or lack of experience and knowledge unless they have been responsible for the supervision or guidance of the use of the appliance for their safety.
- Children should be supervised to ensure that they do not play with electrical machine.
- To disconnect the power adapter if no one is assembling, disassembling or cleaning.
- Children are not allowed to use unsupervised equipment.
- Handle blade, glass should be careful when cleaning.

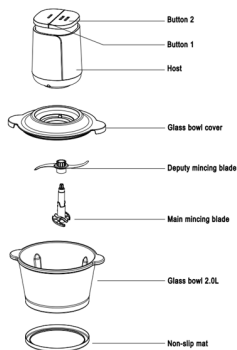

OVERVIEW

Maximum Capacity And Working Time

1. Pork and meat: Max 500g.
2. The maximum amount of prepared food such as pork, meat, steak, etc. is 500 g with operation time of 15 seconds, and each interval of using time is about 2 minutes. Then keep the machine at room temperature.

HOW TO USE

1. Put the anti-skid pad on the bottom of the bowl.
2. Place the bowl on a flat platform.
3. Remove the protective sleeve of the blade and insert the blade assembly in the bowl.
4. Add your food, and choose the range of food, please attention to the guidance.
5. Cut large pieces of food into 1-2cm chunks.
Do not cut hard food, such as coffee beans, ice cubes, spices or chocolate, otherwise you will damage the blade.
6. Put the lid on the bowl.
7. Install host.
8. The host will match in 4 locations correctly.
9. Plug in the plug, press the button 1 or button 2 (according to the food needs to choose the button, soft food select key 1, hard food select key 2).
10. If the machine is running slowly, take out some of the mixture and continue the batch processing.
11. If necessary, stop and take the machine down.
12. Pull out the plug and remove the assembly.

Food	Maximum Capacity	Working Time	Preparation
Meat	500 g	45 sec	Remove the bone, cut the meat to some piece size 1-2cm
Cần tây	80 g	20 sec	Remove the skin
Hạt (Hạnh nhân)	500 g	20 sec	Remove the shell
Phô mai	150 g	20 sec	Cut into 1 to 2cm chunk
Bánh mì	120 g	20 sec	Cut into 1 to 2cm chunk
Cà rốt (Hành tây)	400 g	30 sec	cut into 2cm size
Bánh quy	250 g	20 sec	breaking into squares
Các loại quả mọng	500 g	20 sec	

CLEANING

1. Disconnect the power plug from the socket.
2. Wipe the host with a damp cloth and dry it.
3. All accessories can wash:
4. Wash with water and detergent. Be very careful when dealing with stainless steel blades to avoid hurting yourself.

STORAGE

Assemble the mincing machine, the power cord winding the host.

Attention: Do not disassemble the knife assembly and place it in the glass optionally: the wrong operation may seriously damage the product.

What should you do if your appliance doesn't work?

1. Check the Connect.
2. The host is properly installed in the four position of the glass cover or not.
3. Is your appliance still not working? Contact the service center or manufacturer.

Handle the product correctly



This sign indicates that this product should not be treated with other domestic waste. To prevent the endanger which to the environment and mankind's health caused by the uncontrolled waste treatment ,should recycle ,promote the sustainable use of substance resource .Recycle your used device, please use recycle and collecting system or contact your retailer. They can make the product safety recycle.



The second category of equipment symbol.