

HƯỚNG DẪN SỬ DỤNG
**MÁY XAY
SINH TỔ MINI**

MAGIC **A-020**



Quét mã QR Zalo để
KÍCH HOẠT BẢO HÀNH ĐIỆN TỬ



SẢN PHẨM ĐƯỢC NHẬP KHẨU VÀ PHÂN PHỐI ĐỘC QUYỀN BỞI CÔNG TY TNHH TM XNK NGUỒN SỐNG VIỆT

Hồ Chí Minh: 235-237 Đường số 9A, KDC Trung Sơn, Bình Hưng, Bình Chánh, TP. HCM | Bảo hành: 028 7106 5858

Hà Nội: 382 Phạm Văn Đồng, Cổ Nhuế 2, Bắc Từ Liêm, Hà Nội | Bảo hành: 024 37 855 966

HOTLINE MUA HÀNG: 1800 8379

Tìm hiểu nhiều hơn về chúng tôi tại **www.facebook/magicvietnam.official**
hoặc website công ty **www.magicvietnam.vn**



Cảm ơn bạn đã lựa chọn và ủng hộ MAGIC Vietnam!

Hy vọng bạn hài lòng với sản phẩm & dịch vụ để MAGIC có cơ hội phục vụ, đồng hành cùng bạn và gia đình.

Mọi phản hồi/đánh giá về chất lượng sản phẩm & dịch vụ bạn vui lòng liên hệ đến số hotline **1800 8379** để MAGIC có thể tiếp nhận và khắc phục ngay nhé!

Ở phía sau, các bạn hãy quét mã **Zalo OA** để kích hoạt bảo hành điện tử, nhận thêm **ưu đãi** và hỗ trợ **24/7** từ MAGIC.


Một lần nữa cảm ơn và rất vui được đồng hành cùng bạn trong việc chăm sóc gia đình!

CÁC BIỆN PHÁP AN TOÀN CẦN LƯU Ý

Khi sử dụng các thiết bị điện, phải luôn tuân thủ các biện pháp phòng ngừa an toàn cơ bản, bao gồm:

1. Đọc hướng dẫn sử dụng trước khi dùng.
2. Để tránh khỏi nguy cơ bị giật điện, không được cho động cơ vào nước hoặc bất kỳ chất lỏng nào.
3. Trẻ em phải được giám sát khi sử dụng thiết bị.
4. Nếu dây nguồn bị hỏng, liên hệ nhà sản xuất để được thay thế.
5. Rút phích cắm của thiết bị khỏi ổ cắm trước khi lắp hoặc tháo rời các bộ phận và trước khi vệ sinh. Rút phích cắm khi không sử dụng.
6. Không sử dụng các phụ kiện không được khuyến nghị hoặc các phụ kiện không được bán bởi nhà sản xuất vì có thể dẫn đến hỏa hoạn, giật điện hoặc gây tổn thương tới người dùng.
7. Trước khi tháo rời sản phẩm, đảm bảo động cơ đã dừng hẳn.
8. Không đưa ngón tay vào máy xay khi máy đang hoạt động. Nếu thức ăn bị bám vào máy xay, tắt máy và chờ động cơ dừng hẳn, sau đó tháo máy để lấy nguyên liệu ra.
9. Không bỏ bất kỳ bộ phận nào vào máy rửa chén.
10. Không sử dụng thiết bị cho mục đích khác ngoài mục đích sử dụng.
11. Không sử dụng thiết bị liên tục quá 1 phút vì có thể làm cháy động cơ, sử dụng lại khi thiết bị nguội.
12. Không sử dụng thiết bị để ép các nguyên liệu cứng, bao gồm đá, trái cây đông lạnh, hạt lớn.
13. Tắt thiết bị trước khi tháo nắp.
14. Không sử dụng dây nối dài hoặc bộ hẹn giờ với thiết bị này.
15. Không tháo rời bình xay hoặc tháo nắp khi lưỡi dao đang hoạt động.
16. Cần thận bởi lưỡi dao không gỉ vì sắc bén và có thể gây nguy hiểm.
17. Không nhấn nút xay khi tháo cốc hoặc trước khi lắp cốc.
18. Thêm chất lỏng khi xay trái cây hoặc thức ăn cứng.
19. Không sử dụng thiết bị khi đang sạc.
20. Luôn cho sản phẩm vào trước khi xay.

CẤU TẠO MÁY XAY

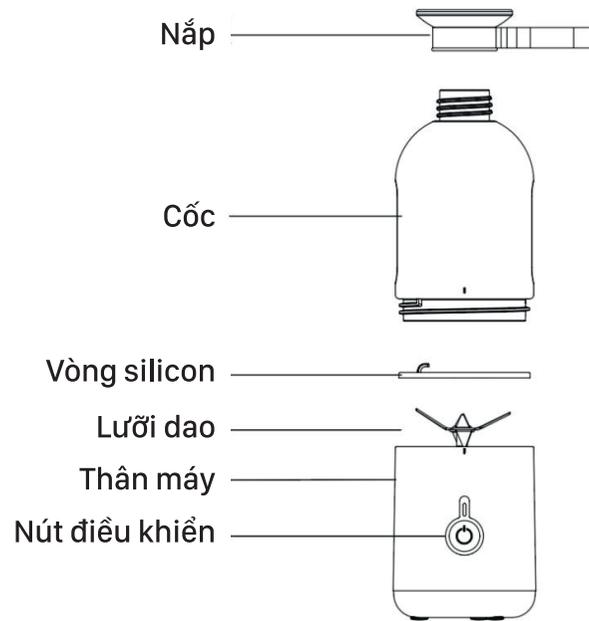

Trước khi sử dụng lần đầu:

1. Tháo bỏ các vật liệu được đóng gói.
2. Vệ sinh các bộ phận với nước rửa chén với miếng bọt biển không mài mòn.
3. Dùng vải lau sạch máy từ trong ra ngoài.

Khi sử dụng thiết bị:

1. Cắt nguyên liệu thành từng miếng cỡ 1 inch. Nếu nguyên liệu có lớp vỏ dày hoặc có vỏ cứng, hãy tách gỡ ra khỏi nguyên liệu.
2. Đổ nguyên liệu vào cốc rồi đổ đầy chất lỏng. Lưu ý: đảm bảo nguyên liệu không nhiều vượt quá mức "tối đa".
3. Lắp thân máy chính vào cốc. Lưu ý: giữ cốc thẳng đứng để không làm đổ nguyên liệu.
4. Nhấn 2 lần vào máy để bắt đầu xay. Thiết bị sẽ tự động dừng lại sau 40 giây.
Lưu ý: Nếu nguyên liệu bị dính vào lưỡi dao, lắc nhẹ để bằng tay.
5. Nếu muốn tiếp tục xay, nhấn nút xay 2 lần, máy sẽ khởi động lại.
Cảnh báo: Thiết bị nên được nghỉ 5 phút sau mỗi chu kỳ để bảo vệ động cơ khỏi bị quá nhiệt.
6. Sau khi xay, có thể uống sau khi mở nắp cốc hoặc đổ vào các bình đựng khác.

VỆ SINH MÁY

- Đổ nước vào trong cốc, lắp thân máy và xay nước trong 20 giây, lưỡi dao sẽ được làm sạch. Hoặc có thể vệ sinh bằng tay với chất tẩy rửa không mài mòn. Hãy cẩn thận với lưỡi dao vì chúng sắc bén.
- Thân máy nên được vệ sinh bằng tay với chất tẩy rửa không mài mòn, không nhúng vào nước vì sẽ ảnh hưởng tới thiết bị.

BẢO QUẢN

- Đảm bảo các phụ kiện sạch và khô.

PHƯƠNG PHÁP SẠC

- Cổng sạc USB ở trên thân máy, nên sử dụng cổng sạc USB để kết nối với nguồn điện 5V.
- Trong quá trình sạc, đèn màu đỏ sẽ nhấp nháy. Khi đã được sạc đầy, đèn màu xanh sẽ sáng lên.

MỆO SẠC

- Khi thiết bị chưa hoạt động và đèn màu đỏ nhấp nháy, có nghĩa là pin yếu và cần được sạc.
- Khi đèn chuyển sang, quá trình sạc hoàn tất.

KHẮC PHỤC SỰ CỐ

Vấn đề	Nguyên nhân khả thi	Giải pháp
Thiết bị không hoạt động	- Sử dụng thiết bị trong thời gian dài. - Lưỡi dao bị kẹt. - Cốc xay chưa được lắp chính xác. - Pin yếu.	- Để nguội thiết bị trong 10 phút và thử lại. - Bỏ các nguyên liệu bị kẹt. - Lắp ráp lại cốc xay và thân chính. - Sạc lại máy.
Nguyên liệu không thể	- Bỏ nguyên liệu quá nhiều hoặc quá ít. - Nguyên liệu quá lớn. - Không cho chất lỏng khi xay.	- Dung tích nguyên liệu nên ít hơn vị trí "tối đa" trên lưỡi dao. - Cắt miếng nhỏ. - Cho thêm chất lỏng vào.
Đèn nhấp nháy nhưng thiết bị không xay	- Lắp sai cốc xay. - Pin yếu. - Quá tải dung tích cối.	- Lắp lại cối xay. - Sạc lại. - Loại bỏ nguyên liệu dư thừa.



INSTRUCTION MANUAL
MINI BLENDER
MAGIC **A-020**



Thank you for choosing and supporting MAGIC Vietnam!

We hope that you are satisfied with our product and service, and that we have the opportunity to serve and accompany you and your family.

If you have any feedback or reviews regarding the quality of our product and service, please contact our hotline at **1800 8379** so that we can receive and promptly address them.

In addition, please scan the **Zalo OA** code to activate the electronic warranty, receive additional gifts, and enjoy promotion and **24/7** support from MAGIC.


Once again, thank you, and we are happy to accompany to take care your family!

SAFETY MEASURES

When using electrical equipment, basic safety precautions should always be followed, including:

1. Read the instructions before use.
2. To avoid the risk of electric shock, do not immerse the motor in water or any other liquid.
3. Children must be supervised when using the appliance.
4. If the power cord is damaged, contact the manufacturer for a replacement.
5. Unplug the appliance from the wall socket before assembling or disassembling parts and before cleaning. Unplug the appliance when not in use.
6. Do not use accessories not recommended or those not sold by the manufacturer as this may result in fire, electric shock or injury.
7. Before disassembling the product, make sure the motor has stopped.
8. Do not put your fingers into the blender while it is running. If food is stuck to the blender, switch it off and wait until the motor has stopped, then remove the blender to remove the ingredients.
9. Do not put any parts in the dishwasher.
10. Do not use the appliance for any purpose other than its intended use.
11. Do not use the appliance continuously for more than 1 minute as this may burn the motor, use it again when it has cooled down.
12. Do not use the appliance to juice hard ingredients, including ice, frozen fruit, large nuts.
13. Turn off the appliance before removing the lid.
14. Do not use an extension cord or timer with this appliance.
15. Do not disassemble the blender jar or remove the lid while the blades are in operation.
16. Be careful with the stainless steel blades as they are sharp and can be dangerous.
17. Do not press the blending button when removing the cup or before inserting the cup.
18. Add liquid when blending fruit or hard foods.
19. Do not use the appliance while charging.
20. Always add the product before blending.

PRODUCT STRUCTURE

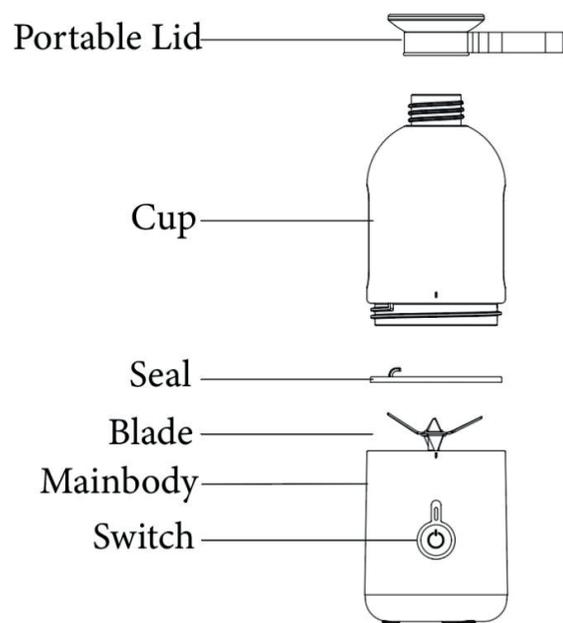

Before first use:

1. Before first use
2. Clean parts with dishwashing liquid and a non-abrasive sponge.
3. Wipe inside and out with a clean cloth.

When using the appliance:

1. Cut the ingredients into 1 inch pieces. If the ingredients have thick or hard skins, remove them from the ingredients.
2. Pour the ingredients into the cup and fill with liquid. Note: make sure the ingredients do not exceed the "maximum" mark.
3. Insert the main body into the cup. Note: keep the cup upright to avoid spilling the ingredients.
4. Press the machine twice to start blending. The appliance will automatically stop after 40 seconds.
Note: If the ingredients stick to the blades, shake the base gently by hand.
5. If you want to continue blending, press the blend button twice, the machine will restart.
Warning: The appliance should be rested for 5 minutes after each cycle to protect the motor from overheating.
6. After blending, it can be drunk after opening the cup lid or poured into other containers.

MACHINE CLEANING

- Pour water into the cup, install the body and blend for 20 seconds, the blade will be cleaned. Or you can clean it by hand with a non-abrasive cleaner. Be careful with the blades because they are sharp.
- The body should be cleaned by hand with a non-abrasive cleaner, do not immerse in water because it will affect the device.

PRESERVE

- Make sure accessories are clean and dry.

CHARGING METHOD

- The USB charging port is on the body, it is recommended to use the USB charging port to connect to a 5V power source.
- During charging, the red light will flash. When fully charged, the blue light will light up.

CHARGING TIPS

- When the device is not working and the red light is flashing, it means the battery is low and needs to be charged.
- When the light turns solid, charging is complete.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device Not Working	<ul style="list-style-type: none"> - Using the appliance for a long time. - The blade is stuck. - The blender cup is not installed correctly. - The battery is low. 	<ul style="list-style-type: none"> - Let the appliance cool for 10 minutes and try again. - Remove any stuck ingredients. - Reassemble the blender cup and main body. - Recharge the appliance.
Ingredients Fail	<ul style="list-style-type: none"> - Too much or too little ingredient. - Ingredients are too large. - Do not add liquid when blending. 	<ul style="list-style-type: none"> - The amount of ingredients should be less than the "max" mark on the blade. - Cut into small pieces. - Add liquid.
Lights Flashing But Device Does Not Blend	<ul style="list-style-type: none"> - Incorrectly installed blender cup. - Low battery. - Overloaded blender cup. 	<ul style="list-style-type: none"> - Reinstall blender cup. - Recharge. - Remove excess ingredients.