

HDSD Size: A6 - 105 x 148.5 mm

SUNHOUSE®

 **HOTLINE MIỄN PHÍ**
1800 6680

Trung tâm bảo hành Miền Bắc

Km21, đại lộ Thăng Long, cụm CN Ngọc Liệp, Xã Kiêu Phú, TP. Hà Nội
ĐT: +84 24 3200 8339 / 3200 5230

Trung tâm bảo hành Miền Trung

Đường số 6 giao Đường số 9, KCN Hòa Khánh, Phường Liên Chiểu, TP. Đà Nẵng
ĐT: +84 23 6372 4821

Trung tâm bảo hành Miền Nam

Lô 8 - 10, Đường số 1, KCN Tân Tạo, Phường Tân Tạo, TP. Hồ Chí Minh
ĐT: +84 28 3869 1014 / Fax: +84 28 3869 1013

SUNHOUSE®



HƯỚNG DẪN SỬ DỤNG
QUẠT ĐỨNG 6 CÁNH SUNHOUSE

Model: SHD7361B

HƯỚNG DẪN KÍCH HOẠT BẢO HÀNH ĐIỆN TỬ

Khách hàng có thể kích hoạt bảo hành điện tử SUNHOUSE theo 2 hình thức:

Hình thức 1: Kích hoạt bảo hành điện tử qua ứng dụng eSUNHOUSE

Lưu ý:


- Để cài đặt ứng dụng, khách hàng cần sử dụng điện thoại thông minh hệ điều hành Android/iOS có kết nối Internet.
- Khách hàng có thể kích hoạt trực tiếp, không cần đăng ký/dăng nhập tài khoản vào ứng dụng.

Bước 1: Tải ứng dụng

Truy cập kho ứng dụng App Store/Google Play, gõ tìm kiếm "eSUNHOUSE" và cài đặt ứng dụng về máy.

Bước 2: Kích hoạt bảo hành

- Trên màn hình chính, bấm vào mục "Đăng nhập", chọn "Kích hoạt bảo hành" ở cuối màn hình.
 - Trên thanh tìm kiếm: Nhập số Serial sản phẩm hoặc sử dụng chế độ quét Serial bằng cách nhấn vào biểu tượng Serial
 - Ứng dụng hiển thị thông tin sản phẩm. Chọn "Xác nhận" để tiếp tục.
 - Nhập thông tin khách hàng theo hướng dẫn.
 - Chọn "Kích hoạt" để hoàn tất. Sau đó, màn hình hiển thị thông báo "Kích hoạt bảo hành điện tử thành công".
- Ghi chú: Khách hàng có thể lập tài khoản, đăng nhập và kích hoạt bảo hành để quản lý nhiều thiết bị cùng lúc, kiểm tra thông tin bảo hành, phiếu bảo hành, "Số bảo hành" và "Lịch sử kích hoạt", khoanh vùng lịch sử thay đổi thiết bị của mình.

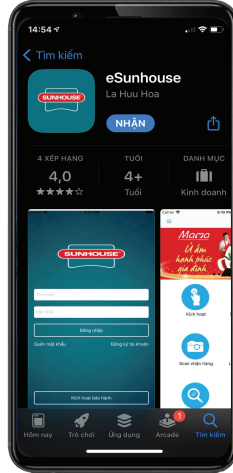

Hình thức 2: Kích hoạt bảo hành điện tử qua trang web <https://baohanhdientu.sunhouse.com.vn/>

Bước 1: Truy cập đường link hoặc quét QR trang web bảo hành điện tử SUNHOUSE

Bước 2: Kích hoạt bảo hành

- Tại trang chủ, màn hình hiển thị các ô chức năng. Nhấn chọn ô "Kích hoạt bảo hành".
- Màn hình chuyển đến giao diện nhập thông tin kích hoạt.
- Nhập thông tin khách hàng theo hướng dẫn.
- Chọn "Kích hoạt" để hoàn tất. Sau đó, màn hình hiển thị thông báo "Kích hoạt bảo hành điện tử thành công".



QUÉT ĐỂ BẢO HÀNH

QUÝ KHÁCH HÀNG THÂN MẾN,

Xin chân thành cảm ơn vì đã tin dùng và lựa chọn sản phẩm của SUNHOUSE.

Chúng tôi tin rằng, sản phẩm làm bằng những chất liệu cao cấp hàng đầu này sẽ đáp ứng mọi yêu cầu và làm hài lòng quý khách.

Quý khách hàng vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng để đảm bảo an toàn và đạt hiệu quả tốt nhất.

SUNHOUSE không chịu trách nhiệm pháp lý về con người và tài sản trong những trường hợp thiệt hại do lắp đặt sai hoặc sử dụng thiết bị không đúng cách.

LƯU Ý QUAN TRỌNG

Quạt cây phải được lắp đặt bởi thợ hoặc người có chuyên môn liên quan, lắp đặt sai có thể dẫn đến nguy hiểm cho người sử dụng

CẢNH BÁO AN TOÀN


Để đảm bảo cho việc lắp đặt, đọc kỹ hướng dẫn và sơ đồ đi kèm

1. Việc lắp đặt và kết nối điện phải được thực hiện bởi người có chuyên môn liên quan.
2. Sản phẩm này không thích hợp cho những người (kể cả trẻ em) không có năng lực về cơ thể, giác quan hoặc tinh thần suy giảm hoặc thiếu kinh nghiệm và hiểu biết trừ khi được giám sát hoặc hướng dẫn sử dụng bởi người có trách nhiệm về sự an toàn của họ.
3. Trẻ em cần được giám sát để đảm bảo không nghịch sản phẩm.
4. Ngắt kết nối phích cắm khi bạn di chuyển thiết bị sang vị trí khác hoặc tháo thiết bị để vệ sinh.
5. Tránh đặt thiết bị tại khu vực có nước hoặc cạnh thiết bị gia dụng dùng gas trong cùng một không gian tại cùng một thời điểm.
6. Không chen bắt kì thứ gì vào cánh quạt khi quạt đang quay. Điều này có thể gây thương tích cho người dùng và ảnh hưởng đến chất lượng quạt.
7. Sau khi lắp đặt phải đảm bảo rằng tất cả các phần kết nối chắc chắn, tránh rủi ro khi đang sử dụng quạt.
8. Khi vận hành tự nhiên, một số kết nối có thể bị lỏng. Kiểm tra các phần kết nối và cánh quạt hai lần một năm để đảm bảo an toàn.
9. Nếu bị lỏng, dùng dụng cụ chuyên dụng để siết chặt lại.

THÔNG SỐ KỸ THUẬT

MODEL	SHD7361B	TRỌNG LƯỢNG	6,68 kg
CÔNG SUẤT	85 W	CHẾ ĐỘ GIÓ	04
SỐ LƯỢNG CÁNH	6	TỐC ĐỘ GIÓ	7,8 m/s
KÍCH THƯỚC SÀI CÁNH	16 inch	LOẠI ĐIỀU KHIỂN	Cơ
CHIỀU CAO	1200 mm - 1400 mm		

CẤU TẠO SẢN PHẨM

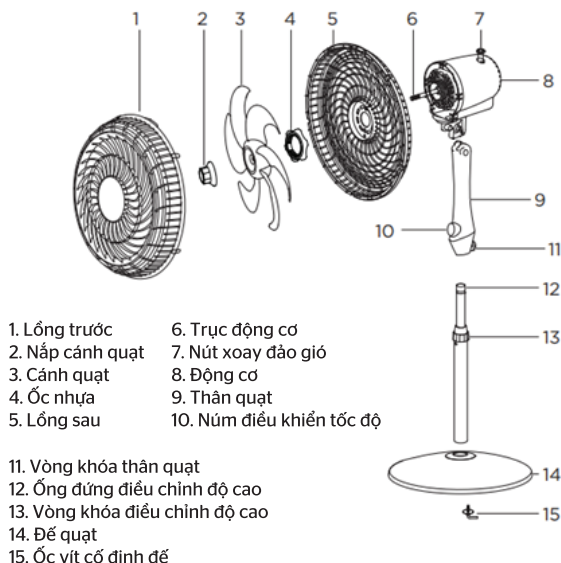

HƯỚNG DẪN SỬ DỤNG

1. TRƯỚC KHI SỬ DỤNG LẦN ĐẦU

- Tháo toàn bộ bao bì, vật liệu đóng gói và kiểm tra xem sản phẩm có bị hư hỏng trong quá trình vận chuyển hay không.
- Nếu phát hiện sản phẩm bị hư hỏng hoặc thiếu linh kiện, không sử dụng và liên hệ với đại lý hoặc trung tâm bảo hành sớm nhất.

2. LẮP ĐẶT QUẠT

- Gắn ống đứng vào đế, sau đó siết chặt ốc vít cố định.
- Lắp thân động cơ lên ống đứng và khóa chặt bằng vòng khóa thân quạt.
- Lắp lồng sau, siết ốc nhựa cố định, tiếp theo gắn cánh quạt, nắp cánh quạt và cuối cùng là lồng trước.
- Điều chỉnh độ cao quạt bằng cách nối lồng vòng khóa điều chỉnh độ cao, nâng hoặc hạ ống đứng đến vị trí mong muốn, sau đó siết chặt lại.

3. VẬN HÀNH QUẠT

- Đặt quạt trên bề mặt phẳng, chắc chắn
- Cắm phích điện vào nguồn 220V- / 50Hz.
- Vận nút điều chỉnh tốc độ để chọn 1 trong 4 cấp độ gió theo nhu cầu.
- Ấn nút đảo gió để quạt quay sang hai bên, nhấn nút lên nếu muốn quạt dừng xoay.
- Có thể điều chỉnh hướng gió lên hoặc xuống bằng cách nhẹ nhàng nghiêng đầu quạt theo ý muốn.

CÁCH BẢO DƯỠNG

1. Kiểm tra tình trạng của quạt 2 lần 1 năm. Nếu xảy ra bất kỳ vấn đề gì, ngưng sử dụng quạt. Sau đó, liên hệ với phòng dịch vụ hoặc trung tâm bảo hành HOTLINE: 1800 6680 (thông tin chi tiết trên Phiếu bảo hành đính kèm)
2. Các điểm cần kiểm tra: các vít bị lỏng, đai ốc lục giác và bu-lông, tình trạng của dây an toàn, trục động cơ, vv ...
3. Luôn giữ quạt sạch sẽ, lau chùi bụi bẩn bằng vải mềm sạch. Không sử dụng các dung môi khác (như xăng, dầu) để vệ sinh quạt. Không được bề cánh quạt trong khi lau chùi.
4. Không sơn cánh quạt. Nếu cánh bị hỏng, mua một bộ cánh mới để thay thế.
5. Nếu quạt bị vỡ hay hỏng, hãy thay sản phẩm mới



Sản phẩm có biểu tượng thùng rác bị gạch chéo thể hiện không được vứt bỏ cùng rác sinh hoạt thông thường. Vui lòng mang sản phẩm đến điểm thu gom rác thải điện, điện tử hoặc liên hệ với nhà bán lẻ/đơn vị thu hồi để được hướng dẫn xử lý đúng quy định, góp phần bảo vệ môi trường.

SUNHOUSE®

 **HOTLINE**
1800 6680

Northern Service Center

Km22, Thang Long Boulevard, Ngoc Liep Industrial Cluster, Kieu Phu Ward, Hanoi City
Tel: +84 24 3200 8339 / 3200 5230

Central Service Center

Street No. 6, Intersection with Street No. 9, Hoa Khanh Industrial Zone,
Lien Chieu Ward, Da Nang City
Tel: +84 23 6372 4821

Southern Service Center

Lots 8-10, Street No. 1, Tan Tao Industrial Zone, Tan Tao A Ward, Ho Chi Minh City
Tel: +84 28 3869 1014 / Fax: +84 28 3869 1013

SUNHOUSE®



INSTRUCTION MANUAL

SUNHOUSE 6-BLADE STANDING FAN

Model: SHD7361B

INSTRUCTIONS FOR ACTIVATING ELECTRONIC WARRANTY

Customers can activate the SUNHOUSE e-warranty in two ways:

Option 1: Activate via eSUNHOUSE Mobile App

Notes:

- To install the app, customers need a smartphone (Android/iOS) with an Internet connection.
- Customers can activate the warranty directly without creating or logging into an account.

Step 1: Download the app


Go to App Store or Google Play, search for "eSUNHOUSE" and install the app.

Step 2: Activate the warranty

- On the main screen, select "Login", then scroll down and choose "Activate Warranty".
- Enter the product Serial Number or scan the code by tapping the Serial icon.
- A pop-up with product information will appear. Click "Confirm" to continue.
- Enter the customer information as required.
- Click "Activate" to complete. The system will then display the message: "E-warranty activated successfully."

Note:

Customers may also create an account to manage multiple devices at once, check warranty details, warranty cards, warranty book and activation history.

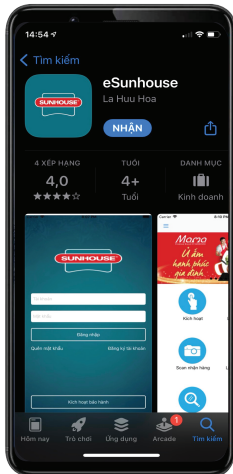

Option 2: Activate via SUNHOUSE e-warranty website

<https://baohanhdiendien.sunhouse.com.vn/>

Step 1: Access the SUNHOUSE E-warranty website or scan the QR code provided.

Step 2: Activate the warranty

- On the main screen, several function boxes will be displayed. Select "Activate Warranty."
- The system will redirect to the warranty information entry form.
- Enter the customer information as required.
- Click "Activate" to complete. The system will then display the message: "E-warranty activated successfully."

DEAR CUSTOMERS,

Thank you so much for trusting and choosing SUNHOUSE products. We believe that our products, which are made from high-quality materials, can meet all of your requirements and make you satisfied. Please read the user manual carefully for safe and effective use of the appliance. SUNHOUSE does not take legal responsibility for any injuries to people or damage to property caused by failure to comply with installation and operating instructions.

IMPORTANT NOTE

The fan must be installed by a qualified technician or a person with relevant expertise. Incorrect installation may cause danger to the user.

SAFETY WARNING


To ensure proper installation, please read the instructions and diagrams carefully.

1. Installation and electrical connections must be carried out by qualified personnel.
2. This product is not suitable for individuals (including children) with reduced physical, sensory, or mental capabilities, or those lacking experience and knowledge, unless they are supervised or instructed by a person responsible for their safety.
3. Children should be supervised to ensure they do not play with the appliance.
4. Disconnect the plug from the power socket before moving the fan or cleaning the appliance.
5. Avoid placing the appliance near water sources or gas-powered household equipment to prevent the risk of fire or explosion.
6. Do not insert any objects into the fan blades while the fan is operating. This may cause injury or damage to the appliance.
7. After installation, ensure all parts and connections are securely tightened to prevent detachment during use.
8. During initial operation, some connections may loosen. Check all joints and fan blades twice to ensure safety.
9. If any part becomes loose, use proper tools to retighten securely.

PRODUCT SPECIFICATIONS

MODEL	SHD7361B	WEIGHT	6,68 kg
POWER	85 W	WIND MODE	04
NUMBER OF BLADES	6	WIND SPEED	7,8 m/s
BLADE SPAN	16 inch	CONTROL TYPE	Mechanical
HEIGHT	1200 mm - 1400 mm		

PRODUCT STRUCTURE

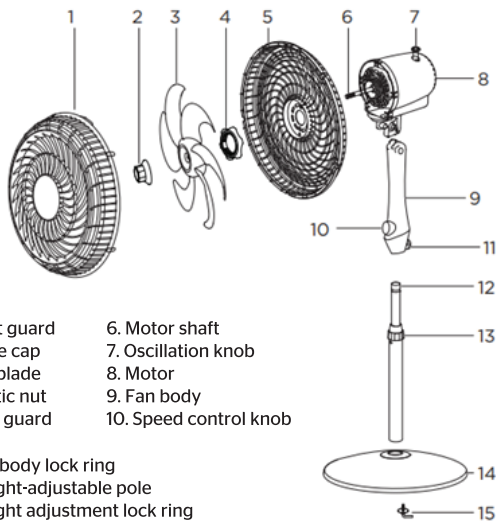

- | | |
|---------------------------------|------------------------|
| 1. Front guard | 6. Motor shaft |
| 2. Blade cap | 7. Oscillation knob |
| 3. Fan blade | 8. Motor |
| 4. Plastic nut | 9. Fan body |
| 5. Rear guard | 10. Speed control knob |
| 11. Fan body lock ring | |
| 12. Height-adjustable pole | |
| 13. Height adjustment lock ring | |
| 14. Fan base | |
| 15. Base fixing screw | |

INSTRUCTIONS

1. BEFORE FIRST USE

- Remove all packaging materials and check if the product has been damaged during transportation.
- If any damage or missing parts are found, do not use the fan. Contact the dealer or authorized service center as soon as possible.

2. FAN ASSEMBLY

- Attach the stand pipe to the base and tighten the fixing screw securely.
- Mount the motor housing onto the stand pipe and lock it firmly using the fan body lock ring.
- Install the rear guard and tighten the plastic nut. Then attach the fan blade, secure it with the blade cap, and finally install the front guard.
- Adjust the fan height by loosening the height adjustment lock ring, raising or lowering the stand pipe to the desired position, and then tightening the ring again.

3. OPERATING THE FAN

- Place the fan on a flat, stable surface.
- Plug the power cord into a 220V- / 50Hz outlet.
- Turn the speed control knob to select one of four wind speed levels as desired.
- Press the oscillation knob to enable left-right oscillation, and lift the knob to stop oscillation.
- Adjust the airflow direction upward or downward by gently tilting the fan head to your preferred angle.

CLEANING AND MAINTENANCE

- Inspect the fan twice a year. If any malfunction or abnormal condition occurs, stop using the fan immediately. Then contact the service department or authorized service center via the HOTLINE: 1800 6680.
- Check the following parts: loose screws, nuts and bolts, condition of the safety cord, motor shaft, etc.
- Keep the fan clean. Wipe off dust and dirt with a soft, dry cloth. Do not use solvents such as gasoline or oil to clean the fan. Do not lift or carry the fan by the blades during cleaning.
- Do not paint the fan blades. If the blades are damaged, replace them with a new set.
- If the fan is cracked or severely damaged, replace it with a new unit.



Do not dispose of electrical appliances as unsorted municipal waste. Please use designated collection points for electrical and electronic waste. Contact your local authorities for information about available collection systems.

If electrical appliances are disposed of in landfills or dumps, hazardous substances may leak into groundwater and enter the food chain, causing harm to health and the environment.