



English

1 Important

Read this user manual carefully before you use the Rice cooker and save it for future reference.

Danger

- The appliance must not be immersed.

Warning


- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be positioned in a stable situation with the handles (if any) positioned to avoid spillage of the hot liquids.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- If the power cord set is damaged, it must be replaced by a cord set available from the manufacturer.
- The appliance is not intended to be operated by means of an external timer or a separate remote-control system.
- Check if the voltage indicated on the appliance corresponds to the local power voltage before you connect it.
- Do not let the power cord hang over the edge of the table or worktop on which the appliance stands.
- Make sure the heating element, the temperature sensor, and the outside of the inner pot are clean and dry before you put the plug in the power outlet.
- Do not plug in the appliance or press any of the buttons on the control panel with wet hands.
- WARNING: Make sure to avoid spillage on the power connector to avoid a potential hazard.
- WARNING: Always follow the instructions and use the appliance properly to avoid potential injury.
- According to the instructions prescribed in this user manual, use a soft damp cloth to clean the surfaces in contact with food and make sure to remove all the food residues stuck to the appliance.
- Don't place the power cord under the appliance when in use.

Caution

- CAUTION: Surface of the heating element is subject to residual heat after use.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.
- Do not expose the appliance to high temperatures, nor place it on a working or still hot stove or cooker.
- Do not expose the appliance to direct sunlight.
- Place the appliance on a stable, horizontal, and level surface.
- Always put the inner pot in the appliance before you put the plug in the power outlet and switch it on.
- Do not place the inner pot directly over an open fire to cook rice.
- Do not use the inner pot if it is deformed.
- The accessible surfaces may become hot when the appliance is operating. Take extra caution when touching the appliance.
- Beware of hot steam coming out of the steam vent during cooking or out of the appliance when you open the lid. Keep hands and face away from the appliance to avoid the steam.
- Do not lift and move the appliance while it is operating.

4 Overview

Product overview

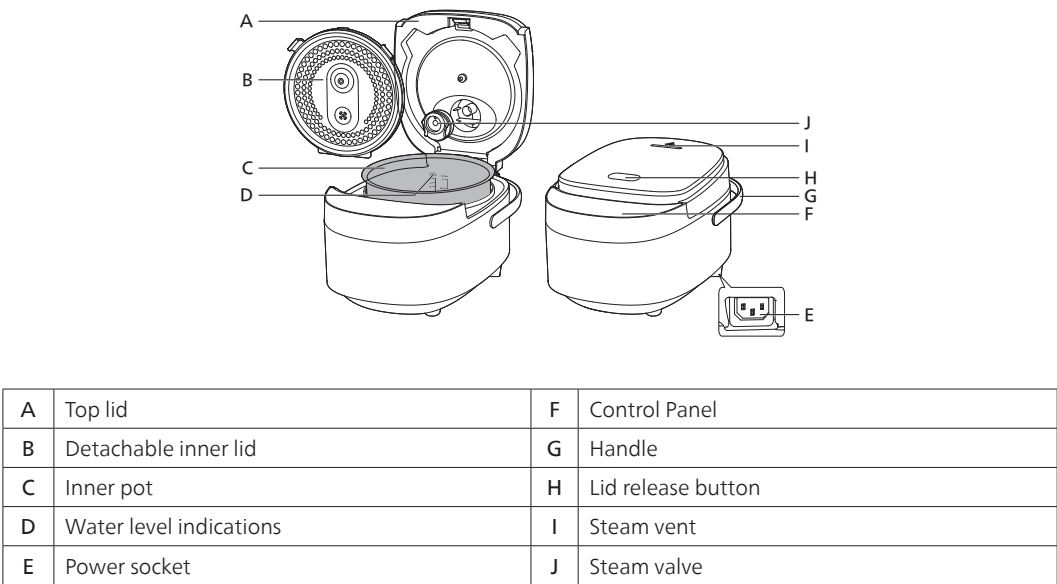

A	Top lid	F	Control Panel
B	Detachable inner lid	G	Handle
C	Inner pot	H	Lid release button
D	Water level indications	I	Steam vent
E	Power socket	J	Steam valve

- Do not exceed the maximum water level indicated in the inner pot to prevent overflow which might cause potential hazard.
- Do not place the cooking utensils inside the pot while cooking, keeping warm or reheating rice.
- Only use the cooking utensils provided. Avoid using sharp utensils.
- To avoid scratches, it is not recommended to cook ingredients with crustaceans and shellfish. Remove the hard shells before cooking.
- Do not insert metallic objects or alien substances into the steam vent.
- Do not place a magnetic substance on the lid. Do not use the appliance near a magnetic substance.
- Always let the appliance cool down before you clean or move it.
- Always clean the appliance after use. Do not clean the appliance in a dishwasher.
- Always unplug the appliance if not used for a longer period.
- The operating altitude range of the appliance is 0 -2000 meters.
- If the appliance is used improperly or for professional or semi-professional purposes, or if it is not used according to the instructions in this user manual, the guarantee becomes invalid and Philips refuses liability for any damage caused.

Power-failure memory function

This appliance features a power-failure memory function that save the status prior to the power loss.

- If a power outage occurs during cooking and power is restored within 2 hours, the cooking time countdown will resume from its previous point.
- If a power outage occurs while the product is in preset mode and power is restored within 2 hours, the preset time countdown will resume from its previous point.
- If power is not restored within 2 hours, the appliance may not resume its previous work process.


Electromagnetic fields (EMF)

This appliance complies with the applicable standards and regulations regarding exposure to electromagnetic fields.

2 Your Rice cooker


Congratulations on your purchase, and welcome to Philips!
To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

3 What's in the box

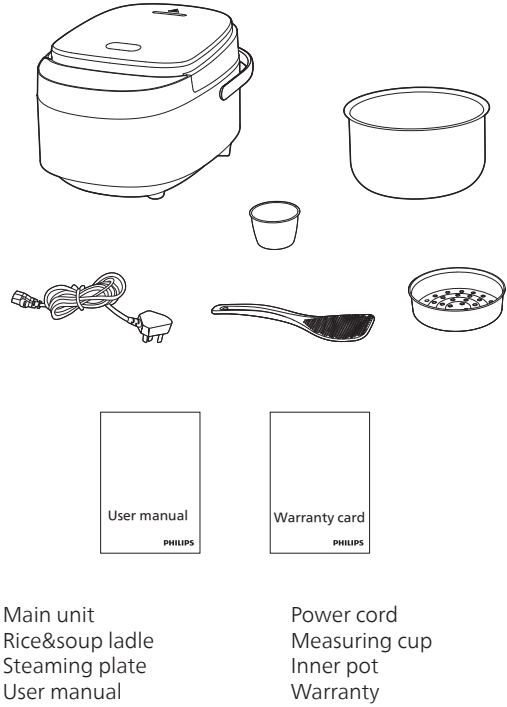

Main unit
Rice&soup ladle
User manual
Power cord
Measuring cup
Inner pot
Warranty

Controls overview

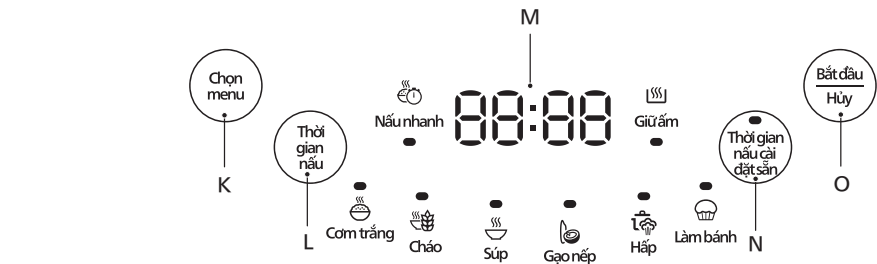

K	Choose menu button	N	Cooking time booking button
L	Cooking time button	O	Start/Cancel button
M	Time display		

Cooking programs

Cooking function	Default cooking time*	Adjustable time range
Fast cook	30 minutes**	N/A
White rice	50 minutes	N/A
Congee	90 minutes	1-2 hours
Soup	120 minutes	1.5-4 hours
Cake	50 minutes	N/A
Sticky rice	50 minutes	N/A
Steam	30 minutes	1minute-1 hour
Keep warm	0-12 hours	N/A

*The default cooking time refers to the default cooking time displayed on the screen when the corresponding function is selected. The appliance cannot adjust the cooking time manually. The actual cooking time may vary depending on the amount of ingredients used, amount of water used, the temperature of the water, and the cooking environment.

**The cooking time for the Fast cook function may vary depending on factors such as the amount of rice used, the quantity of water used, the temperature of the water, and the cooking environment. As a result, the cooking time will be adjusted, either increased or decreased.

5 Using your rice cooker

Before first use

- 1 Take out all the accessories from the inner pot. Remove the packaging material of the inner pot.
- 2 Before first use, boil water and clean the Rice cooker.
- 3 Clean the parts of the Rice cooker thoroughly before using it for the first time (see chapter "Cleaning and Maintenance").

Notes

- Make sure all parts are completely dry before you start using the Rice cooker.
- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.

Preparations before cooking

Warning


- Make sure the detachable inner lid and the steam valve are correctly installed.

Notes


- Make sure that the amount of food or liquid you add to the inner pot is within the range of the water level indication.
- For rice cooking, follow the water level indications on the inside of the inner pot. You can adjust the water level for different types of rice and your own preference. Do not exceed the quantities indicated on the inside of the inner pot.
- After the cooking process starts, you can tap **Start/Cancel** to cancel the cooking, the rice cooker will go to standby mode.

Perform the following preparations before cooking with the rice cooker:


- 1 Press the lid release button to open the rice cooker.

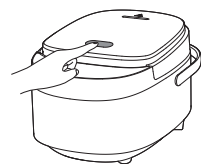


- 2 Take out the inner pot.

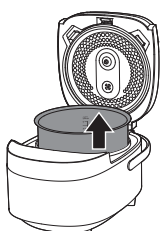

- 3 Put the wahsed food into the inner pot, and wipe off water outside of the inner pot with a soft clean cloth, put it back into the appliance.

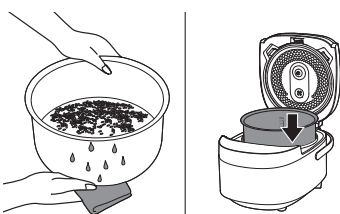

- 4 Close the lid.
- 5 Put the plug in the power socket.

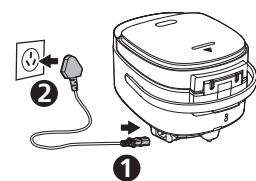


Notes

- Make sure the outside of the inner pot is dry and clean, and that there is no foreign residue on the heating element.
- Make sure the inner pot is in proper contact with the heating element.

Cooking rice

- 1 Follow the steps in "Preparations before cooking".
- 2 Press **Choose menu** button to select Fast cook, White rice or Sticky rice.
 - ↳ The indicator of chosen cooking function blinks.
 - ↳ The default cooking timer displays on the screen.

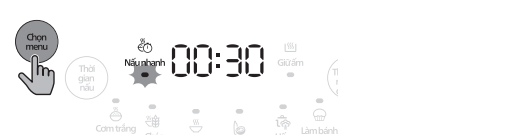

- 3 Press **Start** to start the cooking process.
- 4 When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
- 5 The rice cooker will be in keep warm mode automatically.
 - ↳ The keep-warm indicator lights up.

Notes

- Press **Start/Cancel** to terminate the current cooking process.
- The level marked inside the inner pot is just an indication; you can always adjust the water level for different types of rice and your own preference.
- Besides following the water level indications, you may also add rice and water at 1:(1.3-1.6) ratio for rice cooking
- To prevent the rice from clumping, loosen the rice within 30 minutes.
- Do not exceed the volume indicated nor exceed the maximum water level indicated in the inner pot, as this may cause the rice cooker to overflow and cause potential hazard.

Congee and soup

- 1 Put all ingredients into the inner pot.
- 2 Follow the steps in "Preparations before cooking".
- 3 Press **Choose menu** button to select the Congee or Soup function.



- ↳ The indicator of chosen cooking function blinks.
- ↳ The default cooking timer displays on the screen.


Notes

- You can press the **Cooking time** button to adjust the time, the cooking time blinks on the screen.

- 4 Press **Start** to start the cooking process.
- 5 When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
- 6 The rice cooker will be in keep warm mode automatically.
 - ↳ The keep-warm indicator lights up.

Baking cake

- 1 Whisk the ingredients for cake well.
- 2 Coat the inner pot with some butter or cooking oil, and then pour the ingredients into it.
- 3 Follow the steps in "Preparations before cooking".
- 4 Press **Choose menu** button to select **Cake** function.

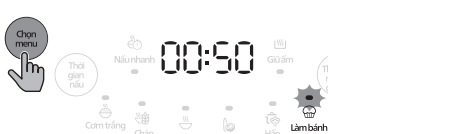

- 5 Press **Start** to start the cooking process.
- 6 When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
 - ↳ The keep-warm indicator lights up.
- 7 Open the lid and carefully take out the inner pot to cool down.
- 8 After the inner pot is cool down, put a plate or cake rack on top of the pot, and then flip over to take the cake out.

Steam

- 1 Add some water into the inner pot.
- 2 Put the steam basket into the inner pot.
- 3 Place foods on a food plate or directly on the steaming basket.
- 4 Press **Choose menu** button to select the **Steam** function.
 - ↳ The indicator of chosen cooking function blinks.
 - ↳ The default cooking timer displays on the screen.



Notes

- You can press the **Cooking time** button to adjust the time, the cooking time after setting blinks on the screen.


- 5 Press **Start** to start the cooking process.
- 6 When the cooking is finished, you will hear 6 beeps and the selected cooking function light will be off.
- 7 The rice cooker will be in keep warm mode automatically.
 - ↳ The keep-warm indicator lights up.

Preset time for delayed cooking

Notes

- The preset function is not available for **Cake** and **Keep warm**. The preset time is up to 24 hours.
- The preset timer should be longer than cooking time.
- If you want to enjoy delicious rice after 8 hours, set the preset time to 8 hours.

- 1 Choose a function you need, press the **Cooking time booking** button to set the preset time.
 - ↳ The cooking time booking indicator blinksThe time on the screen blinks

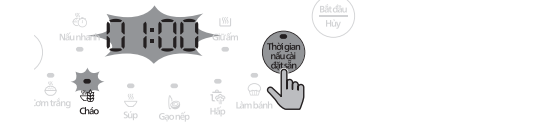

- 2 Press the **Cooking time booking** button to adjust the time.
 - ↳ With each press, the time increases by 10 minutes. Long press the button to quickly adjust the time by 1 hour.




- 3 Press **Start** to start the cooking process.
 - ↳ The rice cooker starts countdown until the cooking process is finished.

6 Cleaning and Maintenance

Notes

- Unplug the Rice cooker before starting to clean it.
- Wait until the appliance has cooled down sufficiently before cleaning.


Inner lid

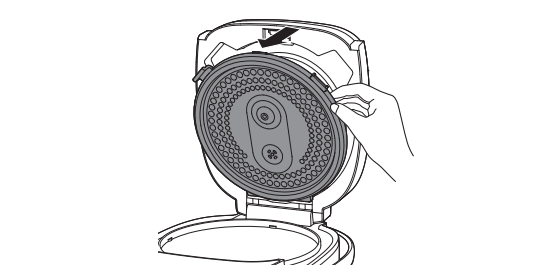


- Remove the inner lid that can be detached from the top lid and clean it.
- Soak the inner lid in warm water and wash it with a sponge.
- Remove all the food residues stuck to the appliance.
- Reattach the inner lid to the top lid.

Steam valve

- Remove the inner lid.
- Remove the steam valve from the top lid.

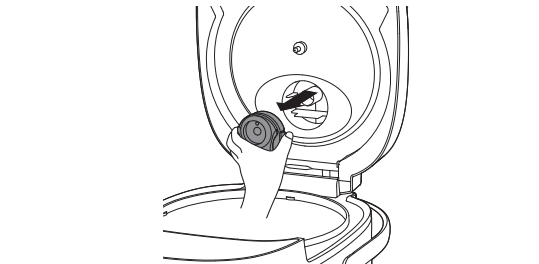

- Rinse the steam valve to remove any food residues. Once it has been cleaned, reattach the steam valve to the top lid.

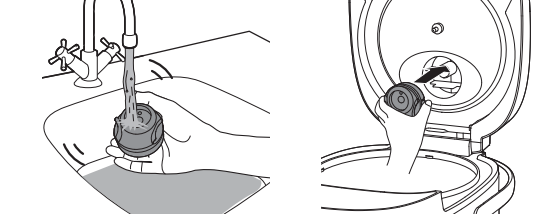

Interior

- Top lid and inside of the appliance:
- Wipe with wrung out cloth.
 - Remove all the food residues stuck to the appliance.
- Heating element:
- Wipe with wrung out cloth.
 - Remove all the food residues.

Exterior

- Wipe with a cloth damped with soap water.
- Only use soft and dry cloth to wipe the control panel.
- Make sure to remove all the food residues.

Accessories

- Rice scoop, steaming basket and inner pot.
- Soak in hot water and clean with sponge.

7 Recycling

Do not throw away the product with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment. Follow your country's rules for the separate collection of electrical and electronic products. Correct disposal helps prevent negative consequences for the environment and human health.

8 Warranty and support

Versuni offers a two-year warranty after purchase on this product. This warranty is not valid if a defect is due to incorrect use or poor maintenance. Our warranty does not affect your rights under law as a consumer. For more information or for invoking the warranty, please visit our website www.philips.com/support.

9 Specifications

Model Number	HD3170
Rated power input	549-653W
Rated capacity	3.0L
Rice capacity	0.85L

10 Troubleshooting

If you encounter problems when using this appliance, check the following points before requesting service. If you cannot solve the problem, contact the Philips Consumer Care Center in your country.

Problem	Solution
The light on the button does not go on.	There is a connection problem. Check if the power cord is connected to the rice cooker properly and if the plug is inserted firmly into the power outlet. The light is defective. Take the appliance to your Philips dealer or a service center authorized by Philips.
The rice is not cooked	There is not enough water. Add water according to the scale on the inside of the inner pot. Make sure that there is no foreign residue on the heating element and the outside of the inner pot before switching the rice cooker on. The heating element is damaged, or the inner pot is deformed. Take the rice cooker to your Philips dealer or a service center authorized by Philips.
The rice is too soft, too hard, or not well cooked.	Add more water into the rice or cook longer.
The appliance does not switch to keep warm mode automatically.	The temperature control system has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.
During cooking, There is water spilling in the rice cooker.	Based on the rice amount and different types of rice, add the appropriate amount of water according to the water level indication on the inner pot.
Rice smells bad after cooking	User the cleaning agent and warm water to clean the inner pot. After cooking, make sure the steam vent cap, inner lid and inner pot are cleaned thoroughly. Clean the inner pot with some washing detergent and warm water.
E1, E2, E3 or E4 displays on the screen.	The sensor has malfunction. Take the appliance to your Philips dealer or a service center authorized by Philips.
E5 or E6 displays on the screen.	The voltage is too high or too low. Once the voltage in your area recovers, the error code will be disappeared from screen.

Tiếng Việt

1 Quan trọng

Đọc kỹ hướng dẫn sử dụng này trước khi sử dụng nồi cơm điện và cất giữ tài liệu để tiện tham khảo sau này.

Nguy hiểm

- Không được ngâm nhúng thiết bị.

Cảnh báo

- Thiết bị này không dành cho người dùng (bao gồm cả trẻ em) bị suy giảm năng lực về thể chất, giác quan hoặc tâm thần, hoặc thiếu kinh nghiệm và kiến thức, trừ khi họ được giám sát hoặc hướng dẫn sử dụng thiết bị bởi người có trách nhiệm đảm bảo an toàn cho họ.

- Trẻ em phải được giám sát để đảm bảo rằng chúng không chơi đùa với thiết bị này.

- Đặt thiết bị này trên một mặt phẳng vững chắc, gần tay cầm (nếu có) để tránh làm tràn nước nóng.

- Thiết bị này được thiết kế để sử dụng trong nhà và những nơi tương tự như:

- Khu vực nhà bếp dành cho nhân viên trong các cửa hàng, văn phòng và các môi trường làm việc khác;
- Nhà ở trang trại;
- Sử dụng bởi khách hàng trong các khách sạn, nhà nghỉ và các môi trường dân cư khác;
- Khách sạn nghỉ qua đêm.

- Nếu bộ dây nguồn bị hỏng, bạn phải thay bằng bộ dây nguồn do nhà sản xuất cung cấp.

- Thiết bị này không được thiết kế để hoạt động như bộ hẹn giờ cắm ngoài hoặc hệ thống điều khiển từ xa riêng.

- Kiểm tra xem điện áp ghi trên thiết bị có tương ứng với điện áp nguồn nơi sử dụng trước khi nối thiết bị với nguồn điện.

- Không để dây điện treo trên cạnh bàn hoặc nơi chuẩn bị đồ ăn, nơi đặt thiết bị.

- Bảo đảm để nhiệt, bộ cảm biến nhiệt độ và mặt ngoài của lồng nồi luôn sạch sẽ và khô ráo trước khi cắm phích cắm vào ổ điện.

- Không cắm phích cắm của thiết bị vào ổ điện hoặc nhấn bất kỳ nút nào trên bảng điều khiển bằng tay uốt.

- CẢNH BÁO:** Đảm bảo không làm tràn nguyên liệu trên đầu nồi nguồn để tránh gây nguy hiểm.

- CẢNH BÁO:** Luôn làm theo các hướng dẫn và sử dụng thiết bị đúng cách để tránh gây ra chấn thương.

- Theo các hướng dẫn có trong sách hướng dẫn sử dụng này, hãy dùng khăn mềm và ẩm để lau chùi các bề mặt tiếp xúc với thực phẩm và đảm bảo đã lấy ra hết thức ăn dính trong thiết bị.

- Không đặt dây điện bên dưới thiết bị trong khi sử dụng.

Thận trọng

- CHÚ Ý: Bề mặt để nhiệt có thể còn nóng sau khi sử dụng.

- Không sử dụng bất kỳ phụ kiện hoặc bộ phận nào từ các nhà sản xuất khác hoặc những phụ kiện / bộ phận mà Philips không đặc biệt khuyến dùng. Nếu bạn sử dụng các phụ kiện hoặc bộ phận không phải của Philips, bảo hành sẽ bị mất hiệu lực.
- Không để thiết bị gần nhiệt độ cao, hay đặt thiết bị lên bếp hay dụng cụ nấu khác đang đun hoặc vẫn còn nóng.

- Không để thiết bị tiếp xúc trực tiếp với ánh nắng mặt trời.

3 Các bộ phận/phụ kiện có trong thùng



Bộ phận chính

Muỗng xới cơm và mức súp

Xung hấp

Sách hướng dẫn sử dụng

Dây điện


Cúp đong

Lồng nồi

Phiếu bảo hành


4 Tổng quan

Tổng quan về sản phẩm

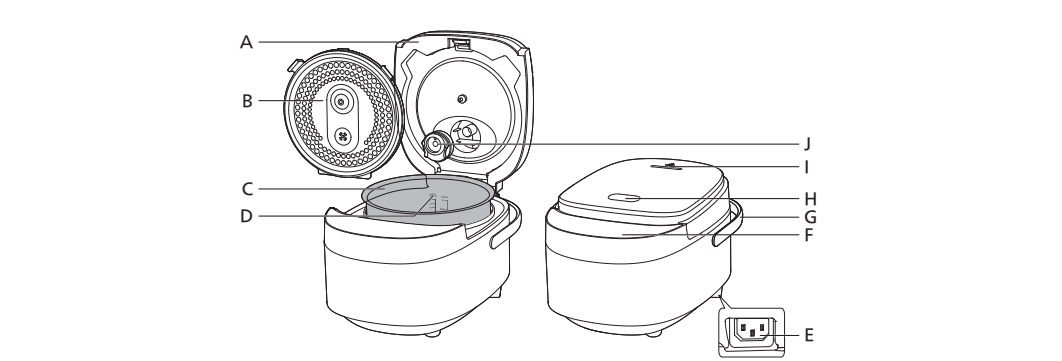

A	Nắp trên	F	Bảng điều khiển
B	Nắp trong có thể tháo rời	G	Tay cầm
C	Lồng nồi	H	Nút mở nắp
D	Chỉ báo mức nước	I	Lỗ thông hơi
E	Ổ cắm điện	J	Van hơi

Tổng quan về bảng điều khiển

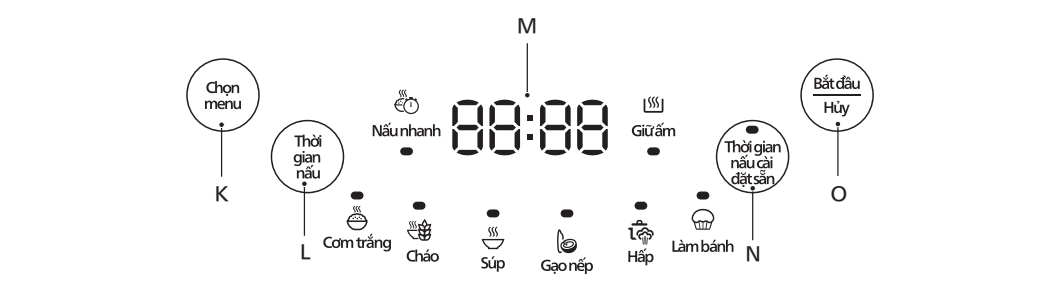

K	Nút Chọn menu	N	Nút Đặt trước thời gian nấu
L	Nút Thời gian nấu	O	Nút Bật đầu/Hủy
M	Màn hình thời gian		

Chương trình nấu

Chức năng nấu	Thời gian nấu mặc định*	Phạm vi thời gian có thể điều chỉnh
Nấu nhanh	30 phút**	Không áp dụng
Cơm trắng	50 phút	Không áp dụng
Chảo	90 phút	1-2 giờ
Súp	120 phút	1,5-4 giờ
Làm bánh	50 phút	Không áp dụng
Gạo nếp	50 phút	Không áp dụng
Hấp	30 phút	1 phút - 1 giờ
Giữ ấm	0-12 giờ	Không áp dụng

*Thời gian nấu mặc định là thời gian nấu mặc định được hiển thị trên màn hình khi chức năng tương ứng được chọn. Thiết bị không thể điều chỉnh thời gian nấu bằng tay. Thời gian nấu thực tế có thể khác nhau tùy thuộc vào lượng nguyên liệu được sử dụng, lượng nước được sử dụng, nhiệt độ của nước và môi trường nấu.

**Thời gian nấu của chức năng Nấu nhanh có thể khác nhau tùy thuộc vào các yếu tố như lượng gạo được sử dụng, lượng nước được sử dụng, nhiệt độ của nước và môi trường nấu. Do đó, thời gian nấu sẽ được điều chỉnh, tăng hoặc giảm.

5 Cách sử dụng nồi cơm điện

Trước khi sử dụng lần đầu

- Lấy toàn bộ phụ kiện bên trong lồng nồi ra. Tháo tất cả vật liệu đóng gói của lồng nồi.
- Trước khi sử dụng lần đầu, hãy đun nước sôi và rửa lồng nồi cơm điện.
- Làm sạch kỹ các bộ phận của nồi cơm điện trước khi sử dụng thiết bị này lần đầu tiên (xem chương "Vệ sinh và bảo dưỡng").

☰ Ghi chú

- Đảm bảo tất cả các bộ phận khô hoàn toàn trước khi bắt đầu sử dụng nồi cơm điện.
- Đảm bảo mặt ngoài của lồng nồi khô ráo và sạch sẽ, cũng như không có vật lạ bám trên bề nhiệt.

Chuẩn bị trước khi nấu

⚠ Cảnh báo


- Đảm bảo nắp trong có thể tháo rời và van hơi được lắp đúng cách.

☰ Ghi chú


- Đảm bảo lượng thực phẩm hoặc chất lỏng bạn thêm vào lồng nồi nằm trong phạm vi của chỉ báo mức nước.
- Để nấu cơm, làm theo các chỉ báo mực nước phía bên trong của lồng nồi. Bạn có thể điều chỉnh mực nước cho các loại gạo khác nhau và tùy theo sở thích của riêng bạn. Không nấu nhiều hơn số lượng được ghi ở trong nồi.
- Sau khi quá trình nấu bắt đầu, bạn có thể chạm vào **Start/Cancel** (Bắt đầu/Hủy) để hủy nấu, nồi cơm điện sẽ chuyển sang chế độ chờ.

Thực hiện các bước chuẩn bị sau đây trước khi nấu bằng nồi cơm điện:


- Nhấn nút mở nắp để mở nồi cơm điện.

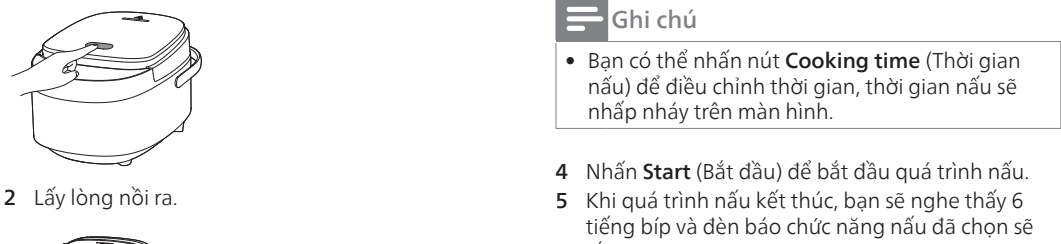


- Lấy lồng nồi ra.

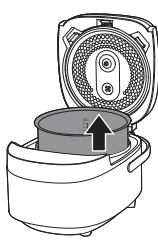

- Cho thực phẩm đã rửa sạch vào lồng nồi, lau sạch nước bên ngoài lồng nồi bằng miếng vải sạch mềm, sau đó đặt lại vào thiết bị.

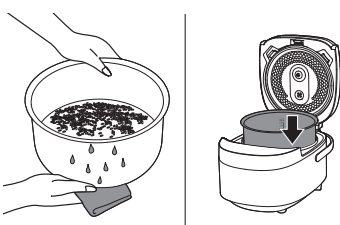

- Đóng nắp.
- Cắm phích cắm vào ổ cắm điện.

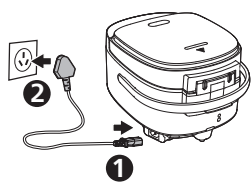


☰ Ghi chú

- Đảm bảo mặt ngoài của lồng nồi khô ráo và sạch sẽ, cũng như không có vật lạ bám trên bề nhiệt.
- Đảm bảo lồng nồi tiếp xúc tốt với bề nhiệt.

Nấu cơm

- Thực hiện theo các bước trong mục "Chuẩn bị trước khi nấu".
- Nhấn nút **Choose menu** (Chọn menu) để chọn Fast cook (Nấu nhanh), **White rice** (Cơm trắng) hoặc **Sticky rice** (Gạo nếp).
 - Đèn báo của chức năng nấu đã chọn nhấp nháy.
 - Đồng hồ hẹn giờ nấu mặc định hiển thị trên màn hình.

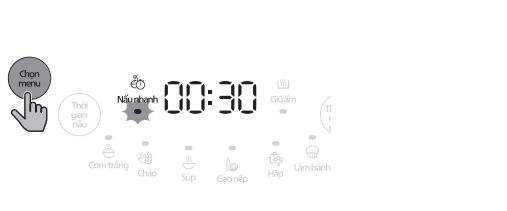

- Nhấn **Start** (Bắt đầu) để bắt đầu quá trình nấu.
- Khi quá trình nấu kết thúc, bạn sẽ nghe thấy 6 tiếng bip và đèn báo chức năng nấu đã chọn sẽ tắt.
- Nồi cơm điện sẽ tự động chuyển sang chế độ giữ ấm.
 - Đèn báo giữ ấm phát sáng.

☰ Ghi chú

- Nhấn **Start/Cancel** (Bắt đầu/Hủy) để kết thúc quá trình nấu hiện tại.
- Mức nước được đánh dấu trên lồng nồi này chỉ mang tính tham khảo; bạn luôn có thể điều chỉnh mực nước cho thích hợp với các loại gạo khác nhau và theo sở thích của riêng bạn.
- Ngoài việc tuân theo chỉ báo mực nước, bạn cũng có thể thêm gạo và nước theo tỷ lệ 1:(1,3-1,6) để nấu cơm.
- Để cơm không bị vón cục, hãy đánh tơi cơm trong vòng 30 phút.
- Không cho quá lượng gạo được chỉ báo hoặc cho quá mức nước tối đa được đánh dấu trong lồng nồi, vì như vậy có thể làm cho gạo nở tràn ra ngoài và gây ra nguy cơ tiềm ẩn.

Cháo và Súp

- Cho tất cả nguyên liệu vào lồng nồi.
- Thực hiện theo các bước trong mục "Chuẩn bị trước khi nấu".

- Nhấn nút **Choose menu** (Chọn menu) để chọn chức năng **Congee** (Cháo) hoặc **Soup** (Xúp).



- Đèn báo của chức năng nấu đã chọn nhấp nháy.
- Đồng hồ hẹn giờ nấu mặc định hiển thị trên màn hình.

☰ Ghi chú

- Bạn có thể nhấn nút **Cooking time** (Thời gian nấu) để điều chỉnh thời gian, thời gian nấu sẽ nhấp nháy trên màn hình.

- Nhấn **Start** (Bắt đầu) để bắt đầu quá trình nấu.
- Khi quá trình nấu kết thúc, bạn sẽ nghe thấy 6 tiếng bip và đèn báo chức năng nấu đã chọn sẽ tắt.
- Nồi cơm điện sẽ tự động chuyển sang chế độ giữ ấm.
 - Đèn báo giữ ấm phát sáng.

Nướng bánh


- Đánh đều các nguyên liệu làm bánh.
- Tráng nồi trong bằng một ít bơ hoặc dầu ăn, sau đó đổ nguyên liệu vào.
- Thực hiện theo các bước trong mục "Chuẩn bị trước khi nấu".
- Nhấn nút **Choose menu** (Chọn menu) để chọn chức năng **Cake** .



- Nhấn **Start** (Bắt đầu) để bắt đầu quá trình nấu.
- Khi quá trình nấu kết thúc, bạn sẽ nghe thấy 6 tiếng bip và đèn báo chức năng nấu đã chọn sẽ tắt.
 - Đèn báo giữ ấm phát sáng.
- Mở nắp và cẩn thận lấy lồng nồi ra để làm nguội.
- Sau khi lồng nồi đã nguội, đặt một cái đĩa hoặc vĩa bánh trên nồi, sau đó úp ngược nồi để lấy bánh ra.

Hấp

- Thêm một ít nước vào lồng nồi.
- Đặt xung hấp vào lồng nồi.
- Đặt thức ăn lên khay hoặc trực tiếp trên xung hấp.
- Nhấn nút **Choose menu** (Chọn menu) để chọn chức năng **Steam** (Hấp).
 - Đèn báo của chức năng nấu đã chọn nhấp nháy.
 - Đồng hồ hẹn giờ nấu mặc định hiển thị trên màn hình.

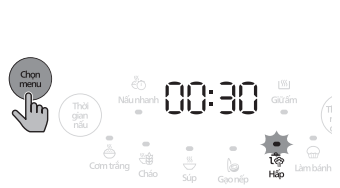

☰ Ghi chú

- Bạn có thể nhấn nút **Cooking time** (Thời gian nấu) để điều chỉnh thời gian, thời gian nấu sau khi cài đặt sẽ nhấp nháy trên màn hình.


- Nhấn **Start** (Bắt đầu) để bắt đầu quá trình nấu.
- Khi quá trình nấu kết thúc, bạn sẽ nghe thấy 6 tiếng bip và đèn báo chức năng nấu đã chọn sẽ tắt.
- Nồi cơm điện sẽ tự động chuyển sang chế độ giữ ấm.
 - Đèn báo giữ ấm phát sáng.

Đặt sẵn thời gian nấu chậm

☰ Ghi chú

- Chức năng cài sẵn không có sẵn cho **Cake** (Làm bánh) và **Keep warm** (Giữ ấm). Thời gian cài sẵn lên đến 24 giờ.
- Thời gian hẹn giờ cài sẵn nên dài hơn thời gian nấu.
- Nếu bạn muốn thưởng thức cơm ngon sau 8 giờ, hãy cài đặt thời gian cài sẵn là 8 giờ.

- Chọn một chức năng bạn cần, nhấn nút **Cooking time booking** (Đặt trước thời gian nấu) để cài đặt thời gian cài sẵn.
 - Đèn báo đặt trước thời gian nấu nhấp nháy
 - Thời gian trên màn hình nhấp nháy.

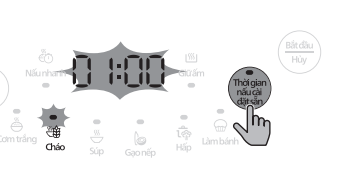

- Nhấn nút **Cooking time booking** (Đặt trước thời gian nấu) để điều chỉnh thời gian.
 - Với mỗi lần nhấn, thời gian tăng thêm 10 phút. Nhấn giữ nút để nhanh chóng điều chỉnh thời gian trong 1 giờ.




- Nhấn **Start** (Bắt đầu) để bắt đầu quá trình nấu.
 - Nồi cơm điện bắt đầu đếm ngược cho đến khi quá trình nấu kết thúc.

6 Vệ sinh và bảo dưỡng

☰ Ghi chú

- Rút phích cắm của nồi cơm điện ra khỏi ổ cắm điện trước khi làm sạch nồi.
- Chờ cho đến khi thiết bị đủ nguội trước khi vệ sinh.


Nắp trong

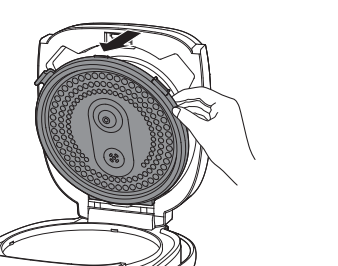

- Tháo nắp trong có thể tháo rời khỏi nắp trên và vệ sinh nắp.
- Ngâm nắp trong vào nước ấm và rửa sạch bằng miếng bọt biển.
- Loại bỏ tất cả cận thức ăn bám vào thiết bị.
- Gắn lại nắp trong vào nắp trên.

Van hơi

- Tháo nắp trong.
- Tháo van hơi ra khỏi nắp trên.

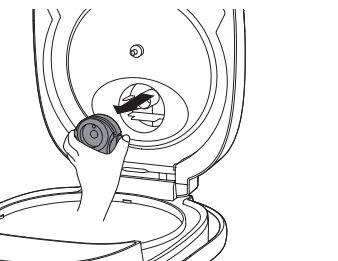


- Rửa sạch van hơi để loại bỏ cận thức ăn. Sau khi đã được làm sạch, lắp lại van hơi vào nắp trên.



10 Khắc phục sự cố

Nếu bạn gặp sự cố khi sử dụng thiết bị này, hãy kiểm tra các vấn đề sau đây trước khi yêu cầu dịch vụ. Nếu bạn không thể giải quyết được vấn đề, hãy liên hệ Trung Tâm Chăm Sóc Khách Hàng của Philips tại nước bạn.

Sự cố	Giải pháp
Đèn báo trên nút không bật sáng.	Có sự cố về dây nối hay phích cắm điện. Kiểm tra xem dây điện có nối chặt với nồi cơm điện không và xem phích cắm có cắm chặt vào ổ điện hay chưa. Đèn báo bị trục trặc. Mang thiết bị đến đại lý Philips của bạn hoặc trung tâm dịch vụ do Philips ủy quyền.
Cơm chưa chín	Không có đủ nước. Cho thêm nước vào theo thang phân chia các mức nước ở lồng nồi. Đảm bảo rằng không có vật lạ trên bề nhiệt và phía bên ngoài lồng nồi trước khi bật nồi cơm điện. Để nhiệt bị hỏng, hoặc lồng nồi bị biến dạng. Mang nồi cơm điện đến đại lý Philips của bạn hoặc trung tâm dịch vụ do Philips ủy quyền.
Cơm bị nhão, khô cứng hoặc chưa chín.	Thêm nước vào gạo hoặc nấu lâu hơn.
Thiết bị không tự động chuyển sang chế độ giữ ấm.	Hệ thống kiểm soát nhiệt độ bị trục trặc. Mang thiết bị đến đại lý Philips của bạn hoặc trung tâm dịch vụ do Philips ủy quyền.
Trong khi nấu, có nước tràn vào nồi cơm điện.	Tùy theo lượng gạo và các loại gạo khác nhau mà thêm lượng nước phù hợp theo chỉ báo mực nước trên lồng nồi.
Cơm có mùi sau khi nấu	Sử dụng chất tẩy rửa và nước ấm để làm sạch lồng nồi.
E1, E2, E3 hoặc E4 hiển thị trên màn hình.	Sau khi nấu, đảm bảo rằng nắp thông hơi, nắp trong và lồng nồi được rửa sạch sẽ. Rửa lồng nồi bằng chất tẩy rửa làm sạch và nước ấm.
E5 hoặc E6 hiển thị trên màn hình.	Cảm biến bị trục trặc. Mang thiết bị đến đại lý Philips của bạn hoặc trung tâm dịch vụ do Philips ủy quyền.
	Điện áp quá cao hoặc quá thấp. Khi điện áp trong khu vực của bạn phục hồi, mà lỗi sẽ biến mất khỏi màn hình.

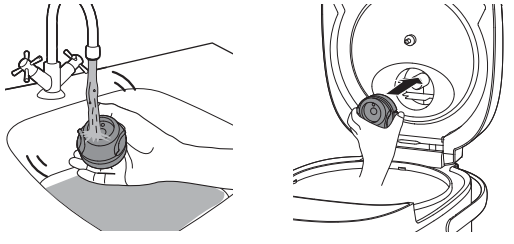

Bên trong

Nắp trên và bên trong thiết bị:

- Lau sạch bằng vải đã vắt khô.
- Loại bỏ tất cả cận thức ăn bám vào thiết bị.

Để nhiệt:

- Lau sạch bằng vải đã vắt khô.

- Loại bỏ tất cả cận thức ăn.

Bên ngoài

- Lau sạch bằng vải ẩm nhúng nước xà phòng.
- Chỉ sử dụng vải khô và mềm để lau sạch bằng điều khiển.
- Đảm bảo loại bỏ tất cả cận thức ăn.

Phụ kiện

Muỗng xới cơm, xung hấp và lồng nồi.

- Ngâm vào nước nóng và lau sạch bằng miếng xốp.

7 Tái chế

Không vứt sản phẩm cùng chung với rác thải gia đình thông thường khi ngừng sử dụng nó, mà hãy đem sản phẩm đến điểm thu gom chính thức để tái chế. Làm như vậy sẽ giúp bảo vệ môi trường.
Làm theo các quy định tại quốc gia của bạn đối với việc thu gom riêng các sản phẩm điện và điện tử. Việc vứt bỏ đúng cách sẽ giúp phòng tránh các hậu quả xấu cho môi trường và sức khỏe con người.

8 Bảo hành và hỗ trợ

Versuni cung cấp bảo hành hai năm sau khi mua sản phẩm này. Bảo hành này không có giá trị nếu lỗi do sử dụng không đúng cách hoặc do bảo trì kém. Bảo hành của chúng tôi không ảnh hưởng đến quyền của bạn theo luật với tư cách là người tiêu dùng. Để biết thêm thông tin hoặc yêu cầu bảo hành, vui lòng truy cập trang web của chúng tôi **www.philips.com/support**.

9 Thông số kỹ thuật

Mã kiểu	HD3170
Đầu vào công suất định mức	549-653W
Công suất định mức	3.0L
Dung tích gạo	0,85L