



QUICK SETUP GUIDE

Speaker Main Features

Wi-Fi connection is recommended for this speaker.

Provides a wide range of sound sources, Internet radio available, and supports group play with multiple connections or stereo sound feature.



Features	 Wi-Fi	 Bluetooth®
Multiroom feature	Connect multiple devices at once.	One device connection
Music service	Variety of music services available with the Samsung Multiroom App . - Sound source service - Internet radio (TuneIn)	App installation per music service required



NOTE

- ✓ Bluetooth Setup, please refer to page 11.

Checking the Components

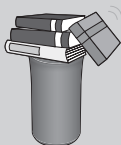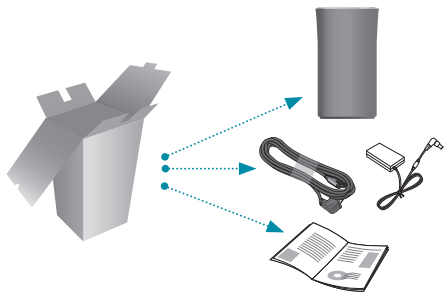

Do not place any items on top of or sit on the main unit.

Getting Started

1. Follow the installation steps in this user manual.
2. Please download **Samsung Multiroom** app on your smart device.

Installation

1. Make sure your smart device (Smart Phone, Tablet, PAD, etc) is connected to your Wi-Fi network.



NOTE

- ✓ All the devices need to connect to the same network.



Smart device



Router

2. On your smart device, download and install the **Samsung Multiroom** app.



Android





iOS



Samsung Multiroom app


3. Connect your speaker to power.

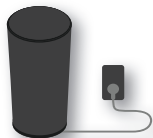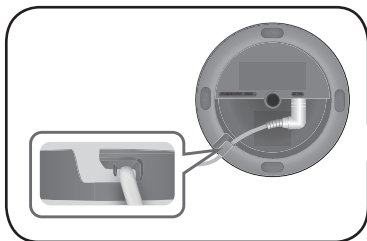

Speaker

Installation

4. Launch the **Samsung Multiroom** app on your smart device, and then follow the instruction on the screen to complete setup.
 - Play music after speaker setup is complete.

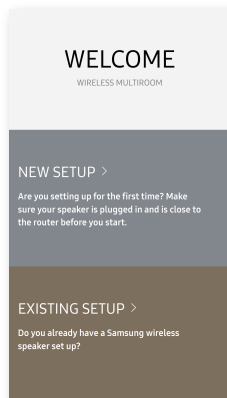

Welcome Screen


If Auto Set-up fails, follow the on-screen instructions.



NOTE

- ✓ If speaker setup continually fails,
Press and hold the volume (+, -) buttons on top of the speaker simultaneously for five seconds to reset the speaker.
Next, restart the app and follow the displayed instructions to configure the speaker again.

Speaker Top

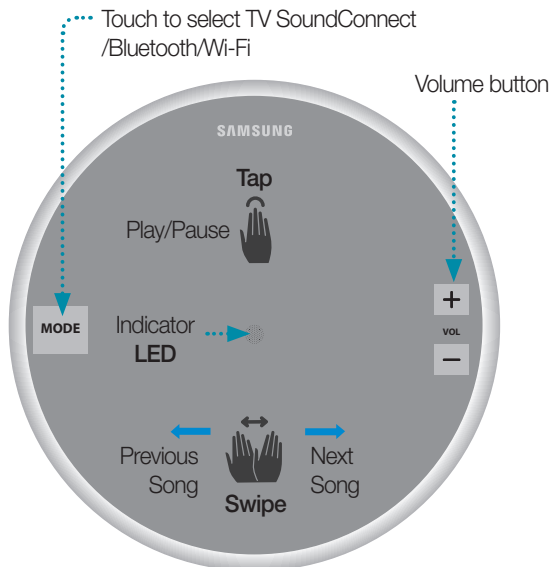

NOTES

- ✓ Tap/Swipe : Whole area is available except **MODE**, Volume (+, -) key area on the TOP.
- ✓ The speaker will enter standby mode to reduce energy consumption after **15 minutes** of idle time.

Speaker Bottom

SPK ADD/Wi-Fi SETUP


SERVICE

For service only.


DC 19V

1. Connect the adaptor's input power cord to the adaptor.
2. Connect the adaptor's output power cord (with the round plug) to the DC 19V jack on the speaker.

Notch for Power Cable

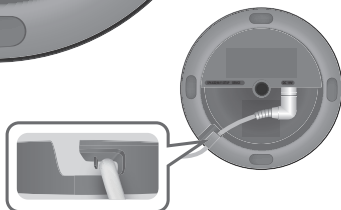

Using the Samsung Multiroom App (on Main Screen)

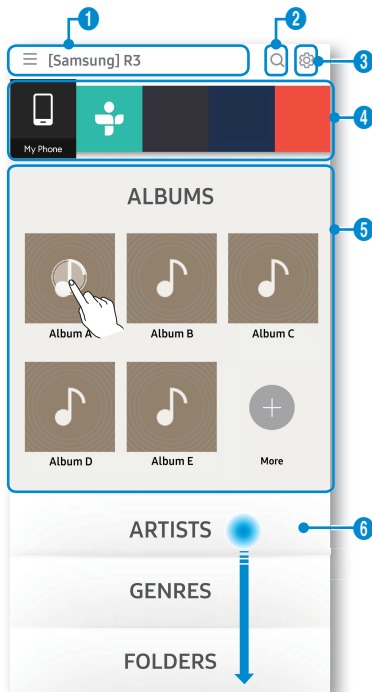

- 1 View the full list of connected speakers.
- 2 Enter a keyword to search for the music desired.
- 3 Access the settings menu.
- 4 Select a source of music and play the music you want. Scroll left or right to view different sources of music.
- 5 A different screen is displayed according to the music source selected.
- 6 Different categories of music are listed below the bar. Scroll down to select your favourite categories of music.



NOTES




- ✓ Some of app image might be different. Please refer to Web Manual for the detail information.
- ✓ Sign-up or log-in may be required to access some streaming services.
- ✓ Some TuneIn radio channels may be restricted depending on their site policies.
- ✓ Supported streaming services are provided by third parties and may be terminated at any time.

Connecting Additional Speakers

You can add additional speakers

Use an app to add speakers to the network.

1. Connect the new speaker to an electrical outlet.
2. On the main screen, touch  at the top left to display a list of speakers.
3. Touch **More**.
4. Touch **Add New Speaker** in the app, and then follow the instructions on the app screen.


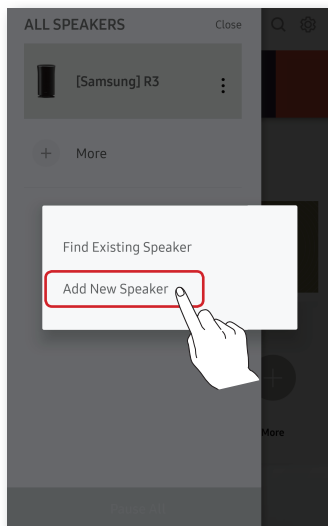
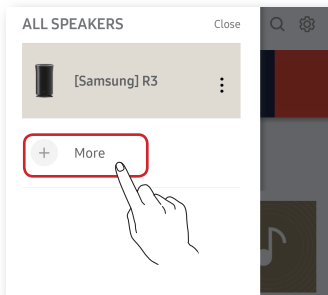
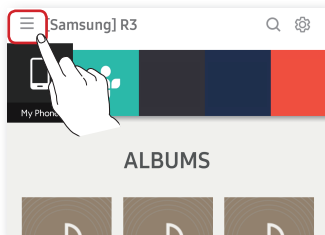


Using Multiple Speakers

Setting up a group

Group multiple speakers, connected over the same network, to play the same music via the speakers.

1. On the main screen, touch  at the top left to display a list of speakers.
2. Touch  next to the speaker name.
3. Touch **Group**. If you have more than two connected speakers, select the speakers you want to set up as a group, and then select **Done**.

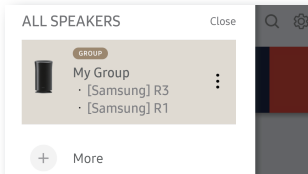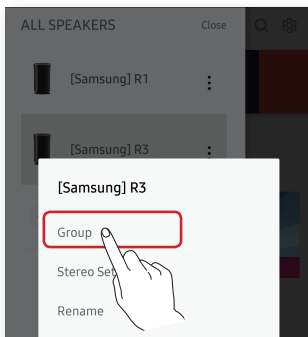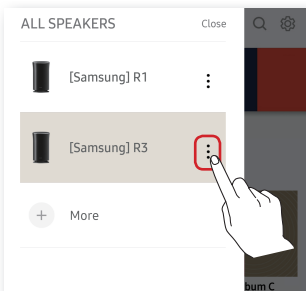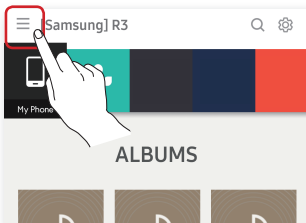

NOTES

- ✓ If two speakers are available, touch **Group** to automatically group the speakers.
- ✓ You cannot use **Group** with Bluetooth or a TV SoundConnect connection.


Using Multiple Speakers

Setting up Stereo Mode

- ✓ If connecting to a Samsung Smart TV over Wi-Fi, use multiple speakers to configure a surround sound system. Refer to “Connecting to a Samsung Smart TV over Wi-Fi” for details.

Use multiple speakers to enjoy stereo sound.

1. On the main screen, touch  at the top left to display a list of speakers.
2. Touch  next to the speaker name.
3. Touch **Stereo Setup**.
4. Touch and hold a speaker, drag and drop it to a desired location, and then select **Done**.

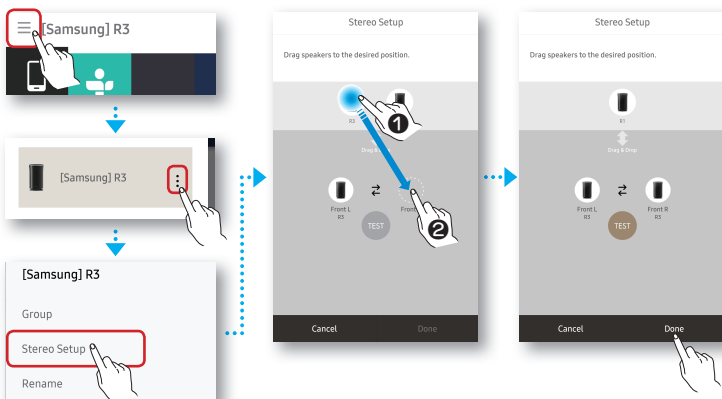

NOTES

- ✓ If two speakers are connected, touch **Stereo Setup** to enable stereo sound mode.
- ✓ Speaker testing and volume adjustment are optional.
- ✓ You cannot use **Stereo Setup** with Bluetooth or a TV SoundConnect connection.

Using Bluetooth®

1. Touch the **MODE** button on the TOP of your speaker one or more times until you hear “Bluetooth is ready.”
2. Enable Bluetooth on your smart phone, and then select **[Samsung] R1** from the Bluetooth list.



NOTE

- ✓ Without connection with **Samsung Multiroom** app, you might see “**Samsung Wireless Audio**” on your Bluetooth list.

3. Use any music app on your device to play music on your speaker.



NOTE

- ✓ In **Bluetooth** mode, the Play/Pause/Next/Prev functions are available in Bluetooth devices supporting AVRCP.

Connecting to a TV via TV SoundConnect (Bluetooth)

TV SoundConnect allows an easy wireless connection between a Samsung TV and your speaker so you can enjoy listening to your TV's sound through the speaker.

1. Touch the **MODE** button one or more times until you hear "TV SoundConnect is ready."



NOTE

- ✓ TV SoundConnect can be used to connect a single speaker to a TV.
(to connect multiple speakers to a TV, refer to "Connecting to a Samsung Smart TV over Wi-Fi").

2. Press and hold **MODE** button for 5 seconds to initialise TV SoundConnect Mode.
3. A pop-up appears on the TV asking you to approve the connection. Approve to continue.



NOTES

- ✓ Once connection completed, skip above step 2 and 3 when you connect the TV again.
- ✓ To connect a new TV, follow above all 3 steps.
- ✓ The TV SoundConnect (SoundShare) feature is available on several Samsung TV models released after 2012.

Connecting to a Samsung Smart TV over Wi-Fi

What is the Wi-Fi surround sound connection?

If your Samsung TV supports the Wi-Fi mode, connect the TV and audio devices on the same Wi-Fi network. You can enjoy sound experience from the surround sound system.

Playing TV sound using the
Soundbar and speakers



Playing TV sound using speakers
only (up to five speakers can be
connected)



Checklist before Connection

※ Check information for your TV model.

For connection to a TV over Wi-Fi, only Samsung Smart TVs, released after 2014, are compatible. (See the User Manual provided with your TV.)

When using a smart TV manufactured by other than Samsung,

- Use a wired connection to connect between your TV and Samsung Soundbar that supports the multiroom feature. Then use the Multiroom app to set up your surround sound system.
(Refer to the Soundbar user manual at the Samsung website.)

Connecting to a Samsung Smart TV over Wi-Fi

1. Check to make sure that the Soundbar and audio device are connected to a (Wi-Fi) network.



NOTE

- ✓ Download the **Samsung Multiroom** app to your smart device, then follow the instructions in the app to connect the speakers and/or Soundbar to the (Wi-Fi) network.
2. Check to make sure that the TV is connected to the network.
 - How to check : Menu → Network → Network Status
 3. Check to make sure that the TV, Soundbar and speakers are connected to the same network.

Connecting to a Samsung Smart TV released in 2016

■ Connecting a single speaker or Soundbar

From the menus, select **Sound Output**.

Home Menu → Settings (⚙️) → Sound → Sound Output → Model name(Wi-Fi)


■ Connecting multiple speakers or connecting a single speaker along with the Soundbar

1. On the TV menu, select **Wireless Speaker Manager**.

Menu → Sound → Expert Settings → Wireless Speaker Manager

Connecting to a Samsung Smart TV over Wi-Fi

2. Select **Multiroom Link Type**.

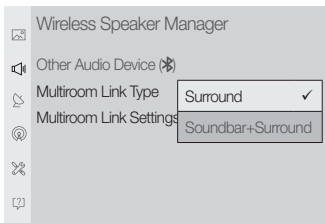

- **Surround :**
Set up with 2 to 5 speakers
- **Soundbar+Surround :**
Set up with one Soundbar and two speakers




NOTE

- ✓ The surround sound system is not available with a combination of one Soundbar and one speaker.

3. Select **Multiroom Link Settings**. Select a speaker for each channel and select **Save** to complete configuration.

• Surround

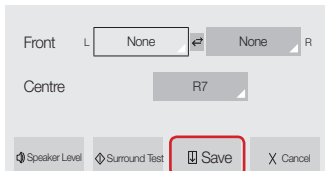

• Soundbar+Surround





- ✓ If a connection cannot be established, see “Checklist before Connection” on pages 13 and 14.

Connecting to a Samsung Smart TV over Wi-Fi

Connecting to a Samsung Smart TV released in 2015

■ Connecting a single speaker or Soundbar

1. On the TV menu, select **Speaker List**.
Menu → Sound → Speaker List
2. Select a connected speaker from the list of speakers.

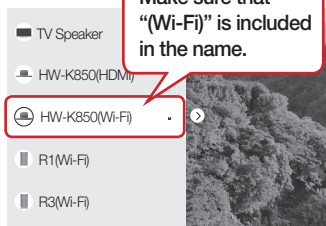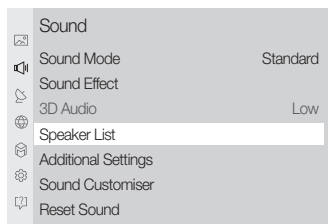

! IMPORTANT

- ✓ Soundbars are indicated by the 'Model name(Wi-Fi)'.

■ Connecting multiple speakers or connecting a single speaker along with the Soundbar

1. Follow the instructions under "Connecting a single speaker or Soundbar" to connect a speaker.


! IMPORTANT

- ✓ To configure the surround sound system aligned with a Soundbar, select a **Soundbar first**.

Connecting to a Samsung Smart TV over Wi-Fi


2. With the speaker selected, press the right directional key on the remote control. Select a speaker for each channel and select **Save** to complete configuration.

Connecting only a speaker

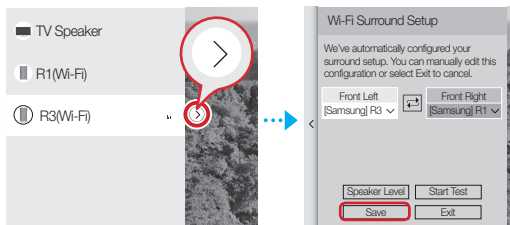

Connecting a speaker along with the Soundbar

- ✓ The surround sound system is not available with a combination of one Soundbar and one speaker.

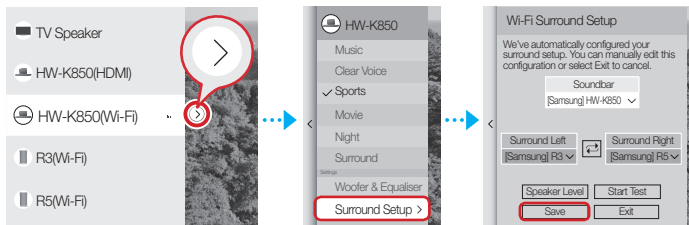



- ✓ If a connection cannot be established, see “Checklist before Connection” on pages 13 and 14.

Connecting to a Samsung Smart TV over Wi-Fi


Connecting to a Samsung Smart TV released in 2014

1. From the menus, select **Multiroom Link - Settings**.

Menu → Sound → Speaker Settings → Multiroom Link - Settings

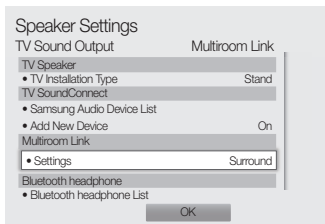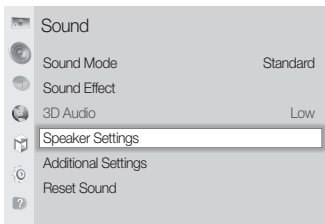

2. Select the **Multiroom Link** type.

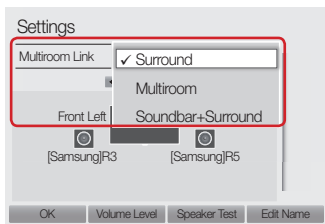

- **Surround :**

Set up with one to five speakers

- **Soundbar+Surround :**

Set up with one Soundbar, or with one Soundbar and two speakers



NOTE



- ✓ The surround sound system is not available with a combination of one Soundbar and one speaker.

Connecting to a Samsung Smart TV over Wi-Fi

3. Select the number of speakers to connect.
e.g., one speaker → 1CH, two speakers → 2CH



4. Select the speaker in the position you want and select **OK**.

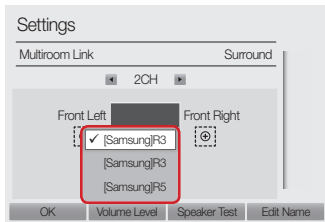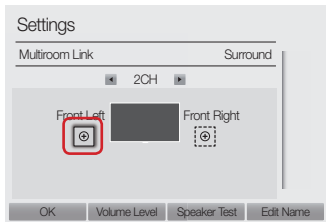

5. Set TV sound output to **Multiroom Link**.

✓ If a connection cannot be established, see “Checklist before Connection” on pages 13 and 14.

Các tính năng chính của loa

Kết nối Wi-Fi được khuyến nghị cho loa này.

Cung cấp nguồn âm thanh đa dạng, hỗ trợ radio qua Internet và tính năng Chia sẻ âm nhạc với kết nối nhiều loa hay âm thanh nổi.



Tính năng	 Wi-Fi	 Bluetooth®
Tính năng đa phòng	Kết nối nhiều thiết bị một lúc.	Kết nối một thiết bị
Dịch vụ nhạc	Nhiều dịch vụ nhạc có sẵn với Ứng dụng Samsung Multiroom . - Dịch vụ nguồn âm thanh - Đài phát thanh qua Internet (TuneIn)	Yêu cầu cài đặt ứng dụng cho mỗi dịch vụ nhạc



LƯU Ý

- ✓ Thiết lập Bluetooth, vui lòng tham khảo trang 11.

Kiểm tra linh kiện

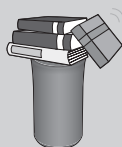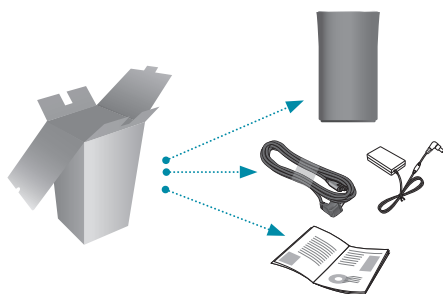

*Không đặt bất kỳ vật
nào lên trên hoặc ngồi
lên loa chính.*

Bắt đầu

1. Thực hiện các bước lắp đặt trong sách hướng dẫn sử dụng này.
2. Vui lòng tải xuống ứng dụng **Samsung Multiroom** trên thiết bị thông minh của bạn.

Lắp đặt

1. Đảm bảo thiết bị thông minh (Điện thoại thông minh, máy tính bảng, PAD, v.v.) của bạn được kết nối với mạng Wi-Fi.



LƯU Ý

- ✓ Tất cả các thiết bị phải kết nối với cùng một mạng.



Thiết bị
thông minh



Bộ định
truyền

2. Trên thiết bị thông minh của bạn, hãy tải về và cài đặt ứng dụng **Samsung Multiroom**.



Android





iOS



Ứng dụng Samsung Multiroom


3. Kết nối loa của bạn với nguồn điện.

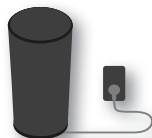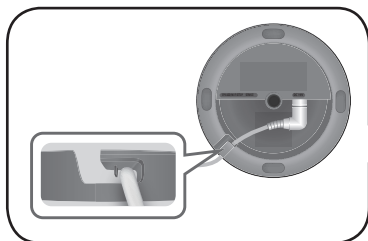

Loa

Lắp đặt

4. Khởi chạy ứng dụng **Samsung Multiroom** trên thiết bị thông minh của bạn và sau đó làm theo hướng dẫn trên màn hình để hoàn tất quá trình thiết lập.
- Phát nhạc sau khi đã hoàn tất cài đặt loa.

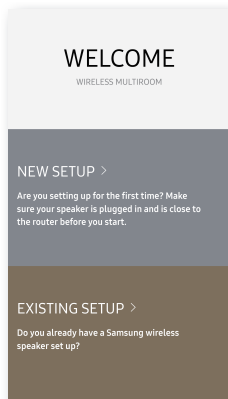

Màn hình Chào mừng


Nếu Tự động thiết lập không thành công, hãy làm theo hướng dẫn trên màn hình.



LƯU Ý

- ✓ Nếu việc cài đặt loa không thành công liên tục, hãy nhấn và giữ cùng một lúc các nút (+, -) ở mặt trên của loa trong năm giây để đặt lại loa. Tiếp theo, khởi động lại ứng dụng và thực hiện theo các hướng dẫn được hiển thị để định cấu hình loa lại lần nữa.

Bề mặt Loa

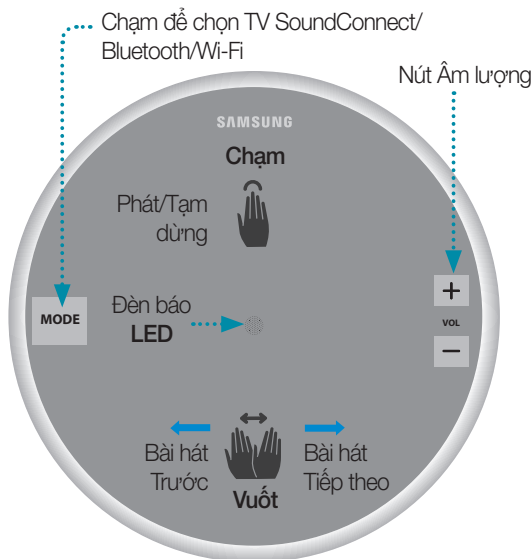

LƯU Ý

- ✓ Chạm/Vuốt : Toàn bộ khu vực đều khả dụng ngoại trừ khu vực phím **MODE**, Âm lượng (-,+) ở ĐÌNH loa.
- ✓ Loa sẽ chuyển sang chế độ chờ để giảm lượng điện tiêu thụ sau **15 phút** không hoạt động.

Đáy Loa

SPK ADD/Wi-Fi SETUP


SERVICE

Chỉ dùng để bảo trì.


DC 19V

1. Cắm dây nguồn đầu vào của bộ điều hợp vào bộ điều hợp.
2. Cắm dây nguồn đầu ra của bộ điều hợp (có phích cắm tròn) vào giắc DC 19 V trên loa.

Khe cắm Dây Nguồn

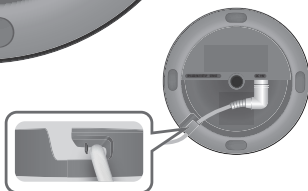

Sử dụng Ứng dụng Samsung Multiroom (trên Màn hình Chính)

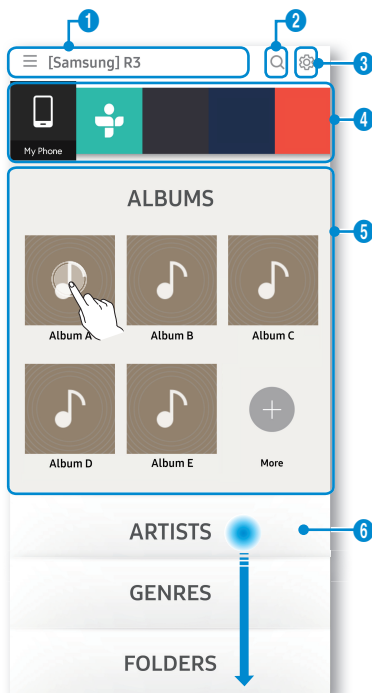

1 Xem danh sách đầy đủ các loa được kết nối.

2 Nhập từ khóa để tìm kiếm nhạc mong muốn.

3 Truy cập menu cài đặt.

4 Chọn một nguồn âm nhạc và phát bài nhạc bạn muốn. Cuộn sang trái hoặc phải để xem các nguồn âm nhạc khác nhau.

5 Một màn hình khác được hiển thị theo nguồn âm nhạc được chọn.

6 Các nhóm bài nhạc khác nhau sẽ được liệt kê bên dưới thanh này. Cuộn xuống để chọn các nhóm bài nhạc yêu thích của bạn.

LƯU Ý




- ✓ Một số hình ảnh ứng dụng có thể khác. Vui lòng tham khảo Hướng dẫn sử dụng trên Web để biết thông tin chi tiết.
- ✓ Có thể phải đăng ký hoặc đăng nhập để truy cập vào một số dịch vụ phát trực tuyến.
- ✓ Một số kênh TuneIn radio có thể bị hạn chế tùy thuộc vào chính sách của trang web.
- ✓ Dịch vụ phát trực tuyến được hỗ trợ do bên thứ ba cung cấp và có thể kết thúc bất cứ lúc nào.

Cài đặt Loa Bỏ sung

Bạn có thể thêm loa bỏ sung

Sử dụng một ứng dụng để thêm loa vào mạng.

1. Kết nối loa mới với ổ cắm điện.
2. Trên màn hình chính, chạm vào ☰ ở trên cùng bên trái để hiển thị danh sách loa.
3. Chạm vào **More**.
4. Chạm vào **Add New Speaker** trên ứng dụng rồi làm theo hướng dẫn trên màn hình ứng dụng.


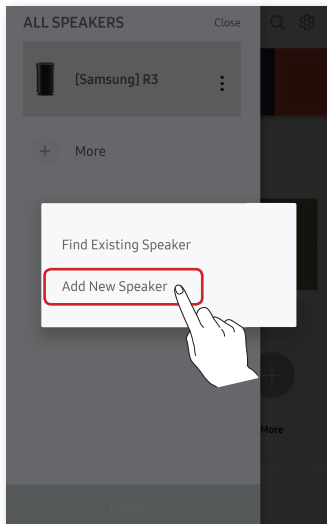
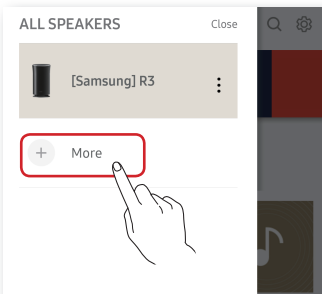
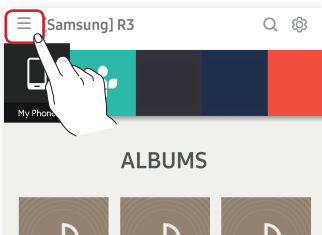


Sử dụng nhiều loa

Thiết lập nhóm

Tạo nhóm nhiều loa kết nối trên cùng một mạng để phát cùng một bài nhạc.

1. Trên màn hình chính, chạm vào ☰ ở trên cùng bên trái để hiển thị danh sách loa.
2. Chạm vào ⋮ bên cạnh tên loa.
3. Chạm vào **Group**. Nếu bạn đã kết nối nhiều hơn hai loa, hãy chọn các loa mà bạn muốn thiết lập thành nhóm, sau đó chọn **Done**.

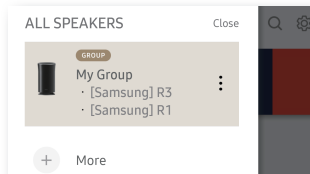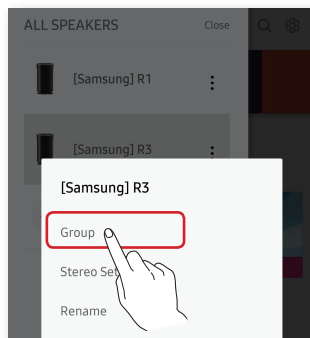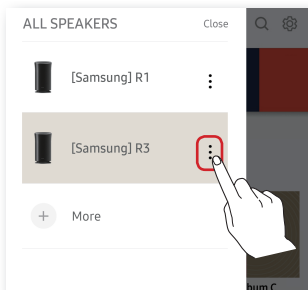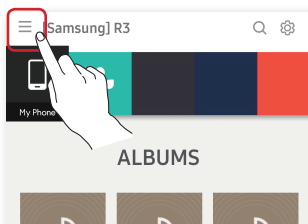

LƯU Ý

- ✓ Nếu có hai loa khả dụng, hãy chạm vào **Group** để nhóm tự động các loa lại với nhau.
- ✓ Bạn không thể sử dụng tính năng **Group** với Bluetooth hoặc kết nối TV SoundConnect.


Sử dụng nhiều loa

Cài đặt chế độ âm thanh nổi

- ✓ Nếu đang kết nối với Samsung Smart TV qua Wi-Fi, hãy sử dụng nhiều loa để định cấu hình cho hệ thống âm thanh vòm. Tham khảo “Kết nối với Samsung Smart TV qua Wi-Fi” để biết chi tiết.

Sử dụng nhiều loa để thưởng thức âm thanh nổi.

1. Trên màn hình chính, chạm vào  ở trên cùng bên trái để hiển thị danh sách loa.
2. Chạm vào  bên cạnh tên loa.
3. Chạm vào **Stereo Setup**.
4. Chạm và giữ loa, kéo và thả loa tới vị trí mong muốn, sau đó chọn **Done**.

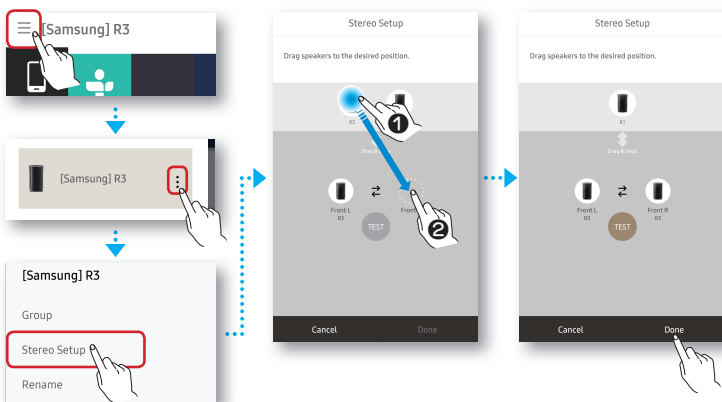

LƯU Ý

- ✓ Nếu có hai loa được kết nối, hãy chạm vào **Stereo Setup** để bật chế độ âm thanh nổi.
- ✓ Bạn có thể tùy chọn kiểm tra loa và điều chỉnh âm lượng.
- ✓ Bạn không thể sử dụng tính năng **Stereo Setup** với Bluetooth hoặc kết nối TV SoundConnect.

Sử dụng Bluetooth®

1. Chạm vào nút **MODE** ở ĐỈNH loa ít nhất một lần cho đến khi bạn nghe thấy thông báo “Bluetooth is ready. (Bluetooth đã sẵn sàng.)”.
2. Bật Bluetooth trên điện thoại thông minh của bạn, sau đó chọn **[Samsung] R1** từ danh sách Bluetooth.



LƯU Ý

- ✓ Nếu không có kết nối với ứng dụng **Samsung Multiroom**, bạn có thể thấy “**Samsung Wireless Audio**” trên danh sách Bluetooth của mình.

3. Sử dụng ứng dụng nhạc bất kỳ trên thiết bị của bạn để phát nhạc trên loa.

LƯU Ý

- ✓ Ở chế độ **Bluetooth**, các chức năng Phát/Tạm dừng/Tiếp theo/Trước khả dụng trên thiết bị Bluetooth hỗ trợ AVRCP.

Kết nối với TV qua TV SoundConnect (Bluetooth)

TV SoundConnect cho phép bạn dễ dàng kết nối không dây TV Samsung với loa để có thể tận hưởng âm thanh của TV thông qua loa.

1. Chạm vào nút **MODE** ít nhất một lần cho đến khi bạn nghe thấy thông báo “TV SoundConnect is ready. (TV SoundConnect đã sẵn sàng.)”.



LƯU Ý

- ✓ Có thể sử dụng TV SoundConnect để kết nối một loa với TV. (để kết nối nhiều loa với một TV, hãy tham khảo “Kết nối với Samsung Smart TV qua Wi-Fi”).
2. Bấm và giữ nút **MODE** trong 5 giây để khởi chạy Chế độ TV SoundConnect.
 3. Một cửa sổ bật lên xuất hiện trên TV yêu cầu bạn chấp thuận kết nối. Chấp thuận để tiếp tục.



LƯU Ý

- ✓ Sau khi hoàn tất kết nối, bỏ qua bước 2 và 3 bên trên khi bạn kết nối TV một lần nữa.
- ✓ Để kết nối TV mới, làm theo tất cả 3 bước bên trên.
- ✓ Tính năng TV SoundConnect (SoundShare) khả dụng ở nhiều sản phẩm TV Samsung được ra mắt sau năm 2012.

Kết nối với Samsung Smart TV qua Wi-Fi

Kết nối âm thanh vòm qua Wi-Fi là gì?

Nếu TV Samsung của bạn hỗ trợ chế độ Wi-Fi, hãy kết nối TV và các thiết bị âm thanh trên cùng một mạng Wi-Fi. Bạn có thể thưởng thức âm thanh từ hệ thống âm thanh vòm.

Phát âm thanh TV qua
Soundbar và các loa



Chỉ phát âm thanh TV bằng các loa
(lên đến năm loa được kết nối)



Danh mục kiểm tra trước khi kết nối

※ Kiểm tra thông tin về mẫu TV của bạn.

Để kết nối với TV qua Wi-Fi, chỉ Samsung Smart TV phát hành sau năm 2014 mới tương thích. (Xem Sách hướng dẫn Sử dụng được cung cấp kèm theo TV của bạn.)

Khi sử dụng TV thông minh không phải do Samsung sản xuất,

- Sử dụng kết nối có dây để kết nối TV với Soundbar của Samsung có hỗ trợ tính năng âm thanh đa vùng. Sau đó dùng ứng dụng Multiroom để cài đặt hệ thống âm thanh vòm.

(Tham khảo sách hướng dẫn sử dụng Soundbar tại trang web của Samsung.)

Kết nối với Samsung Smart TV qua Wi-Fi

1. Kiểm tra để đảm bảo rằng Soundbar và các thiết bị âm thanh được kết nối với cùng một mạng (Wi-Fi).



LƯU Ý

- ✓ Tải ứng dụng **Samsung Multiroom** về thiết bị thông minh của bạn rồi làm theo hướng dẫn trên ứng dụng để kết nối loa và/hoặc Soundbar với mạng (Wi-Fi).
2. Kiểm tra để đảm bảo TV được kết nối với mạng.
 - Hướng dẫn kiểm tra: Menu → Mạng → Trạng thái mạng
 3. Kiểm tra để đảm bảo TV, Soundbar và các loa được kết nối với cùng một mạng.

Kết nối với Samsung Smart TV phát hành năm 2016

■ Kết nối một loa hoặc Soundbar

Từ các menu, hãy chọn **Đầu ra âm thanh**.

Menu Chính → Cài đặt (⚙️) → Âm thanh → Đầu ra âm thanh → Tên mẫu(Wi-Fi)


■ Kết nối nhiều loa hoặc kết nối một loa cùng với Soundbar

1. Trên menu TV, hãy chọn **Trình quản lý loa không dây**.

Menu → Âm thanh → Cài đặt chuyên môn → Trình quản lý loa không dây

Kết nối với Samsung Smart TV qua Wi-Fi

2. Chọn Loại Multiroom Link.

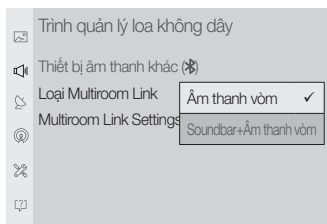


- **Âm thanh vòm :**
Cài đặt với 2 đến 5 loa
- **Soundbar+Âm thanh vòm :**
Cài đặt với một Soundbar và hai loa

LƯU Ý

- ✓ Hệ thống âm thanh vòm không khả dụng để kết hợp một Soundbar và một loa.

3. Chọn Multiroom Link Settings. Chọn một loa cho mỗi kênh và chọn Lưu để hoàn tất quá trình định cấu hình.

• Âm thanh vòm

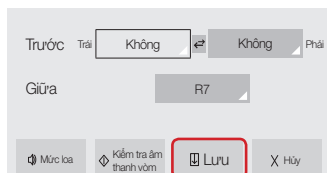

• Soundbar+Âm thanh vòm





- ✓ Nếu không thể thiết lập một kết nối, xem “Danh mục kiểm tra trước khi kết nối” ở trang 13 và 14.

Kết nối với Samsung Smart TV qua Wi-Fi

Kết nối với Samsung Smart TV phát hành năm 2015

■ Kết nối một loa hoặc Soundbar

1. Trên menu TV, hãy chọn **Danh sách loa**.
Menu → Âm thanh → Danh sách loa
2. Chọn một loa đã kết nối từ danh sách loa.

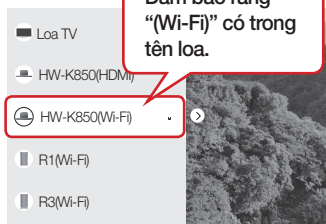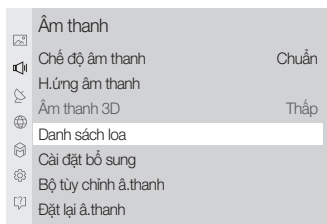

! QUAN TRỌNG

- ✓ Soundbar được nhận biết bởi 'Tên mẫu(Wi-Fi).'

■ Kết nối nhiều loa hoặc kết nối một loa cùng với Soundbar

1. Thực hiện theo hướng dẫn trong "Kết nối một loa hoặc Soundbar" để kết nối một loa.


! QUAN TRỌNG

- ✓ Để định cấu hình hệ thống âm thanh vòm với một Soundbar, hãy chọn một **Soundbar trước tiên**.

Kết nối với Samsung Smart TV qua Wi-Fi


2. Với loa đã chọn, nhấn phím mũi tên bên phải trên điều khiển từ xa. Chọn một loa cho mỗi kênh và chọn **Lưu** để hoàn tất quá trình định cấu hình.

Chỉ kết nối một loa

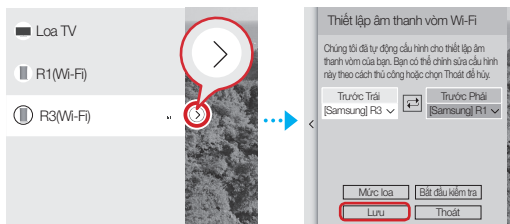

Kết nối một loa cùng với Soundbar

- ✓ Hệ thống âm thanh vòm không khả dụng để kết hợp một Soundbar và một loa.

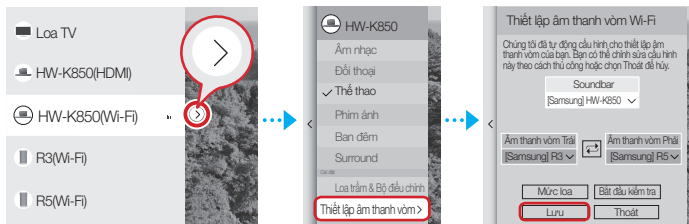



- ✓ Nếu không thể thiết lập một kết nối, xem “Danh mục kiểm tra trước khi kết nối” ở trang 13 và 14.

Kết nối với Samsung Smart TV qua Wi-Fi


Kết nối với Samsung Smart TV phát hành năm 2014

1. Từ các menu, hãy chọn **Multiroom Link - Cài đặt**.

Menu → Âm thanh → Cài đặt loa → Multiroom Link - Cài đặt

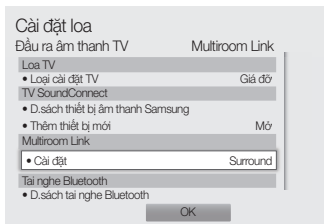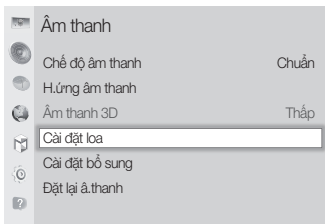

2. Chọn loại **Multiroom Link**.

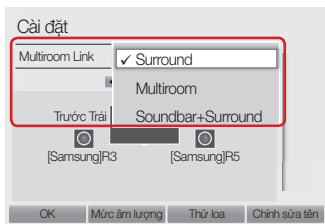

• **Surround :**

Cài đặt với một đến năm loa

• **Soundbar+Surround :**

Cài đặt với một Soundbar, hoặc với một Soundbar và hai loa



LƯU Ý

- ✓ Hệ thống âm thanh vòm không khả dụng để kết hợp một Soundbar và một loa.



Kết nối với Samsung Smart TV qua Wi-Fi

3. Chọn số loa cần kết nối.

ví dụ, một loa → 1CH, hai loa → 2CH



4. Chọn loa ở vị trí bạn muốn và chọn **OK**.

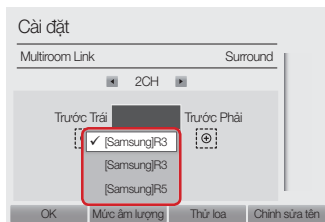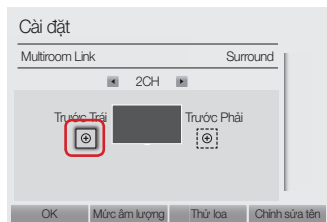

5. Cài đặt đầu ra âm thanh sang **Multiroom Link**.

- ✓ Nếu không thể thiết lập một kết nối, xem “Danh mục kiểm tra trước khi kết nối” ở trang 13 và 14.

Area		Contact Centre ☎	Web Site
S.E.A	SINGAPORE	1800-SAMSUNG(726-7864)	www.samsung.com/sg/support
	AUSTRALIA	1300 362 603	www.samsung.com/au/support
	NEW ZEALAND	0800 726 786	www.samsung.com/nz/support
	VIETNAM	1800 588 889	www.samsung.com/vn/support
	THAILAND	0-2689-3232, 1800-29-3232	www.samsung.com/th/support
	MYANMAR	+95-1-2399-888	www.samsung.com/th/support
	MALAYSIA	1800-88-9999 603-77137477 (Overseas contact)	www.samsung.com/my/support
	INDONESIA	021-56997777 08001128888	www.samsung.com/id/support
	PHILIPPINES	1-800-10-726-7864 [PLDT Toll Free] 1-800-8-726-7864 [Globe Landline and Mobile] 02-422-2111 [Standard Landline]	www.samsung.com/ph/support
	TAIWAN	0800-329999	www.samsung.com/tw/support
	JAPAN	0120-363-905	www.samsung.com/jp/support



AH68-02949M-00