Mama
PREMIUM BRAND OF SUNHOUSE

Hotline: 1800 6680

Trung tâm bảo hành Miền Bắc
Km8, Đại lộ Thăng Long, Hoài Đức, Hà Nội - ĐT: +84 24 3200 8339 / 3200 5230
Trung tâm bảo hành Miền Trung
685 Điện Biên Phủ, Q. Thanh Khê, Đà Nẵng - ĐT: +84 23 6372 6821
Trung tâm bảo hành Miền Nam
Lô 8 - 10 đường số 1, KCN Tân Tạo, P. Tân Tạo A, Q. Bình Tân, TP Hồ Chí Minh
ĐT: +84 28 3869 1014 / Fax: +84 28 3869 1013

SUNHOUSE®

Nhập khẩu & Phân phối: Công ty Cổ phần tập đoàn SUNHOUSE
Địa chỉ: Số 139, Nguyễn Thái Học, P.Điện Biên, Q.Ba Đình, Tp.Hà Nội
Điện thoại: +84 24 3394 0848 - **Fax:** +84 24 3394 0878
Sản phẩm được sản xuất tại Trung Quốc
Website: www.sunhouse.com.vn

Mama
PREMIUM BRAND OF SUNHOUSE

HƯỚNG DẪN SỬ DỤNG

NỒI CƠM ĐIỆN CAO TẦN 1.5L SUNHOUSE MAMA

Model: SHD8955

Vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng

Hướng dẫn cách xác nhận sản phẩm chính hãng, đăng ký và kiểm tra thời hạn bảo hành của sản phẩm áp dụng bảo hành điện tử SUNHOUSE:

Bước 1: Cào nhẹ lớp phủ bạc ở tem chính hãng (vui lòng tìm Tem chính hãng dán trên sản phẩm) để lấy Mã tem cào.
Bước 2: Soạn tin nhắn cú pháp

SHG<dấu cách>***MODEL***<dấu cách>***MÃ TEM CÀO*** gửi đến số ***8077***
Ví dụ: SHG SHD8255B 012345678 gửi đến số ***8077***

Sau khi nhận được tin nhắn, tổng đài sẽ gửi thông báo xác nhận đến Quý khách hàng.

Quý khách hàng thân mến,

Xin chân thành cảm ơn vì đã tin dùng và lựa chọn sản phẩm của SUNHOUSE. Chúng tôi tin rằng, sản phẩm làm bằng những chất liệu cao cấp hàng đầu này sẽ đáp ứng mọi yêu cầu và làm hài lòng quý khách.

Quý khách hàng vui lòng đọc kỹ hướng dẫn sử dụng trước khi dùng để đảm bảo an toàn và đạt hiệu qủa tốt nhất.

Nhà sản xuất không chịu trách nhiệm pháp lý về con người và tài sản trong những trường hợp thiệt hại do lắp đặt sai hoặc sử dụng thiết bị không đúng cách.

THÀNH PHẦN CẤU TẠO

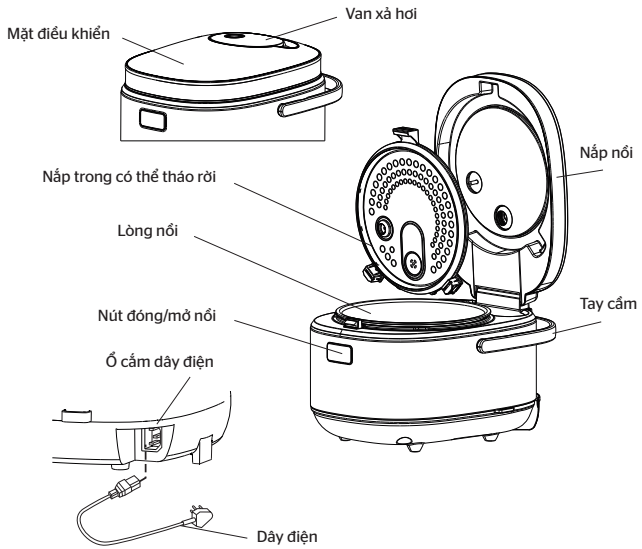

THÔNG SỐ KỸ THUẬT

Sản phẩm	SHD8955
Dung tích	1.5 L
Công suất tiêu thụ	1200W
Hiệu điện thế	220V~ /50Hz
Trọng lượng	6.1 kg

GIỚI THIỆU VỀ CÔNG NGHỆ TĂNG NHIỆT IH

Công nghệ tăng nhiệt IH hay còn được gọi là tăng nhiệt cảm ứng điện tử, thông qua môi trường điện từ trực tiếp tác động lên vật bị tăng nhiệt. Công nghệ này hiệu quả hơn nhiều so với các thiết bị dùng điện có thiết kế ống nhiệt hoặc khí, dầu, than truyền thống. Đồng thời áp dụng công nghệ tăng nhiệt IH cũng giúp tiết kiệm điện năng và tăng tuổi thọ, độ an toàn, thân thiện với môi trường.

CẢNH BÁO AN TOÀN TRƯỚC KHI SỬ DỤNG

1. Đảm bảo điện áp nguồn tương thích với điện áp quy định được ghi trên sản phẩm.
2. Thiết bị này không thích hợp cho những người (kể cả trẻ em) có năng lực về cơ thể, giác quan hoặc tinh thần suy giảm hoặc thiếu kinh nghiệm và hiểu biết trừ khi được giám sát hoặc hướng dẫn sử dụng thiết bị bởi người có trách nhiệm về sự an toàn của họ.
3. Bắt buộc sử dụng với ổ cắm tường tiếp đất, khi cắm điện cần cắm chặt. Không được sử dụng ổ cắm vạn năng và sử dụng cùng lúc với các sản phẩm dùng điện khác để tránh quá tải điện.
4. Khi rút dây điện, cần cầm chặt vào đầu cắm và rút ra, không kéo dây điện. Nếu dây nguồn bị hỏng, vui lòng liên hệ TTBH để được thay thế dây chuyên dụng.
5. Để đảm bảo tiếp xúc tốt, cần cắm chặt dây điện với nồi vào với nguồn điện. Bất cứ đầu nào bị lỏng lẻo cũng có thể gây nóng linh kiện, ảnh hưởng chức năng của sản phẩm và làm giảm tuổi thọ.
6. Khi không sử dụng, đảm bảo rút dây điện khỏi nguồn.
7. Không sử dụng sản phẩm khi không có người theo dõi.
8. Không để trẻ em chơi đùa với thiết bị. Để thiết bị và dây điện ngoài tầm với của trẻ em.
9. Không đặt sản phẩm ở nơi không bằng phẳng, ẩm ướt, dễ cháy để sử dụng.
10. Không vận hành sản phẩm khi không có lòng nồi hoặc lòng nồi chưa có thực phẩm.
11. Không đổ nước hoặc bất kỳ thực phẩm nào vào nồi khi chưa có lòng nồi.
12. Không di chuyển sản phẩm, chạm vào các bộ phận kim loại khi nồi đang vận hành.

13. Không được để sản phẩm tiếp xúc với lửa hoặc gần nguồn nhiệt nóng, nguồn lửa nếu không có thể gây ra những sự cố đáng tiếc, thậm chí nguy hiểm (hình 1).
14. Tuyệt đối không làm nóng trực tiếp lòng nồi bằng các nguồn như lửa như bếp gas, bếp lửa..., nếu không có thể gây biến dạng hoặc bong tróc lòng nồi.
15. Dựa vào mực nước đánh dấu trên lòng nồi để điều tiết tỷ lệ gạo, nước. Tuyệt đối không để nước vượt quá vạch MAX, nếu không có thể gây trào.
16. Bề ngoài lòng nồi cần được giữ khô, sạch, đáy lòng nồi tiếp xúc với mâm nhiệt không được dính nước hay tạp chất để đảm bảo tiếp xúc tốt. Lòng nồi đặt cân bằng, không được lệch nếu không có thể gây cháy linh kiện (hình 2)
17. Trong quá trình nấu, sản phẩm sẽ tăng nhiệt và xả hơi. Không được để tay, mặt gần lỗ xả hơi để tránh bỏng. Tuyệt đối không dùng giẻ hay các vật cách nhiệt khác che chắn nắp nồi, lỗ xả hơi (hình 3).
18. Ngoài lòng nồi, những bộ phận khác của nồi không được dùng nước để rửa hoặc ngâm nước (hình 4).
19. Cần rút điện ngay trong các trường hợp sau: Nồi đang sử dụng xuất hiện sự cố, trước khi vệ sinh nồi, kiểm tra nồi.
20. Nếu có trường hợp bất kỳ bộ phận nào của nồi bị cháy, không được dùng nước để dập lửa mà có thể dùng vải ướt phủ lên để dập lửa.
21. Không để nồi ở chế độ "Giữ ấm" quá 12 giờ để tránh làm mất vị ngon của món ăn.

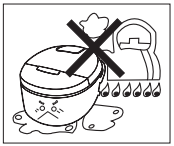
(Hình 1)

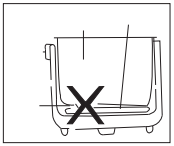
(Hình 2)

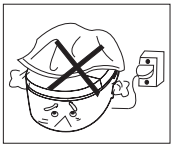
(Hình 3)

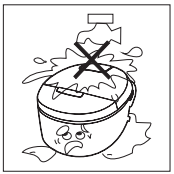
(Hình 4)

Lưu ý: Không sử dụng sản phẩm trong những trường hợp sau:
- Sản phẩm hoặc dây nguồn có vấn đề.
- Sản phẩm bị rơi dẫn đến hỏng hóc hoặc bất thường do vận chuyển.

Nếu phát sinh những trường hợp trên, cần liên hệ TTBH của công ty để xử lý. Không tự ý thay thế bằng các linh kiện không phải linh kiện chính hãng của sản phẩm.

BẢNG ĐIỀU KHIỂN

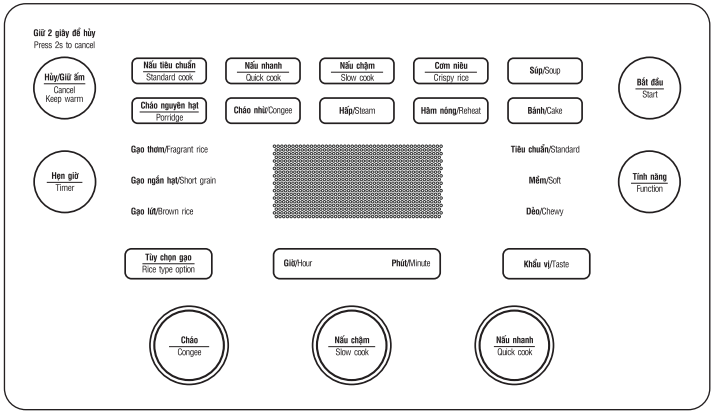

GIẢI THÍCH CÁC CHỨC NĂNG BẢNG ĐIỀU KHIỂN

1. Tính năng/Function

Ấn TÍNH NĂNG/FUNCTION để chọn tính năng nấu phù hợp, đèn của tính năng tương ứng sẽ sáng. Ấn liên tục phím này để tuần hoàn lựa chọn các tính năng nấu, dừng lại ở chức năng bạn muốn chọn.

2. Bắt đầu/Start

Sau khi chọn được tính năng mong muốn, ấn nút BẮT ĐẦU/START để thiết bị bắt đầu vận hành.
Sau khi nấu xong, nồi sẽ vang lên tiếng "bíp" để báo hiệu và tự động chuyển sang chế độ giữ ấm. Đèn giữ ấm sẽ sáng và màn hình hiển thị thời gian giữ ấm.
Ví dụ: Ấn nút "Tính năng/Function" rồi chọn Cháo nguyên hạt, đèn ở tính năng đó sẽ sáng. Ấn nút "Bắt đầu/Start" để nồi bắt đầu làm việc.

3. Tùy chọn gạo/Rice type option

Sau khi chọn xong tính năng muốn nấu, bạn có thể chọn loại gạo bằng cách ấn nút TÙY CHỌN GẠO/RICE TYPE OPTION nhiều lần để chọn giữa "Gạo thơm", "Gạo ngắn hạt" và "Gạo lứt".
Tùy chọn loại gạo chỉ có thể chọn ở các tính năng: Nấu tiêu chuẩn, Nấu nhanh, Nấu chậm và Cơm niêu.

4. Khẩu vị/Taste

Sau khi chọn xong tính năng muốn nấu, bạn có thể chọn khẩu vị bằng cách ấn nút KHẨU VỊ/TASTE nhiều lần để chọn giữa "Tiêu chuẩn", "Mềm" và "Dẻo".
Khẩu vị chỉ có thể chọn ở tính năng Nấu tiêu chuẩn

5. Hẹn giờ/Timer

Sau khi chọn xong tính năng muốn nấu, bạn có thể hẹn giờ nấu bằng cách ấn nút HẸN GIỜ/TIMER. Phạm vi thời gian có thể hẹn là từ 1 – 24 giờ.
Hẹn giờ chỉ có thể chọn ở các tính năng: Nấu tiêu chuẩn, Nấu chậm, Cháo nguyên hạt, Cháo nhừ, Súp và Hấp.

6. Giờ - Phút

Ở chế độ "Hẹn giờ/Timer", ấn nút GIỜ/HOUR và PHÚT/MINUTE để hẹn giờ chính xác đến từng phút.



7. Hủy/Giữ ấm

Trong khi nồi đang vận hành, bạn có thể tạm dừng bằng cách ấn nút HỦY/GIỮ ẤM. Bấm nút này lần nữa, nồi sẽ chuyển sang chế độ "Giữ ấm".
Thời gian giữ ấm tối đa là 24 giờ, sau khi chế độ "Giữ ấm" kết thúc, nồi sẽ đi vào chế độ chờ.

Không nên giữ ấm quá 12 giờ để đảm bảo độ ngon của món ăn.

HƯỚNG DẪN SỬ DỤNG

TRƯỚC KHI SỬ DỤNG

1. Đảm bảo nắp trong và van xả đã được lắp đặt chính xác. Nếu không có van xả hơi, khi nấu có thể bị trào nước.

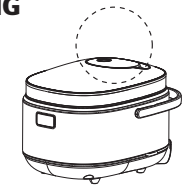

2. Dùng cốc đong được cung cấp để lường gạo vào trong nồi.
• Một cốc đong tương ứng khoảng 160ml (150gr).
• Không nên vo gạo bằng lòng nồi.

3. Tham khảo vạch định mức trên lòng nồi để đổ nước. Có thể dựa vào khẩu vị, loại gạo để điều chỉnh mực nước, tuy nhiên tổng lượng nước và gạo không nên vượt quá mức cao nhất vạch trên lòng nồi.

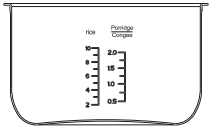

4. Đặt lòng nồi vào trong nồi. Đảm bảo lòng nồi đã khô ráo, sạch sẽ, không dính cặn bẩn.

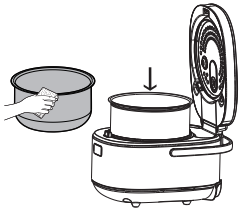

5. Đậy nắp nồi và cắm điện nguồn
Sau khi đậy nắp, nồi sẽ phát ra tiếng kêu "tita" báo hiệu đã đậy chuẩn. Cắm chặt phích cắm vào nguồn điện.

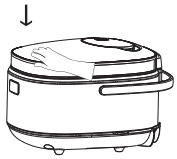

6. Để tránh hiện tượng khô cạn, khi sử dụng tính năng "Hấp", cần chú ý lượng nước như sau:

Thời gian (phút)	5-15	15-30	30-45	45-60
Vạch định mức	2	3	4	5

TRONG KHI SỬ DỤNG

Sau khi đã kết nối với nguồn điện, bạn có thể điều chỉnh theo hướng dẫn dưới đây:

HẸN GIỜ

1. Chọn tính năng muốn nấu
Chế độ "Hẹn giờ" chỉ cài đặt được ở tính năng: Nấu tiêu chuẩn, Nấu chậm, Cháo nguyên hạt, Cháo nhừ, Súp và Hấp.

2. Cài đặt thời gian
• Ấn nút THỜI GIAN/TIMER, rồi ấn nút Giờ/Hour – Phút/Minute để chọn. Giới hạn thời gian là từ 1 – 24 giờ.
• Thời gian hẹn giờ là thời gian để quá trình nấu kết thúc. Tuy nhiên, thực phẩm bị ngâm trong nước quá lâu cũng sẽ dẫn đến chế biến không ngon, vì thế không nên để hẹn giờ quá 12 giờ.
• Đây là thời gian dự kiến. Tùy thuộc vào khu vực, điện áp, lượng gạo, tỷ lệ thực phẩm... mà thời gian này cũng sẽ có sự khác biệt.

3. Ấn nút BẮT ĐẦU/START để nồi vận hành theo cài đặt.

GIỮ ẤM

1. Thiết bị sẽ tự động chuyển sang chế độ “Giữ ấm” khi quá trình nấu kết thúc. Ở chế độ chờ, bạn cũng có thể bật giữ ấm khi ấn nút HỦY/GIỮ ẤM.

2. Đóng nắp nồi, ấn nút HỦY/GIỮ ẤM, nồi sẽ ở trạng thái giữ ấm.

3. Khi ở trạng thái này, đèn “Giữ ấm” sẽ sáng. Thời gian tối đa cho chế độ này là 24 tiếng.

NẤU TIÊU CHUẨN

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn NẤU TIÊU CHUẨN/STANDARD COOK, đèn ở chế độ này sẽ sáng. Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, quá trình nấu sẽ được hiển thị trên màn hình.

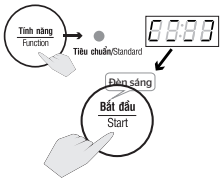

NẤU NHANH

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn NẤU NHANH/QUICK COOK, đèn ở chế độ này sẽ sáng. Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, quá trình nấu sẽ được hiển thị trên màn hình.

Chú ý: Bạn cũng có thể ấn trực tiếp vào NẤU NHANH/QUICK COOK. Nếu bạn không chọn thêm Khẩu vị, Tùy chọn gạo hay chức năng khác, nồi sẽ tự động vận hành sau 3 giây. Sau khi chế độ nấu kết thúc, nồi sẽ tự giữ ấm.

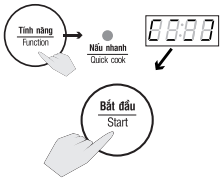

NẤU CHẬM

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn NẤU CHẬM/SLOW COOK, đèn ở chế độ này sẽ sáng. Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, quá trình nấu sẽ được hiển thị trên màn hình.

Chú ý: Bạn cũng có thể ấn trực tiếp vào NẤU CHẬM/SLOW COOK. Nếu bạn không chọn thêm Khẩu vị, Tùy chọn gạo hay chức năng khác, nồi sẽ tự động vận hành sau 3 giây. Sau khi chế độ nấu kết thúc, nồi sẽ tự giữ ấm.

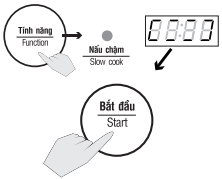

HÂM NÓNG

1. Đảo lại cơm nguội và dàn đều ra lòng nồi. Nếu lượng gạo còn ít thì hãy dồn vào giữa nồi.

2. Thêm một ít nước vào lòng nồi. Nếu lượng cơm nhiều, hãy đảm bảo đổ đều nước vào cơm.

3. Đóng nắp nồi. Ấn nút TÍNH NĂNG/FUNCTION để chọn tính năng HÂM NÓNG/REHEAT, đèn ở tính năng này sẽ sáng. Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc

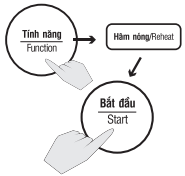

CƠM NIÊU

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn CƠM NIÊU/CRISPY RICE, đèn ở chế độ này sẽ sáng. Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, quá trình nấu sẽ được hiển thị trên màn hình.

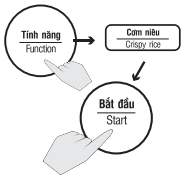

CHÁO NGUYÊN HẠT

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn CHÁO NGUYÊN HẠT/PORRIDGE, đèn ở chế độ này sẽ sáng. Thời gian nấu tiêu chuẩn là 1 giờ, bạn có thể điều chỉnh thời gian bằng cách nhấn nút GIỜ/HOUR – PHÚT/MINUTE (từ 45 phút – 1h15 phút).

Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, thời gian đếm ngược sẽ hiển thị trên màn hình.

CHÁO NHỪ

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn CHÁO NHỪ/CONGEE, đèn ở chế độ này sẽ sáng. Thời gian nấu tiêu chuẩn là 1 giờ 30 phút, bạn có thể điều chỉnh thời gian bằng cách nhấn nút GIỜ/HOUR – PHÚT/MINUTE (từ 1 – 4 giờ).

Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, thời gian đếm ngược sẽ hiển thị trên màn hình.

Chú ý: Bạn cũng có thể ấn trực tiếp vào CHÁO NHỪ/CONGEE. Nếu bạn không chọn thêm Khẩu vị, Tùy chọn gạo hay chức năng khác, nồi sẽ tự động vận hành sau 3 giây. Sau khi chế độ nấu kết thúc, nồi sẽ tự giữ ấm.

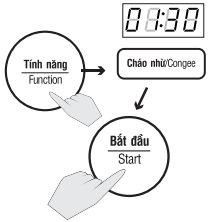

HẤP

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn HẤP/STEAM, đèn ở chế độ này sẽ sáng. Thời gian nấu tiêu chuẩn là 5 phút, bạn có thể điều chỉnh thời gian bằng cách nhấn nút GIỜ/HOUR – PHÚT/MINUTE (từ 5 phút – 1 giờ).

Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, thời gian đếm ngược sẽ hiển thị trên màn hình.

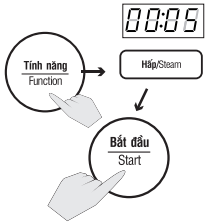

SÚP

Ấn nút TÍNH NĂNG/FUNCTION rồi chọn Súp/Soup, đèn ở chế độ này sẽ sáng. Thời gian nấu tiêu chuẩn là 1 giờ 30 phút, bạn có thể điều chỉnh thời gian bằng cách nhấn nút GIỜ/HOUR – PHÚT/MINUTE (từ 1 – 4 giờ).

Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, thời gian đếm ngược sẽ hiển thị trên màn hình.

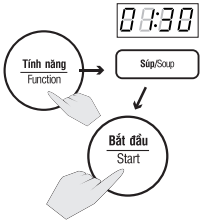

LÀM BÁNH

1. Phết một lớp dầu ăn lên lòng nồi, đổ hỗn hợp bánh đã trộn vào và đậy nắp nồi.

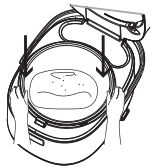

2. Ấn nút TÍNH NĂNG/FUNCTION rồi chọn LÀM BÁNH/CAKE, đèn ở chế độ này sẽ sáng. Thời gian nấu tiêu chuẩn là 50 phút. Ấn nút BẮT ĐẦU/START để thiết bị bắt đầu làm việc, thời gian đếm ngược sẽ hiển thị trên màn hình.

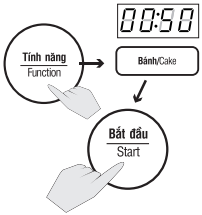

VỆ SINH VÀ BẢO DƯỠNG

Trước khi vệ sinh, cần đảm bảo đã rút điện và các bộ phận của nồi đã nguội xuống hoàn toàn. Việc vệ sinh sau khi sử dùng là bắt buộc để đảm bảo không có mùi hôi và nấm mốc trong sản phẩm.
Sử dụng giẻ lau mềm, có tính thấm hút để lau toàn thân ngoài sản phẩm.

Chú ý: Không dùng khăn ướt để lau mặt điều khiển, đầu cắm và dây nguồn. Không dùng các chất tẩy rửa mạnh có tính ăn mòn để vệ sinh trong ngoài nồi (như dầu chuối, xăng, bột tẩy, bàn chải cứng...). Và nghiêm cấm sử dụng máy rửa bát, máy sấy để vệ sinh nồi, tránh làm biến dạng hoặc cháy nổ nồi gây nguy hiểm.

1. Mở nắp nồi, hai tay cầm chắc tay cầm trong của nắp nồi đồng thời kéo ra để vệ sinh. Khi tháo không được giằng kéo gioăng nắp trong.

2. Dùng nước sạch để vệ sinh sạch sẽ nắp trong, gioăng cao su. Sau đó lau khô.

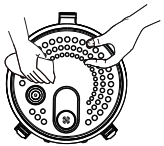

3. Lắp nắp trong trở lại cho đúng vị trí ban đầu.

4. Kéo van xả hướng ra ngoài, vặn để tháo bộ phận trên dưới của van. Dùng nước sạch để rửa, rồi lau khô với khăn mềm. Sau đó lắp lại đúng vị trí ban đầu.

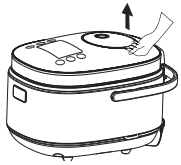

5. Trên mâm nhiệt có thể lưu lại hạt cơm, nước hoặc tạp chất khác, nên dùng khăn khô để lau sạch, không được dùng nước rửa.

6. Lấy lòng nồi ra, dùng khăn mềm để rửa sạch, rồi lau khô. Khi đặt lòng nồi trở lại, cần cẩn thận tránh va đập khiến lòng nồi biến dạng.

Sau khi vệ sinh xong, cần lắp các bộ phận đã tháo rời về đúng vị trí ban đầu: lòng nồi, nắp trong, van xả... để thuận tiện cho những lần sử dụng sau.

SỰ CỐ CÓ THỂ XẢY RA VÀ CÁCH KHẮC PHỤC

Trong quá trình sử dụng nếu nồi phát sinh sự cố, trước khi mang đến trung tâm bảo hành để sửa chữa có thể dựa vào bảng mã cảnh báo sự cố dưới đây để kiểm tra và xử lý sơ bộ:

Mã	Nguyên nhân sự cố	Phương pháp xử lý
E1	Trong quá trình tăng nhiệt, kiểm tra thấy không có lòng nồi hoặc kích thước chất liệu lòng nồi không phù hợp	Đặt lòng nồi phù hợp vào nồi, bấm phím "Giữ ấm/Tắt" để tắt cảnh báo, nếu vẫn báo E1 thì mang đến trung tâm bảo hành chỉ định.
E2	Cảm biến phần đế xuất hiện lỗi hở mạch	Ngắt điện nguồn, kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.
E3	Cảm biến phần đế xuất hiện lỗi hở mạch	Ngắt điện nguồn, kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.
E4	Cảm biến phần đế xuất hiện lỗi hở mạch	Ngắt điện nguồn, kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.
E5	Cảm biến phần đế xuất hiện lỗi hở mạch	Ngắt điện nguồn, kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.
E6	Cảm ứng nhiệt độ IGBT quá nhiệt hoặc đoản mạch, hở mạch	Ngắt điện nguồn, kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.
E7	Điện áp lưới điện quá cao	Ngắt điện, đợi lưới điện trở lại bình thường thì kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.
E8	Điện áp lưới điện quá thấp	Ngắt điện, đợi lưới điện trở lại bình thường thì kết nối lại. Nếu vẫn báo lỗi thì mang đến trung tâm bảo hành chỉ định.

Mama

PREMIUM BRAND OF SUNHOUSE

INSTRUCTION MANUAL

SUNHOUSE MAMA 1.5L induction heating RICE COOKER

Model: SHD8955

Please read operating instructions before use

Instruction to verify genuine product, register and check warranty period for product applied SUNHOUSE E-warranty sticker

Step 1: Scratch slightly Silver cover in E-warranty sticker to get CODE NUMBER (Please find the E-warranty sticker in product)
Step 2: Compose message as below:

SHG<Space>***MODEL***<Space>***CODE NUMBER*** send to ***8077***

For example: SHG SHD8255B 012345678 send to ***8077***

After receiving message, Exchange will send confirmation to customer.

Dear customers,

Thank you so much for trusting and choosing SUNHOUSE products. We believe that our products, which are made from high-quality materials, can meet all of your requirements and make you satisfied.
Please read the user manual carefully for safe and effective use of the appliance.
SUNHOUSE does not take legal responsibility for any injuries to people or damage to property caused by failure to comply with installation and operating instructions.

Content

1.Preface ----------

2.Safety Cautions ----------

3.Product Information ----------

4.Product Specification ----------

5.Instruction about operation panel ----------

6.Operation Instruction ----------

7.Preparation before Cooking ----------

8.Cooking ----------

9.Cleaning and Maintance ----------

10.Troubleshoot ----------

11.Schematic Circuit Diagram ----------

1.Preface

Introduction about Induction Heating technology

IH technology is electromagnetic induction heating, electromagnetic field act on conductor directly, the energy efficience is much higher than conventional heating plate with resistance wire.Comparing with those equipment working with coal,gasolene, gas or electric heating pipe, IH technology has advantage on aspects such as environment protection, lifetime and safety.

* Technical specification in this manual may change without information.

2. Safety Cautions

Following is basic information and safety cautions for this IH rice cooker.

1.Make sure actual voltage comply with voltage that specified in this manual.

2.This product is for household use only. We are not responsible for mulfunction caused by commercial use, unintended use, or usage that violate this manual book.

3.Make sure to use outlet with grouding, plug firmly. Don't use this appliance together with other appliances with a universal socket.

4.Please hold plug tightly when unpluging from outlet, don't pull or twist the power cord. If the power cord get damaged, get new one from after sales service.

5.Plug firmly to the outlet, otherwise the appliance may become over heating because of loose contacts.

6.Before use, connect power cord with this appliance firmly,otherwise the appliance may become over heating because of loose contacts.

7.Unplug from outlet when the appliance is not in use.

8.Close supervison is needed when the appliance is in use.

9.Please keep this appliance away from children.

10.To avoid damage or mulfunction, don't use this appliance on unstable, damp or inflammable surfaces.

11.Don't use this appliance when inner pan is not in rice cooker, or when inner pan is empty.

12.Don't remove inner pan when the appliance is in use.

13.To avoid damage or mulfunction, keep this appliance away from fire. (Refer to picture 1)

14.Don't collide inner pan with other objects, or put it directly on other heat source, otherwise it will deform.

15.Don't touch hot surface when the appliance is in use.

16.Don't add ingredients or water directly in rice cooker when the inner pan is not in rice cooker.

17.Adjust proportion between rice and water according to the scale on inner pan.

18.Before putting inner pan into rice cooker, make sure the external of inner pan is dry and clean, remove water drop or other debris from the surface of heating element. Don't put inner pan in lean position, otherwise some components may get burnt during working. (Refer to picture 2)

19.Steam will come out from steam valve, always keep your hands and face away from steam valve, don't cover the lid with wet cloth while cooking. (Refer to picture 3)

20.Except inner pan, don't immerse any parts into water. (Refer to picture 4)

21.If this appliance begin to malfunction during use, unplug the cord immediately. You must unplug the cord also before cleaning.

22.If any part is on fire, don't put out the fire with water, use wet cloth to cover it.

23.Don't keep warm for more than 12 hours, food may go bad after long time.

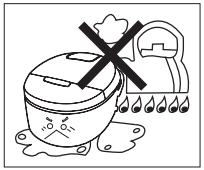

(picture 1)

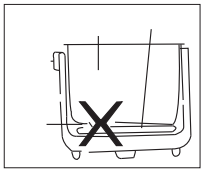

(picture 2)

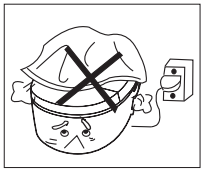

(picture 3)

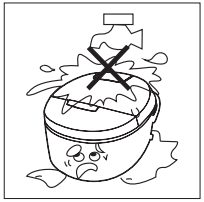

(picture 4)

Don't use this appliance under following circumstances.

1. This appliance or the power cord has problem.

2.This appliance fall down accidently, causing damage or mulfunction. In these circumstances, send the appliance to after sales center, please use original parts only.

3. Product Information

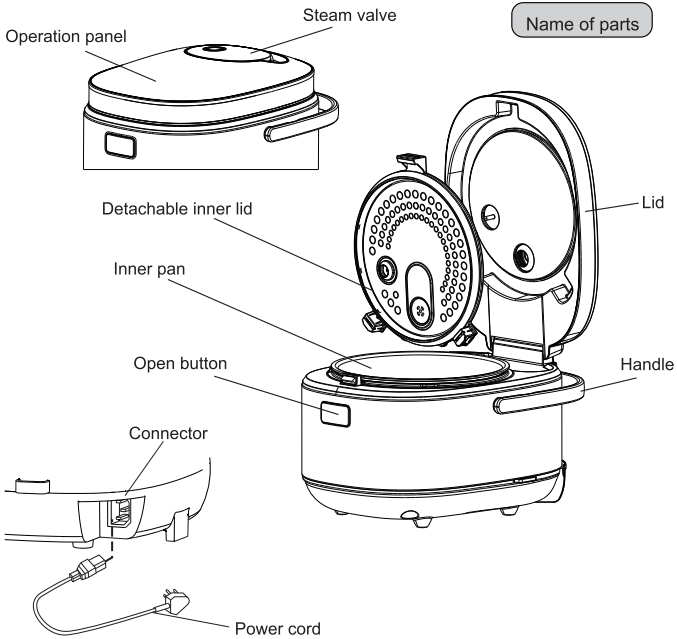

★ Packing list :

(Please refer to actual product)

Rice paddle	Soup spoon	Measuring cup	Steamer	Power cord
				

4. Product Specification

Product Specification	
Model	**SHD8955**
Voltage	220V~50Hz
Power (W)	1200W
Input	Single phase grounded AC power
Power cord	Original from manufacturer
Control	Operation button
Capacity	**1.5L**
Product Dimension	415x310x260mm
Net weight	6.1kg
Cook capacity (Cup)	2-8
Suitable for	4 to 8 person

5. Instruction about operation panel

Operation Panel

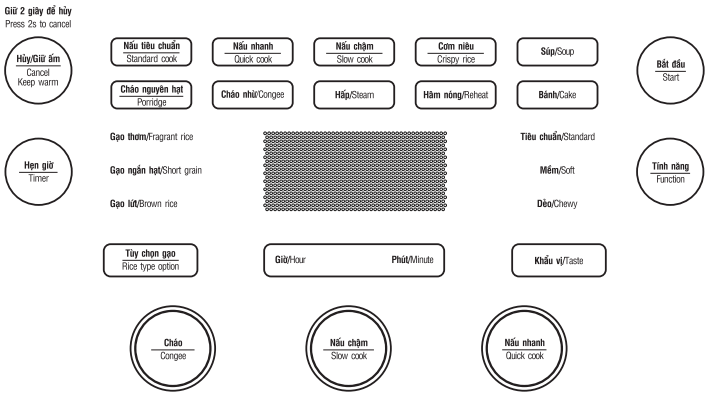

Operation instruction

1

- Press Function to select a function needed, the corresponding lamp twinkles, press Function repeatedly to select other functions.

Following functins can be selected: Standard cook/Quick cook/Delicous cook/ Reheat/Clay pot rice/Porridge/Soup/Steam/ Congee/Cake

2

- After selecting a function, press Start and this appliance starts to work.
- The appliance "beep" several times and starts keep warm mode automatically after cooking process finished. Keep warm lamp will be on and keep warm time will be shown on screen.

For example, press Function and select porridge, porridge lamp twinkles, press Start and this appliance start to work.

6.Operation Instruction

3

- Under "Standard cook", "Quick cook", "Delicious cook" and "Clay pot rice", press Rice type repeatedly, you can select "Other rice " , " Fragrant rice " and " Brown rice " .

Rice type can be selected under the following functions:
Standard cook/Quick cook/Delicious cook/ Clay pot rice

4

- After selecting "Delicious cook", press Taste repeatedly, you can select "Standard","Soft" and "Chewy"

Delicous cook

5

- Under "Standard cook", "Delicious cook", "Porridge", "Soup", "Congee", and "Steam", press Preset ,you can set preset time.
- Preset time: between 1 hour and 24 hours.

Preset time can be set under the following functions:
Standard cook/Delicious cook/Porridge/ Soup/Congee/Steam

6

- Under preset mode, you can press Hour and Min to adjust time.

7

- During cooking, you can cancel that function by pressing Cancel/Keep Warm button, press it again and this appliance will start keep warm mode, keep warm lamp will be on.
- Maximum keep warm time is 24 hours, after keep warm mode finishes, the appliance will start standby mode.

Maximum keep warm time is 24 hours

Preparation before Cooking

1

Make sure inner lid and steam valve are installed correctly.

- If you cook without steam valve, soup may spill.

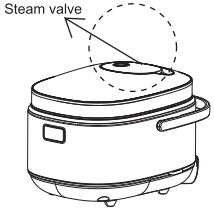

2

Use original measuring cup to measure rice, wash it.

- One cup of rice is about 160ml (about 150 gram)
- Don't wash rice with inner pan.

7. Preparation before Cooking

3 Keep this appliance at horizontal position, adjust water amount according to the scale on inner pan.

- The scale is for reference only. Please adjust water amount according to kind or taste of rice. Total rice and water should not exceed maximum of the scale.

Scale on inner pan



(Reference picture for water level)

4 Put inner pan into rice cooker.

- Sweep away rice and water drop on exteral of inner pan and internal of rice cooker, make sure it's clean and dry.

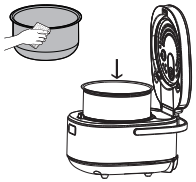

5 Close the lid and plug to outlet.

- You will hear "Ka" when the lid is closed.
- Plug power cord firmly to outlet.

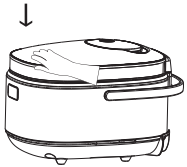

6 To avoid drying out, while using steam function, please add water with refering to following form.

Time (minute)	5-15	15-30	30-45	45-60
Scale	2	3	4	5

8.Cooking

Cooking

Please operate while this appliance is connected with power, you can cook according to your special request.

Preset

1 Select a function needed

- press Function to select standard cook / delicious cook / porridge / soup / steam

Standard cook / delicious cook / porridge / soup / steam

2 Set preset time

- press Preset ,adjust time by pressing Hour and Min , minimum preset time is 1 hour, maximum is 24 hours.
- Preset time is the time when cooking is finished,food may go bad because of long time been immersed in water, please don't make preset time longer than 12 hours.
- Preset time is an estimated time, it may differ because of different area, voltage, rice amount, or propotion between rice and water.

3 Press Start after setting up, this appliance starts preset function.

Timing function

1 Select a function that need timing function:

- Press Function to select "Porridge","Soup/ Congee","Steam"or "Cake".

Porridge/Soup/Congee/ Steam/ Cake

2 Set cooking time

- press Hour or Min to set cooking time, you can adjust the time quickly by keeping pressing Hour or Min

3 press Start after setting up, this appliance starts working.

Keep warm function

1 This appliance will start keep warm mode automatically after cooking process is finished. During standby mode, you can start keep warm mode by pressing Cancel/Keep Warm

2 Close the lid, press Cancel/Keep Warm button, this appliance starts keep warm mode.

3 When this appliance start keep warm mode, "Keep warm" lamp is on. Maximum keep warm time is 24 hours.



Standard cook

press Function and select "Standard cook", the "Standard cook" lamp twinkles, then press Start the "Start" lamp will be on and this appliance begins to work, red circle will flow, cooking process will show on screen.

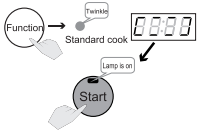

Quick cook

press Function to select "Quick cook", "Quick cook" lamp will twinkle, press Start and its lamp will be on, this appliance starts working.

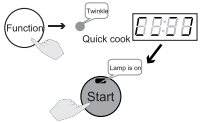

Slow cook

press Function to select "Slow cook", its lamp will be on, rice taste can be selected by pressing Taste ;then press Start and its lamp will be on,this appliance will start working, red circle will flow on screen and cooking process will show on screen.

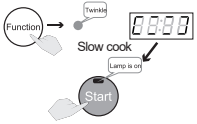

Reheat

1 Stir rice so that it covers evenly on bottom of inner pan.

- If rice is a little, please make rice at the center of inner pan.

2 Add proper amount of water into inner pan.

- If a lot of rice in inner pan, please add water into rice evenly.

3 Close the lid, press Function to select "Reheat" and its lamp will twinkle, press Start and its lamp will be on, the appliance starts working.

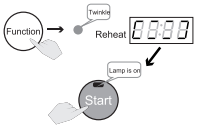

Crispy rice

press Function to select " Crispy rice ", its lamp will twinkle, press Start to start working. At the stage of stew this appliance will beep as a reminder for opening lid and adding ingrediants, please close the lid after adding ingrediants, clay pot rice will be ready after cooking process finishes.

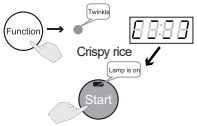

Porridge

Press Function to select "Porridge", its lamp will twinkle, standard cooking time is 1 hour, it can be adjusted between 45 minutes and one hour and 15 minutes by pressing Hour and Min ,press Start to start cooking, count-down will show on screen.

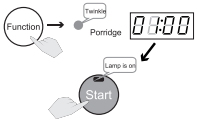

Congee

Press Function to select "Congee", its lamp will twinkle, standard cooking time is one hour and 30 minutes, it can be adjusted between 1 hour and 4 hours by pressing Hour and Min , press Start to start cooking, countdown will show on screen.

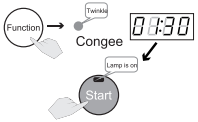

Steam

Press Function to select "Steam", its lamp will twinkle, standard steam time is 5 minutes, it can be adjusted between 5 minutes and 1 hour by pressing Hour and Min , press Start to start steaming, red circle will flow on screen, countdown will show on screen once the water is boiling.

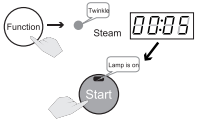

Soup

Press Function to select "Soup", its lamp will twinkle, stardard cooking time is 1 hour and 30 minutes, it can be adjusted between 1 hour and 4 hours by pressing Hour and Min , press Start to start cooking, count-down will show on screen.

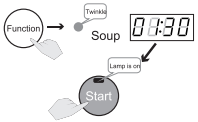

Cake

1 Smear bottom and internal surface of inner pan with salad oil, add cake paste into inner pan and close the lid.

2 Press Function to select "Cake", its lamp will twinkle, standard cooking time is 50 minutes, press Start to start cooking, countdown will show on screen.

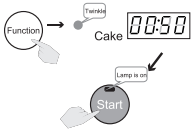

Slow cook Shortcuts

Press shortcuts Slow cook directly, its lamp will twinkle, if you do not choose taste, rice type or other cook menu, this appliance will start cook after 3 seconds, and will start keep warm mode after cooking process finishes.

Quick cook Shortcuts

Press shortcuts Quick cook directly, its lamp will twinkle, if you do not make other choices, this appliance will start cook after 3 seconds, and will start keep warm mode after cooking process finishes.

Congee Shortcuts

Press shortcuts Congee directly, its lamp will twinkle, if you do not make other choices, this appliance will start cook after 3 seconds, and will start keep warm mode after cooking process finishes.



9. Cleaning and maintance

Cleaning and maintance

Some smells may remain in this appliance after cooking rice or other ingrediants, make sure to clean it in the same day once cooking is finished.

Before cleaning and maintance, make sure power supply has been cut off and this appliance cools completely. Use clean and soft cloth to wipe body, lid and other parts. (Attention: don't wipe operation panel, plug or power cord with wet and soft cloth.)
Don't clean internal and external of this appliance with corrosive liquid or hard objects (Such as banana oil, gasoline, cleaning powder and hard brush). Don't pour water into this appliance once inner pan is not in it, don't immerse this appliance into water.
To avoid deformation and explosion, don't wash this appliance with dishwasher and dish dryer.

In order to clean this appliance completely, please disassemble the detachable inner lid and steam valve with special care before cleaning, please follow the steps below:

1 Open the lid, hold the inner lid handles with both hands, pull it towards outside to disassemble the inner lid.

- Don't pull sealing ring while disassembling the inner lid.

2 Wash inner lid and sealing ring with clean water, wipe them with soft cloth.

- You can add a little tableware detergent while cleaning.

3 Insert lock part of inner lid into the square groove on the lid, push inner lid toward the lid, the assembling is finished once you hear "KA".

4 Pull steam valve towards outside to take it out, rotate and disassemble it, wash it with clean water and wipe with soft cloth, assemble it and install it onto the lid.

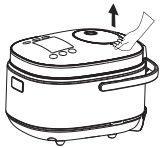

5 Rice, water or other sundries may stick on surface of heating element, wipe it with dry cloth, don't wash it with water.

6 Take out the inner lid, wash it with soft sponge, then wipe with dry and soft cloth. To avoid deformation, please handle with care while taking out or putting back the inner pan, don't wipe it with steel wool or hard objects.

After cleaning and maintance, please install inner lid and steam valve, make sure all parts are in their right position and ready for future use.

After-sales service

1. Please refer to regulations in "Gurantee Card".
2. In case of deformation, don't atempt to repair this appliace by yourself, send it to after-sales service.

10. Troubleshoot

Troubleshoot

In case of mulfunction, please try procedures specified in the following form before sending to after-sales service.

Code	Reason of malfunction	Solution
E1	During cooking, this appliance cann't detect inner pan, or material or dimension of inner pan is improper.	Put proper inner pan into this appliance, press "Keep warm / OFF" to cancel the error code, if E1 appears again, please send to our after-sales service.
E2	Open circuit with bottom sensor	Cut off power supply and wait for a while, then connect again, if E2 appears again, please send to our after-sales service.
E3	Short circuit with bottom sensor	Cut off power supply and wait for a while, then connect again, if E3 appears again, please send to our after-sales service.
E4	Open circuit with top sensor	Cut off power supply and wait for a while, then connect again, if E4 appears again, please send to our after-sales service.
E5	Short circuit with top sensor	Cut off power supply and wait for a while, then connect again, if E5 appears again, please send to our after-sales service.
E6	IGBT temperature sensor is over heating, or open circuit / short circuit with IGBT temperature sensor.	Cut off power supply and wait for a while, then connect again, if E6 appears again, please send to our after-sales service.
E7	Input voltage is too high	Cut off power supplier, reconnect after input voltage becomes normal, if E7 appears again, please send to our after-sales service.
E8	Input voltage is too low	Cut off power supplier, reconnect after input voltage becomes normal, if E8 appears again, please send to our after-sales service.

11. Schematic Circuit Diagram
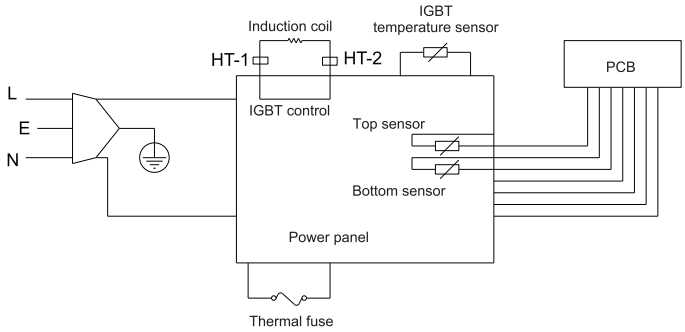
Schematic Circuit Diagram